

**BE-M1000 PROGRAMMING GUIDE****List of Volumes**

#	Volume	Title	Pages
1	1	General Description	24
2	2	Memory Map	11
3	3	Interrupts	28
<b>SoC Interconnects</b>			
4	4.1	Network Interconnect (NIC)	34
5	4.2	Cache Coherent Network (CCN)	135
<b>System Debug</b>			
6	5	CoreSight Subsystem	27
<b>System Monitoring and Management</b>			
7	6.1	Local Clock and Reset Unit (LCRU)	231
8	6.2	Process, Voltage and Temperature (PVT) Sensors	23
<b>Memory Management</b>			
9	7.1	DDR3/4 Memory Controller	257
10	7.2	DDR PHY	270
11	7.3	System Memory Management Unit (SMMU)	48
12	7.4	DMA Controller for Low Speed Peripherals (DMAC LSP)	128
13	7.5	DMA Controller for Mem2Mem Transfers	74
<b>Connectivity &amp; Mass Storage</b>			
14	8.1	USB 2.0 Controller	76
15	8.2	USB 3.0/2.0 Controller	83
16	8.3	PCI Express (PCIe)	283
17	8.4	1Gb Ethernet MAC (GMAC)	164
18	8.5	10Gb Ethernet MAC (XGMAC)	447
19	8.6	PCIe & XGMAC PHY	127
20	8.7	Serial ATA 6G (SATA)	82
21	8.8	Mobile Storage Host Controller (eMMC/SD)	158
22	8.9	USB 3.0/2.0 PHY	77
23	8.10	SATA PHY	60
<b>Timers</b>			
24	9.1	Cortex-A57 Timers	16
25	9.2	Peripheral Timers	19
<b>Multimedia and Graphics</b>			
26	10.1	Mali Graphics Processing Unit (Mali GPU)	10
27	10.2	HDMI Controller	252
28	10.3	HDMI PHY	60
29	10.4	Video Display Unit (VDU) for HDMI and LVDS	64
30	10.5	HD Video Decoder	12
31	10.6	Inter-IC Sound Bus (I2S)	37
<b>Low Speed Communication</b>			
32	11.1	Inter-IC Controller (I2C)	71
33	11.2	Serial Peripheral Interface (SPI)	53
34	11.3	Enhanced Serial Peripheral Interface (eSPI)	29
35	11.4	Universal Asynchronous Receiver/Transmitter (UART)	50
36	11.5	System Management Bus Controller (SMBus)	45
37	11.6	General Purpose Input/Output (GPIO)	22
<b>Security</b>			
38	12.1	TrustZone Management	31
39	12.2	TrustZone Controller	25

**Total 3643**