


**Chapter 5: Jumper Settings**  
**SVEC COMPUTER CORPORATION**  
**FD1800-F**

**NIC Type** FDDI  
**Transfer Rate** 100Mbps  
**Data Bus** 16-bit ISA  
**Topology** Ring  
**Wiring Type** Fiber optic cable  
**Boot ROM** Not available

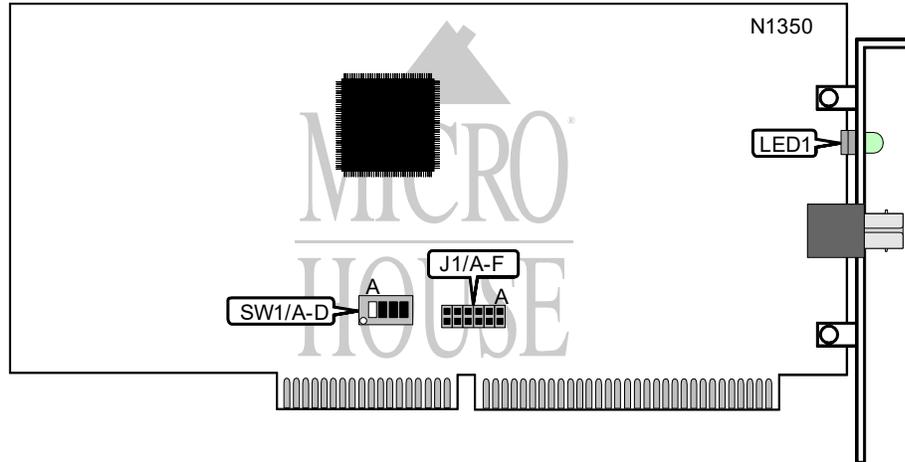

BASE I/O ADDRESS SELECTION				
Address	SW1/A	SW1/B	SW1/C	SW1/D
C8000h	On	Off	On	On
CA000h	On	Off	On	Off
CC000h	On	Off	Off	On
CE000h	On	Off	Off	Off
D0000h	Off	On	On	On
D2000h	Off	On	On	Off
D4000h	Off	On	Off	On
D6000h	Off	On	Off	Off
D8000h	Off	Off	On	On
DA000h	Off	Off	On	Off
DC000h	Off	Off	Off	On
DE000h	Off	Off	Off	Off

Continued next page...

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**SVEC COMPUTER CORPORATION**  
**FD1800-F**

... continued from previous page.

INTERRUPT SELECTION						
IRQ	J1/A	J1/B	J1/C	J1/D	J1/E	J1/F
3	Closed	Open	Open	Open	Open	Open
5	Open	Closed	Open	Open	Open	Open
10	Open	Open	Closed	Open	Open	Open
11	Open	Open	Open	Closed	Open	Open
12	Open	Open	Open	Open	Closed	Open
15	Open	Open	Open	Open	Open	Closed

DIAGNOSTIC LED(S)			
LED	Color	Status	Condition
LED1	Green	On	Network connection is good
LED1	Green	Off	Network connection is broken