


## Chapter 5: Jumper Settings

OLIVETTI

NCU 9191

**NIC Type** Ethernet  
**Transfer Rate** 10Mbps  
**Data Bus** 16-bit ISA  
**Topology** Linear Bus  
**Wiring Type** Fiber optic  
**Boot ROM** Not available

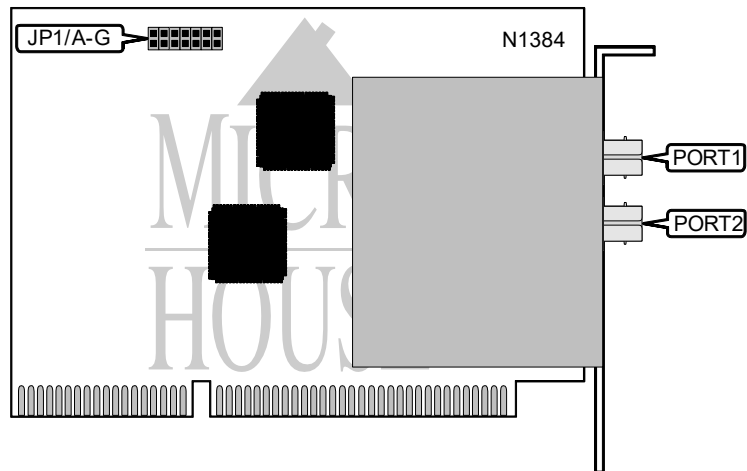

CONNECTIONS	
Purpose	Location
Fiber optic transmit port	Port 1
Fiber optic receive port	Port 2

USER CONFIGURABLE SETTINGS		
Purpose	Location	Setting
f Factory configurable - do not alter	JP1/A	N/A
f Factory configurable - do not alter	JP1/E	Closed
f MEGA O	JP1/F	Open
MEGA F	JP1/F	Closed
f 64KB	JP1/G	Closed
16KB	JP1/G	Open

Continued next page...

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**OLIVETTI**  
**NCU 9191**

... continued from previous page.

BIOS ADDRESS SELECTION				
Address	Window	JP1/A	JP1/B	JP1/C
C000h	16K	Closed	Closed	Closed
C400h	16K	Closed	Closed	Open
C800h	16K	Closed	Open	Closed
CC00h	16K	Closed	Open	Open
D000h	16K	Open	Closed	Closed
D400h	16K	Open	Closed	Open
D800h	16K	Open	Open	Closed
DC00h	16K	Open	Open	Open
C000h	32K	Closed	Closed	Open
C800h	32K	Closed	Open	Open
D000h	32K	Open	Closed	Open
D800h	32K	Open	Open	Open
C000h	64K	Closed	Open	Open
D000h	64K	Open	Open	Open