


CONTROL CORPORATION HOSTESS 550

Card Type Multi-user serial controller
Chipset/Controller Texas Instruments (UART)
I/O Options Serial ports (4 or 8)
Maximum DRAM N/A

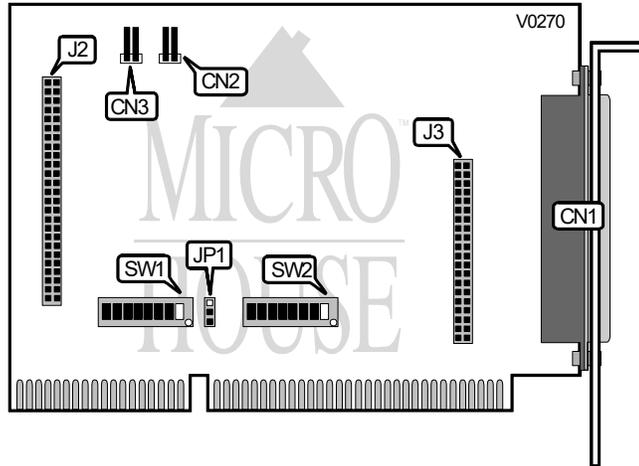

CONNECTIONS			
Purpose :	Location	Purpose :	Location
100-pin interface connector	CN1	Upgrade connector 1	J2
Daisy chain connector 1	CN2	Upgrade connector 2	J3
Daisy chain connector 2	CN3		

Note: Daisy chain connectors are for the use of multiple cards on the same interrupt.

I/O ADDRESS SELECTION							
Address	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
140h	Off	On	Off	On	On	On	On
200h	On	On	On	Off	On	On	On
240h	Off	On	On	Off	On	On	On
280h	On	Off	On	Off	On	On	On
500h	On	On	Off	On	Off	On	On
540h	Off	On	Off	On	Off	On	On
580h	On	Off	Off	On	Off	On	On
640h	Off	On	On	Off	Off	On	On
680h	On	Off	On	Off	Off	On	On
6C0h	Off	Off	On	Off	Off	On	On
700h	On	On	Off	Off	Off	On	On

Note: These settings are for use with SCO XENIX, SCO UNIX, AT&T UNIX, INTERACTIVE 386/ix, and Microport V/386 operating systems.

Continued on next page . . .

CONTROL CORPORATION
HOSTESS 550

... continued from previous page

I/O ADDRESS SELECTION								
Address	Controller	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
280h	First	On	Off	On	Off	On	On	On
240h	Second	Off	On	On	Off	On	On	On

Note: These settings are for use with the SunOS operating system with a maximum of two Hostess 550 controllers in a system..

SERIAL PORT INTERRUPT SELECTION							
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7
2	On	On	Off	Off	Off	Off	Off
3	On	Off	On	Off	Off	Off	Off
4	On	Off	Off	On	Off	Off	Off
5	On	Off	Off	Off	On	Off	Off
10	On	Off	Off	Off	Off	On	Off
11	On	Off	Off	Off	Off	Off	On

Note: These settings are for use with SCO XENIX, SCO UNIX, AT&T UNIX, INTERACTIVE 386/ix, DOS, and Microport V/386 operating systems.

I/O ADDRESS SELECTION								
Address	Controller	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
280h	First	On	Off	On	Off	Off	Off	Off
240h	Second	On	Off	Off	On	Off	Off	Off

Note: These settings are for use with the SunOS operating system.

MISCELLANEOUS TECHNICAL NOTE
Switch 1/1 is Off for an eight port controller, on for a four port. Switch 2/8 is on for a four port controller and Off for an eight port. Serial ports are located on an interface box which connects to Hostess 186 via the 100-pin interface connector.