


CONTROL CORPORATION HOSTESS RJ-11

Card Type I/O controller
Chipset/Controller Texas Instruments (UART)
I/O Options Serial ports (8)
Maximum DRAM N/A

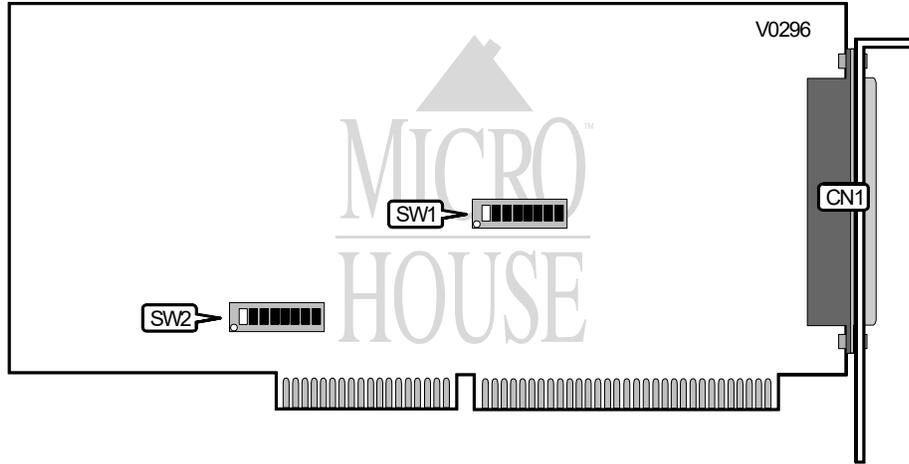

CONNECTIONS	
Purpose	Location
100 Pin interface connector	CN1

I/O ADDRESS CONFIGURATION								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
100h	Off	On	On	Off	On	On	On	On
140h	Off	Off	On	Off	On	On	On	On
200h	Off	On	On	On	Off	On	On	On
240h	Off	Off	On	On	Off	On	On	On
280h	Off	On	Off	On	Off	On	On	On
500h	Off	On	On	Off	On	Off	On	On
540h	Off	Off	On	Off	On	Off	On	On
580h	Off	On	Off	Off	On	Off	On	On
600h	Off	On	On	On	Off	Off	On	On
640h	Off	Off	On	On	Off	Off	On	On
680h	Off	On	Off	On	Off	Off	On	On
700h	Off	On	On	Off	Off	Off	On	On

Continued on next page . . .

COMTROL CORPORATION
HOSTESS RJ-11

... continued from previous page

I/O INTERRUPT SELECTION (MASK ENABLE ON)								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ2	On	On	Off	Off	Off	Off	Off	Off
IRQ3	On	Off	On	Off	Off	Off	Off	Off
IRQ4	On	Off	Off	On	Off	Off	Off	Off
IRQ5	On	Off	Off	Off	On	Off	Off	Off
IRQ7	On	Off	Off	Off	Off	On	Off	Off
IRQ10	On	Off	Off	Off	Off	Off	On	Off
IRQ11	On	Off	Off	Off	Off	Off	Off	On

I/O INTERRUPT SELECTION (MASK ENABLE OFF)								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ2	Off	On	Off	Off	Off	Off	Off	Off
IRQ3	Off	Off	On	Off	Off	Off	Off	Off
IRQ4	Off	Off	Off	On	Off	Off	Off	Off
IRQ5	Off	Off	Off	Off	On	Off	Off	Off
IRQ10	Off	Off	Off	Off	Off	On	Off	Off
IRQ11	Off	Off	Off	Off	Off	Off	On	Off
IRQ12	Off	On						

SCO XENIX 2.2.3 AND EARLIER ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
500h	Off	On	On	Off	On	Off	On	On
580h	Off	On	Off	Off	On	Off	On	On
680h	Off	On	Off	On	Off	Off	On	On
700h	Off	On	On	Off	Off	Off	On	On

SCO XENIX 2.2.3 AND EARLIER INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	On	Off	On	Off	Off	Off	Off	Off
IRQ4	On	Off	Off	On	Off	Off	Off	Off

SCO XENIX 2.3.1 AND LATER ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
140h	Off	Off	On	Off	On	On	On	On
200h	Off	On	On	On	Off	On	On	On

SCO XENIX 2.3.1 AND LATER INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	On	Off	On	Off	Off	Off	Off	Off
IRQ4	On	Off	Off	On	Off	Off	Off	Off

Continued on next page...

COMTROL CORPORATION
HOSTESS RJ-11

... continued from previous page

SCO UNIX SYSTEM V/386 VERSION 3.2 ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
140h	Off	Off	On	Off	On	On	On	On
500h	Off	On	On	Off	On	Off	On	On
680h	Off	On	Off	On	Off	Off	On	On

SCO UNIX SYSTEM V/386 VERSION 3.2 INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ4	On	Off	Off	On	Off	Off	Off	Off

SCO UNIX SYSTEM V/386 VERSION 3.2.0 ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
200h	Off	On	On	On	Off	On	On	On
580h	Off	On	Off	Off	On	Off	On	On
700h	Off	On	On	Off	Off	Off	On	On

SCO UNIX SYSTEM V/386 VERSION 3.2.0 INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	On	Off	On	Off	Off	Off	Off	Off

PICK OPERATING SYSTEM ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
260h	Off	Off	On	On	Off	On	On	On
160h	Off	Off	On	Off	On	On	On	On

PICK OPERATING SYSTEM INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ4	Off	Off	Off	On	Off	Off	Off	Off
IRQ3	Off	Off	On	Off	Off	Off	Off	Off

QNX OPERATING SYSTEM ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
280h	Off	On	Off	On	Off	On	On	On

QNX OPERATING SYSTEM INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	Off	Off	On	Off	Off	Off	Off	Off

CONCURRENT PC DOS ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
280h	Off	On	Off	On	Off	On	On	On

Continued on next page...

COMTROL CORPORATION
HOSTESS RJ-11

... continued from previous page

CONCURRENT PC DOS INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	Off	Off	On	Off	Off	Off	Off	Off

PC DOS EASYLAN/LANLINK ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
280h	Off	On	Off	On	Off	On	On	On

PC DOS EASYLAN/LANLINK INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	On	Off	On	Off	Off	Off	Off	Off
IRQ4	On	Off	Off	On	Off	Off	Off	Off

MICROPORT SYSTEM V/4 ADDRESS SETTINGS								
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
100h	Off	On	On	Off	On	On	On	On
140h	Off	Off	On	Off	On	On	On	On

MICROPORT SYSTEM V/4 INTERRUPT SETTINGS								
IRQ	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
IRQ3	On	Off	On	Off	Off	Off	Off	Off