


# ZENITH DATA SYSTEMS RS-422 CURRENT LOOP LAN INTERFACE CARD

**Card Type** Serial I/O controller  
**Chipset Controller** Unidentified  
**I/O Options** RS-422 serial port  
**Maximum Dram** N/A

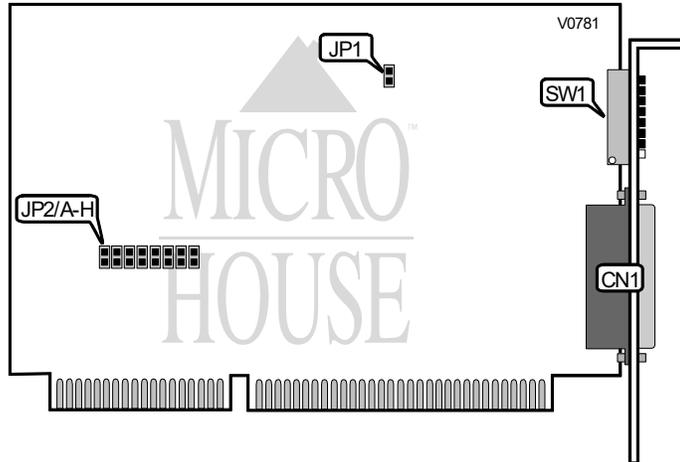

CONNECTIONS	
Purpose	Location
RS-422 serial interface	CN1

INTERRUPT SELECT								
IRQ	JP2/A	JP2/B	JP2/C	JP2/D	JP2/E	JP2/F	JP2/G	JP2/H
IRQ4	Open	Closed	Open	Open	Open	Open	Open	Open
IRQ3	Closed	Open						
IRQ5	Open	Open	Closed	Open	Open	Open	Open	Open
IRQ10	Open	Open	Open	Closed	Open	Open	Open	Open
IRQ11	Open	Open	Open	Open	Closed	Open	Open	Open
IRQ12	Open	Open	Open	Open	Open	Closed	Open	Open
IRQ14	Open	Open	Open	Open	Open	Open	Closed	Open
IRQ15	Open	Closed						

BASE MEMORY ADDRESS SELECT							
Address	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
3F8-3FFh	Off						
2F8-2FFh	Off	On	Off	Off	Off	Off	Off
1A0-1A7h	On	Off	Off	On	Off	On	On

Continued on next page...

ZENITH DATA SYSTEMS  
RS-422 CURRENT LOOP LAN INTERFACE CARD

...continued from previous page

RTS/CTS CONFIGURATION	
Setting	JP1
RTS/CTS handshaking disabled	Open
RTS/CTS handshaking enabled	Closed

CURRENT LOOP INTERFACE CONFIGURATION	
Setting	SW1/1
Disabled	On
Enabled	Off