


DIALOGIC CORPORATION

D/21D, D/41D (REV. 2)

Card Type	Telephony
I/O Options	AEB bus
Data Bus	8-bit ISA
Line Type	Loop-start

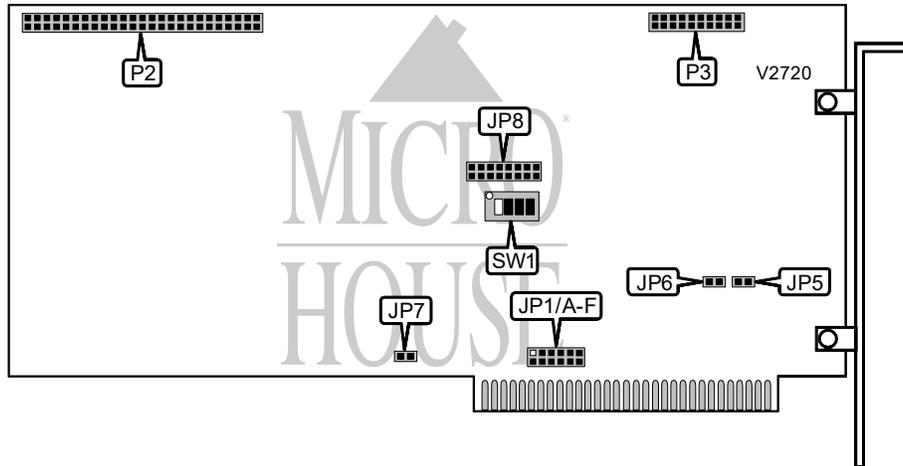

CONNECTIONS			
Function	Label	Function	Label
Microprocessor interface	P2	Analog expansion bus	P3

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
IRQ termination enabled	JP7	Open
IRQ termination disabled	JP7	Closed
Board will use internal loop-start interface for input	JP8	Installed
Board will use T1 interface via AEB bus for input	JP8	Not installed
Disabled board will not answer incoming calls	SW1/4	Off
Disabled board will send busy signal to incoming calls	SW1/4	On

Note: If multiple D/4x cards are installed in a system, JP7 should be closed for only one of them.

BASE I/O ADDRESS					
Setting	JP5	JP6	SW1/1	SW1/2	SW1/3
A000h	Closed	Open	Off	Off	Off
A200h	Closed	Open	Off	Off	On
A400h	Closed	Open	Off	On	Off
A600h	Closed	Open	Off	On	On
A800h	Closed	Open	On	Off	Off
AA00h	Closed	Open	On	Off	On
AC00h	Closed	Open	On	On	Off
AE00h	Closed	Open	On	On	On
B800h	Closed	Closed	Off	Off	Off
BA00h	Closed	Closed	Off	Off	On
BC00h	Closed	Closed	Off	On	Off
BE00h	Closed	Closed	Off	On	On

Continued on next page. . .

DIALOGIC CORPORATION
D/21D, D/41D (REV. 2)

. . . continued from previous page

BASE I/O ADDRESS (CON'T)						
Setting	JP5	JP6	SW1/1	SW1/2	SW1/3	
C0000h	Closed	Closed	On	Off	Off	
C0000h	Open	Closed	Off	Off	Off	
C2000h	Closed	Closed	On	Off	On	
C2000h	Open	Closed	Off	Off	On	
C4000h	Closed	Closed	On	On	Off	
C4000h	Open	Closed	Off	On	Off	
C6000h	Closed	Closed	On	On	On	
C6000h	Open	Closed	Off	On	On	
C8000h	Open	Closed	On	Off	Off	
CA000h	Open	Closed	On	Off	On	
CC000h	Open	Closed	On	On	Off	
CE000h	Open	Closed	On	On	On	
D0000h	Open	Open	Off	Off	Off	
D2000h	Open	Open	Off	Off	On	
D4000h	Open	Open	Off	On	Off	
D6000h	Open	Open	Off	On	On	
D8000h	Open	Open	On	Off	Off	
DA000h	Open	Open	On	Off	On	
DC000h	Open	Open	On	On	Off	
DE000h	Open	Open	On	On	On	

INTERRUPT						
Setting	JP1/A	JP1/B	JP1/C	JP1/D	JP1/E	JP1/F
IRQ2	Closed	Open	Open	Open	Open	Open
IRQ3	Open	Closed	Open	Open	Open	Open
IRQ4	Open	Open	Closed	Open	Open	Open
IRQ5	Open	Open	Open	Closed	Open	Open
IRQ6	Open	Open	Open	Open	Closed	Open
IRQ7	Open	Open	Open	Open	Open	Closed

Note: All D/4xx boards in the system should be set to the same interrupt.