


MITSUMI ELECTRONICS CORPORATION MOZART SOUND CARD

Card Type	Sound card
Chip Set	Unidentified
Maximum Onboard Memory	N/A
I/O Options	CD ROM Audio in, IDE CD-ROM interface, Mitsumi CD-ROM interface, Line in, Line out, Microphone in, MIDI/Game port, Speaker out
Data Bus	16-bit ISA

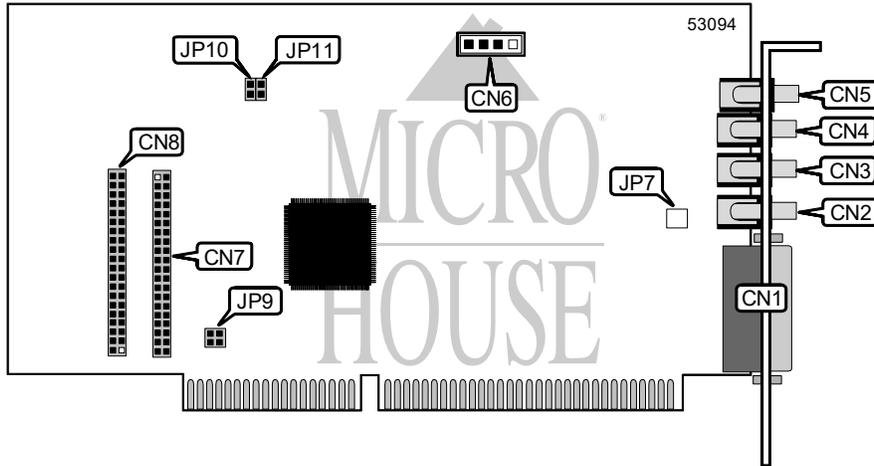

CONNECTIONS			
Function	Label	Function	Label
Game/MIDI port	CN1	CD-ROM audio	CN6
Microphone in	CN2	Mitsumi CD-ROM interface	CN7
Line in	CN3	IDE CD-ROM interface	CN8
Line out	CN4		
Speaker out	CN5		

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
í Powered microphone is in use	JP7	Closed	
Dynamic microphone is in use	JP7	Open	
í CD-ROM termination enable/disable	JP9	Unidentified	
Note: JP9 is CD-ROM termination jumper. Exact setting is unidentified. Size and orientation of JP7 is unidentified.			

OPL4 DAUGHTER CARD CONFIGURATION		
Setting	JP10	JP11
í Not installed	Closed	Closed
Installed	Open	Open