


# DIALOGIC CORPORATION GAMMAFAX CPD/220

<b>Card Type</b>	Fax
<b>Processor</b>	80C188 (4)
<b>Processor Speed</b>	20MHz
<b>Chipset</b>	Rockwell
<b>Maximum Onboard Memory</b>	2MB DRAM (512KB per channel)
<b>Maximum Fax Rate</b>	14.4Kbps x 4
<b>Fax Modulation</b>	ITU-T V.17, V.27ter, V.29, V.33
<b>Fax Class</b>	N/A
<b>Line Type</b>	DID, loop-start
<b>Data Bus</b>	16-bit ISA
<b>Card Size</b>	Full height, full length

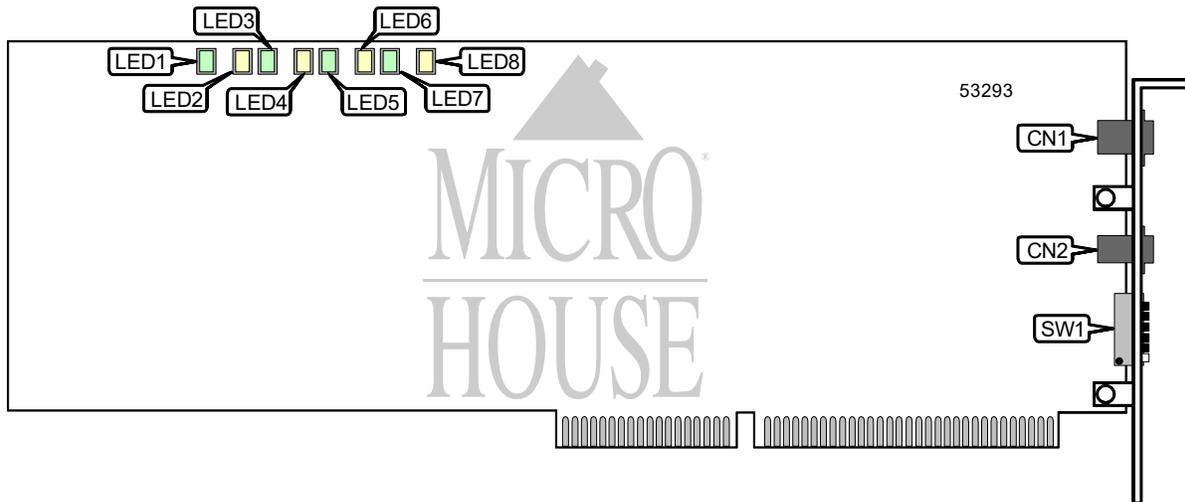

CONNECTIONS			
Function	Label	Function	Label
Loop-start telephone lines 1 & 2 out	CN1	DID telephone lines 1 & 2 out	CN2

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
í Factory configured - do not alter	SW1/4	Unidentified
í Factory configured - do not alter (DID line polarity)	SW1/5	Unidentified
í Factory configured - do not alter (DID line polarity)	SW1/6	Unidentified

BASE I/O ADDRESS SELECTION							
Line 1	Line 2	Line 3	Line 4	Channels	SW1/1	SW1/2	SW1/3
í 350h	360h	370h	250h	0 - 3	Off	Off	Off
260h	270h	150h	160h	4 - 7	On	Off	Off
100h	104h	108h	10Ch	8 - 11	Off	On	Off
110h	114h	118h	11Ch	12 - 15	On	On	Off
280h	284h	288h	28Ch	16 - 19	Off	Off	On
290h	294h	298h	29Ch	20 - 23	On	Off	On
120h	124h	128h	12Ch	24 - 27	Off	On	On
130h	134h	138h	13Ch	28 - 31	On	On	On

Continued on next page. . .

DIALOGIC CORPORATION  
 GAMMAFAX CPD/220

. . . continued from previous page

DIAGNOSTIC LED(S)			
LED	Color	Status	Condition
LED1	Green	On	Line 1 is off-hook
LED1	Green	Off	Line 1 is on-hook
LED2	Yellow	On	Line 1 is operational
LED2	Yellow	Off	Line 1 is not operational
LED2	Yellow	Blinking	Country code is not correct in configuration file
LED3	Green	On	Line 2 is off-hook
LED3	Green	Off	Line 2 is on-hook
LED4	Yellow	On	Line 2 is operational
LED4	Yellow	Off	Line 2 is not operational
LED4	Yellow	Blinking	Country code is not correct in configuration file
LED5	Green	On	Line 3 is off-hook
LED5	Green	Off	Line 3 is on-hook
LED6	Yellow	On	Line 3 is operational
LED6	Yellow	Off	Line 3 is not operational
LED6	Yellow	Blinking	Country code is not correct in configuration file
LED7	Green	On	Line 4 is off-hook
LED7	Green	Off	Line 4 is on-hook
LED8	Yellow	On	Line 4 is operational
LED8	Yellow	Off	Line 4 is not operational
LED8	Yellow	Blinking	Country code is not correct in configuration file