

| | | | | | | | | | | |
|---------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|
| IRQ12 | Open | Close d | Open |
| í Plug & Play | Close d |

Continued on next page . . .

MAXTECH CORPORATION XPV 336HT (SF-1133HV/C3-HT)

. . . continued from previous page

| SUPPORTED COMMAND SET | |
|--|--|
| Basic AT Commands | |
| AT, +++, A/ | |
| A, E, H, M, O, P, Q, T, V, X, Y, Z | |
| &C, &F, &G, &W, &Y, &Z | |
| Extended AT Commands | |
| \A, \B, \C, \G, \J, \K, \O, \U, \X, \Y, \Z | |
| %A, %G | |
| -J, "H | |
| S Registers | |
| S0, S1, S2, S3, S4, S5, S6, S7, S8, S9, S10, S11, S12, S14, S16, S18, S21, S22, S23, S25, S27, S30, S31, S33, S37 | |
| Special Commands | |
| +MS | |
| Note: See MHI Help File for full command documentation. | |

PROPRIETARY AT COMMAND SET

For a full command summary, see MAXTECH CORPORATION, XPV 336IC (SF-1133HV/C3-HT)