

**Parallel Port Mode Selection:
JP17, JP18**

JP17, JP18	Parallel Port Mode
JP17	Printer *
JP17	EPP/ECP
JP17	

Jumper Settings:

* Default setting

Serial and Parallel Port Selections: JP9


JP9-1, JP9-2	Serial Port 1 COMA
JP9-1 JP9-2	Not Available
JP9-1 JP9-2	<u>COM1 (3F8)</u> *
JP9-1 JP9-2	COM3 (3E8)
JP9-1 JP9-2	Disabled
JP9-3, JP9-4	Serial Port 2 COMB
JP9-3 JP9-4	Not Available
JP9-3 JP9-4	<u>COM2 (2F8)</u> *
JP9-3 JP9-4	COM4 (2E8)
JP9-3 JP9-4	Disabled
JP9-5, JP9-6	Parallel Port
JP9-5 JP9-6	LPT3 (3BC)
JP9-5 JP9-6	LPT2 (278)
JP9-5 JP9-6	<u>LPT1 (378)</u> *
JP9-5 JP9-6	Disabled

HDD and FDD Selections: JP6

JP6: HDD/FDD jumper setting			
JP6-1	FDD A&B change mode	<u>Normal</u> *	A&B change
JP6-2	FDD address select	370-377	<u>3F0-3F7</u> *
JP6-3	IDE Interface (HDD)	<u>Enabled</u> *	Disabled
JP6-4	HDD Address select	376, 377, 170-177	<u>3F6,3F7,1F0-1F7</u> *
JP6-5	FDD Controller	<u>Enabled</u> *	Disabled

Game Port Selection: JP16

Game Port	JP16
	<u>Enabled</u> *
	Disabled

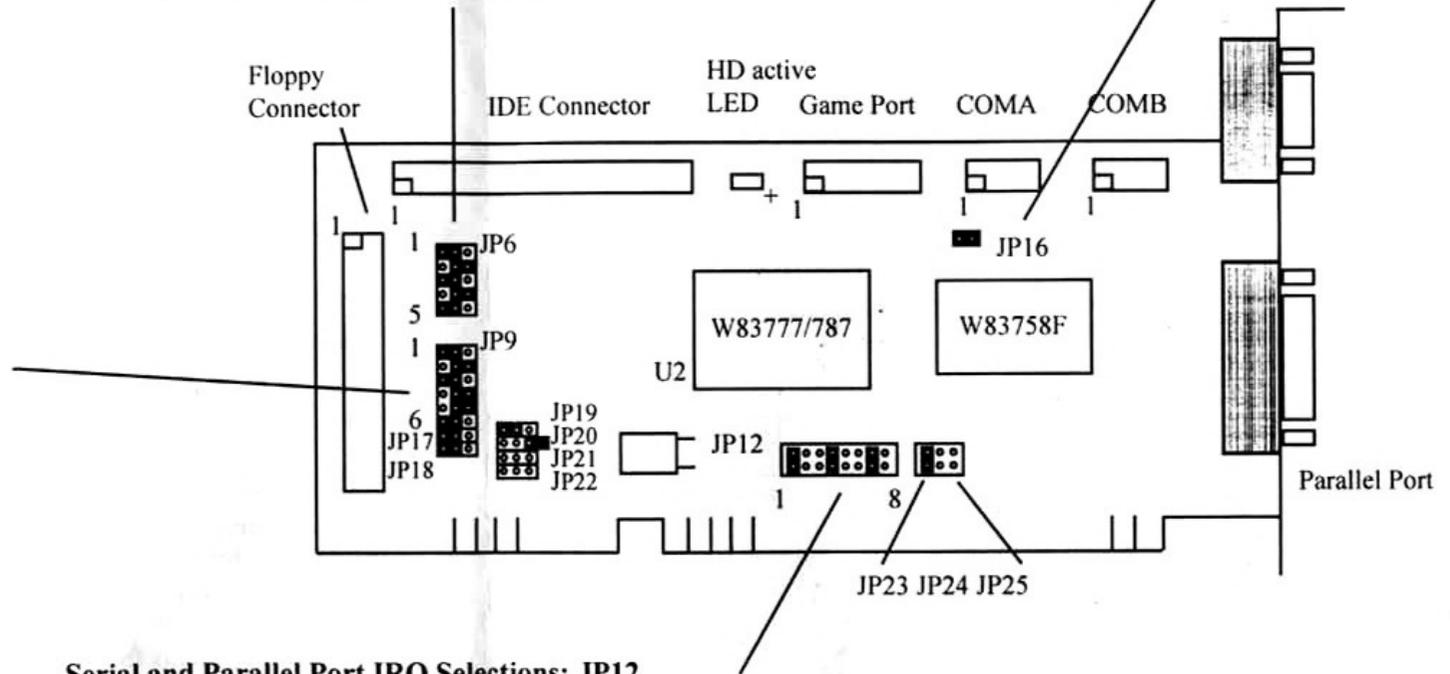

Serial and Parallel Port IRQ Selections: JP12

JP12-1,2,3	Serial Port 1 COMA
1 2 3	<u>IRQ4</u> *
1 2 3	IRQ3
1 2 3	IRQ5

JP12-4,5,6	Serial Port 2 COMB
4 5 6	<u>IRQ3</u> *
4 5 6	IRQ4
4 5 6	IRQ5

IRQ4 is generally reserved for COM1 and COM3.
IRQ3 is generally reserved for COM2 and COM4.
IRQ7 is generally reserved for Parallel Port.

JP12-7,8	Parallel Port
7 8	<u>IRQ7</u> *
7 8	IRQ5