


Operating Instructions

MULTI I/O CARD

ATIO-VB

Before operating this unit, please read these instructions completely and retain it for future reference.

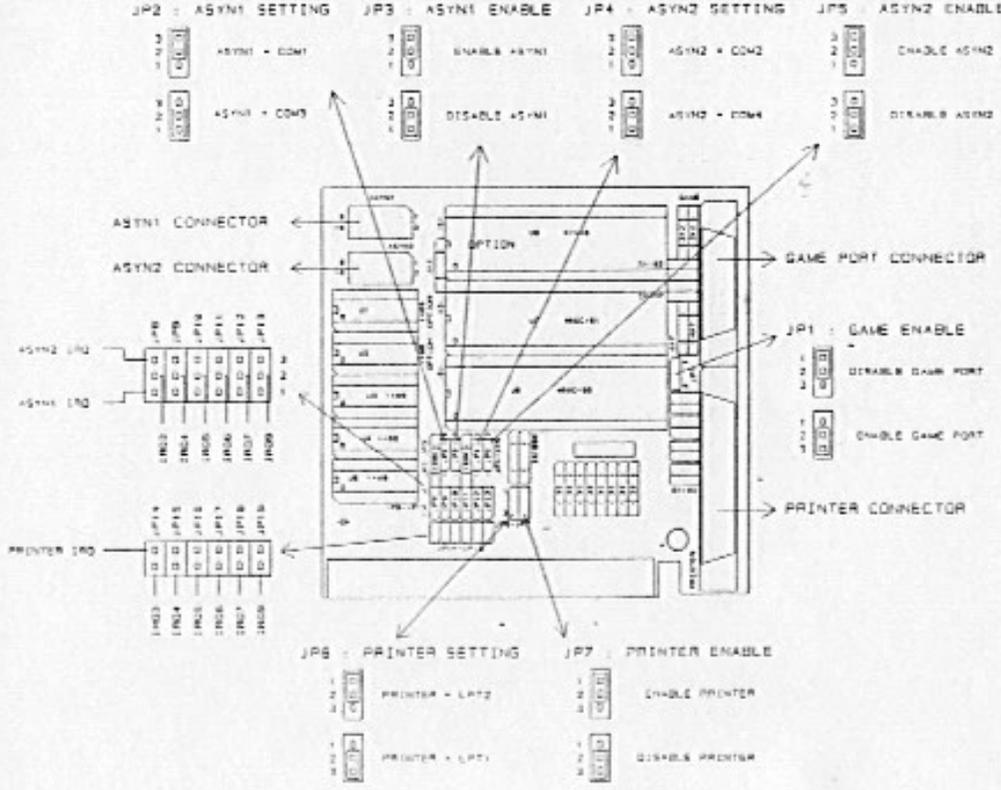

www.tdnservices.com

Specifications

- one printer port
- one serial port com1 or com3
- one optional serial port com2 or com4
- one games port
- selectable interrupt signals
- all functions can be enabled or disabled

Connector Name


ASYM1 : SERIAL 1 CONNECTOR

ASYM2 : SERIAL 2 CONNECTOR


GAME : GAME PORT CONNECTOR

Jumper Settings


JP1 : game enable

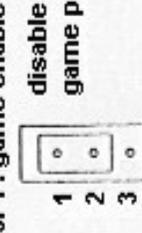


JP2 : asym1 setting

 





JP3 : asym1 enable

 


JP4 : asym2 setting

 


www.tdnservices.com

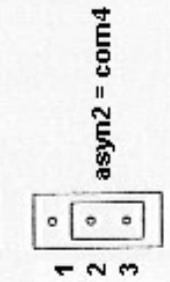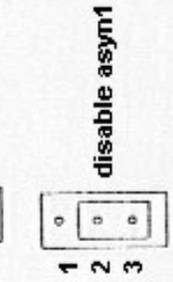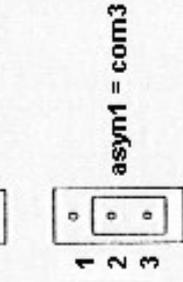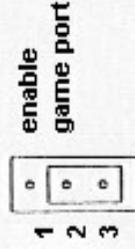


JP5 : asym2 enable

 

JP6 : printer setting

 

JP7 : printer enable

 

JP8 - JP13 : asym interrupt select

JP 8 9 10 11 12 13

asym2 irq ==>	•	•	•	•	•	•	•	•
asym1 irq ==>	•	•	•	•	•	•	•	•

irq 3 4 5 6 7 9

JP14 - JP19 : printer interrupt select

JP 14 15 16 17 18 19

printer irq ==>	•	•	•	•	•	•	•	•
irq	3	4	5	6	7	9		

Location of ports

game port : 200H-207H

printer port : lpt1 : 378H-37FH

lpt2 : 278H-27FH

asyn 1 port : com1 : 3F8H-3FFH

com3 : 3E8H-2FFH

asyn 2 port : com2 : 2F8H-3EFH

com4 : 2E8H-3EFH

irq 3,4,5,6,7,9


 
irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

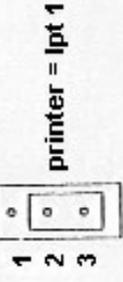

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9

irq 3,4,5,6,7,9