

COAX/3270

SWITCH SETTINGS:

1-2-3

1 1 1 = C0000H-C7FFFH
1 1 0 = C8000H-CFFFFH
1 0 1 = D0000H-D7FFFH
1 0 0 = D8000H-DFFFFH
0 1 0 = E0000H-E7FFFH
0 1 0 = E8000H-EFFFFH
0 0 1 = F0000H-E7FFFH
0 0 0 = F8000H-FFFFFH

INTERUPT LEVEL JUMPERS

E1-3 = IRQ 3 (STANDARD)
E2-4 = IRQ 4