


DC4000

DC4000 Jumper Settings

DC4000 General Layout

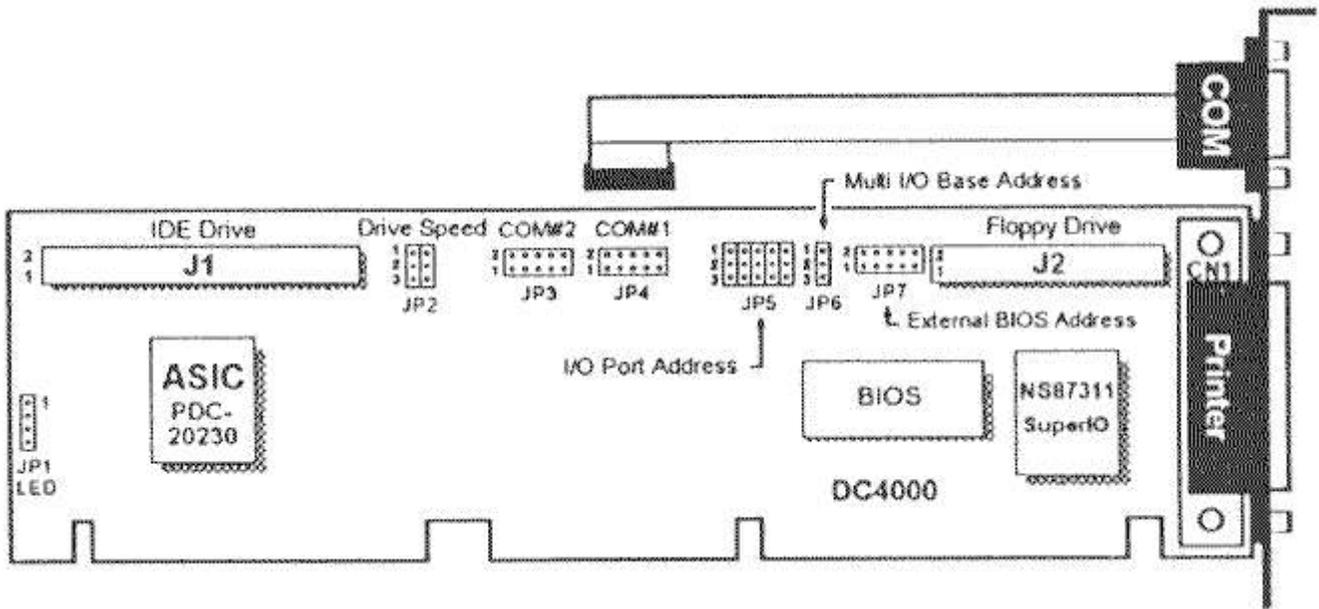

DC4000 Ext. BIOS Address

2468A	BIOS address	2468A	BIOS address	2468A	BIOS address
13579	DE000	01101	D2000	xxxx0	disabled
00011	DC000	01111	D0000		
00101	DA000	10001	CE000		0 = open, jumper out
00111	D8000	10011	CC000		1 = short, jumper in
01001	D6000	10101	CA000		x = don't care
01011	D4000	10111	C8000		

Table 1. JP7 External BIOS address settings

DC4000 Serial, Parallel, Printer Ports and Floppy

Configuration jumpets					Activated functions			
<input type="checkbox"/> = 0		<input type="checkbox"/> = 1						
1	4	7	10	13	Floppy drive	serial port 1 (JP4)	serial port 2 (JP3)	printer port
2	5	8	11	14				
3	6	9	12	15				
0	0	0	0	0	PRI ²	COM1 ³	COM2	LPT2 ⁴
1	0	0	0	0	PRI	COM1	COM2	LPT1
0	1	0	0	0	PRI	COM1	COM2	LPT1
1	1	0	0	0	PRI	COM3	COM4	LPT1
0	0	1	0	0	PRI	COM2	COM3	LPT2
1	0	1	0	0	PRI	COM3	COM4	LPT2
0	1	1	0	0	PRI	COM1		LPT2
1	1	1	0	0	PRI	COM1		LPT1
0	0	0	1	0	PRI	COM1		LPT1
1	0	0	1	0	PRI	COM3		LPT1
0	1	0	1	0	PRI	COM3		LPT2
1	1	0	1	0	PRI	COM3		LPT2
0	0	1	1	0	PRI	COM1	COM2	LPT2
1	0	1	1	0	PRI	COM1	COM2	LPT1
0	1	1	1	0	PRI	COM3	COM4	LPT1
1	1	1	1	0	PRI	COM2	COM3	LPT2
0	0	0	0	1	PRI			LPT2
1	0	0	0	1	PRI			LPT1
0	1	0	0	1	PRI			LPT1
1	1	0	0	1	PRI			LPT2
0	0	1	0	1		COM1	COM2	LPT2
1	0	1	0	1		COM1	COM2	LPT1
0	1	1	0	1		COM3	COM4	LPT1
1	1	1	0	1		COM2	COM3	LPT2
0	0	0	1	1	PRI	COM1	COM2	LPT2
1	0	0	1	1	PRI	COM1	COM2	LPT1
0	1	0	1	1	SEC ⁵	COM1	COM2	LPT1
1	1	0	1	1	PRI	COM3	COM4	LPT1
0	0	1	1	1	PRI	COM2	COM3	LPT2
1	0	1	1	1	SEC	COM3	COM4	LPT2
0	1	1	1	1	PRI			
1	1	1	1	1		NONE		

Table 4. JP5 settings

Drivers

Filename	Size	Description
2000-OS2.ZIP	17,220	Driver V2.10a for OS/2 2.x for DC2000/4000
2000.EXE	37,917	Drivers & Utilities V1.5a (Complete Set) for DC2000/4000
UNIX2000.EXE	34,588	UNIX Drivers for DC2000/4000