

## Zip Zoom SCSI Accelerator Settings

### Default Settings:

| PARAMETER:              | DEFAULT SETTING:      |
|-------------------------|-----------------------|
| SCSI Disconnection      | Enabled               |
| SCSI Address            | 7                     |
| SCSI Parity             | Enabled               |
| Terminators             | Permanently Installed |
| Interrupt Channel (IRQ) | 11                    |
| I/O Port Address        | 340h-35Fh             |

### Changing the Port Address:

If the ALT pin is not jumpered or left hanging on one post the Port Address is: 340h-35Fh. If the ALT pin is jumpered the Port Address is: 140h-15Fh

### Changing IRQ Settings:

If no jumper is on I9, I10, I11, or I12 or if the jumper is on one post: No IRQ

- I9 jumper set: IRQ 9
- I10 jumper set: IRQ 10
- I11 jumper set: IRQ 11
- I12 jumper set: IRQ 12

*NOTE: The Iomega Zip software for Windows/DOS does not use interrupts.*

### Zip Zoom SCSI Accelerator Board Layout

| LOCATION: | DESCRIPTION:  |
|-----------|---|
| J1        | 50 internal SCSI connector block<br>(not implemented) |
| J2        | Jumper block  |
| J3        | 25-pin ribbon cable block                             |
| RN1       | Terminator  |
| R1, R4    | Resistor Locations                                    |
| U1        | AIC-6360 Rev. C PIO Chip                              |

