

JUMPER SETTINGS

<u>Serial Port A</u>	<u>Address and IRQ Level</u>
JP5 Short	COM3
JP6 Short	COM1 *
JP7 Short	COM2
JP12 Short	COM4
J5 — J7/J12 all Opened	Disabled
JP1 Pin1-2 short	IRQ9
JP2 Pin1-2 short	IRQ3
JP3 Pin1-2 short	IRQ4 *
JP4 Pin1-2 short	IRQ5

<u>Serial Port B</u>	<u>Address and IRQ Level</u>
JP8 Short	COM2 *
JP9 Short	COM1
JP10 Short	COM4
JP13 Short	COM3
J8 — J10/J13 all Opened	Disabled
JP1 Pin2-3 Short	IRQ9
JP2 Pin2-3 Short	IRQ3 *
JP3 Pin2-3 Short	IRQ4
JP4 Pin2-3 Short	IRQ5

<u>Parallel Port</u>	<u>Address and IRQ Level</u>
J11-1 Short	LPT1
J11-2 Short	LPT2 *
J11-3 Short	LPT3
J11 all Opened	Disabled
J14 Pin1-2 Short	IRQ7 *
J14 Pin2-3 Short	IRQ5

* : Factory Settings