

Jumpers setting for KW-556F

For PortA (CN5)

COM1	JP6-1 pin 2-3 short
	JP6-2 pin 1-2 short
COM3	JP6-1 pin 1-2 short
	JP6-2 pin 2-3 short
COM4	JP6-1 pin 2-3 short
	JP6-2 pin 2-3 short
Disable	JP6-1 pin 1-2 short
	JP6-2 pin 1-2 short
IRQ3	JP8-2 short
IRQ4	JP8-1 short
IRQ5	JP8-3 short

For PortA (CN4)

COM2	JP6-3 pin 2-3 short
	JP6-4 pin 1-2 short
COM3	JP6-3 pin 2-3 short
	JP6-4 pin 2-3 short
COM4	JP6-3 pin 1-2 short
	JP6-4 pin 2-3 short
Disable	JP6-1 pin 1-2 short
	JP6-2 pin 1-2 short
IRQ3	JP8-4 short
IRQ4	JP8-5 short
IRQ5	JP8-6 short

Parallel Port (CN6)

LPT1 (378H)*	JP6-5 Pin 1-2 short
	JP6-6 Pin 2-3 short
LPT2 (278H)	JP6-5 Pin 2-3 short
	JP6-6 Pin 1-2 short
Disable	JP6-5 Pin 1-2 short
	JP6-6 Pin 1-2 short
IRQ7*	JP8-7 short
IRQ5	JP8-8 short

HDC

primary	JP7-1 pin1-2 short
secondary	JP7-1 pin2-3 short

FDC

primary	JP7-3 pin1-2 short
secondary	JP7-3 pin2-3 short

FLOPPY DISK DRIVERS A&B CHNAGE MODE

AB change mode	JP7-2 pin1-2 short
NORMAL	JP7-2 pin2-3 short

ENABLE/DISABLE IDE-BUS HDD/FDD

HDD enable	JP7-4 pin2-3 short
HDD disable	JP7-4 pin1-2 short
FDD enable	JP7-5 pin 2-3 short
FDD disable	JP7-5 pin 1-2 short

---Fin ----