

LONGSHINE LCS-6924

Jumper JP7, JP1

HDD Jumper Setting

HDD Controller	
HDC Exist	JP7 close *
HDD Not Exist	JP7 open
HDD primary mode	JP1 1-2 *
HDD secondary mode	JP1 2-3

Jumper JP2, JP3

HDD Speed Settings

HDD Speed	JP3	JP2
Low Speed	2-3	2-3
Mid Speed	2-3	1-2*
High Speed	1-2	1-2

Note:

Refer to the README file on the LCS-6924 utility diskette.

Jumper JP5 (A, B, C, D)

Serial Port I/O Settings

Serial Ports	A	B	C	D
COM 1	1-2*	1-2*	-	-
COM 2	-	-	1-2*	1-2*
COM 3	1-2	2-3	-	-
COM 4	-	-	1-2	2-3
Disable COM 1/3	2-3	-	-	-
Disable COM 2/4	-	-	2-3	-

Jumper JP5 (E, F, G)

Parallel (Printer) Port Settings

Printer	E	F	G
PRN 2	1-2*	1-2*	1-2*
PRN 3	1-2	2-3	2-3
Disable	2-3	-	-

Jumper JP5 (H)

=====

FDD Jumper Setting

HDD	H
Primary	1-2*
Secondary	2-3

Jumper JP5 (I)

=====

Game Port Setting

Game	I
Enable	1-2*
Disable	2-3

Jumper JP6

=====

Parallel (Printer) Port's Data Direction Settings

	JP6
1-2	Parallel data input only
2-3	Parallel data output only *

* = Default