



### JP7 Jumpers

1 & 4 = HDD

L L 1F0-1F7 (DEFAULT)

H L 170-177

L H DISABLE IDE

H H DISABLE IDE

2 & 5 = FDC

L L 3F0-3F7 (DEFAULT)

H L 370-377

L H DISABLE

H H DISABLE

3 & 6 = UNKNOWN

### JP6 Jumpers

1 & 2 = UART A

L L COM4 (2E8H)

H L COM3 (3E8H)

L H COM1 (3F8H) (DEFAULT)

H H DISBALE

3 & 4 = UART B

L L COM3 (3E8H)

H L COM4 (2E8H)

L H COM2 (2F8H) (DEFAULT)

H H DISABLE

5 & 6 = LPT

L L LPT3 (3BCH)

H L LPT2 (278H)

L H LPT1 (378H) (DEFAULT)

H H DISABLE

JP8 & 4 = UNKNOWN