

**Default Setting**

JP1	JP2	JP3	JP4	JP5	JP6	JP7	JP8	JP9	JP10	JP11	JP12	JP13	JP14	JP15	JP16	JP17	JP18	JP19	JP20	
COM1	COM2	PRT ADDR	PRT Mode	UART 0A	IDE HX	IDE E.D	FDD E.D	GAME E.D												
JP14	JP18																			
IRQ14	IRQ15	IRQ3	IRQ7	IRQ9	IRQ10	IRQ11	IRQ12	DMA												

Mode Selection

JP7	JP8	JP7	JP8	JP7	JP8	JP7	JP8
SPP	ECP	EPP	EXT2FDD				

**ECP DMA CHANNEL SET**

JP5	JP6	JP5	JP6
JP16	DMA CH3	JP16	DMA CH1

**COM PORT IRQ SETTING**

**JP19 SIO1 IRQ**

3	4	5	7	9	10	11	12
---	---	---	---	---	----	----	----

**JP20 SIO2 IRQ**

3	4	5	7	9	10	11	12
---	---	---	---	---	----	----	----

**SIO1 Address**

JP1	JP2	JP3	JP4	JP1	JP2	JP1	JP2	JP1	JP2	JP1	JP2
3	2	1		3	2	1		3	2	1	
Default	COM1	COM3	COM4	COM4	COM3	Disable					

**SIO2 Address**

JP1	JP2	JP3	JP4	JP3	JP4	JP3	JP4	JP3	JP4	JP3	JP4
3	2	1		3	2	1		3	2	1	
Default	COM2	COM4	COM3	COM3	COM2	Disable					

**IDE Select**

JP10	JP11	JP10	JP11	JP10	JP11	JP10	JP11				
3	2	1	3	2	1	3	2	1	3	2	1
Primary FDD	Secondary FDD	Enable GAME	Disable GAME								

**IDE IRQ**

JP14	JP14	JP15						
3	2	1	3	2	1	3	2	1
IRQ14	IRQ15	Printer Port IRQ						

IRQ 5, IRQ 7, IRQ 9, IRQ 10, IRQ 11, IRQ 12