

PS PORT

ASSY PA1010414-xx

SWITCH SETTINGS

```

+-----+
|1|2|3|4|5|6|      SW1: 1 = ON, 0 = OFF
+-----+
| | | | | +----- Parallel Port Address
| | | | | 0 1      LPT1 - 3BCH: Used only if no Monochrome/Printer Adapter
| | | | | 1 0      LPT2 - 378H: Is LPT2 if Monochrome/Printer is present
| | | | | 1 1      LPT3 - 278H
| | | | | 0 0      Disabled
| | | | |
| | | | | +----- Second Serial Port Address
| | | | | 0 1      COM1 - 3F8H & Jumper E11-E13 for IRQ4
| | | | | 1 0      COM2 - 2F8H & Jumper E13-E15 for IRQ3*
| | | | | 1 1      COM3 - 3E8H
| | | | | 0 0      Second Serial Port Disabled
| | | | |
+----- First Serial Port Address
0 1      COM1 - 3F8H & Jumper E39-E41 for IRQ4*
1 0      COM2 - 2F8H & Jumper E41-E43 for IRQ3
1 1      COM3 - 3E8H
0 0      First Serial Port Disabled

```

JUMPER SETTINGS

Device	Description	Configuration
Parallel Port	Interrupt Level IRQ7	E35-E37* *Factory settings
	Interrupt Level IRQ5	E37-E38
Parallel Port	Unidirectional Port Control	E8-E10*
	Bidirectional Port Control	E7-E8
	Bidirectional/Internal Ctrl	E4-E6*
	Bidirectional/External Ctrl	E5-E6
Parallel Port	Centronics Interface	E1-E3*
	Dataproducts Interface	E1-E2
Serial Port 1	RS-232 Interface	E25-E26*
	TTL Interface	E26-E28
	Ring Indicator connected	E29-E30*
	+5V on pin 9	E27-E29
Serial Port 2	RS-232 Interface	E20-E22*
	TTL Interface	E18-E20
	Ring Indicator connected	E21-E23*
	+5V omn pin 9	E19-E21
Slot Selection	PC-XT short slot	E31-E32
	Other installations	E31-E33*

ADDING 2ND SERIAL PORT TO THE PS PORT

Add National Semiconductor or equivalent NS16450 (U2), SN75154N (U1), and MC1488N (U5). Configure the port accordingly.

EXTERNAL EQUIPMENT CONNECTIONS

- J1 DB25 Female Parallel Printer Port Connector
- J2 DB9 Male Serial Port 1 Connector
- J3 10-Pin Berg header for optional Serial Port 2 cliffhanger cable

10-Pin BERG HEADER PINOUTS

1	CD	6	CTS
2	DSR	7	DTR
3	RXD	8	RI
4	RTS	9	SGRND
5	TXD		

DB9 MALE CONNECTOR PINOUTS

1	CD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	SGRND		

□