

BoB/MG DISPLAY ADAPTER Assy.# PA1010419

There are no switches to set on this card.

MODE	JUMPERS	Comments
Monochrome	E29-E30 Monitor E35-E36 Adapter E6-E7 Char. set	This is the setting for IBM Monochrome Display Adapter emulation .
Color	E28-E29 Monitor E34-E35 Adapter E11-E12 Char. set	This is the setting for IBM Color/Graphics Display Adapter emulation .
Gray - Scale	E29-E30 Monitor E34-E35 Adapter E6-E7 Char. Set	This is the setting for displaying color/graphics software on a monochrome monitor.

Jumper E25-E26

E32-E33 for Printer Address LPT1: (3BCh)

E26-E27
E31-E32
for Printer Address LPT2: (378h)

E25-E26
E31-E32 for
Printer Address LPT3: (278h)

E26-E27
E32-E33 to Disable the
Printer Port.

E37-E38 selects IRQ7 as the interrupt level for the printer port. (IBM standard)