



S1342 Yucatan V1.8 Jumper Settings

IDE Address

- J17 1-2 Disable VL IDE
2-3 Enable VL IDE (default)
- J18 J19 IDE Address
1-2 2-3 Both IDE Channel Enable(default)
2-3 1-2 Secondary IDE Channel Only
2-3 2-3 Primary IDE Channel Only
- J7 OFF I/O Ready not used (default)
ON I/O Ready for both IDE channel

IDE Wait State

- J20 J21 J22 IDE Wait State
1-2 2-3 1-2 VL bus speed less or equal to 33Mhz
2-3 1-2 2-3 VL Bus speed greater than 33Mhz
2-3 2-3 2-3 General Setting for All VL Bus Speeds (default)

Floppy Port

- J8 1-2 Disable Floppy
2-3 Enable Floppy (default)
- J26 1-2 Use 370 for Floppy port
2-3 Use 3F0 for Floppy port (default)
- J16 1-2 Floppy Enhanced Mode
2-3 Normal Compatible Mode (default)

- J4 J5 J6 Floppy Channel
OFF OFF OFF Primary Floppy Channel only (default)
ON ON ON Enable Both Floppy Channel

Parallel Port

- J9 J27 Printer Port Address
1-2 1-2 LPT 3: 3BC
1-2 2-3 Disable LPT port
2-3 1-2 LPT 2: 278
2-3 2-3 LPT 1: 378 (default)
- J35 J36 LPT Interrupt
OFF OFF No IRQ for LPT
ON OFF IRQ 5 for LPT
OFF ON IRQ 7 for LPT (default)
- J28 J29 Advanced LPT Mode
1-2 1-2 ECP + EPP + AT mode
1-2 2-3 EPP + AT mode
2-3 1-2 ECP + AT mode
2-3 2-3 AT mode only (default)
- J38 J39 J40 J41 J42 ECP Mode Setting

Text Links:

- [BIOS Support](#)
- [CPU Support](#)
- [Drivers Support](#)
- [General FAQs](#)
- [Motherboard FAQs](#)
- [Manuals](#)
- [Memory Support](#)
- [Technology Overview](#)

- [Home](#)
- [What's New](#)
- [Products](#)
- [Support](#)
- [Company](#)

ON	ON	ON	OFF	OFF	ECP mode uses DMA3
ON	OFF	OFF	ON	ON	ECP mode used DMA1
OFF	OFF	OFF	OFF	OFF	No ECP mode (default)

Serial Port 1

J10	J11	Serial Port 1
1-2	1-2	Disable Serial Port 1
1-2	2-3	COM3: 3E8
2-3	1-2	COM2: 2F8
2-3	2-3	COM1: 3F8 (default)

J34	OFF	No IRQ for Serial port 1
	ON	IRQ 4 for Serial port 1

Serial Port 2

J12	J13	Serial Port 2
1-2	1-2	Disable Serial Port 2
1-2	2-3	COM1: 3F8
2-3	1-2	COM4: 2E8
2-3	2-3	COM2: 2F8 (default)

J33	OFF	No IRQ for Serial port 2
	ON	IRQ 3 for Serial port 2

Game Port

J37	Open	Disable
	Close	Enable (default)

Serial Port Interrupt

J32	J33	J34	J35	Serial 1	Serial 2
OFF	ON	ON	OFF	IRQ 4	IRQ 3
OFF	OFF	ON	OFF	IRQ 4	No IRQ
OFF	ON	OFF	OFF	No IRQ	IRQ 3