



S1346 Yosemite Jumper Settings

IDE Address

- J1 1-2 Disable VL IDE
2-3 Enable VL IDE (default)
- J10 1-2 Enable Both IDE Channel (default)
2-3 Primary IDE Channel only
- J20 OFF I/O Ready not used (default)
ON I/O Ready for both IDE channel

IDE Wait State

- J2 J3 J4 IDE Wait State
- 1-2 2-3 1-2 VL bus speed less or equal to 33Mhz
- 2-3 1-2 2-3 VL Bus speed greater than 33Mhz
- 2-3 2-3 2-3 General Setting for All VL Bus Speeds (default)

Floppy Port

- J12 1-2 Disable Floppy
2-3 Enable Floppy (default)
- J13 1-2 Use 370 for Floppy port
2-3 Use 3F0 for Floppy port (default)
- J11 1-2 Change A/B Drive Assignment
2-3 Normal Floppy Assignment (default)

Parallel Port

- J5 J6 Printer Port Address
- 1-2 1-2 LPT 2: 278
- 1-2 2-3 LPT 3: 3B8
- 2-3 1-2 Disable LPT
- 2-3 2-3 LPT 1: 378 (default)
- J23 J24 LPT Interrupt
- OFF OFF No IRQ for LPT
- ON OFF IRQ 5 for LPT
- OFF ON IRQ 7 for LPT (default)
- J14 J15 Advanced LPT Mode
- 1-2 1-2 ECP + EPP + AT mode
- 1-2 2-3 EPP + AT mode
- 2-3 1-2 ECP + AT mode
- 2-3 2-3 AT mode only (default)
- J17 J19 J16 J18 ECP Mode Setting
- ON ON OFF OFF ECP mode uses DMA3
- OFF OFF ON ON ECP mode used DMA1
- OFF OFF OFF OFF OFF No ECP mode (default)

Serial Port 1

- J7 J8 Serial Port 1

Text Links:

- [BIOS Support](#)
- [CPU Support](#)
- [Drivers Support](#)
- [General FAQs](#)
- [Motherboard FAQs](#)
- [Manuals](#)
- [Memory Support](#)
- [Technology Overview](#)

- [Home](#)
- [What's New](#)
- [Products](#)
- [Support](#)
- [Company](#)

1-2 1-2 COM3: 3E8
1-2 2-3 Disable Serial Port 1
2-3 1-2 COM4: 2E8
2-3 2-3 COM1: 3F8 (default)

J22 OFF No IRQ for Serial port 1
ON IRQ 4 for Serial port 1

Serial Port 2

J9 J10 Serial Port 2
1-2 1-2 COM4: 2E8
1-2 2-3 Disable Serial Port 2
2-3 1-2 COM3: 3E8
2-3 2-3 COM2: 2F8 (default)

J21 OFF No IRQ for Serial port 2
ON IRQ 3 for Serial port 2

Game Port

J25 Open Disable
Close Enable (default)

Serial Port Interrupt

J21	J22	J23	Serial 1	Serial 2
ON	ON	OFF	IRQ 4	IRQ 3
ON	OFF	OFF	IRQ 4	No IRQ
OFF	ON	OFF	No IRQ	IRQ 3