



S1372 Yakima Jumper Settings

IDE Channel

- J23 1-2 Enable IDE Channel
- 2-3 Diabile IDE Channel (default)
- J22 1-2 Set CN5 as Secondary IDE Channel
- 2-3 Set CN5 as Primary IDE Channel (default)
- J24 1-2 Use IRQ 15 for 2nd IDE Channel
- 2-3 Use IRQ 14 for 1st IDE Channel (default)

Floppy Drive

- J20 1-2 Disabole Floppy Drive
- 2-3 Enable Floppy Drive (default)
- J21 1-2 Secondary Floppy Channle use 370-7
- 2-3 Primary Floppy Channel use 3F0-7 (default)

Parallet Port

- J15 J14 Printer Port Address
- 1-2 1-2 LPT 3: 3BC-3BE
- 1-2 2-3 Disable LPT port
- 2-3 1-2 LPT 2: 278-27F
- 2-3 2-3 LPT 1: 378-37f (default)

- J5 open No IRQ to LPT port
- close IRQ 7 for LPT port (default)

Serial Port 1

- J16 J17 Serial Port 1 Address
- 1-2 1-2 Disable serial port 1
- 1-2 2-3 COM 3: 3E8
- 2-3 1-2 COM 2: 2F8
- 2-3 2-3 COM 1: 3F8 (default)

- J3 open NO IRQ for Serial port 1
- close IRQ 4 for Serial port 1 (default)

Serial Port 2

- J18 J19 Serial Port 2 Address
- 1-2 1-2 Disable Serial Port 2
- 1-2 2-3 COM 4: 2E8
- 2-3 1-2 COM 1: 3F8
- 2-3 2-3 COM 2: 2F8 (default)

- J2 open NO IRQ for Serial Port 2
- close IRQ 3 for Serial Port 2

Game Port

- J11 Open Disable
- close Enable (default)

LPT Port Interrupt

- J34 J35 LPT Interrupt

Text Links:

- [BIOS Support](#)
- [CPU Support](#)
- [Drivers Support](#)
- [General FAQs](#)
- [Motherboard FAQs](#)
- [Manuals](#)
- [Memory Support](#)
- [Technology Overview](#)

- [Home](#)
- [What's New](#)
- [Products](#)
- [Support](#)
- [Company](#)

ON OFF no IRQ
ON OFF IRQ 5
OFF ON IRQ 7 (default)

Advanced LPT Port

J12 J13 LPT Mode
1-2 1-2 ECP + EPP + AT Printer
1-2 2-3 EPP + AT Printer
2-3 1-2 ECP + AT Printer
2-3 2-3 AT Printer (default)

J6 J7 J8 J9 J10 ECP Mode DMA Setting
ON OFF OFF ON ON ECP mode uses DMA 3
ON ON ON OFF OFF ECP mode uses DMA 1
OFF OFF OFF OFF OFF no ECP mode (default)

Serial Port Interrupt

J1 J2 J3 J4 Serial 1 Serial 2
OFF ON ON OFF IRQ 4 IRQ 3
OFF OFF ON OFF IRQ 4 NO IRQ
OFF ON OFF OFF NO IRQ IRQ 3