


# Multi CD-ROM AT-BUS Card (4 in 1)

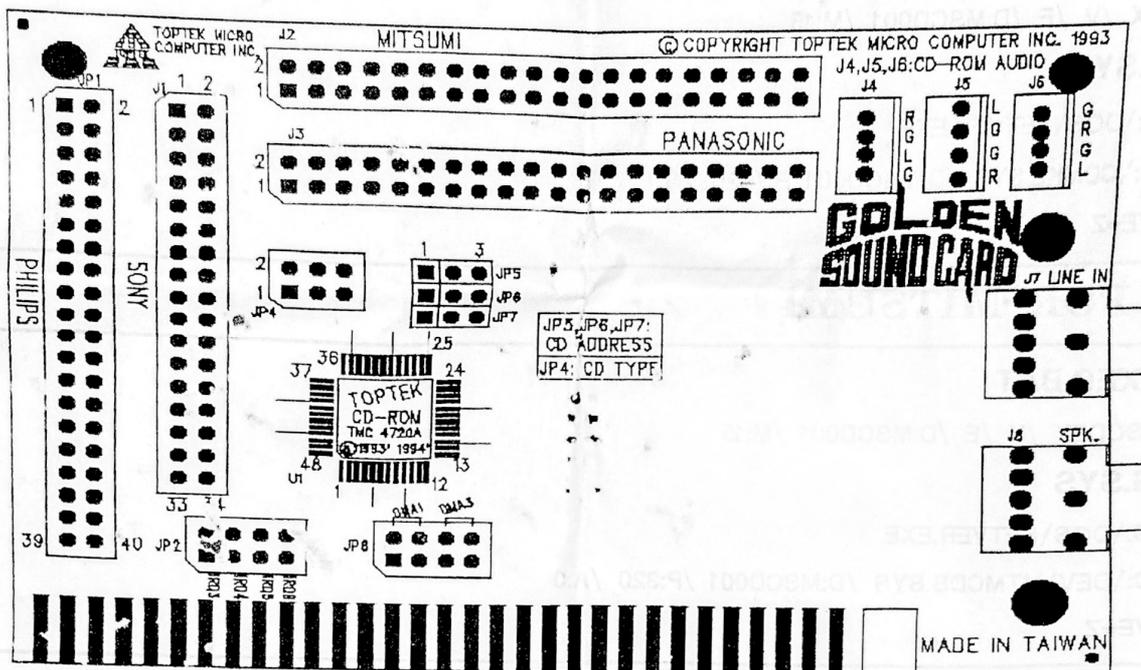

PIN		Description	
J1, J2, J3, JP1		CD-ROM Interface connector; J1: SONY or WEARNES, J2: MITSUMI J3: PANASONIC, JP1: PHILIPS	
J4, J5, J6		CD AUDIO IN J4: "G-L-G-R", J5: "R-G-G-L", J6: "L-G-R-G"	
J7	LINE-IN	J8	SPEAKER OUT
<b>DMA (JP8)</b>			
	DMA=1		DMA=3
<b>IRQ (JP2)</b>			
	IRQ=3		IRQ=5
	IRQ=4		IRQ=9
<b>CD ADDRESS (JP5, JP6, JP7)</b>			
	200H		300H
	240H		340H
	220H		320H
	260H		360H
<b>CD TYPE (JP6)</b>			
	MITSUMI		SONY, WEARNES, OR PHILIPS
	PANASONIC		

## SET FOR PANASONIC

### AUTOEXEC.BAT

C:\MSCDEX /V /E /D:MSCD001 /M:15

### CONFIG.SYS

DEVICE=C:\DOS\SETVER.EXE

DEVICE=C:\CDMKE.SYS /D:MSCD001 P:/320 /N:1

LASTDRIVE=Z

## SET FOR MITSUMI

### AUTOEXEC.BAT

C:\BIN\MSCDEX /V /E /D:MSCD001 /M:15

### CONFIG.SYS

DEVICE=C:\DOS\SETVER.EXE

DEVICE=C:\DEV\MTMCDS.SYS /D:MSCD001 /P:320 /A:0

LASTDRIVE=Z

## SET FOR PHILIPS

### AUTOEXEC.BAT

C:\CDROM \MSCDEX.EXE /D:MSCD0001 /M:4

### CONFIG.SYS

DEVICE=C:\DOS\SETVER.EXE

DEVICE=C:\CDROM\CR940.SYS /D:MSCD0001 /M:S /P:320

LASTDRIVE=Z

## SET FOR SONY

### AUTOEXEC.BAT

C:\BIN\MSCDEX /V /E /D:SONY\_000 /M:15

### CONFIG.SYS

DEVICE=C:\DOS\SETVER.EXE

DEVICE=C:\DEV\SLCD.SYS /D:SONY\_000 /B:320 /M:P /V /C

LASTDRIVE=Z

## SET FOR WEARNES

### AUTOEXEC.BAT

C:\CDD\MSCDEX.EXE /D:WP\_CDROM

### CONFIG.SYS

DEVICE=C:\DOS\SETVER.EXE

DEVICE=C:\CDD.SYS /D:WP\_CDROM /P:320

LASTDRIVE=Z