


# AST RESEARCH, INC. MID-SIZE BRAVO 486/33 (MODEL 202385-002)

<b>Processor</b>	80486DX
<b>Processor Speed</b>	33MHz
<b>Chip Set</b>	AST
<b>Max. Onboard DRAM</b>	16MB
<b>SRAM Cache</b>	None
<b>BIOS</b>	AST
<b>Dimensions</b>	340mm x 245mm
<b>I/O Options</b>	Bus mouse port, floppy drive interface
	IDE interface, parallel port, serial port (2), SVGA port
<b>NPU Options</b>	4167

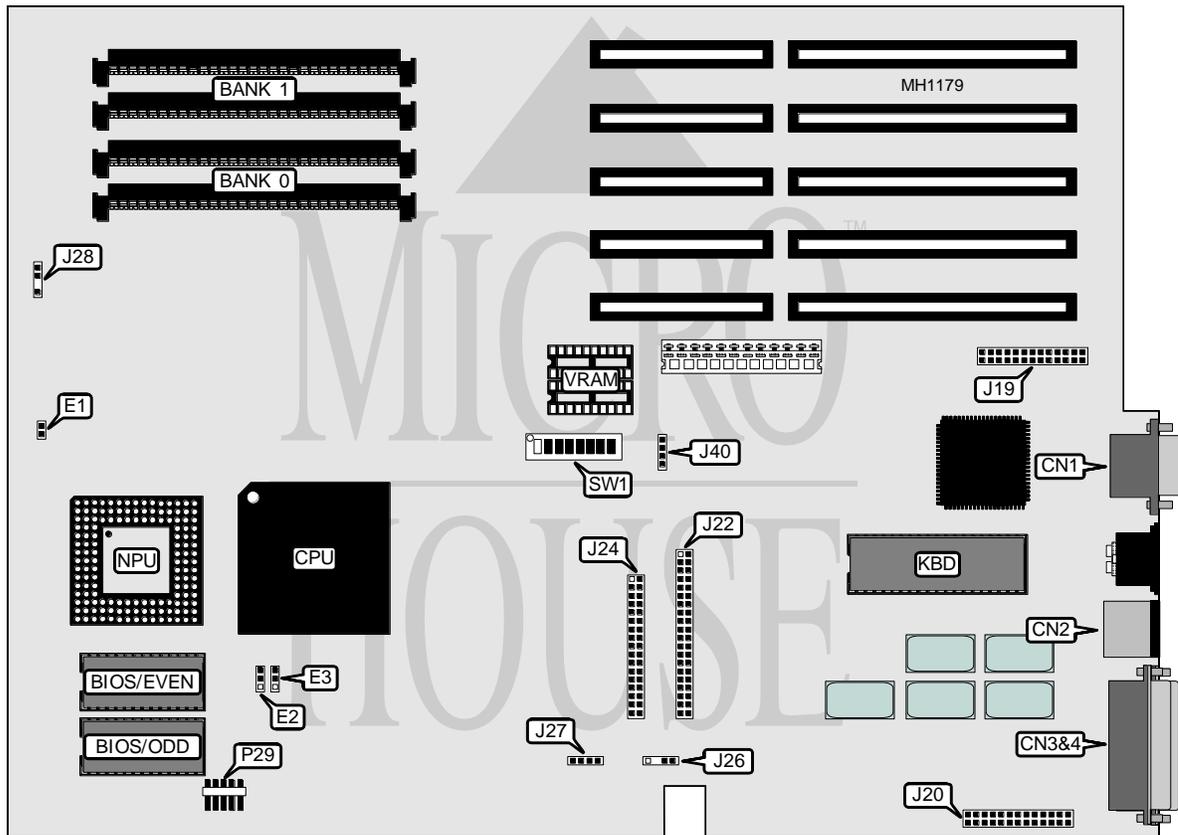

CONNECTIONS			
Purpose	Location	Purpose	Location
SVGA port	CN1	Floppy drive interface	J24
Bus mouse port	CN2	External battery	J26
Serial port 1 (COM1)	CN3	Speaker	J27
Parallel port	CN4	Fan power	J28
VGA pass-through	J19	Front panel switches & LEDs	P29
Serial port 2 (COM2)	J20	IDE interface LED	J40
IDE interface	J22		

Continued on next page . . .

## AST RESEARCH, INC.

## MID-SIZE BRAVO 486/33 (MODEL 202385-002)

... continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Jumper/Switch	Position
í Parity check enabled	E1	closed
Parity check disabled	E1	open
í Factory configured - do not alter	E2	pins 2 & 3 closed
í Factory configured - do not alter	E3	pins 2 & 3 closed
í VGA port enabled	SW1/switch 1	closed
VGA port disabled	SW1/switch 1	open
í Password check enabled	SW1/switch 2	open
Password check disabled	SW1/switch 2	closed
í Factory configured - do not alter	SW1/switch 3	open
í Factory configured - do not alter	SW1/switch 4	open
í Factory configured - do not alter	SW1/switch 5	closed
í Factory configured - do not alter	SW1/switch 6	closed
í Monitor type select PS/2 style	SW1/switch 7	closed
Monitor type select AT style	SW1/switch 7	open
í Monitor type select VGA or fixed-frequency	SW1/switch 8	open
Monitor type select multi-frequency	SW1/switch 8	closed

DRAM CONFIGURATION		
Size	Bank 0	Bank 1
2MB	(2) 1M x 9	NONE
4MB	(2) 1M x 9	(2) 1M x 9
8MB	(2) 4M x 9	NONE
10MB	(2) 4M x 9	(2) 1M x 9
16MB	(2) 4M x 9	(2) 4M x 9

VRAM CONFIGURATION	
Size	VRAM
256KB	NONE
512KB	(2) 44256