

## Here are some new CPU Jumper Setting

<b>CPU Type</b>	<b>AMD 3.3V Enhanced CPU</b>	<b>AMD 3.3V X5-133 (P5-133) CPU</b>	<b>CYRIX 486 DX CPU &amp; TI 486 DX4 CPU</b>	<b>CYRIX 5x86 3.3V CPU</b>
JP8	1-2	1-2	2-3	2-3
JP12	1-2	1-2	2-3	1-2
JP13	OPEN	OPEN	2-3	OPEN
JP18	1-2	1-2	2-3	2-3
JP19	1-2	1-2	1-2	1-2
JP24	4-5	4-5	2-3	4-5
JP25	2-3	2-3	1-2, 3-4	2-3
JP28	2-3	2-3	OPEN	2-3
JP29	1-2, 3-4	1-2, 3-4	2-3	1-2, 3-4
JP33	1-2, 3-4	1-2, 3-4	1-2, 3-4	1-2, 3-4
JP37	3-4	3-4	3-4	3-4
JP40	2-3	2-3	2-3	2-3
J11	CLOSE	CLOSE	OPEN	CLOSE
J13	CLOSE	CLOSE	OPEN	CLOSE
J14	OPEN	OPEN	OPEN	OPEN
JP78	1-2	1-2	1-2	1-2

--	--	--	--

Note: 3.45V CPU, U50 must be open (3-6), (4-5)  
3.45V AMD 486 DX2/66/80 CPU, J14 must be closed  
DX4-100 CPU, JP10 must be OPEN, other CPU closed  
AMD X5-133 CPU, JP44 close (1-2), other CPU open.