


The 6VIA82P Mainboard layout

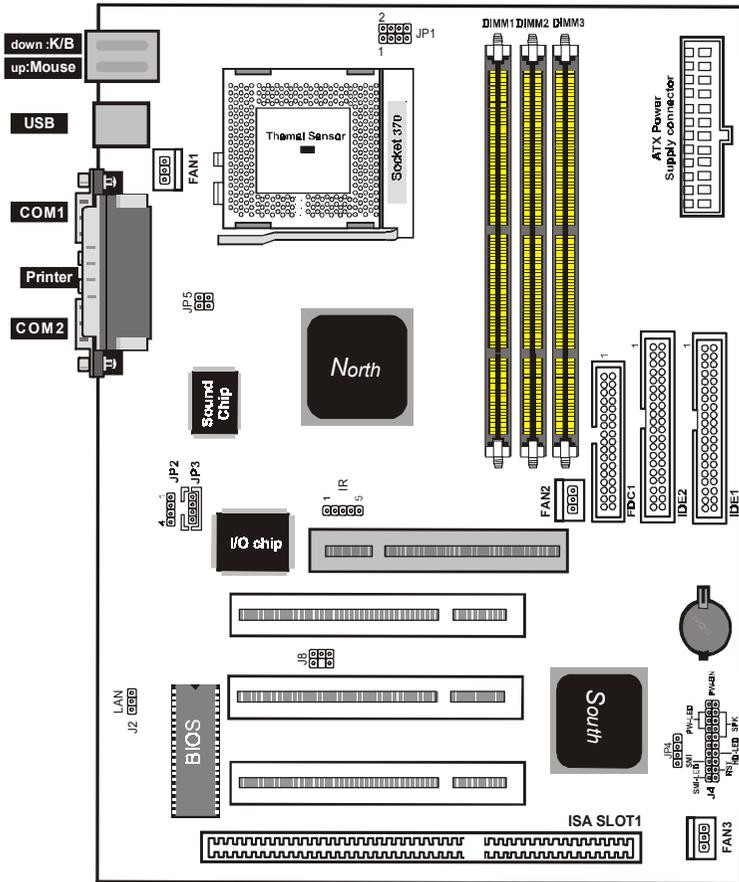

CPU/System Fan Connector:Fan1/2

Pin	Assignment
1	Ground
2	+12VDC
3	Signal

CPU/System Fan Connector:Fan3

Pin	Assignment
1	Ground
2	+12VDC
3	Ground

Wake-On LAN Header:J2

Pin	Assignment
1	5VSB
2	Ground
3	Signal

CPU Type Selector jumper : JP1

CPU Type Selecto	JP1				
66 MHZ	1-2	3-4	5-6	7-8	ON
100MHZ	1-2	3-4	7-8		ON
133MHZ	1-2	3-4			ON

CMOS Function Selection:JP4

JP4 CMOS Clear	
2-3 (default)	Normal
<small>P4 P3 P2 P1</small>	
3-4	Clear CMOS
<small>P4 P3 P2 P1</small>	
1-4	External Battery
<small>P4 P3 P2 P1</small>	

