



Jumper & Connector No.	Function
JP3	Onboard Audio Enable/Disable 1-2 Enable (Default) 2-3 Disable
JP6	Clear CMOS Data 1-2 Normal (Default) 2-3 Clear CMOS
J2	Audio / VGA Header
J3	CD-ROM Audio-in Connector
J5	Serial Dangle (Dallas Key)
FAN1	CPU Fan Connector

Jumper & Connector No.	Function
CN1	ATX Power Supply Connector
CN2	AT Power Supply Connector
CN3	USB Connector
CN4	COM 1 port (=fun.link)
CN5	COM 4 port (=modem)
CN6	COM 2 port (=Dataprint)
CN7	funworld I/O port (15-pin)
CN8	COM 3 port (=serial touchscreen controller)
CN9	funworld I/O port (25-pin)