


NEC TECHNOLOGIES, INC.

PowerMate

Configuration

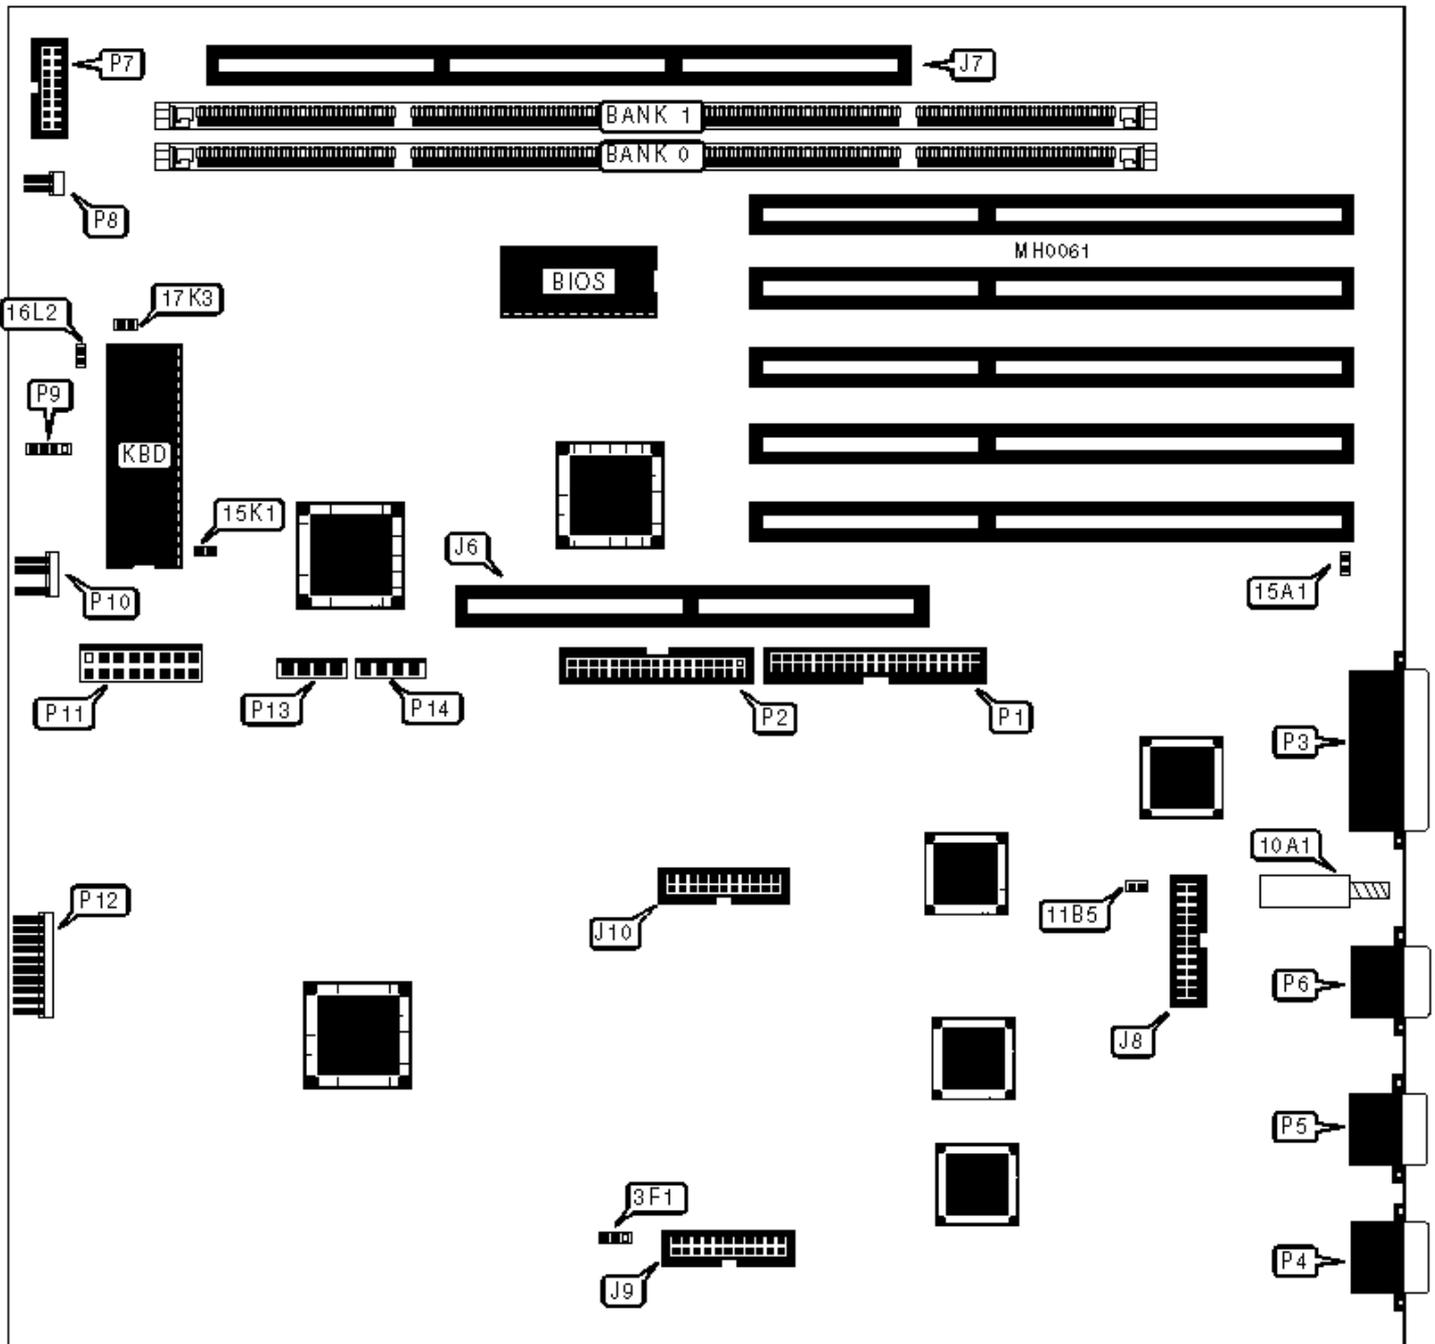

CONNECTIONS


Purpose	Location	Purpose	Location
Proprietary CPU module	J6	Video port	P6
Proprietary external memory card	J7	Keyboard/Bus mouse interface	P7
Proprietary video card	J8, J9, & J10	Fan power	P8
IDE interface	P1	IDE interface LED	P9
Floppy drive interface	P2	External battery	P10
Parallel port	P3	Power supply	P11 & P12
Serial port (COM1)	P4	Drive power	P13
Serial port (COM2)	P5	Drive power	P14

USER CONFIGURABLE SETTINGS

	Function	Jumper	Position
»	Password enabled	3F1	pins 2 & 3 closed
	Password disabled	3F1	pins 1 & 2 closed
»	Test mode disabled	10A1	Open
	Test mode enabled	10A1	Closed
»	I/O recovery disabled	11B5	Open
	I/O recovery enabled	11B5	Closed
»	NEC VGA adapter disabled (U.S. setting)	15A1	Open
	NEC VGA adapter enabled	15A1	Closed
»	Manufacturing loop disabled	15K1	Closed
	Manufacturing loop enabled	15K1	Open
»	Floppy drive interface enabled	16L2	Open
	Floppy drive interface disabled	16L2	Closed
»	BIOS flash reprogramming enabled	17K3	Open

	BIOS flash reprogramming disabled	17K3	Closed
--	-----------------------------------	------	--------

DRAM CONFIGURATION		
Size	Bank 0	Bank 1
8MB	(2) 1M x 36	NONE
16MB	(2) 1M x 36	(2) 1M x 36
32MB	(2) 4M x 36	NONE
64MB	(2) 4M x 36	(2) 4M x 36

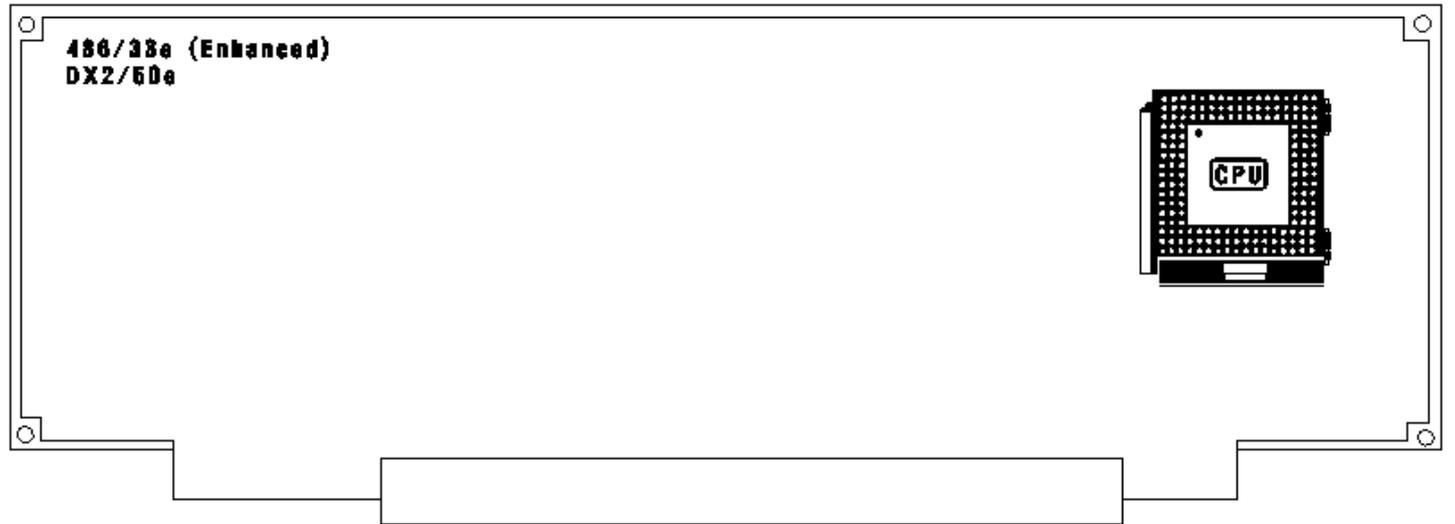

CACHE CONFIGURATION

CPU card comes standard with 128KB of cache and is not configurable.. The locations of the cache chips are un