


SEANIX TECHNOLOGY, INC.

FRASERLX (VER. 1.0)

Configuration

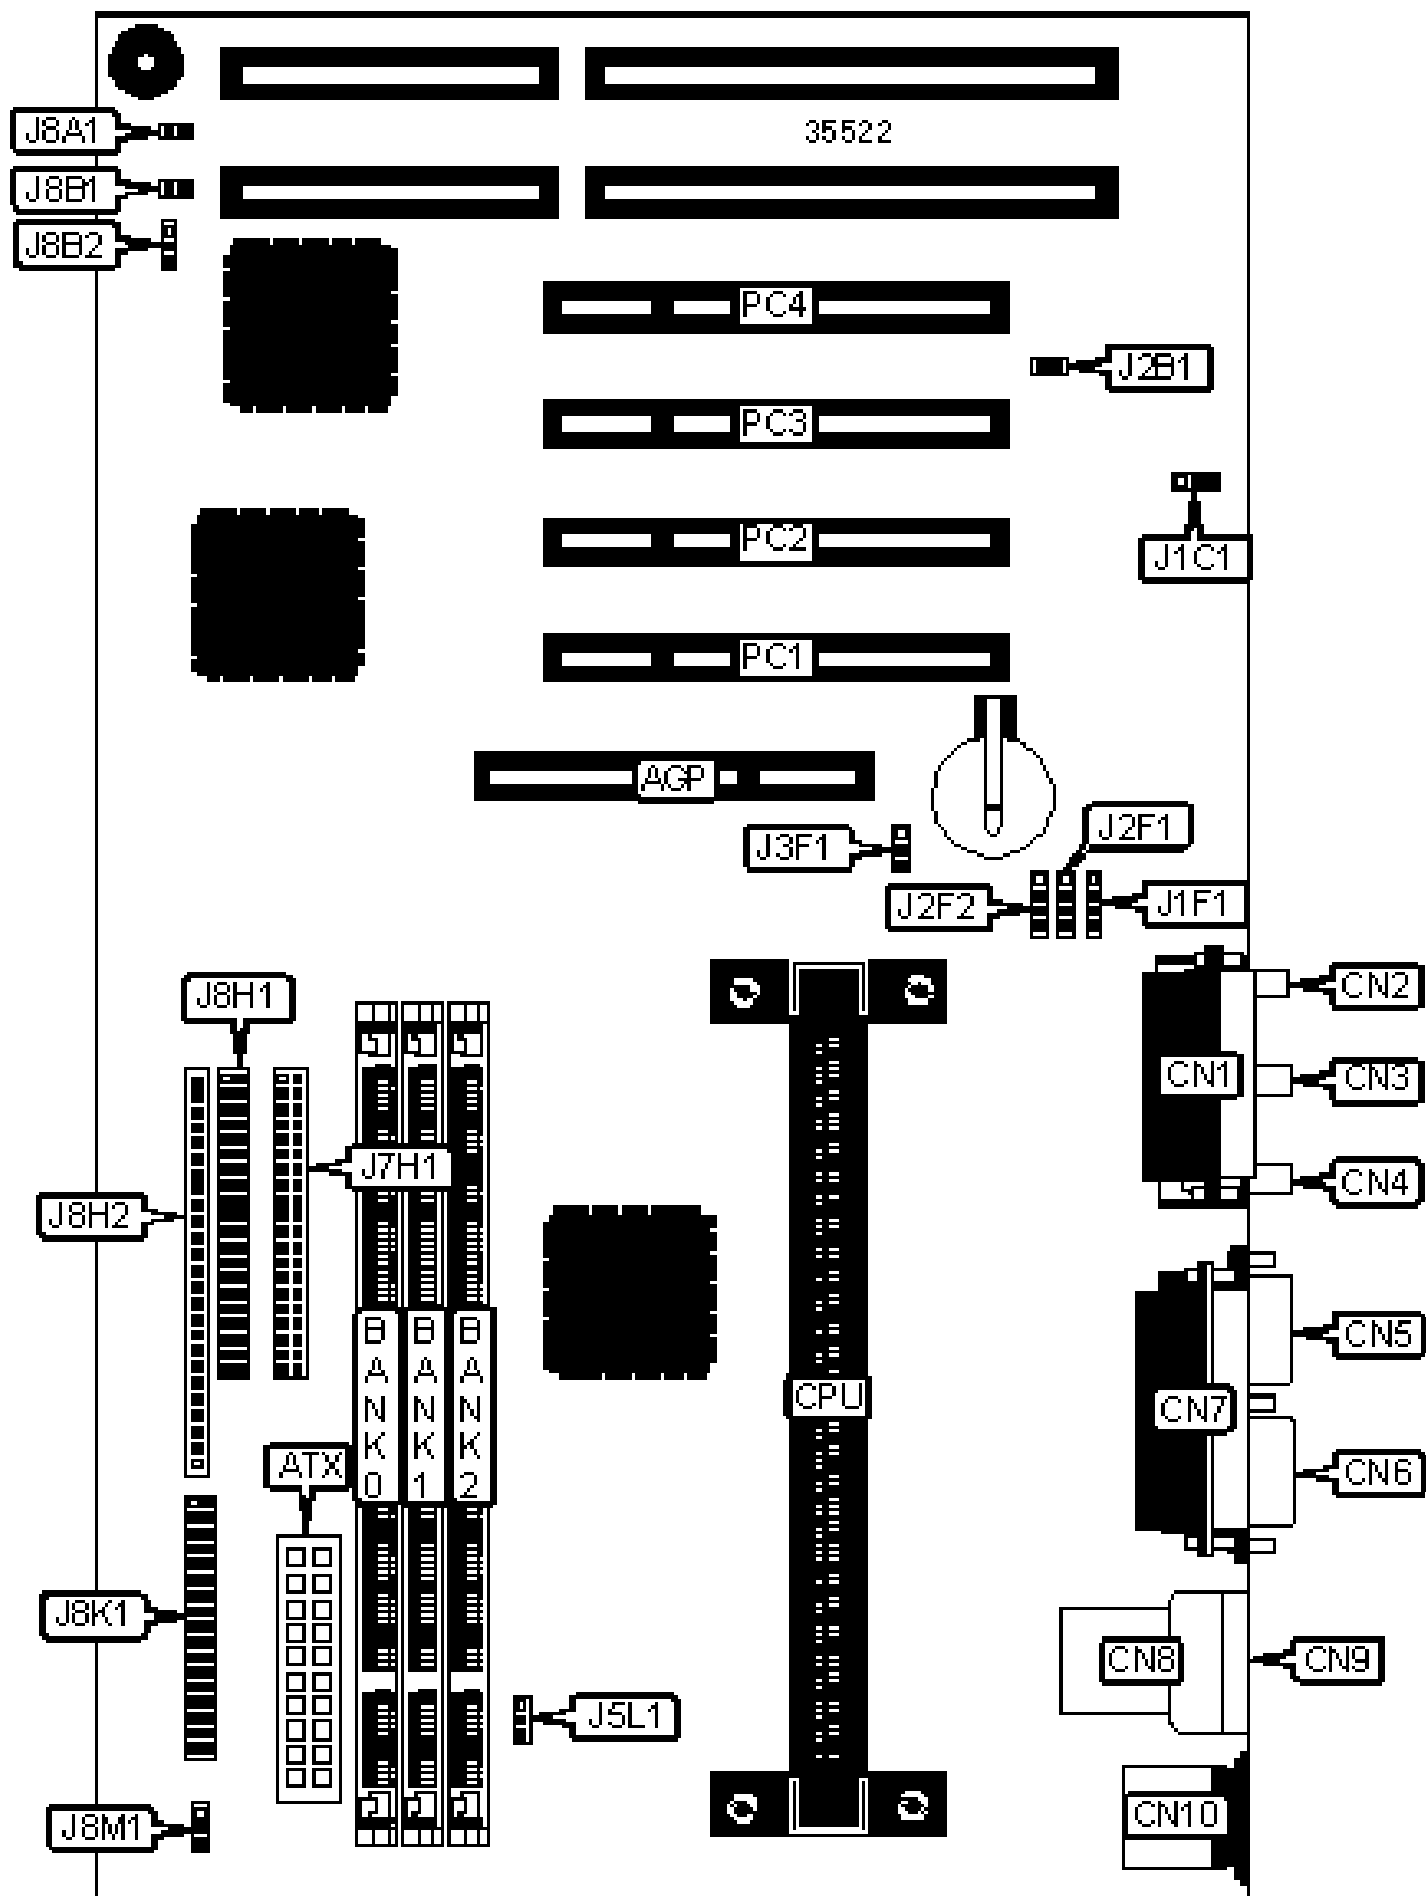

CONNECTIONS

Purpose	Location	Purpose	Location
ATX power connector	ATX	Chassis fan power	J5L1
Game/MIDI port	CN1	IDE interface 2	J7H1
Microphone in	CN2	Wake on ring connector	J8A1
Line in - external	CN3	SCSI interface LED	J8B1
Line out	CN4	IDE interface 1	J8H1
Serial port 2	CN5	Soft off power supply	J8H2/pins 1 & 2
Serial port 1	CN6	Green PC connector	J8H2/pins 3 & 4
Parallel port	CN7	IR connector	J8H2/pins 6 - 11
USB connector 2	CN8	IDE interface LED	J8H2/pins 13 - 16
USB connector 1	CN9	Power LED	J8H2/pins 18 - 20
PS/2 mouse port	CN10	Reset	J8H2/pins 22 & 23
Wake on LAN connector	J1C1	Speaker	J8H2/pins 24 - 27
Audio in - CD-ROM	J1F1	Floppy drive interface	J8K1
Chassis security	J2B1	Chassis fan power	J8M1
Telephony connector	J2F1	32-bit PCI slots	PC1 – PC4
Line in - internal	J2F2	AGP slot	AGP
Chassis fan power	J3F1		

USER CONFIGURABLE SETTINGS

Function	Label	Position
BIOS normal operation	J8B2	Pins 1 & 2 closed
BIOS configuration mode	J8B2	Pins 2 & 3 closed
BIOS recovery mode	J8B2	Open

DIMM CONFIGURATION			
Size	Bank 0	Bank 1	Bank 2
8MB	(1) 1M x 64	None	None
16MB	(1) 2M x 64	None	None
16MB	(1) 1M x 64	(1) 1M x 64	None
24MB	(1) 2M x 64	(1) 1M x 64	None
24MB	(1) 1M x 64	(1) 1M x 64	(1) 1M x 64
32MB	(1) 4M x 64	None	None
32MB	(1) 2M x 64	(1) 2M x 64	None
40MB	(1) 4M x 64	(1) 1M x 64	None
48MB	(1) 4M x 64	(1) 2M x 64	None
48MB	(1) 2M x 64	(1) 2M x 64	(1) 2M x 64
64MB	(1) 8M x 64	None	None
64MB	(1) 4M x 64	(1) 4M x 64	None
72MB	(1) 8M x 64	(1) 1M x 64	None
80MB	(1) 8M x 64	(1) 2M x 64	None
96MB	(1) 8M x 64	(1) 4M x 64	None
96MB	(1) 4M x 64	(1) 4M x 64	(1) 4M x 64

DIMM CONFIGURATION (CON'T)			
Size	Bank 0	Bank 1	Bank 2
128MB	(1) 8M x 64	(1) 8M x 64	None
128MB	(1) 16M x 64	None	None
192MB	(1) 8M x 64	(1) 8M x 64	(1) 8M x 64
256MB	(1) 16M x 64	(1) 16M x 64	None
384MB	(1) 16M x 64	(1) 16M x 64	(1) 16M x 64

CACHE CONFIGURATION
Note: 512KB cache is located on the Pentium II CPU.