

A785G3/A780L3/A780L3G BIOS Manual

BIOS Setup	1
1 Main Menu	3
2 Advanced Menu	6
3 PCIPnP Menu	16
4 Boot Menu	20
5 Chipset Menu	22
6 Performance Menu	28
7 Exit Menu	37

BIOS Setup

Introduction

The purpose of this manual is to describe the settings in the AMI BIOS Setup program on this motherboard. The Setup program allows users to modify the basic system configuration and save these settings to CMOS RAM. The power of CMOS RAM is supplied by a battery so that it retains the Setup information when the power is turned off.

Basic Input-Output System (BIOS) determines what a computer can do without accessing programs from a disk. This system controls most of the input and output devices such as keyboard, mouse, serial ports and disk drives. BIOS activates at the first stage of the booting process, loading and executing the operating system. Some additional features, such as virus and password protection or chipset fine-tuning options are also included in BIOS.

The rest of this manual will guide you through the options and settings in BIOS Setup.

Plug and Play Support

This AMI BIOS supports the Plug and Play Version 1.0A specification.

EPA Green PC Support

This AMI BIOS supports Version 1.03 of the EPA Green PC specification.

APM Support

This AMI BIOS supports Version 1.1&1.2 of the Advanced Power Management (APM) specification. Power management features are implemented via the System Management Interrupt (SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can also be managed by this AMI BIOS.

ACPI Support

AMI ACPI BIOS support Version 1.0/2.0 of Advanced Configuration and Power interface specification (ACPI). It provides ASL code for power management and device configuration capabilities as defined in the ACPI specification, developed by Microsoft, Intel and Toshiba.

A785G3/A780L3/A780L3G BIOS Manual

PCI Bus Support

This AMI BIOS also supports Version 2.3 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

DRAM Support


DDR3 SDRAM (Double Data Rate III Synchronous DRAM) is supported.

Supported CPUs

This AMI BIOS supports the AMD CPU

Using Setup

When starting up the computer, press during the **Power-On Self-Test (POST)** to enter the BIOS setup utility. In the BIOS setup utility, you will see **General Help** description at the top right corner, and this is providing a brief description of the selected item. **Navigation Keys** for that particular menu are at the bottom right corner, and you can use these keys to select item and change the settings.

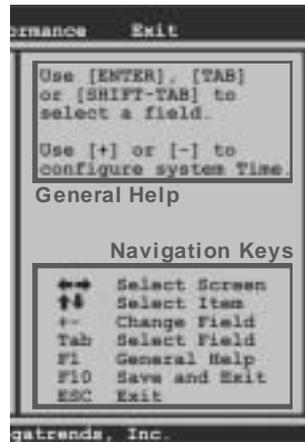


Notice

- The default BIOS settings apply for most conditions to ensure optimum performance of the motherboard. If the system becomes unstable after changing any settings, please load the default settings to ensure system's compatibility and stability. Use Load Setup Default under the Exit Menu.
- For better system performance, the BIOS firmware is being continuously updated. The BIOS information described in this manual is for your reference only. The actual BIOS information and settings on board may be slightly different from this manual.
- The content of this manual is subject to be changed without notice. We will not be responsible for any mistakes found in this user's manual and any system damage that may be caused by wrong-settings.

A785G3/A780L3/A780L3G BIOS Manual

1 Main Menu

Once you enter AMI BIOS Setup Utility, the Main Menu will appear on the screen providing an overview of the basic system information.

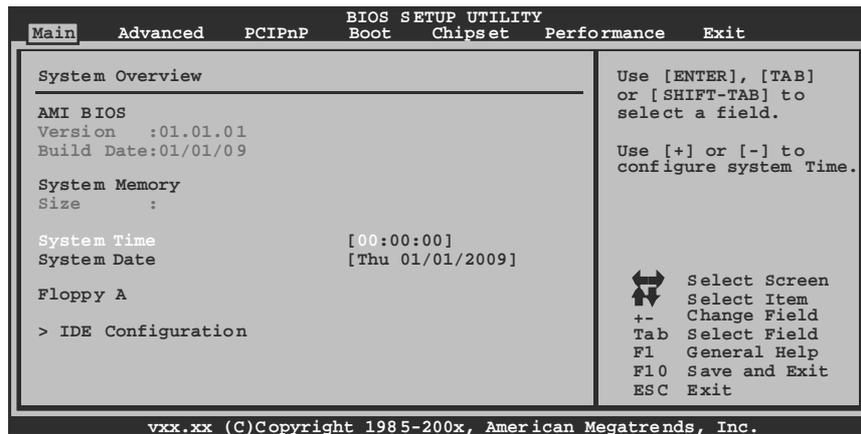

AMI BIOS

Shows system information including BIOS version and built date.

System Memory

Shows system memory size, VGA shard memory will be excluded..

System Time

Set the system internal clock.

System Date

Set the system date. Note that the 'Day' automatically changes when you set the date.

Floppy A


Select the type of floppy disk drive installed in your system.

Options: 360K, 5.25 in / 1.2M, 5.25 in / 720K, 3.5 in / 1.44M, 3.5 in / 2.88M, 3.5 in / None


A785G3/A780L3/A780L3G BIOS Manual

IDE Configuration

The BIOS will automatically detect the presence of IDE/SATA devices. There is a sub-menu for each IDE/SATA device. Select a device and press <Enter> to enter the sub-menu of detailed options.

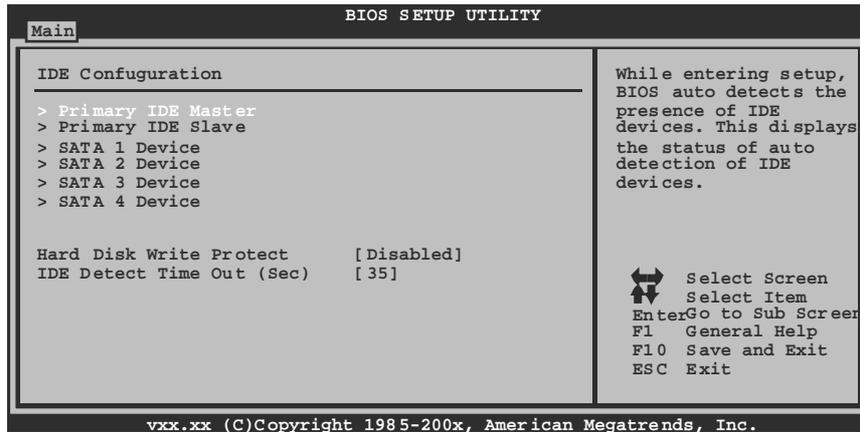

Primary IDE Master/Slave ; SATA 1/2/3/4 Device

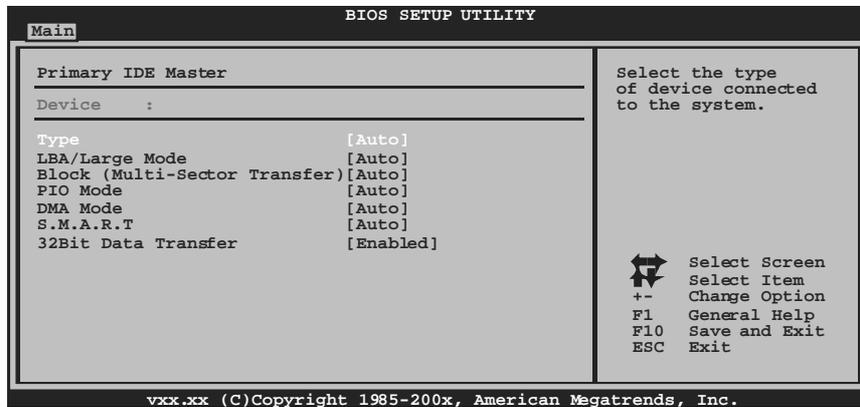

The BIOS detects the information and values of respective devices, and these information and values are shown below to the name of the sub-menu.

A785G3/A780L3/A780L3G BIOS Manual

Type

Select the type of the IDE/SATA drive.

Options: Auto (Default) / CDROM / ARMD / Not Installed

LBA/Large Mode

Enable or disable the LBA mode.

Options: Auto (Default) / Disabled

Block (MultiSector Transfer)

Enable or disable multi-sector transfer.

Options: Auto (Default) / Disabled

PIO Mode

Select the PIO mode.

Options: Auto (Default) / 0 / 1 / 2 / 3 / 4

DMA Mode

Select the DMA mode.

Options: Auto (Default) / SWDMA0 ~ 2 / MWDMA0 ~ 2 / UDMA0 ~ 5

S.M.A.R.T

Set the Smart Monitoring, Analysis, and Reporting Technology.

Options: Auto (Default) / Disabled / Enabled

32Bit Data Transfer

Enable or disable 32-bit data transfer.

Options: Enabled (Default) / Disabled

Hard Disk Write Protect

Disable or enable device write protection. This will be effective only if the device is accessed through BIOS.

Options: Disabled (Default) / Enabled

IDE Detect Time Out (Sec)

Select the time out value for detecting IDE/SATA devices.

Options: 35 (Default) / 30 / 25 / 20 / 15 / 10 / 5 / 0


A785G3/A780L3/A780L3G BIOS Manual

2 Advanced Menu

The Advanced Menu allows you to configure the settings of CPU, Super I/O, Power Management, and other system devices.


Notice

- Beware of that setting inappropriate values in items of this menu may cause system to malfunction.

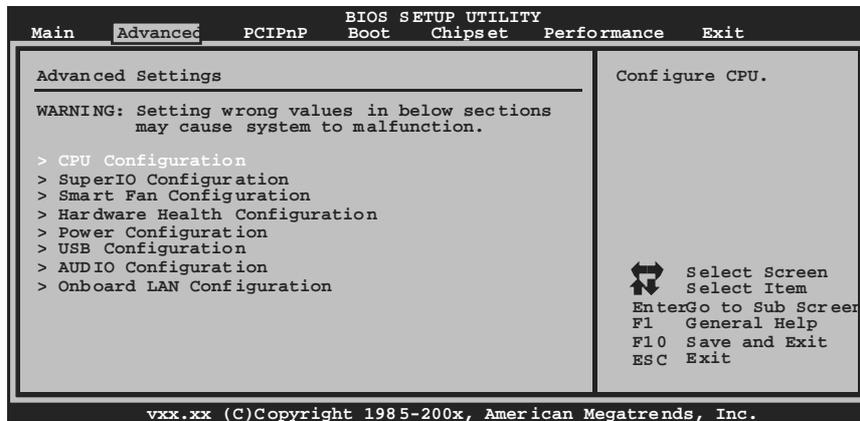

CPU Configuration

This item shows the CPU information that the BIOS automatically detects.

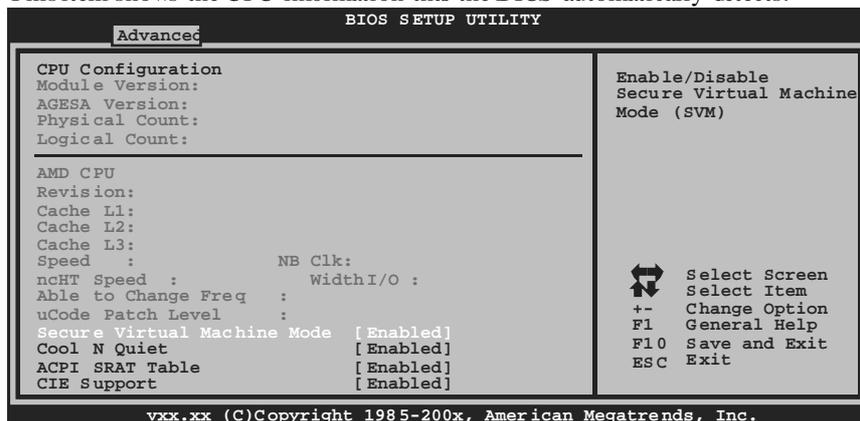

A785G3/A780L3/A780L3G BIOS Manual

Secure Virtual Machine Mode

Virtualization Technology can virtually separate your system resource into several parts, thus enhance the performance when running virtual machines or multi interface systems.

Options: Enabled (Default) / Disabled

Cool N Quiet

This item allows you to enable or disable the Cool & Quiet power saving technology.

Options: Enabled (Default) / Disabled

ACPI SRAT Table

The operating system scans the ACPI SRAT at boot time and uses the information to better allocate memory and schedule software threads for maximum performance. This item controls whether the SRAT is made available to the operating system at boot up, or not.

Options: Enabled (Default) / Disabled

C1E Support

This item allows you to configure the Enhanced Halt State (C1E) function, which may reduce the power consumption of your system when the system is idle.

Options: Disabled (Default) / Enabled

Advanced Clock Calibration

Advanced Clock Calibration (ACC) is an enhanced technology for overlocking, needing support from both chipset and CPU. When enabled, it will improve the stability of advanced overlocking greatly.

Options: Disabled (Default) / Auto / All Cores / Per Core


Core Leveling

This item allows you to activate Core Leveling function.

Options: Auto(Default) / Force Single Core / Force Dual Core / Force Tri Core / Enable all Cores

A785G3/A780L3/A780L3G BIOS Manual

SuperIO Configuration

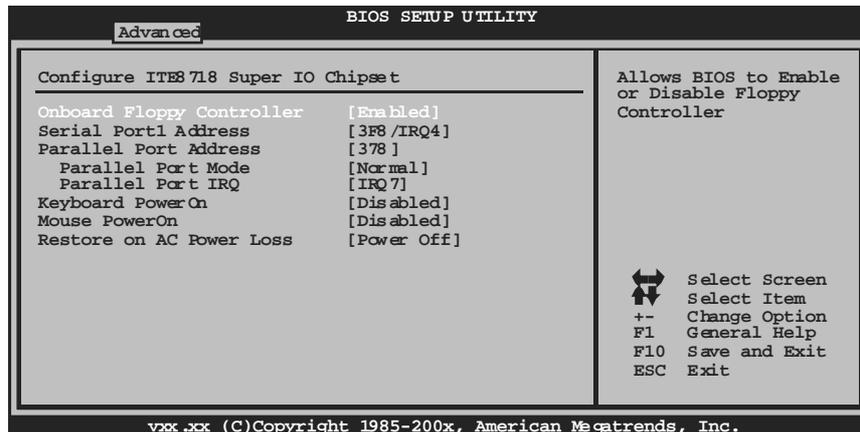

Onboard Floppy Controller

Select enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you installed another FDC or the system uses no floppy drive, select disabled in this field.

Options: Enabled (Default) / Disabled

Serial Port1 Address

Select an address and corresponding interrupt for the first and second serial ports.

Options: 3F8/IRQ4 (Default) / 2F8/IRQ3 / 3E8/IRQ4 / 2E8/IRQ3 / Disabled

Parallel Port Address

This item allows you to determine access onboard parallel port controller with which I/O Address.

Options: 378 (Default) / 278 / 3BC / Disabled

Parallel Port Mode

This item allows you to determine how the parallel port should function.

Options: Normal (Default) Using Parallel port as Standard Printer Port.
EPP Using Parallel Port as Enhanced Parallel Port.
ECP Using Parallel port as Extended Capabilities Port.
ECP+EPP Using Parallel port as ECP & EPP mode.

A785G3/A780L3/A780L3G BIOS Manual

ECP Mode DMA Channel

This item allows you to select parallel port ECP DMA.

Options: DMA3 (Default) / DMA0 / DMA1

Parallel Port IRQ

This item allows you to select the IRQ for the onboard parallel port.

Options: IRQ7 (Default) / IRQ5 / Disabled

Keyboard PowerOn

This item allows you to control the keyboard power on function.

Options: Disabled (Default) / Specific Key / Stroke Key / Any Key

Specific Key Enter

This item will show only when Keyboard PowerOn is set "Specific Key."

Stroke Keys Selected

This item will show only when Keyboard PowerOn is set "Stroke Key."

Options: Ctrl+F1 (Default) / Wake Key / Power Key / Ctrl+F2 / Ctrl+F3 /
Ctrl +F4 / Ctrl+F5 / Ctrl+F6

Mouse PowerOn

This item allows you to control the mouse power on function.

Options: Disabled (Default) / Enabled


Restore on AC Power Loss

This setting specifies how your system should behave after a power fail or interrupts occurs. By choosing Disabled will leave the computer in the power off state. Choosing Enabled will restore the system to the status before power failure or interrupt occurs.

Options: Power Off (Default) / Last State

A785G3/A780L3/A780L3G BIOS Manual

Smart Fan Configuration

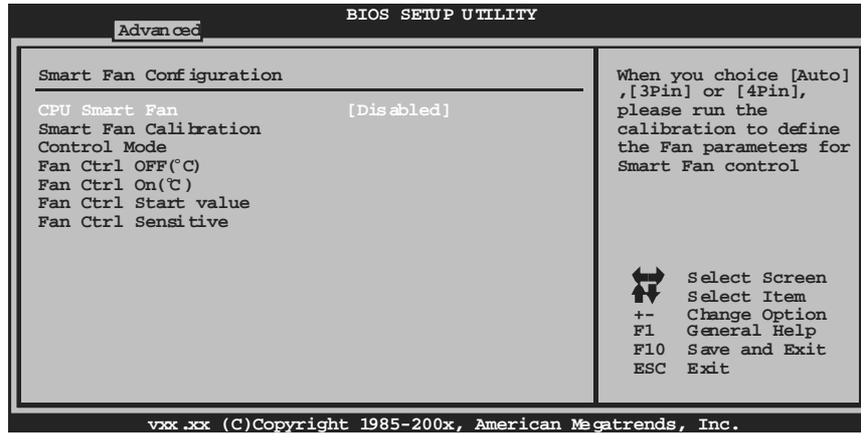

CPU Smart Fan

This item allows you to control the CPU Smart Fan function.

Options: Disabled (Default) / Auto / 4Pin / 3Pin

Smart Fan Calibration

Choose this item and then the BIOS will auto test and detect the CPU/System fan functions and show CPU/System fan speed.

Control Mode

This item provides several operation modes of the fan.

Options: Quiet / Performance / Manual

Fan Ctrl OFF(°C)

If the CPU/System Temperature is lower than the set value, FAN will turn off.

Options: 0~127 (°C) (With the interval of 1°C)

Fan Ctrl On(°C)

CPU/System fan starts to work under smart fan function when arrive this set value.

Options: 0~127 (°C) (With the interval of 1°C)

A785G3/A780L3/A780L3G BIOS Manual

Fan Ctrl Start Value

When CPU/System temperature arrives to the set value, the CPU/System fan will work under Smart Fan Function mode.

Options: 0~127 (With the interval of 1)


Fan Ctrl Sensitive

Increasing the value will raise the speed of CPU/System fan.

Options: 1~127 (With the interval of 1)

Hardware Health Configuration

This item shows the system temperature, fan speed, and voltage information.

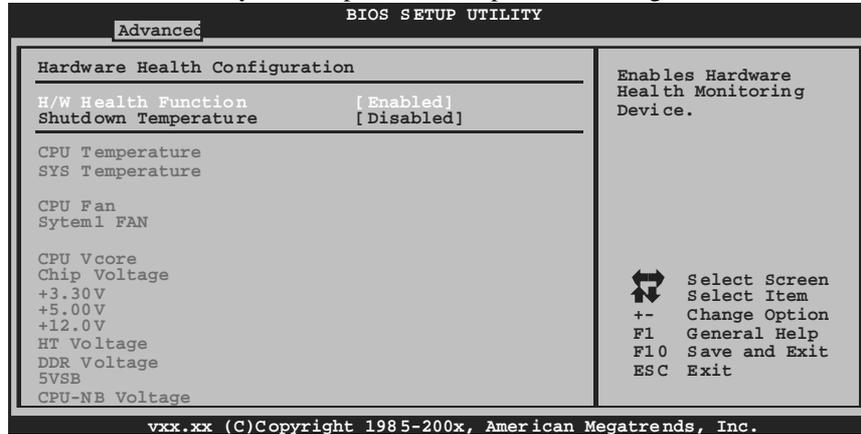

H/W Health Function

If with a monitoring system, the system will show PC health status during POST stage.

Options: Enabled (Default) / Disabled


Shutdown Temperature

This item allows you to set up the CPU shutdown Temperature. This item is only effective under Windows 98 ACPI mode.

Options: Disabled (Default) / 60°C/140°F / 65°C/149°F / 70°C/158°F / 75°C/167°F / 80°C/176°F / 85°C/185°F / 90°C/194°F

A785G3/A780L3/A780L3G BIOS Manual

Power Configuration

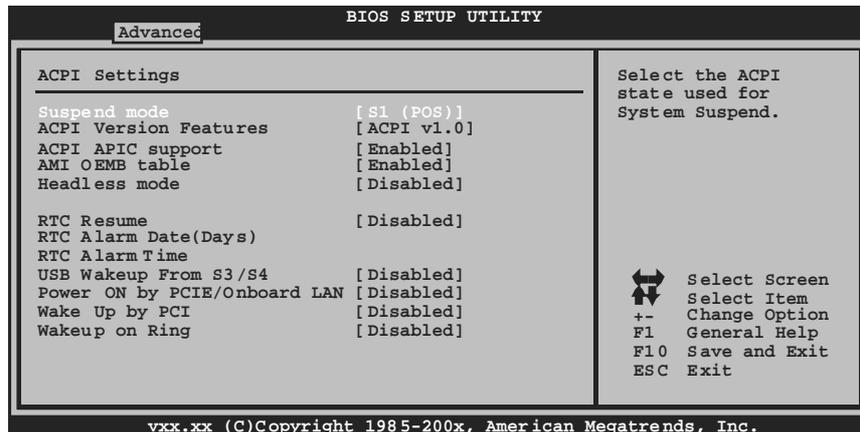

Suspend mode

The item allows you to select the suspend type under the ACPI operating system.

Options: S1 (POS) (Default) Power on Suspend
 S3 (STR) Suspend to RAM
 S1 & S3 POS+STR

ACPI Version Features

The item allows you to select the version of ACPI

Options: ACPI v1.0 (Default) / ACPI v2.0 / ACPI v3.0

ACPI APIC support

This item is used to enable or disable the motherboard's APIC (Advanced Programmable Interrupt Controller). The APIC provides multiprocessor support, more IRQs and faster interrupt handling.

Options: Enabled (Default) / Disabled

AMI OEMB table

Set this value to allow the ACPI BIOS to add a pointer to an OEMB table in the Root System Description Table (RSDT) table.

Options: Enabled (Default) / Disabled

A785G3/A780L3/A780L3G BIOS Manual

Headless mode

This is a server-specific feature. A headless server is one that operates without a keyboard, monitor or mouse. To run in headless mode, both BIOS and operating system (e.g. Windows Server 2003) must support headless operation.

Options: Disabled (Default) / Enabled

RTC Resume

When "Enabled", you can set the date and time at which the RTC (real-time clock) alarm awakens the system from Suspend mode.

Options: Disabled (Default) / Enabled

RTC Alarm Date (Days)

You can choose which date the system will boot up.

RTC Alarm Time

You can choose the system boot up time, input hour, minute and second to specify.

USB Wakeup from S3/S4

This item allows you to enable or disabled the USB resume from S3/S4 function.

Options: Disabled (Default) / Enabled

Power On by PCIE/Onboard LAN

This item allows you control the wake on LAN (WOL) function.

Options: Disabled (Default) / Enabled

Wake Up by PCI

Enable / Disable PCI to generate a wake event.

Options: Disabled (Default) / Enabled

Wakeup on Ring


This item allows you control the wake on ring function.

Options: Disabled (Default) / Enabled

A785G3/A780L3/A780L3G BIOS Manual

USB Configuration

This item shows the USB controller and using USB device information.

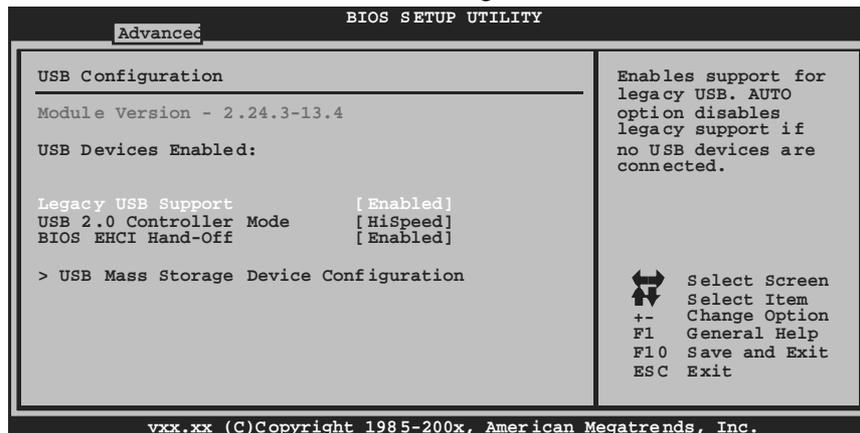

Legacy USB Support

This item determines if the BIOS should provide legacy support for USB devices like the keyboard, mouse, and USB drive. This is a useful feature when using such USB devices with operating systems that do not natively support USB (e.g. Microsoft DOS or Windows NT).

Options: Enabled (Default) / Disabled

USB 2.0 Controller Mode

This item allows you to select the operation mode of the USB 2.0 controller.

Options: HiSpeed (Default) USB 2.0-480Mbps
FullSpeed USB 1.1-12Mbps

BIOS EHCI Hand-Off

This item allows you to enable support for operating systems without an EHCI hand-off feature.

Options: Enabled (Default) / Disabled

A785G3/A780L3/A780L3G BIOS Manual

USB Mass Storage Device Configuration

BIOS SETUP UTILITY	
Advanced	
USB Mass Storage Device Configuration	Number of seconds POST waits for the USB mass storage device after start unit command.
USB Mass Storage Reset Delay [20 Sec]	
Device #	
Emulation Type [Auto]	
	
	Select Screen
	Select Item
	+ - Change Option
	F1 General Help
	F10 Save and Exit
	ESC Exit
vxx.xx (C)Copyright 1985-200x, American Megatrends, Inc.	

USB Mass Storage Reset Delay

This item allows you to set the reset delay for USB mass storage device.

Options: 20 Sec (Default) / 10 Sec / 30Sec / 40Sec

Emulation Type

This item allows you to select the emulation type of the USB mass storage device.

Options: Auto (Default) / Floppy / Forced FDD / Hard Disk / CDROM

AUDIO Configuration

BIOS SETUP UTILITY	
Chipset	
AUDIO Configuration	Options
785G HD Audio [Enabled]	Disabled
HD Audio Azalia Device [Enabled]	Enabled
	
	Select Screen
	Select Item
	EnterUpdate
	F1 General Help
	F10 Save and Exit
	ESC Exit
vxx.xx (C)Copyright 1985-200x, American Megatrends, Inc.	

A785G3/A780L3/A780L3G BIOS Manual


785G HD Audio

This item allows you to control 785G HD audio function.
Options: Enabled (Default) / Disabled

HD Audio Azalia Device

This item allows you to control the HD audio device.
Options: Enabled (Default) / Auto / Disabled

Onboard LAN Configuration

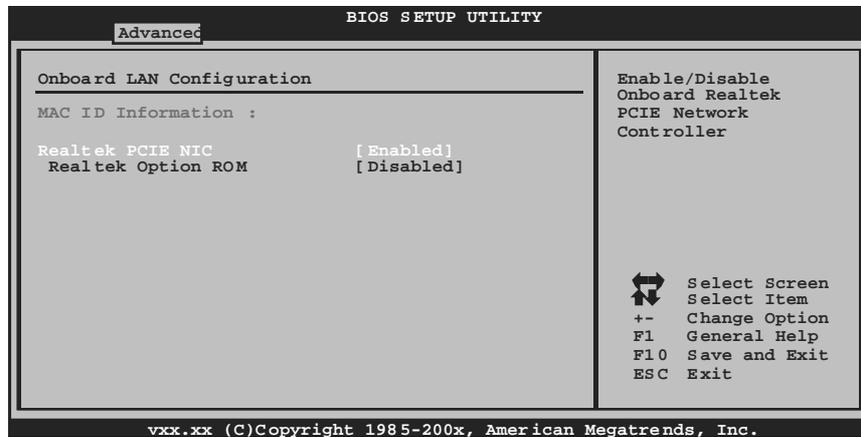

MAC ID Information

This area shows the MAC ID.

Realtek PCIE NIC

This option allows you to control the onboard LAN controller.
Options: Enable (Default) / Disable

Realtek Option ROM


This item allows you to enable or disable the Onboard LAN Boot ROM.
Options: Disabled (Default) / Enabled

3 PCIPnP Menu

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itselfuses when communicating with its own special components.

Notice

- Beware of that setting inappropriate values in items of this menu may cause system to malfunction.

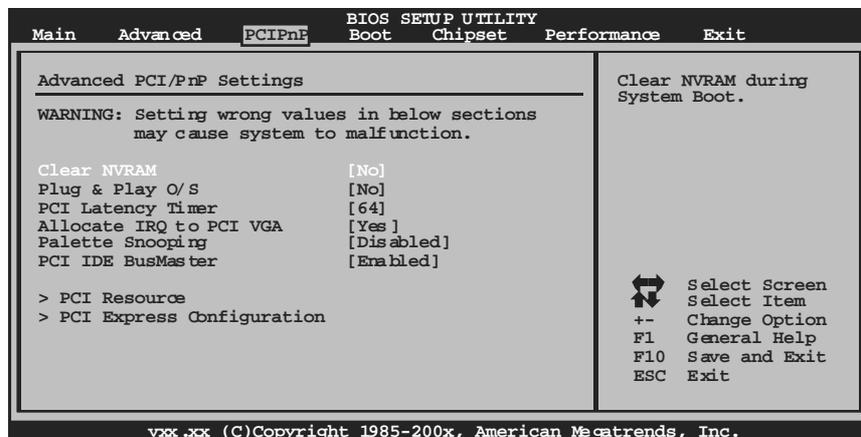

Clear NVRAM

This item allows you to clear the data in the NVRAM (CMOS) by selecting "Yes".

Options: No (Default) / Yes

Plug & Play OS

When set to YES, BIOS will only initialize the PnP cards used for the boot sequence (VGA, IDE, SCSI). The rest of the cards will be initialized by the PnP operating system like Window™ 95. When set to NO, BIOS will initialize all the PnP cards. For non-PnP operating systems (DOS, Netware™), this option must set to NO.

Options: No (Default) / Yes

A785G3/A780L3/A780L3G BIOS Manual

PCI Latency Timer

This item controls how long a PCI device can hold the PCI bus before another takes over. The longer the latency, the longer the PCI device can retain control of the bus before handing it over to another PCI device.

Options: 64 (Default) / 0-255

Allocate IRQ to PCI VGA

This item allows BIOS to choose a IRQ to assign for the PCI VGA card.

Options: Yes (Default) / No

Palette Snooping

Some old graphic controllers need to “snoop” on the VGA palette and then map it to their display as a way to provide boot information and VGA compatibility. This item allows such snooping to take place.

Options: Disabled (Default) / Enabled

PCI IDE BusMaster

This item is a toggle for the built-in driver that allows the onboard IDE controller to perform DMA (Direct Memory Access) transfers.

Options: Enabled (Default) / Disabled

PCI Resource

BIOS SETUP UTILITY
PCI/PnP

PCI Resource	
IRQ3	[Available]
IRQ4	[Available]
IRQ5	[Available]
IRQ7	[Available]
IRQ9	[Available]
IRQ10	[Available]
IRQ11	[Available]
IRQ14	[Available]
IRQ15	[Available]
DMA Channel 0	[Available]
DMA Channel 1	[Available]
DMA Channel 3	[Available]
DMA Channel 5	[Available]
DMA Channel 6	[Available]
DMA Channel 7	[Available]
Reserved Memory Size	[Disabled]

Available: Specified IRQ is available to be used by PCI/PnP devices.
Reserved: Specified IRQ is reserved for use by Legacy ISA devices.

⬅️ Select Screen
➡️ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit

vxx.xx (C)Copyright 1985-200x, American Megatrends, Inc.

A785G3/A780L3/A780L3G BIOS Manual

IRQ3/4/5/7/9/10/11/14/15

These items will allow you to assign each system interrupt a type, depending on the type of device using the interrupt. The option “Available” means the IRQ is going to assign automatically.

Options: Available (Default) / Reserved

DMA Channel 0/1/3/5/6/7

These items will allow you to assign each DMA channel a type, depending on the type of device using the channel. The option “Available” means the channel is going to assign automatically.


Options: Available (Default) / Reserved

Reserved Memory Size

This item allows BIOS to reserve certain memory size for specific PCI device.

Options: Disabled (Default) / 16K / 32K / 64K

PCI Express Configuration

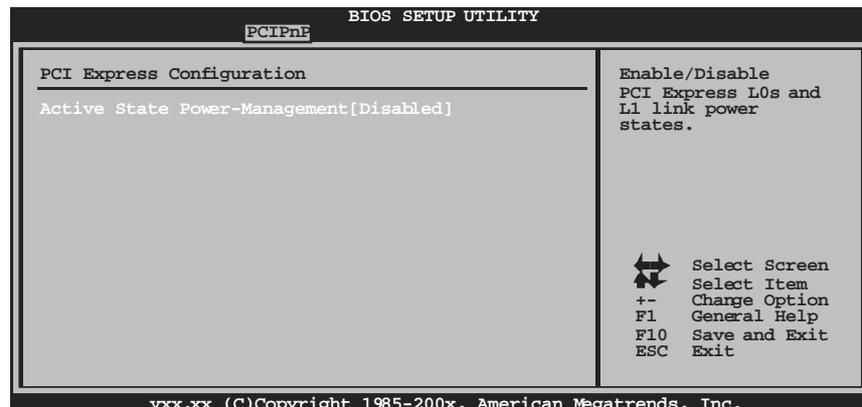


Active State Power-Management

This item sets the ASPM configuration for the PCI Express devices before the operating system boots. This function is for OS which does not support ASPM.

Options: Disabled (Default) / Enabled

4 Boot Menu

This menu allows you to setup the system boot options.

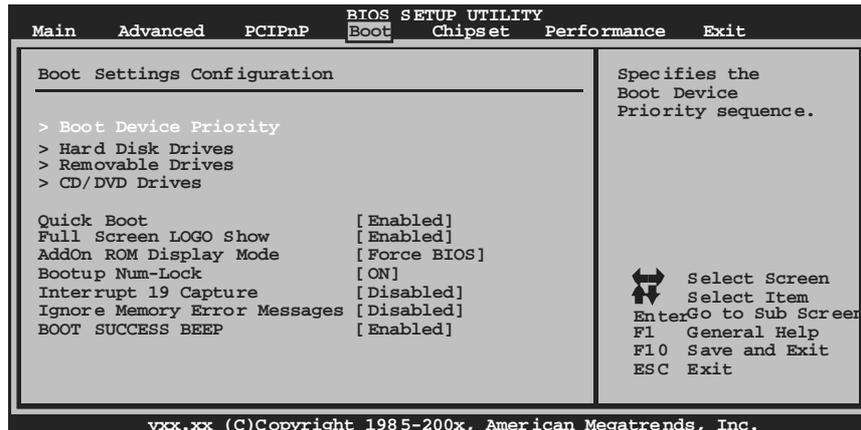

Boot Device Priority

Items in this sub-menu specify the boot device priority sequence from the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system.

Options: Removable / Hard Disk / CDROM / Legacy LAN / Disabled

Hard Disk Drives

The BIOS will attempt to arrange the hard disk boot sequence automatically. You can also change the booting sequence. The number of device items that appears on the screen depends on the number of devices installed in the system.

Options: Pri. Master / Pri. Slave / Sec. Master / Sec. Slave / USB HDD0 /
USB HDD1 / USB HDD2 / Bootable Add-in Cards

Removable Drives

The BIOS will attempt to arrange the removable drive boot sequence automatically. You can also change the booting sequence. The number of device items that appears on the screen depends on the number of devices installed in the system.

Options: Floppy Disks / Zip100 / USB-FDD0 / USB-FDD1 / USB-ZIP0 /
USB-ZIP1 / LS120

A785G3/A780L3/A780L3G BIOS Manual

CD/DVD Drives

The BIOS will attempt to arrange the CD/DVD drive boot sequence automatically. You can also change the booting sequence. The number of device items that appears on the screen depends on the number of devices installed in the system.

Options: Pri. Master / Pri. Slave / Sec. Master / Sec. Slave / USB CDROM0 /
USB CDROM 1

Quick Boot

Enabling this option will cause an abridged version of the Power On Self-Test (POST) to execute after you power up the computer.

Options: Enabled (Default) / Disabled

Full Screen LOGO Show

This item allows you to enable/disable Full Screen LOGO Show function.

Options: Enabled (Default) / Disabled

AddOn ROM Display Mode

This item sets the display mode for option ROM.

Options: Force BIOS (Default) / Keep Current

Boot up Num-Lock

Selects the NumLock State after the system switched on.

Options: ON (Default) / OFF

Interrupt 19 Capture

When set to Enabled, this item allows the option ROMs to trap interrupt 19.

Options: Disabled (Default) / Enabled

Ignore Memory Error Messages

When set to Enabled, the POST will ignore memory error messages.

Options: Disabled (Default) / Enabled

BOOT SUCCESS BEEP


When this item is set to Enabled, BIOS will let user know boot success with beep.

Options: Enabled (Default) / Disabled


A785G3/A780L3/A780L3G BIOS Manual

5 Chipset Menu

This submenu allows you to configure the specific features of the chipset installed on your system. This chipset manage bus speeds and access to system memory resources, such as DRAM. It also coordinates communications with the PCI bus.

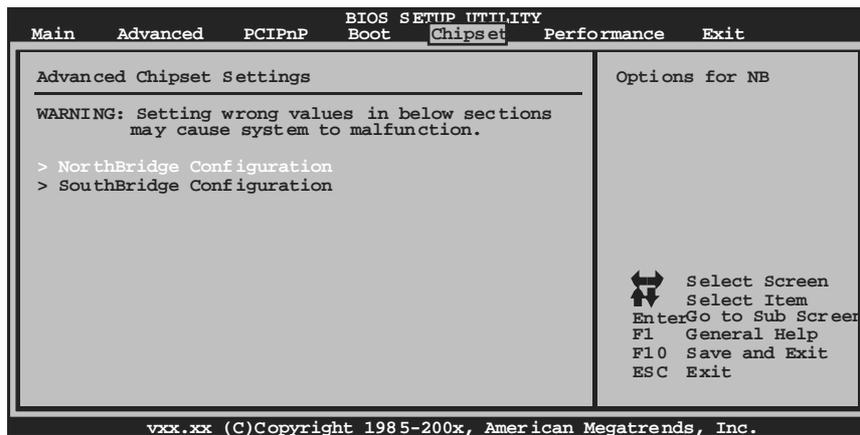


NorthBridge Configuration

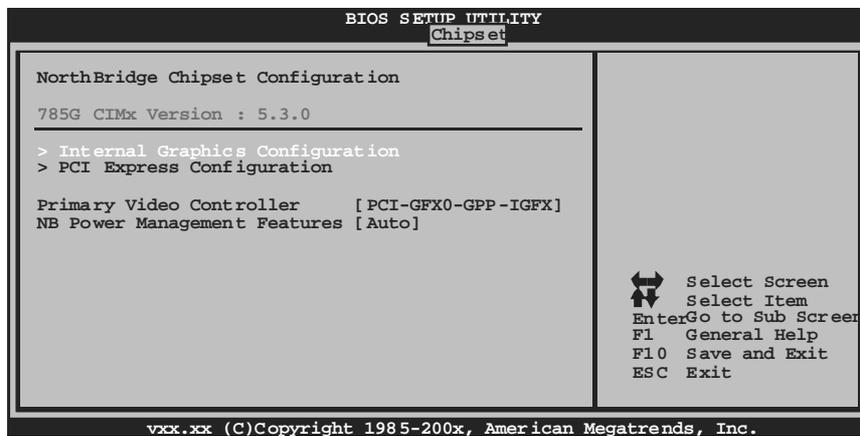

A785G3/A780L3/A780L3G BIOS Manual

Internal Graphics Configuration

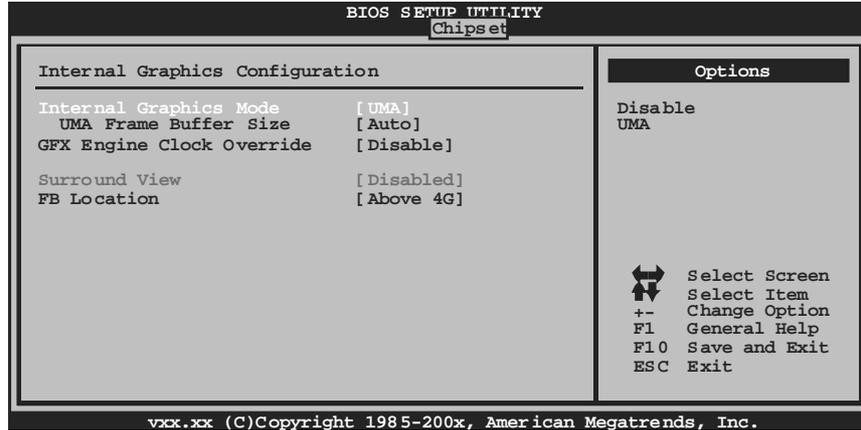

Internal Graphics Mode

This item allows you to select the memory mode used for internal graphics device.

Options: UMA (Default) / Disable

UMA Frame Buffer Size

This item allows you to choose the UMA frame buffer size for internal graphics.

Options: Auto (Default) / 32MB / 64MB / 128MB / 256MB / 512MB

GFX Engine Clock Override

This item allows you to control the internal GFX engine clock override function.

Options: Disabled (Default) / Enabled

GFX Engine Clock

This item allows you to set the internal GFX engine clock.

Options: 500 (Default) / Min: 150, Max: 1200

Surround View

This item allows you to control the Surround View Function.

Options: Disabled / Enabled / Auto (Default)


FB Location

This item allows you to set the FB-DIMM location.


Options: Above 4G (Default) / Under 4G

A785G3/A780L3/A780L3G BIOS Manual

PCI Express Configuration

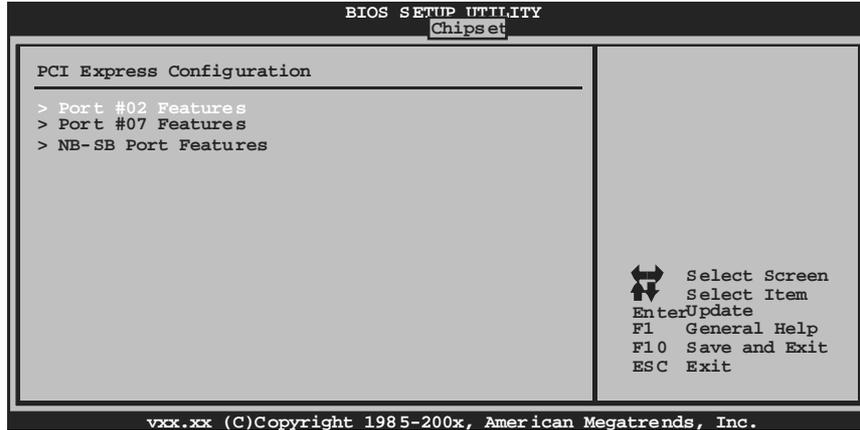

Port #02/07 Features

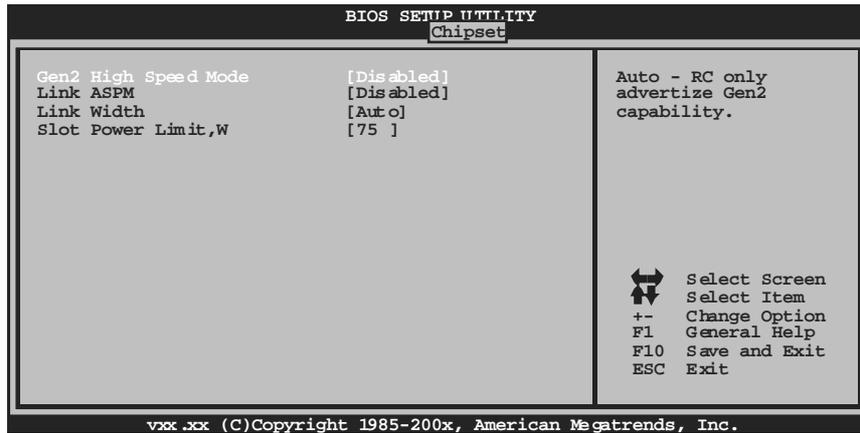

Gen2 High Speed Mode

Options: Disabled (Default) / Auto

Link ASPM

Options: Disabled (Default) / L0s / L1 / L0x & L1

A785G3/A780L3/A780L3G BIOS Manual


Link Width (Only for Port #02)

Options: Auto (Default) / x1 / x2 / x4 / x8 / x16

Slot Power Limit, W (Only for Port #02)

Options: 75 (Default) / 0-255

NB-SB Port Features

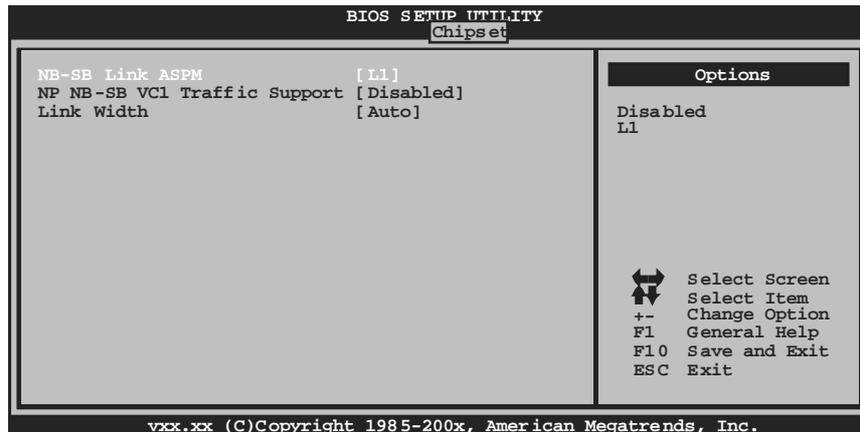

NB-SB Link ASPM

Options: L1(Default) / Disabled

NP NB-SB VCI Traffic Support

Options: Disabled(Default) / Enabled

Link Width

Options: Auto (Default) / x1 / x2 / x4

Primary Video Controller

This option allows you to select the video controller in charge.

Options: PCI-GFX0-GPP-IGFX (Default) / GFX0-GPP-IGFX-PCI /
GPP-GFX0-IGFX-PCI / IGFX-GFX0-GPP-PCI


NB Power Management Features

This option controls the NB power management function.

Options: Auto (Default) / Disabled

A785G3/A780L3/A780L3G BIOS Manual

SouthBridge Configuration

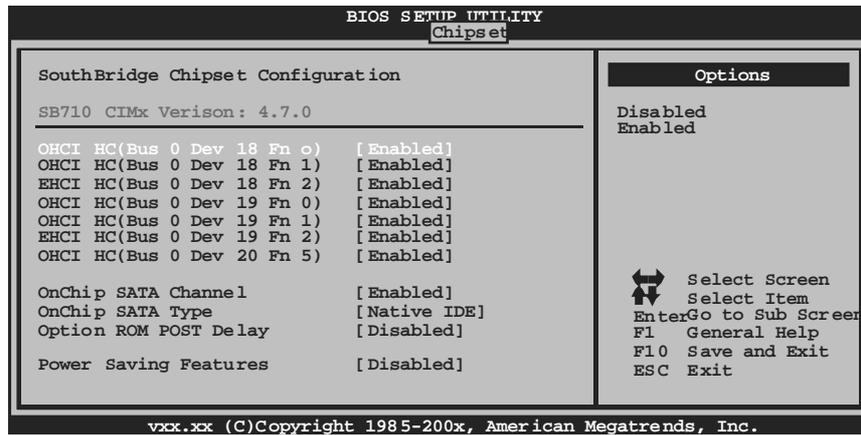

OHCI HC(Bus 0 Dev 18/19/20 Fn 0/1/5)

This item allows you to control OHCI host controller. (USB 1.1 Device)
Options: Enabled (Default) / Disabled

EHCI HC(Bus 0 Dev 18/19 Fn 2)

This item allows you to control EHCI host controller. (USB 2.0 Device)
Options: Enabled (Default) / Disabled

OnChip SATA Channel

This option allows you to enable the on-chip Serial ATA.
Options: Enabled (Default) / Disabled

OnChip SATA Type

This option allows you to select the on-chip Serial ATA operation mode.
Options: Native IDE (Default) / RAID / AHCI / Legacy IDE / IDE→AHCI

Option ROM POST Delay

Options: Disabled (Default) / 1 Second / 2 ~ 7 Seconds

A785G3/A780L3/A780L3G BIOS Manual

SATA IDE Combined Mode

This option controls the SATA/PATA combined mode.

Options: Enabled (Default) / Disabled

Power Saving Features

This item allows you to enable or disable power saving features in SB. As general rule, this feature should be disabled for desktop and enabled for mobile. See AMD SB710 Power Saving document for more details.


Options: Disabled (Default) / Enabled

6 Performance Menu

This submenu allows you to change voltage and dock of various devices.
(However, we suggest you use the default setting. Changing the voltage and clock improperly may damage the device.)

Notice

- Beware of that setting inappropriate values in items of this menu may cause system to malfunction.

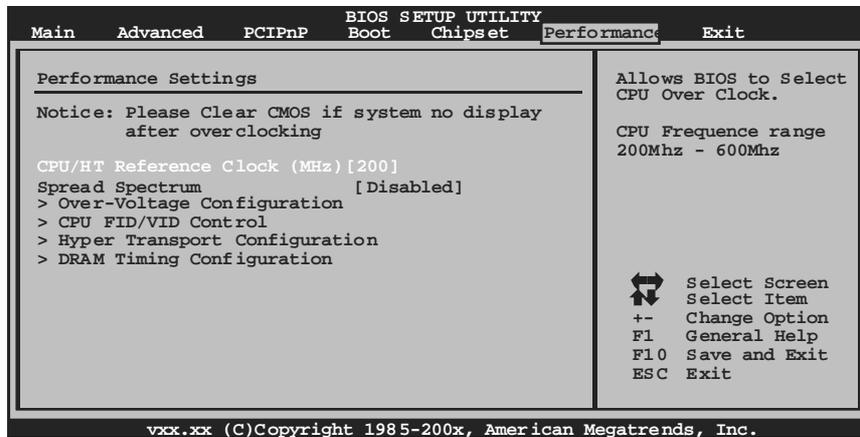

CPU/HT Reference Clock (MHz)


This item allows BIOS to select CPU Over Clock.
Options: 200 (Default) / 200~600

Spread Spectrum

This item allows you to control Spread Spectrum function.
Options: Disabled (Default) / Enabled

A785G3/A780L3/A780L3G BIOS Manual

Over-Voltage Configuration

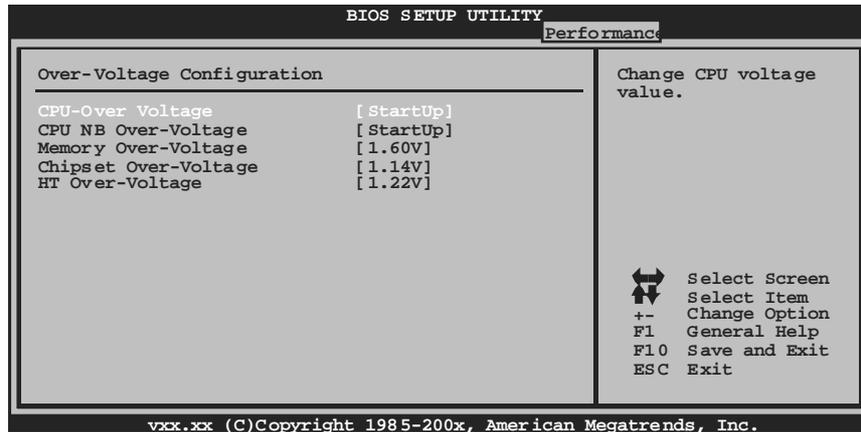

CPU Over Voltage

This item allows you to select CPU Voltage Control.

Options: StartUp (Default) / +0.10V / +0.20V / +0.30V

CPU NB Over-Voltage

This item allows you to select CPU NB Voltage Control.

Options: StartUp (Default) / +0.10V / +0.20V / +0.30V

Memory Over-Voltage

This item allows you to select Memory Voltage Control.

Options: 1.60V (Default) / 1.50V / 1.55V / 1.65V / 1.70V / 1.75V / 1.80V / 1.85V

Chipset Over-Voltage

This item allows you to select Chipset Voltage Control.

Options: 1.14V (Default) / 1.18V / 1.23V / 1.27V


HT Over-Voltage

This item allows you to select HT Voltage Control.

Options: 1.22V (Default) / 1.27V / 1.32V / 1.37V

A785G3/A780L3/A780L3G BIOS Manual

CPU FID/VID Control

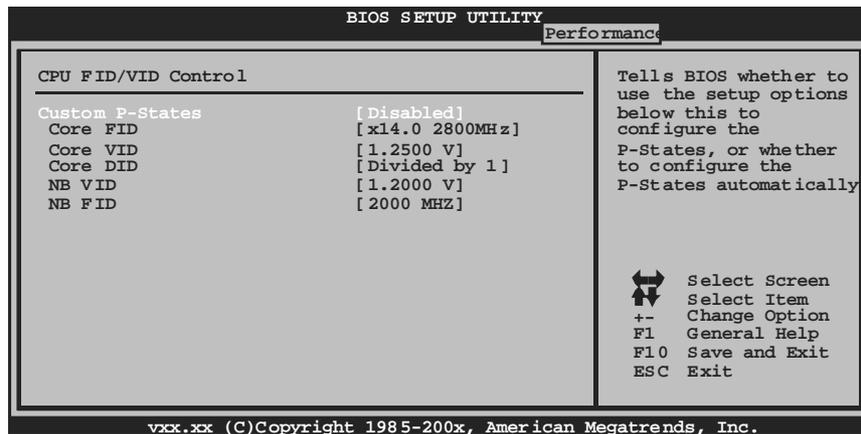

Custom P-States

This item allows you to select the P-States controlling.

Options: Disabled (Default) / Enabled

Core FID

This item allows you to select the Ratio/Frequency of AM3 CPU.

Options: x8.0 1600MHz ~ x31.5 6300MHz

Core VID

This function allows you to adjust the vdtage of AM3 CPU.

Options: 0.0125V ~ 1.5500V

Core DID

This is the Core Divider.

Options: Divided by 1 (Default) / Divided by 2 / Divided by 4 / Divided by 8 / Divided by 16

A785G3/A780L3/A780L3G BIOS Manual


NB VID

This function allows you to adjust the vdtage of NB chip.
Options: 0.0125V ~ 1.5500V

NB FID

This item allows you to select the Frequency of NB chip.
Options: 800MHz ~ 7000MHz (Differed by CPU)

Hyper Transport Configuration

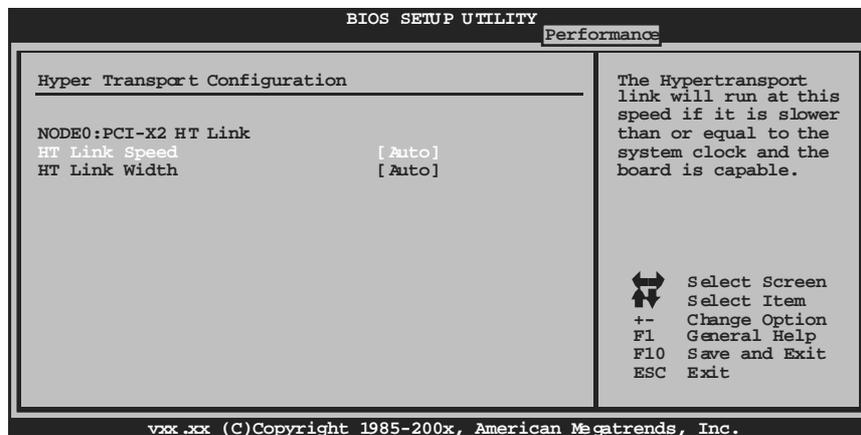

HT Link Speed


Options: Auto (Default) / 200MHz / 400MHz / 600MHz / 800MHz / 1GHz / 1.2GHz / 1.4GHz / 1.6GHz / 1.8GHz / 2.0GHz / 2.2GHz / 2.4GHz / 2.6GHz

HT Link Width


Options: Auto (Default) / 8 Bit / 16 Bit

A785G3/A780L3/A780L3G BIOS Manual

DRAM Timing Configuration

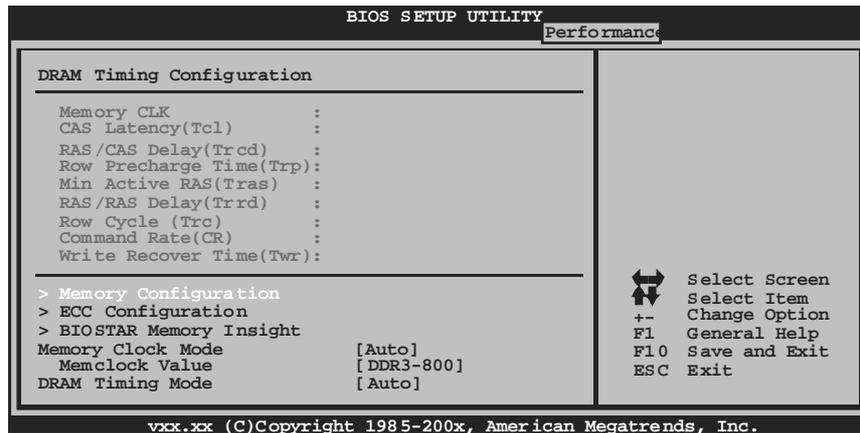

Memory Configuration

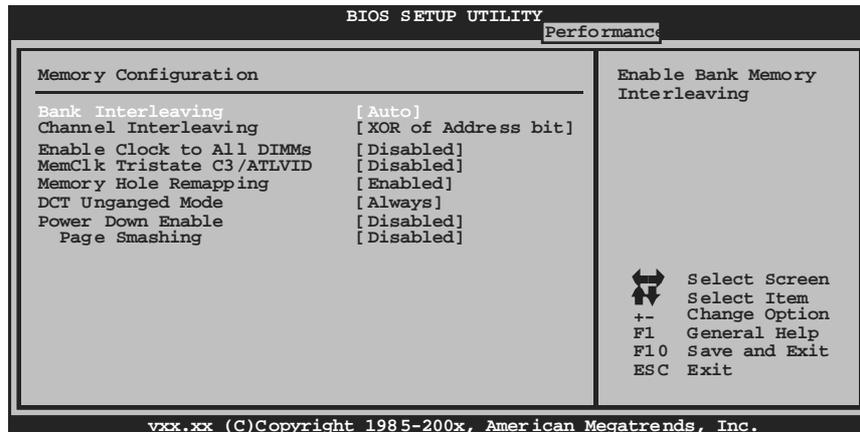

Bank Interleaving

Bank Interleaving is an advanced chipset technique used to improve memory performance. Memory interleaving increases bandwidth by allowing simultaneous access to more than one piece of memory.

Options: Auto (Default)

A785G3/A780L3/A780L3G BIOS Manual

Channel Interleaving

This item allows you to control the DDR2 dual-channel function.

Options: XOR of Address bits [20:16, 6] (Default) / XOR of Address bits [20:16, 9] / Address bits 6 / Address bits 12 / Disabled

Enable Clock to All DIMMs

This item determines whether the BIOS should actively reduce EMI (Electromagnetic Interference) and reduce power consumption by turning off unoccupied or inactive DIMM slots.

Options: Disabled (Default) / Enabled

MemClk Tristate C3/ATLVID

This item enables or disables the MemClk Tristate function in C3 Mode.

Options: Disabled (Default) / Enabled

Memory Hole Remapping

This item allows you to enable or disable the remapping of the overlapped PCI memory above the total physical memory. Only 64-bit OS supports this function.

Options: Enabled (Default) / Disabled

DCT Unganged Mode

This item controls the DRAM controller ganged (128bit*1) / unganged (64bit*2) dual-channel operation mode. If two DRAM modules with different size are installed, using unganged mode can still make it run in dual-channel operation.

Options: Always (Default) / Auto

Power Down Enable

This item controls the DRAM power down function.

Options: Enabled (Default) / Disabled


Page Smashing

This item is S/W Control of Page Smashing Mechanism.

Options: Disabled (Default) / IC / DC / Both

A785G3/A780L3/A780L3G BIOS Manual

ECC Configuration

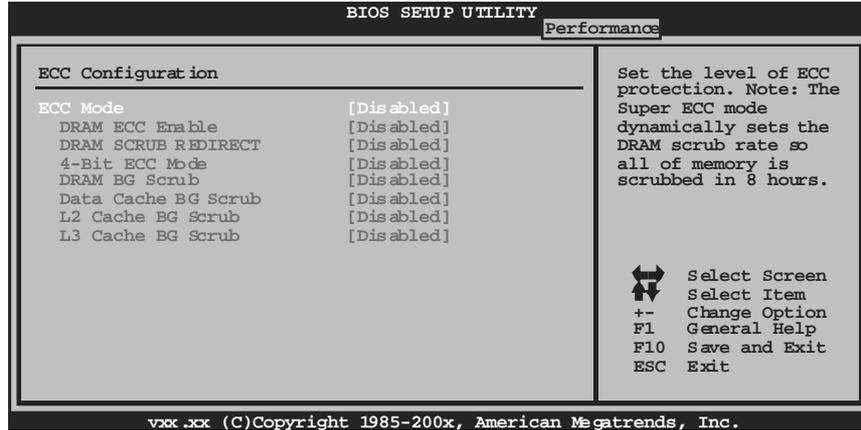

ECC Mode

This item allows you to select the DRAMECC Mode.

Options: Disabled (Default) / Basic / Good / Super / Max / User

DRAM ECC Enabled

Options: Disabled (Default) / Enabled

DRAM Scrub Redirect

Options: Disabled (Default) / Enabled

4-bit ECC Mode


Options: Disabled (Default) / Enabled

DRAM BG Scrub/Data Cache BG Scrub/L2 Cache BG Scrub/L3 Cache BG Scrub

Options: Disabled (Default) / 40ns / 80ns / 160ns / 320ns / 640ns / 1.28us / 2.56us / 5.12us / 10.2us / 20.5us / 41.0us / 81.9us / 163.8us / 327.7us / 655.4us / 1.31ms / 2.62ms / 5.24ms / 10.49ms / 20.97ms / 42.00ms / 84.00ms

A785G3/A780L3/A780L3G BIOS Manual

BIOSTAR Memory Insight

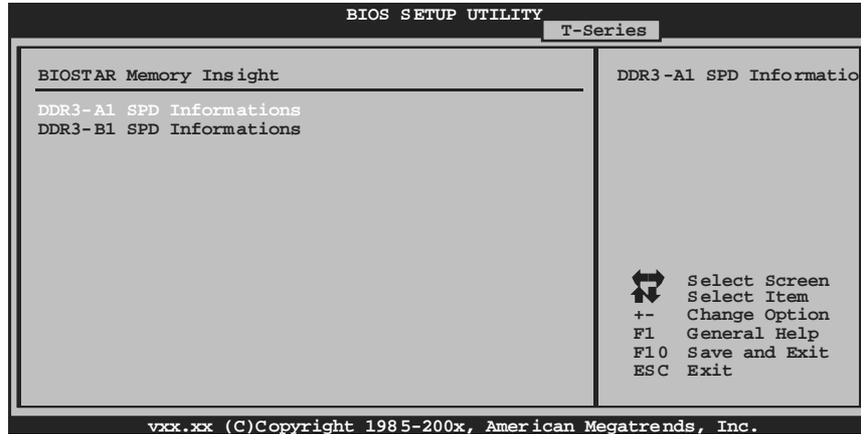

DDR3-A1/B1 SPD Informations

These items display SPD information of DDR3 memory.

Memory Clock Mode

This item allows you to control the Memory Clock.

Options: Auto (Default) / Limit / Manual

Memclock Value

This item allows you to set the Memory Clock.

Options: DDR3-800 (Default) / DDR3-1066 / DDR3-1333 / DDR3-1600 / Auto

DRAM Timing Mode

This item allows you to choose to manually or automatically regulate the DRAM Timing.

Options: Auto (Default) / DCT0 / DCT1 / Both

CAS Latency (CL)

Options: Auto (Default) / 4~12 CLK

2T Command

Options: Auto (Default) / 1T / 2T

A785G3/A780L3/A780L3G BIOS Manual

TRCD

Options: Auto (Default) / 5~12 CLK

TRP

Options: Auto (Default) / 5~12 CLK

tRTP

Options: Auto (Default) / 4~7 CLK

TRAS

Options: Auto (Default) / 15~30 CLK

TRC

Options: Auto (Default) / 11~42 CLK

tWR

Options: Auto (Default) / 5~8 / 10 / 12 CLK

TRRD

Options: Auto (Default) / 4~7 CLK

tWTR

Options: Auto (Default) / 4~7 CLK


tRFC0 / tRFC1 / tRFC2 / tRFC3

Options: Auto (Default) / 90ns / 110ns / 160ns / 300ns / 350ns

A785G3/A780L3/A780L3G BIOS Manual

7 Exit Menu

This menu allows you to load the optimal default settings, and save or discard the changes to the BIOS items.

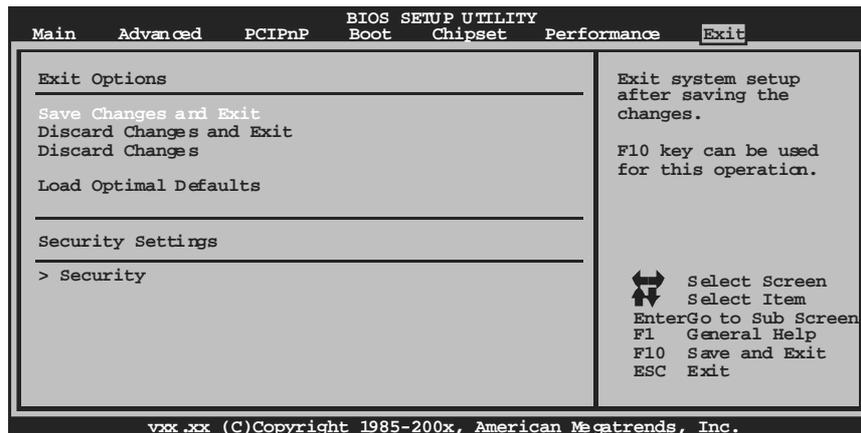

Save Changes and Exit

Save all configuration changes to CMOS RAM and exit setup.

Discard Changes and Exit

Abandon all changes made during the current session and exit setup.

Discard Changes

Abandon all changes made during the current session and restore the previously saved values.


Load Optimal Defaults

This selection allows you to reload the BIOS when problem occurs during system booting sequence. These configurations are factory settings optimized for this system.

A785G3/A780L3/A780L3G BIOS Manual

Security

This sub-menu allows you to provide/revise supervisor and user password.

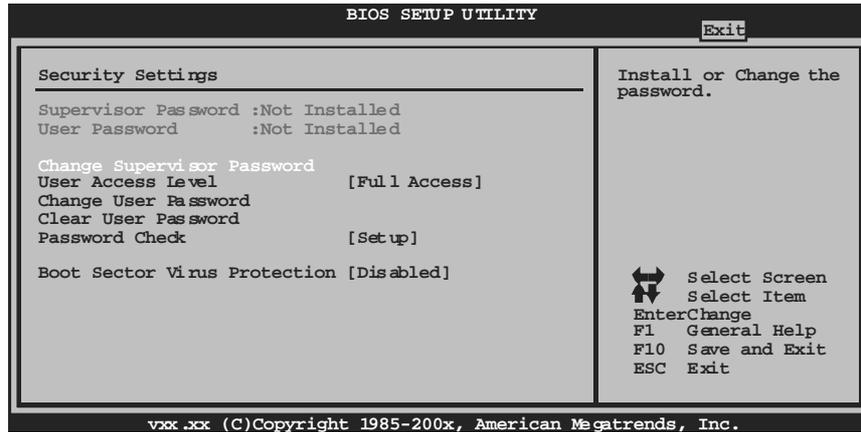

Change Supervisor Password

Setting the supervisor password will prohibit everyone except the supervisor from making changes using the CMOS Setup Utility. You will be prompted with to enter a password.

User Access Level

This item allows supervisor to set the user level.

Options: Full Access (Default) / No Access / View Only / Limited

Change User Password

If the Supervisor Password is not set, then the User Password will function in the same way as the Supervisor Password. If the Supervisor Password is set and the User Password is set, the "User" will only be able to view configurations but will not be able to change them.

Clear User Password

This item is for clearing user password.

A785G3/A780L3/A780L3G BIOS Manual

Password Check

This item is for setting the timing that checking password.

Options: Setup (Default) / Always

Boot Sector Virus Protection

This option allows you to choose the VIRUS Warning feature that is used to protect the IDE Hard Disk boot sector. If this function is enabled and an attempt is made to write to the boot sector, BIOS will display a warning message on the screen and sound an alarm beep.

Options: Disabled (Default) / Enabled