

AcerAltos 9000

User's Guide

Document History

EDITION	PART NUMBER	DATE
First Edition	49.AA984.001	June 1996

Copyright Notice

Copyright © 1996 by Acer America Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer America Corporation.

Programs Copyright © 1996 Acer America Corporation.
All rights reserved.

Printed in U.S.A

Trademarks

Acer and the Acer logo are registered trademarks of Acer Incorporated.

AcerAltos is a trademark of Acer America Corporation and Acer Inc..

Adaptec and the Adaptec logo are registered trademarks of Adaptec, Inc. SCSISelect is a trademark of Adaptec, Inc.

Intel and Pentium are registered trademarks of Intel Corporation.

IBM is a registered trademark and PS/2 is a trademark of International Business Machines Corporation.

MS-DOS and Windows NT are registered trademarks of Microsoft Corporation.

Mylex is a registered trademark of Mylex Corporation.

Novell and NetWare are registered trademarks of Novell Incorporated.

SCO and SCO UNIX are registered trademarks of The Santa Cruz Operation, Inc.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Disclaimer

Acer and its suppliers make no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaim any warranties of merchantability or fitness for a particular purpose. Further, Acer reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revisions or changes. Acer reserves the right to make changes to the products described in this manual at any time and without notice.

Warranty/Limitation of Liability

Any software described in this manual is licensed “as is” and Acer and its suppliers disclaim any and all warranties, express or implied, including but not limited to any warranty of non-infringement of third party rights, merchantability or fitness for a particular purpose. Acer does not warrant that the operation of the software will be uninterrupted or error free. Should the programs prove defective, the buyer (and not Acer, its distributor, or its dealer) assumes the entire cost of all necessary service, repair, and any incidental or consequential damages resulting from any defect in the software. Please see the Acer Limited Product Warranty for details of Acer’s limited warranty on hardware products. IN NO EVENT SHALL ACER BE LIABLE FOR ANY INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF PROFITS OR DATA, EVEN IF ACER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Software License

Acer grants you a personal, non-transferable, non-exclusive license to use the software that accompanies your computer system only on a single computer. You may not (a) make copies of the software except for making one (1) backup copy of the software which will also be subject to this license, (b) reverse engineer, decompile, disassemble, translate or create derivative works based upon the software, (c) export or re-export the software to any person or destination which is not authorized to receive them under the export control laws and regulations of the United States, (d) remove or alter in any way the copyright notices, or other proprietary legends that were on the software as delivered to you or (e) sublicense or otherwise make the software available to third parties. The software is the property of Acer or Acer’s supplier and you do not have and shall not gain any proprietary interest in the software (including any modifications or copies made by or for you) or any related intellectual property rights. Additional restrictions may apply to certain software titles. Please refer to any software licenses that accompany such software for details.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully. Save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. This product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace the outlet. Do not defeat the purpose of the grounding-type plug.
9. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
10. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed 15 amperes.
11. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

12. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or frayed
 - b. If liquid has been spilled into the product
 - c. If the product has been exposed to rain or water
 - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
 - e. If the product has been dropped or the cabinet has been damaged
 - f. If the product exhibits a distinct change in performance, indicating a need for service
14. Use only the proper type of power supply cord (provided in your keyboard/manual accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SVT/SJT, rated 6A 125V minimum. Maximum length is 15 feet (4.6 meters).

FCC Class A Radio Frequency Interference Statement

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/television technician for help.

Notice 1:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2:

Shielded interface cables, if any, must be used in order to comply with the emission limits.

Table of Contents

Introduction	1
Features	2
Options	3
Conventions	4
Chapter 1 System Housing	1-1
1.1 Features	1-1
1.1.1 Front Panel	1-1
1.1.2 Rear Panel.....	1-3
1.2 Getting Started	1-5
1.2.1 Selecting a Site.....	1-5
1.2.2 Unpacking the System.....	1-6
1.2.3 Positioning the System	1-7
1.2.4 Moving the System.....	1-9
1.3 Connecting Components.....	1-10
1.4 Installing Options	1-15
1.4.1 ESD Precautions.....	1-15
1.5 Opening the System.....	1-16
1.5.1 Opening the Housing Panels	1-16
1.5.2 Installing Disk Drives.....	1-19
1.5.3 Installing An Expansion Board.....	1-25
1.5.4 Installing a CPU Board.....	1-27
1.6 Drive Tray Management System (DTMS) Hot Plug Backplane.....	1-29

Chapter 2	System Board	2-1
2.1	Features	2-1
2.2	Major Components	2-2
2.3	Layout	2-3
2.4	Jumpers and Connectors	2-4
2.4.1	Jumper and Connector Locations	2-4
2.4.2	Jumper Settings	2-5
2.4.3	Connector Functions	2-6
2.5	ESD Precautions	2-7
2.6	Memory Upgrade	2-7
2.6.1	Rules for Adding Memory	2-7
2.6.2	Memory Configurations	2-8
2.6.3	Installing a SIMM	2-9
2.6.4	Removing a SIMM	2-10
2.6.5	Reconfiguring the System	2-11
2.7	Video Memory Upgrade	2-12
2.8	PCI Slot Configuration	2-13
2.8.1	PCI-to-PCI Bridge Feature	2-13
2.8.2	Installing PCI Devices	2-13
2.9	Error Messages	2-14
2.9.1	Software Error Messages	2-14
2.9.2	System Error Messages	2-14
2.9.3	Correcting Error Conditions	2-17
Chapter 3	BIOS Utility	3-1
3.1	Entering Setup	3-2
3.2	Basic System Configuration	3-3
3.2.1	Date and Time	3-5
3.2.2	Diskette Drives	3-6

3.2.3	Hard Disk Drives.....	3-6
3.2.4	System Memory	3-8
3.2.5	Math Coprocessor.....	3-9
3.2.6	Video Display.....	3-9
3.2.7	Communication Settings.....	3-9
3.2.8	Enhanced IDE Features	3-10
3.2.9	Large Memory Support Mode.....	3-10
3.2.10	Num Lock After Boot.....	3-11
3.2.11	Memory Test	3-11
3.2.12	Auto Configuration Mode	3-11
3.2.13	Fast Boot Mode	3-11
3.3	Advanced System Configuration	3-12
3.3.1	Shadow RAM.....	3-13
3.3.2	Internal Cache (CPU Cache)	3-13
3.3.3	External Cache	3-13
3.3.4	ECC/Parity Mode Selection	3-14
3.3.5	Memory at 15MB -16MB	3-14
3.4	PCI System Configuration	3-15
3.4.1	PCI IRQ Setting.....	3-16
3.4.2	VGA Palette Snoop.....	3-17
3.4.3	Onboard SCSI.....	3-17
3.5	Non-PnP ISA Card Configuration.....	3-17
3.5.1	IRQ/DMA.....	3-19
3.5.2	Expansion ROM Region.....	3-19
3.5.3	I/O Region	3-19
3.6	Power Saving Configuration	3-20
3.6.1	Power Management Mode.....	3-21
3.6.2	System/Wakeup Events.....	3-21
3.7	System Security Setup	3-22
3.7.1	Disk Drive Control	3-22

3.7.2	Onboard Communication Ports.....	3-24
3.7.3	Onboard PS/2 Mouse (IRQ12).....	3-26
3.7.4	Setup Password.....	3-27
3.7.5	Power On Password.....	3-28
3.8	Remote Diagnostic Configuration.....	3-29
3.9	Load Setup Default Settings.....	3-30
3.10	Leaving Setup.....	3-31

Chapter 4 SCSISelect Configuration Utility.....4-1

4.1	The SCSISelect Configuration Utility.....	4-1
4.1.1	Default Values.....	4-1
4.1.2	When to Use the SCSISelect Utility.....	4-2
4.1.3	Running the SCSISelect Utility.....	4-2
4.2	SCSISelect Utility Options.....	4-4
4.2.1	Configure/View Host Adapter Settings Menu.....	4-5
4.2.2	SCSI Disk Utilities.....	4-19
4.3	Configuring Multiple SCSI Controllers.....	4-22
4.4	Disk Drives Over 1 Gbyte.....	4-23
4.4.1	Extended Translation.....	4-23
4.4.2	The DOS 1 Gbyte Limit.....	4-23
4.4.3	When to Use Extended Translation.....	4-24
4.5	SCSI Troubleshooting Checklist.....	4-25
4.6	BIOS Startup Messages.....	4-26
4.6.1	Device connected, but not ready.....	4-27
4.6.2	Start unit request failed.....	4-28
4.6.3	Disk Drive Configuration Problems.....	4-28

Chapter 5 EISA Configuration Utility (ECU)5-1

5.1	EISA Configuration Utility.....	5-1
5.1.1	Functions.....	5-1

5.1.2	Making Menu Selections	5-2
5.1.3	Getting Help.....	5-3
5.2	Starting the ECU.....	5-4
5.3	ECU Main Menu.....	5-5
5.3.1	Main Menu Selections	5-6
5.4	Configuring Your Computer for the First Time.....	5-12
5.5	Adding or Removing Boards.....	5-15
5.6	Configuring Memory	5-19
5.7	Viewing or Editing Configuration Details.....	5-22
5.8	What To Do If Your Nonvolatile Memory Is Invalid.....	5-25

Appendix A System ResourcesA-1

A.1	Memory Map	A-1
A.2	I/O Address Map.....	A-2
A.3	Interrupt Channels	A-4
A.4	System Default Configuration.....	A-5

Appendix B Drive Tray Management System (DTMS)B-1

B.1	Introduction	B-1
B.1.1	Major Components.....	B-2
B.2	Jumper Settings.....	B-4
B.3	Hard Disk ID Setting Options	B-6
B.4	SCSI Channel Configurations	B-9
B.5	Installing a SCSI Hard Disk.....	B-12
B.6	Using the Hot-swap Feature.....	B-15

Index

List of Figures

1-1	Front Panel.....	1-1
1-2	Rear Panel.....	1-3
1-3	Extending the Chassis Legs (Bottom View).....	1-7
1-4	Placing the System Near a Wall.....	1-8
1-5	Moving the System.....	1-9
1-6	Connecting the Keyboard.....	1-10
1-7	Connecting the Mouse.....	1-11
1-8	Connecting a Monitor.....	1-12
1-9	Connecting a Printer.....	1-13
1-10	Complete System Connections.....	1-15
2-1	System Board Layout.....	2-3
2-2	System Board Jumper and Connector Locations.....	2-4
2-3	Installing a SIMM.....	2-9
2-4	Removing a SIMM.....	2-10
2-5	Installing a Video Memory Chip.....	2-12
4-1	Options Menu Screen.....	4-4
4-2	Configure/View Host Adapter Settings Screen.....	4-5
4-3	Host Adapter SCSI ID Selection Screen for AIC-7880.....	4-6
4-4	SCSI Parity Checking Selection.....	4-7
4-5	Host Adapter SCSI Termination Selection for AIC-7880.....	4-9
4-6	Boot Device Options Screen.....	4-10
4-7	SCSI Device Configuration Screen for AIC-7880.....	4-11
4-8	Advanced Configuration Options Screen.....	4-16
4-9	SCSI Disk Utilities Screen for AIC-7880.....	4-20
5-1	ECU Main Menu—Steps in Configuring Your Computer.....	5-5
5-2	Important EISA Configuration Information.....	5-6
5-3	Add or Remove Boards.....	5-8
5-4	View or Edit Details.....	5-9
5-5	Examine Switches or Print Report.....	5-10
5-6	Save and Exit.....	5-11

5-7 Examine Switches or Print Report 5-12

5-8 Save and Exit..... 5-14

5-9 Add or Remove Boards..... 5-16

B-1 Backplane Board ComponentsB-2

B-2 Hot-plug SCSI Drive Tray Components.....B-3

B-3 Channel Configuration Jumper Settings.....B-5

B-4 ID Cable Connector Pin Definitions.....B-6

B-5 Hard Disk ID Switch Settings.....B-7

B-6 Channel Configuration Jumpers and Slot Number IDsB-8

B-7 Single-Channel ConfigurationB-9

B-8 Dual-Channel ConfigurationB-11

B-9 Connecting the Drive Cables (wide SCSI drive)B-12

B-10 Securing a Drive to the Hot-plug TrayB-13

B-11 Installing the Hot-plug Drive TrayB-14

List of Tables

1-1	Features and Functions of the Front Panel.....	1-2
1-2	Features and Functions of the Rear Panel	1-4
2-1	System Board Jumper Settings.....	2-5
2-2	Connector Functions.....	2-6
2-3	Memory Configurations.....	2-8
2-4	System Error Messages.....	2-15
3-1	Drive Control Settings.....	3-23
3-2	Serial Port 1 Settings.....	3-24
3-3	Serial Port 2 Settings.....	3-24
3-4	Parallel Port Settings.....	3-25
3-5	Parallel Port Operation Mode Settings.....	3-26
4-1	Default Settings for SCSI Controller and All Devices.....	4-2
5-1	Keyboard Function Keys.....	5-2
A-1	System Memory Map.....	A-1
A-2	System I/O Address Map	A-2
A-3	Interrupt Channels	A-4
A-4	Basic System Configuration (Page 1/2).....	A-5
A-5	Basic System Configuration (Page 2/2).....	A-5
A-6	Advanced System Configuration (Page 1/1).....	A-6
A-7	PCI System Configuration	A-7
A-8	System Security	A-8
A-9	EISA Configuration Utility - ECU.....	A-9
B-1	Terminator Settings for single-Channel Configuration.....	B-10
B-2	Terminator Settings for Dual-Channel Configuration	B-11

Introduction

Congratulations on the purchase of your new AcerAltos™ networking server! This Intel® Pentium® processor-based high-performance, expandable server can be used as:

- a file, print, or application server;
- a communications gateway; or,
- an internet web server.

The AcerAltos 9000 supports a variety of operating systems, including Novell® NetWare®, SCO UNIX®, and Microsoft Windows NT®.

The dual-processor CPU card can be upgraded with a second CPU for use as an SMP server.

The onboard PCI SCSI Host Adapter and SVGA graphics controller allow for an additional four PCI and two EISA expansion slots, and one shared EISA/PCI expansion slot.

The modular tower includes an easy-access 8-bay hot-pluggable 3.5-inch Drive Tray Management System (DTMS) and three 5.25-inch half-height drive bays.

The AcerAltos 9000 SCSI backplane is split-channel capable for those networking applications which require fault tolerant RAID configurations.

Features

The AcerAltos 9000 server combines high performance with high expandability, and incorporates the latest advances in server technology. These features include:

- Intel Pentium processor with support for symmetrical multiprocessing (second Intel Pentium required)
- 512 KB pipeline-burst write-back second-level cache
- 32 MB of system ECC RAM, expandable to 256 MB
- 256 KB Flash BIOS — fully programmable with password security
- Onboard SVGA graphics: 64-bit PCI video controller with 1 MB DRAM (upgradable to 2 MB)
- Onboard PCI fast/wide bus master SCSI host adapter
- One 4X SCSI CD-ROM
- Total of seven I/O expansion slots — four PCI, two EISA, and one shared EISA/PCI
- Drive Tray Management System (DTMS) — eight hot-plug 3.5-inch internal storage bays
- Three 5.25-inch half-height internal storage bays
- Two 9-pin serial ports
- One EPP/ECP parallel port — 25-pin Centronics standard
- PS/2®-compatible keyboard port
- PS/2®-compatible mouse port
- One 3.5-inch 1.4 MB floppy diskette drive
- One 350 W switching power supply (115V/230V)
- Acer StartUp™ Kit
- Acer Server Manager™ for SCO UNIX®

Options

The AcerAltos 9000 server can be expanded with the following options:

- 5.25-inch 1.2 MB floppy diskette drive
- 3.5-inch 2.1 GB SCSI fast/wide hard disk drive
- 3.5-inch 4.3 GB SCSI fast/wide hard disk drive
- 3.5-inch 8.0 GB (compressed) SCSI DAT tray
- 3.5-inch 2.5 GB SCSI QIC tape drive
- Fast Ethernet 10/100 PCI NIC
- Adaptec® PCI fast/wide bus master SCSI host adapter
- Mylex® 2-channel PCI RAID Array Processor/Host Adapter
- Specialix® RIO EISA host multiport controller
- Specialix® Remote Terminal Adapter
- Dual Pentium Upgrade Kit

Conventions


The following conventions are used in this manual:

a , e , s , etc.	Represents the actual keys that you have to press on the keyboard.
	NOTE Gives bits and pieces of additional information related to the current topic.
	WARNING Alerts you to any damage that might result from doing or not doing specific actions.
	CAUTION Suggests precautionary measures to avoid potential hardware or software problems.
	IMPORTANT Reminds you to take specific action relevant to the accomplishment of the procedure at hand.
	TIP Tells how to accomplish a procedure with minimum steps through little shortcuts.

Chapter 1 System Housing

1.1 Features

1.1.1 Front Panel

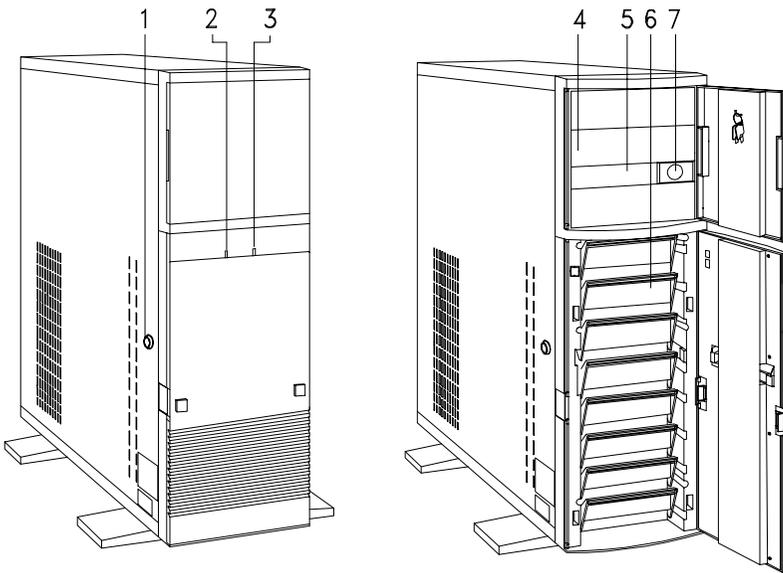

- 1 Keylock
- 2 Hard Disk Drive LED
- 3 Power LED
- 4 5.25-inch Drive Bays


- 5 3.5-inch Drive Bay
- 6 Hard Disk Drive Trays
- 7 Power Button

Figure 1-1 Front Panel

Table 1-1 Features and Functions of the Front Panel

Feature	Function
Keylock	Locks or unlocks the system housing
Hard Disk Drive LED	Indicates hard disk drive activity for hard drives
Power LED	Indicates that power is applied to the system
3.5-inch Diskette Drive	Accommodates a 3.5-inch diskette
Drive Bays	Holds the diskette drives and fixed disk drives
Power Button	Turns the system on or off

1.1.2 Rear Panel

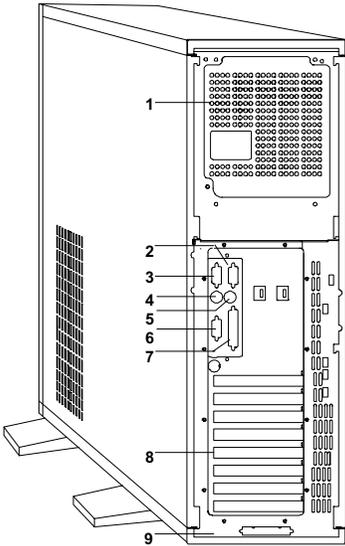

- | | |
|---------------------|------------------------|
| 1. Power Supply Fan | 6. Video Port |
| 2. COM1 | 7. Parallel Port |
| 3. COM2 | 8. Expansion Slots |
| 4. Keyboard Port | 9. SCSI Expansion slot |
| 5. Mouse Port | |

Figure 1-2 Rear Panel

Table 1-2 Features and Functions of the Rear Panel

Feature	Function
Parallel Port	Connects a parallel printer
Serial Ports	Connects serial peripherals
SCSI Port	Connects peripheral devices for high-speed, parallel data transfer
Expansion Slots	For additional expansion boards
Keyboard Connector	Connects a PS/2-compatible keyboard
Mouse Connector	Connects a PS/2-compatible mouse

1.2 Getting Started

The preinstallation process involves the following:

- Selecting a site
- Unpacking the components
- Positioning the system
- Moving the System

1.2.1 Selecting a Site

Consider the following when selecting a site for the system:

1. Find a place that is comfortable for you. Avoid dusty areas of extreme temperature and humidity.
2. Cable paths should not run near equipment that might cause electromagnetic or frequency interference such as radio transmitters, television sets, copying machines, heaters, or air conditioners.
3. Find a location close to an electrical outlet. Avoid using extension cords.
4. Leave enough space around the system for normal air circulation.

1.2.2 Unpacking the System

Unpack the contents of the system box, following instructions found with the system unit.

The system box contains the base system with one 3.5-inch diskette drive installed, onboard video board and an accessory tray. Additional peripherals and configurations may be installed depending upon model.

The accessory tray contains the following:

- AcerAltos 9000 User's Guide - (this manual)
- Power Cord
- Keyboard and mouse
- Acer StartUp CD software bundle
- Warranty Package
- Mounting hardware for peripherals

1.2.3 Positioning the System

Arrange the legs of the system in such a way that the system is stable. Figure 1-3 shows the correct position of the legs when they are extended.

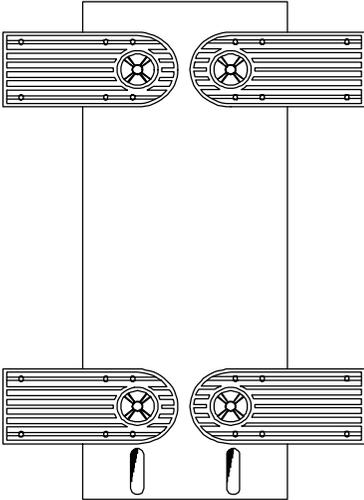


Figure 1-3 Extending the Chassis Legs (bottom view)

When placing the system with side fan facing a wall, leave a space of 2 - 4 inches from the wall to allow air circulation, then position the legs as in Detail A in Figure 1-4.

When standing the system with side fan facing out, place the system close to the wall and position the legs as in Detail B in Figure 1-4.

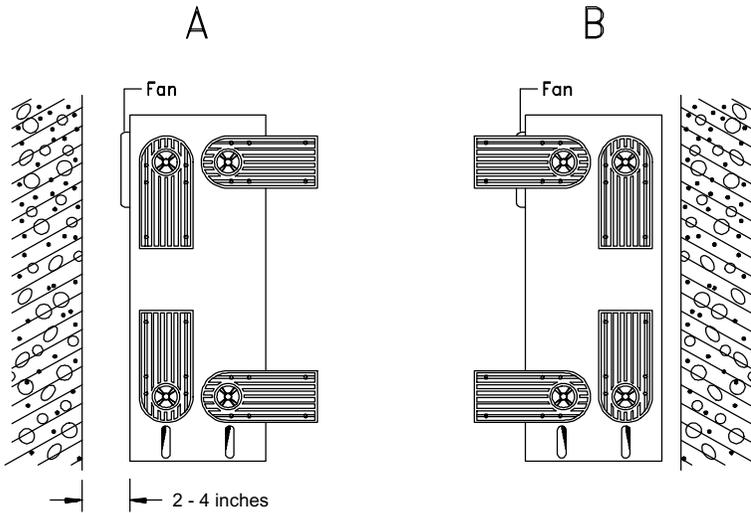


Figure 1-4 Placing the System Near a Wall

1.2.4 Moving the System

The system housing has a handle on top and two wheels at the base to move it easily. Figure 1-5 shows how to move the system.

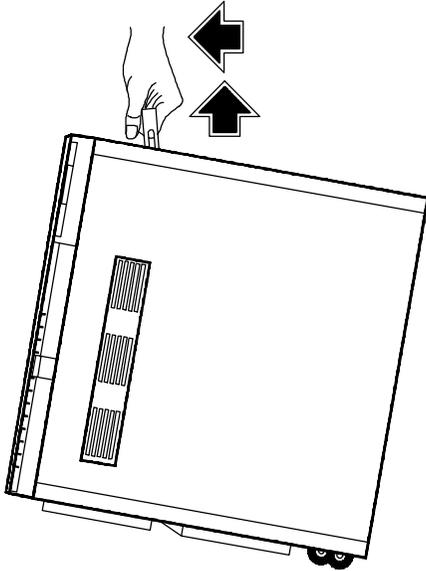


Figure 1-5 Moving the System

NOTE: Be sure to re-position the legs underneath the system before moving.

1.3 Connecting Components

CAUTION: *Make sure that the system is turned off before connecting any system components.*

NOTE: *Each component plug is keyed allowing it to be inserted in one direction.*

Follow these steps to connect the component:

1. Plug the keyboard into the keyboard socket.

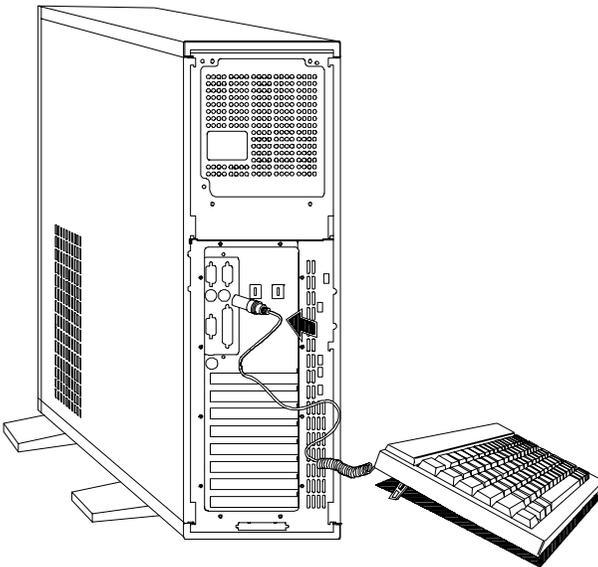


Figure 1-6 Connecting the Keyboard

2. Connect the mouse into the mouse connector.

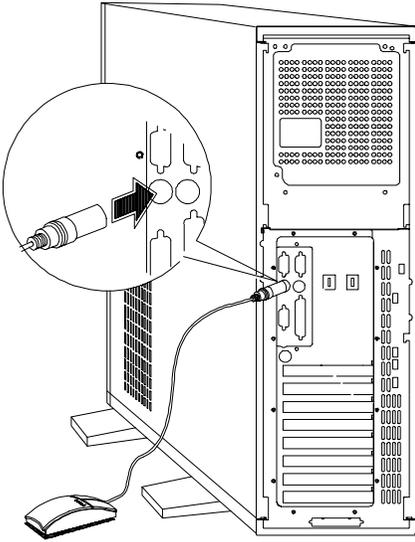


Figure 1-7 Connecting the Mouse

3. Connect the monitor cable into the video socket.

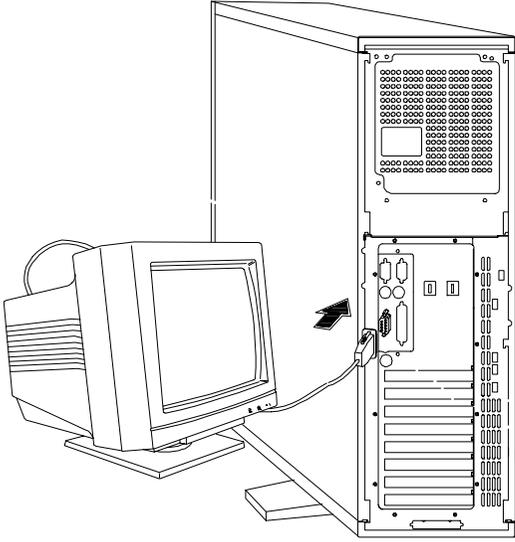


Figure 1-8 Connecting a Monitor

4. If you have a parallel printer, connect it to the parallel port.

If you have a serial printer or other serial peripherals, connect it to a serial port (Serial 1 or Serial 2). Refer to Figure 2-1 for serial port locations.

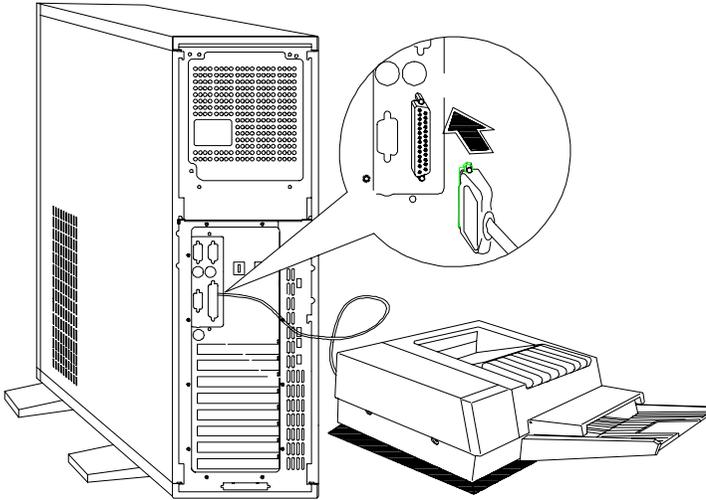


Figure 1-9 Connecting a Printer

5. Plug the female end of the power connector into the system power socket and the other end into a grounded electrical outlet.
6. Plug the monitor power cable into a grounded electrical outlet.

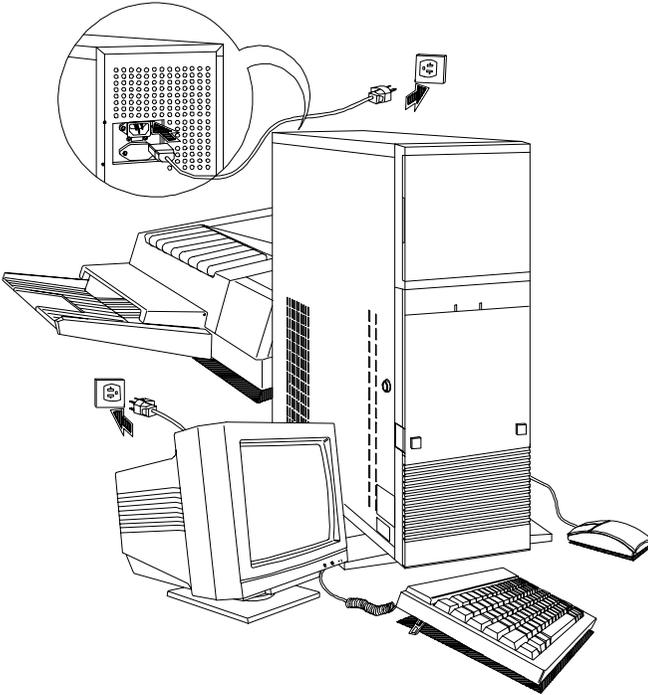


Figure 1-10 Complete System Connections

1.4 Installing Options

This section tells you how to open the system housing and install additional components in the system.

1.4.1 ESD Precautions

Integrated circuits (ICs) on expansion boards are sensitive to static electricity. To avoid damaging the chips from electrostatic discharge (ESD), observe the following precautions:


1. Do not remove a board from its packaging until you are ready to install it.
2. Wear a wrist grounding strap before handling electronic components. Wrist grounding straps are available at most electronic component stores.

1.5 Opening the System

CAUTION! Turn OFF the system and unplug the power cable from the wall socket before opening the system.


1.5.1 Opening the Housing Panels

1.5.1.1 Upper Front Panel

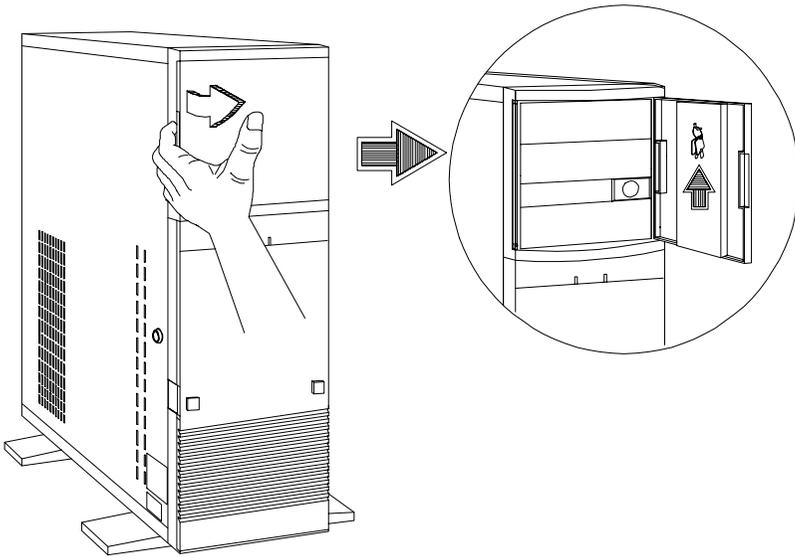

Hold either the right or left edge of the upper front panel to open it and gain access to the CD-ROM and 1.44 MB diskette drives. The housing keys are inside the front panel.

1.5.1.2 Lower Front Panel

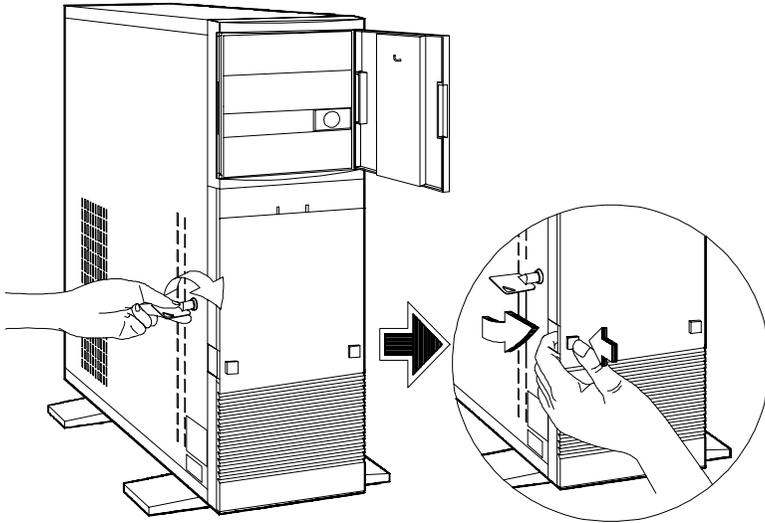


Unlock the housing with the key. Press either the left or right button then pull the panel to access the drive trays.



You cannot remove the key after you have unlocked the housing. You can remove it only when you lock the housing again.

1.5.1.3 Left Panel

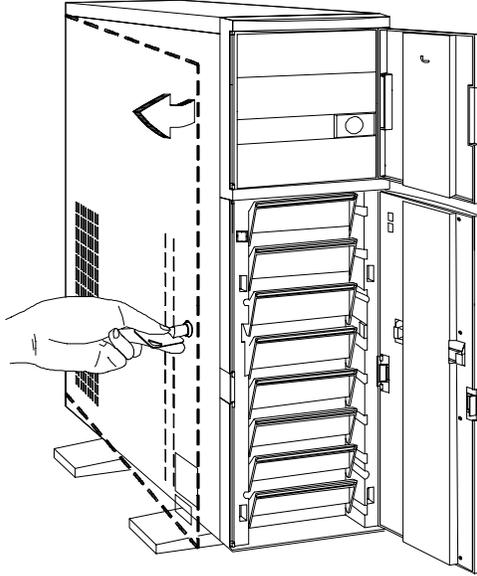

Pull on the key to swing the left panel open. If necessary, you may use a screwdriver to pry open the panel.


1.5.2 Installing Disk Drives




Turn off the power switch and unplug the power cord before installing or removing drives, unless you are utilizing a RAID controller and drives that support hot swapping.

1.5.2.1 3.5-inch Diskette Drive


1. Open the lower front panel.
2. Remove the upper panel including its frame by pressing the latch underside and pulling the panel out.

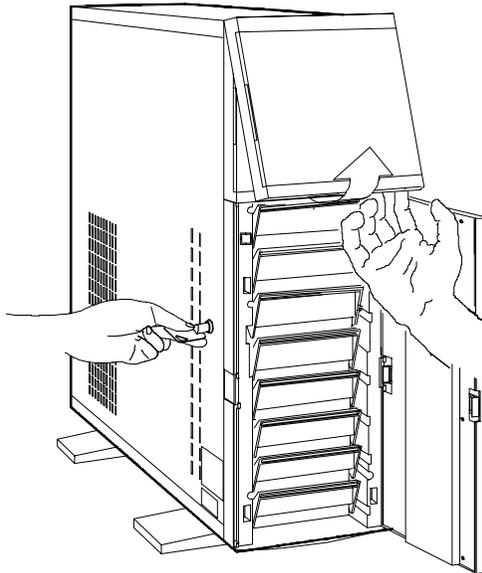

3. Remove the screw attaching the 3.5-inch drive frame to the housing.
4. Secure a 3.5-inch drive on the frame with four screws.

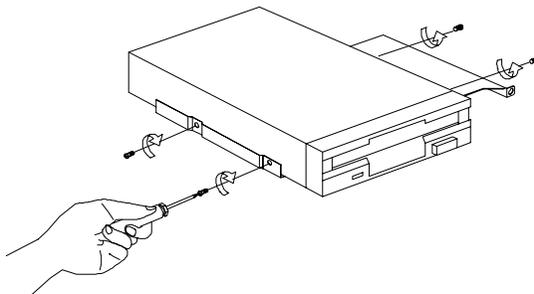

5. Insert the drive into the drive bay and secure it with a screw.

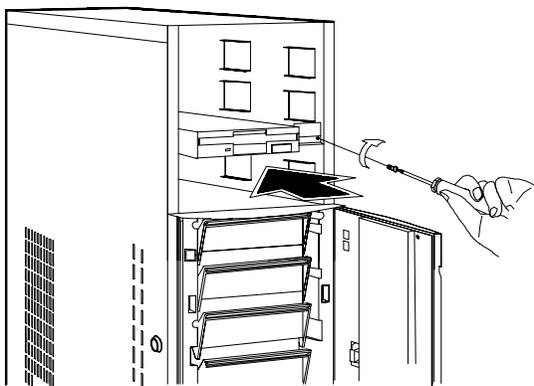


6. Connect the diskette drive cables.


1.5.2.2 5.25-inch Drive

You may install a CD-ROM, QIC tape, hard disk, diskette drive or any other 5.25-inch form factor device into the drive bay(s).

1. Open the lower front panel.
2. Remove the upper panel including its frame by pressing the latch underside and pulling the panel out.
3. Secure the drive guides on the sides of a 5.25-inch drive.

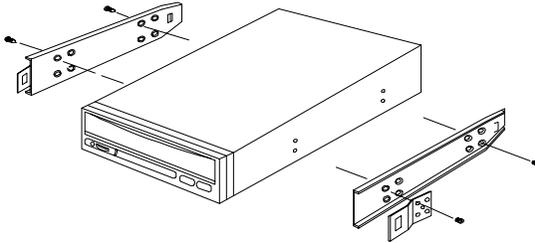


4. Insert the drive into the drive bay.

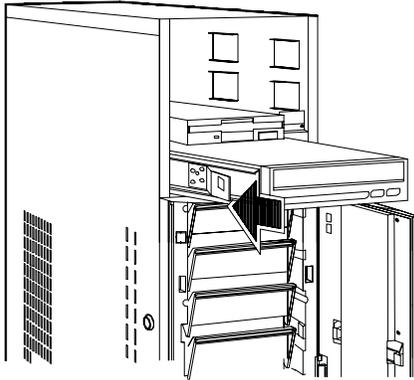


5. Connect the signal and power cables to the drive.

1.5.2.3 3.5-inch Hard Disk

1. Slide the power switch of the drive tray to the **Unlock/Power Off** position.
2. Pull down the tray handle and remove the tray.

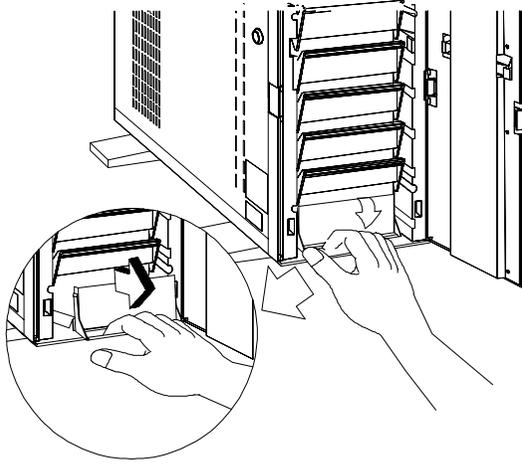


3. Place a hard disk on the tray and secure it with four screws. Refer to Appendix B for information about connecting the drive cables.

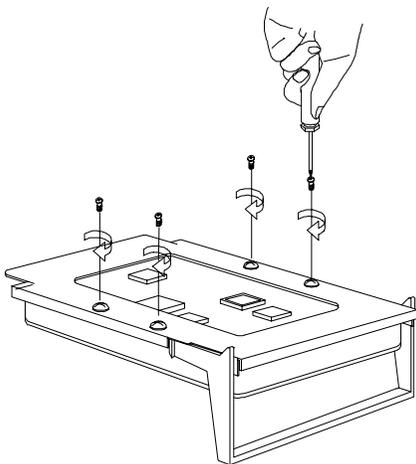


Only fast/wide SCSI drives can be used; fast/narrow SCSI drives will not fit or work in the AcerAltos 9000 drive tray.

4. Insert the tray back into the housing.
5. Slide the power switch of the drive tray to the **Lock/Power On** position.

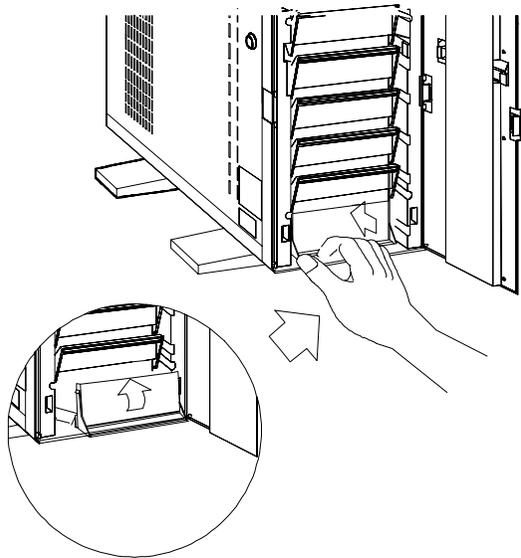


1.5.3 Installing An Expansion Board

1. Remove an expansion slot bracket cover. Save the screw to secure the expansion board.

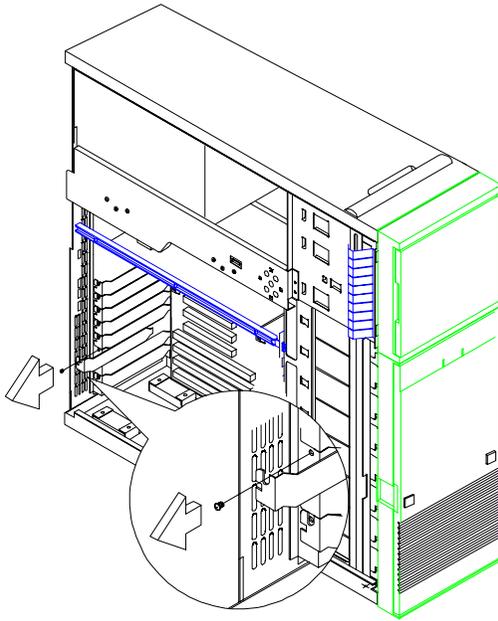


2. Align an expansion board with the open slot and insert the golden fingers into the expansion bus connector.
3. Secure the board with a screw.

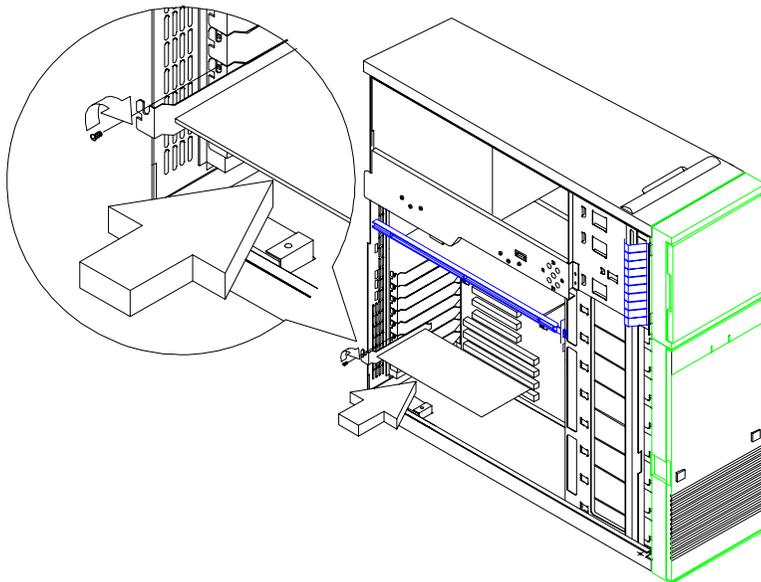

1.5.4 Installing a CPU Board

Follow these steps to re-install the CPU board after reconfiguring or adding an additional CPU.


1. Remove the support board bar, if installed.
2. Insert the board into the slot.

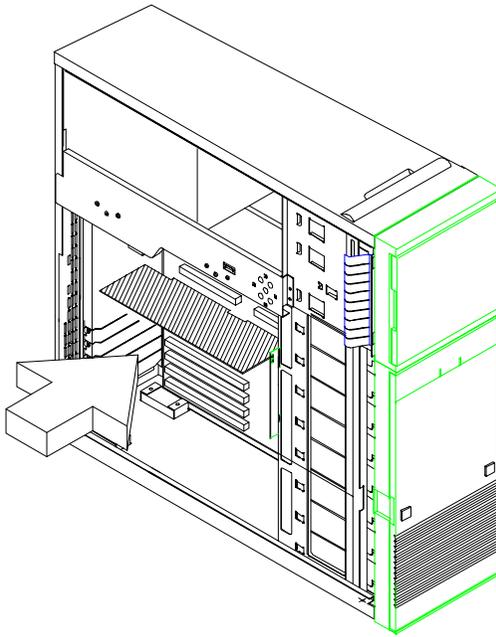

Make sure that the board is properly seated in the slot.

3. Re-insert the support board bar.

4. Align the plastic support bar with the board edge.
5. Insert the right end of the bar to the hole near the hard disk drive frame and the left end to the hole on the rear panel.

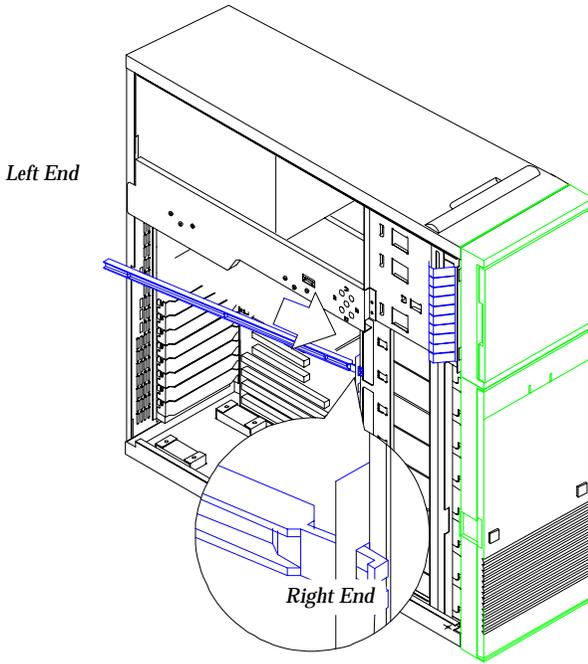

1.6 Drive Tray Management System (DTMS) Hot Plug Backplane

The BP-W8 wide SCSI backplane subsystem consists of a backplane board and drive trays that support wide SCSI hard disk drives. The BP-W8 backplane is specifically designed for a tower housing that accommodates up to eight SCSI drives.

The backplane subsystem major features are listed below:

- “Hot-swap” feature that allows replacement of a defective hard drive even while the system is in full operation. This feature requires a RAID controller board and RAID drivers.
- Two LEDs on the SCSI drive tray front panel to indicate power and drive failure
- Allows “split” and “combine” SCSI-channel configurations
- SCSI ID strapping that allows wide SCSI HDD ID configuration through the backplane switches instead of configuring the individual drive IDs
- Fixed 2.85-volt termination

The DTMS hot-plug backplane is discussed in detail in Appendix B. Refer to Appendix B for information about:

- Major components
- Jumper settings
- Hard disk ID setting options
- SCSI channel configurations (single and dual channel)
- How to install a SCSI hard disk
- How to use the hot-plug feature

Chapter 2 System Board

2.1 Features

The AcerAltos 9000 is a dual-processor capable system that supports the Intel® Pentium® processor. The system board contains an exclusive slot for the CPU board that carries two 321-pin zero-insertion force (ZIP) CPU sockets plus an embedded 512 KB pipeline burst second-level cache.

This high-performance 64-bit system board utilizes both EISA and PCI local bus architecture. Two EISA, four PCI bus slots, and one EISA/PCI shared slot reside on the board to allow installation of either master or slave devices.

The system board has four DRAM banks composed of eight 72-pin SIMM sockets that accommodate both fast-page mode and EDO (extended data output) SIMMs. The sockets support a total of 256-MB system memory using 32-MB SIMMs.

A 50-pin Fast SCSI interface and a 68-pin Wide SCSI interface come with the system board to connect SCSI devices. Standard external I/O interfaces include two 9-pin serial ports, one parallel port, a video port, and keyboard and mouse ports.


2.2 Major Components

The system board has the following major components:

- Four DRAM banks composed of eight 72-pin SIMM sockets that support single- and double-density 60/70ns SIMMs
- CPU board slot
- Four PCI and two EISA bus slots, and one EISA/PCI shared slot
- 256 KB Flash ROM for system BIOS
- System clock/calendar plus 8 KB extended CMOS RAM with battery backup
- 50-pin Fast SCSI and 68-pin Wide SCSI interfaces
- Two 24-pin RDM interfaces
- Onboard VRAM and VRAM sockets for video memory upgrade
- Power connector for 350-watt switching power supply (115/230V)
- Super I/O, SCSI, VGA, memory, and Advanced Server Management (ASM) controller chipsets
- External ports:
 - Two 9-pin serial ports
 - PS/2-compatible keyboard port
 - PS/2-compatible mouse port
 - Parallel port
 - Video port

2.3 Layout

Figure 2-1 shows the locations of system board components.

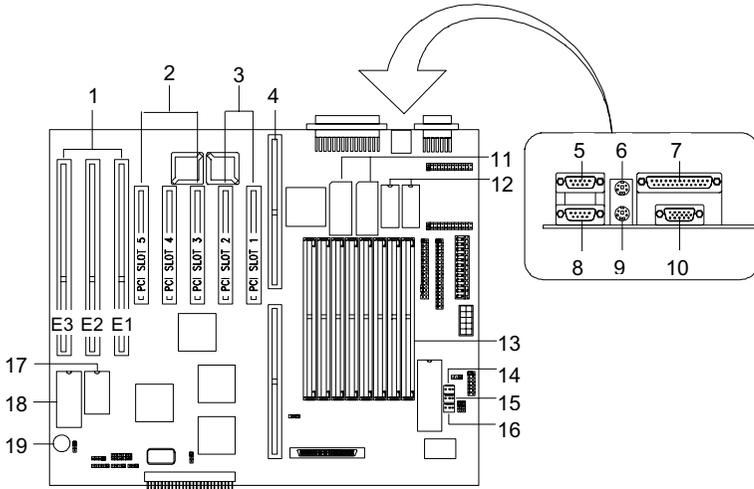

- | | |
|-------------------------|--------------------------|
| 1 EISA slots | 10 Video port |
| 2 PCI slots (secondary) | 11 Video upgrade sockets |
| 3 PCI slots (primary) | 12 Video RAM |
| 4 CPU board slot | 13 SIMM sockets |
| 5 COM1 | 14 Fan connector 3 (FA3) |
| 6 Mouse port | 15 Fan connector 2 (FA2) |
| 7 Parallel port | 16 Fan connector 1 (FA1) |
| 8 COM2 | 17 Buzzer |
| 9 Keyboard port | 18 Flash ROM BIOS |
| | 19 Real-time clock |

Figure 2-1 System Board Layout

2.4 Jumpers and Connectors

2.4.1 Jumper and Connector Locations

Figure 2-2 shows the jumper and connector locations on the system board.

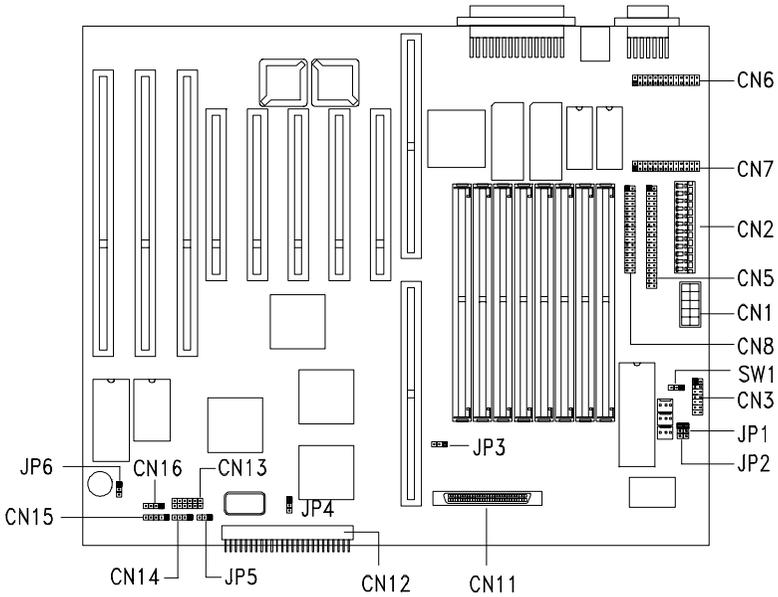


Figure 2-2 System Board Jumper and Connector Locations



Jumpers are prefixed “JP”. Connectors are prefixed “CN” and “SW”.

On this figure, the blackened pin of a jumper represents pin 1.

2.4.2 Jumper Settings

Table 2-1 lists the system board jumpers with their corresponding settings and functions.

Table 2-1 System Board Jumper Settings

Jumper	Setting	Function
Password Security JP1	1-2 2-3*	Check password Bypass password
BIOS Type JP2	1-2* 2-3	Acer OEM
SCSI Termination JP3	1-2 2-3*	Terminator always set to ON Use SCSI Setup Utility to set terminator to ON or OFF
SCSI Feature JP4	1-2* 2-3	Wide SCSI Standard
Hardware Reset JP5	1-2 2-3*	Enabled Disabled
Sound Feature JP6	1-2* 2-3	Buzzer Speaker

* Default setting

2.4.3 Connector Functions

Table 2-2 lists the different connectors on the system board and their respective functions.

Table 2-2 Connector Functions

Connector	Function
CN1	Power connector
CN2	Power connector
CN3	Backplane board HDD status connector
CN5	IDE hard disk connector
CN6	RDM connector
CN7	RDM connector
CN8	Diskette drive connector
CN11	68-pin Wide SCSI connector
CN12	50-pin Fast SCSI connector
CN13	LED board connector
CN14	Hard disk LED connector
CN15	Power LED connector
CN16	Speaker connector
SW1	NMI switch

2.5 ESD Precautions

Always observe the following electrostatic discharge (ESD) precautions before installing a system component:

1. Do not remove a component from its antistatic packaging until you are ready to install it.
2. Wear a wrist grounding strap before handling electronic components. Wrist grounding straps are available at most electronic component stores.



Do not attempt the procedures described in the following sections unless you are a qualified technician.

2.6 Memory Upgrade

The system board comes with eight 72-pin SIMM sockets that support 4-MB and 16-MB single-density SIMMs as well as 8-MB and 32-MB double-density SIMMs for a total system memory of 256-MB. The sockets support both the fast page mode and EDO 60/70 ns SIMMs.

See Table 2-3 for a list of some possible memory configurations.

2.6.1 Rules for Adding Memory

- Use only one type of SIMM in a given bank. You may combine different types of SIMMs for a memory configuration as long as the SIMMs in each bank are of the same type.
- You may use the memory banks (Bank0 ~ Bank3) in any order.
- Always install SIMMs in pairs. For example, for a total memory of 16 MB, install two 8-MB SIMMs in a bank. You can not use a 16-MB SIMM alone for a 16-MB memory.
- Run the EISA Configuration Utility (ECU) after changing memory capacity.

2.6.2 Memory Configurations

Table 2-3 Memory Configurations

Bank0		Bank1		Bank2		Bank3		Total Memory
S1	S2	S3	S4	S5	S6	S7	S8	
8 MB	8 MB							16 MB
16 MB	16 MB							32 MB
32 MB	32 MB							64 MB
8 MB	8 MB	8 MB	8 MB					32 MB
16 MB	16 MB	16 MB	16 MB					64 MB
32 MB	32 MB	32 MB	32 MB					128 MB
8 MB	8 MB	16 MB	16 MB					48 MB
8 MB	8 MB	32 MB	32 MB					80 MB
16 MB	16 MB	32 MB	32 MB					96 MB
8 MB	8 MB	16 MB	16 MB					48 MB
8 MB	8 MB	16 MB	16 MB	16 MB	16 MB			80 MB
8 MB	8 MB	16 MB	16 MB	32 MB	32 MB			112 MB
8 MB	8 MB	16 MB	16 MB	32 MB	32 MB	32 MB	32 MB	176 MB
8 MB	8 MB	8 MB	8 MB	16 MB	16 MB	16 MB	16 MB	96 MB
8 MB	8 MB	8 MB	8 MB	32 MB	32 MB	32 MB	32 MB	160 MB
16 MB	16 MB	16 MB	16 MB	32 MB	32 MB	32 MB	32 MB	192 MB
8 MB	64 MB							
16 MB	128 MB							
32 MB	256 MB							



The above configurations are only some of the available memory combinations. You can use other combinations as long as you follow the rules for upgrading memory in section 2.6.1.

2.6.3 Installing a SIMM

Follow these steps to install a SIMM:

1. Carefully slip a SIMM at a 45° angle into a socket making sure that the curved edge indicating the pin 1 of the SIMM matches pin 1 of the socket.



A SIMM fits only in one direction. If you slip in a SIMM that does not completely fit, you may have inserted it the wrong way. Reverse the orientation of the SIMM.

2. Gently push the SIMM to a vertical position until the pegs of the socket slip into the holes on the SIMM, and the holding clips lock the SIMM into position. The SIMM should be at a 90° angle when installed.

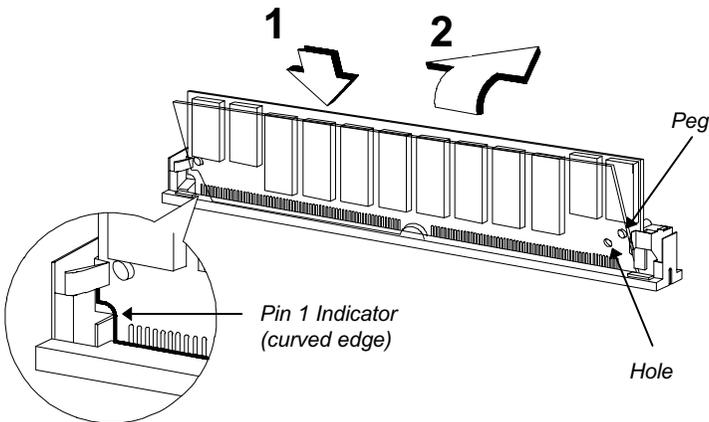


Figure 2-3 Installing a SIMM

2.6.4 Removing a SIMM

Follow these steps to remove a SIMM:

1. Press the holding clips on both sides of the SIMM outward to release it.
2. Move the SIMM to a 45° angle.
3. Pull the SIMM out of the socket.

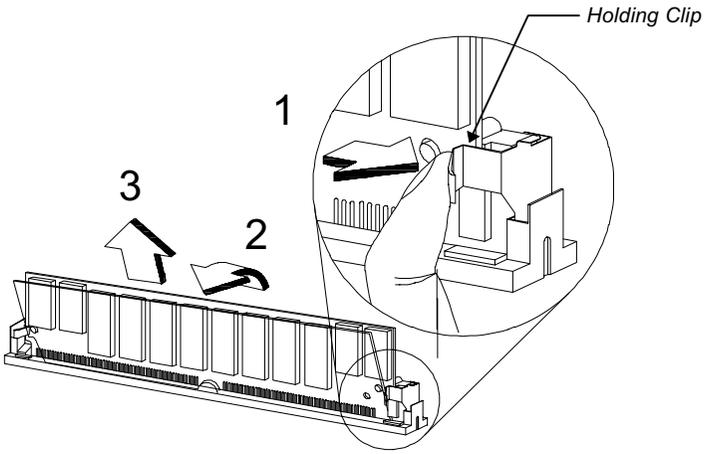


Figure 2-4 Removing a SIMM

2.6.5 Reconfiguring the System

You must enter Setup after installing or removing SIMMs to reconfigure the system.

Follow these steps to reconfigure the system:

1. Turn the system on. A memory error message appears, indicating that the total memory does not match the value stored in CMOS.
2. Press **CTRL** + **ALT** + **ESC** to enter Setup. A warning message appears indicating an incorrect memory configuration.
3. Press **ESC** twice to exit and reboot the system.

The system boots with the new memory configuration.

5. Run the EISA Configuration Utility (ECU).



If you run Windows NT, NetWare, or UnixWare in the system, make sure to run the ECU every time you change the memory size. See Chapter 5 for information on the ECU.

2.7 Video Memory Upgrade

Larger video memory allows you to display higher resolutions and more colors. The system board comes with a 1-MB video memory onboard upgradable to 2 MB.

Follow these steps to upgrade the video memory:

1. Locate the video DRAM upgrade sockets labeled U18 and U21 on the system board. See Figure 1-1.
2. Gently insert a video chip into each of the upgrade sockets.



Make sure that the pin 1 indicator on the chip matches the notched corner of the socket.

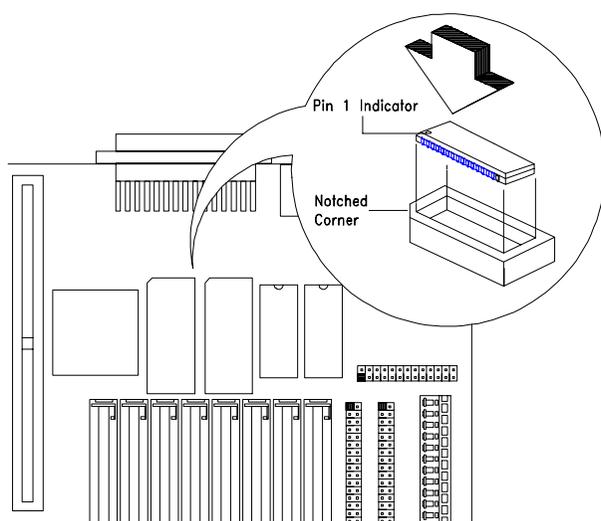


Figure 2-5 Installing a Video Memory Chip

2.8 PCI Slot Configuration

2.8.1 PCI-to-PCI Bridge Feature

The system board carries a PCI-to-PCI bridge controller chipset that expands the capability of the PCI system by allowing all the five PCI slots in the system to be bus masters. The bridge has two interfaces. The primary interface connects directly to the PCI bus close to the host CPU. The secondary interface creates a new PCI bus that can operate independently from the primary PCI bus. Refer to Figure 2-1.

2.8.2 Installing PCI Devices

The devices you install in PCI slots 1 and 2 operate on the primary PCI bus while those in PCI slots 3, 4, and 5 operate on the secondary PCI bus.

Since the primary PCI bus has a quicker response time than the secondary PCI bus, install PCI add-on boards in PCI slots 1 and 2 first then in PCI slots 3, 4, and 5 to enhance system performance. See Figure 2-1 for the locations of the PCI slots.

2.9 Error Messages

Do not continue using the computer if you receive an error message of any type. Note the message and take corrective action. This section explains the different types of error messages and corresponding corrective measures.

There are two general types of error messages:

- Software
- System

2.9.1 Software Error Messages

Software error messages are returned by your operating system or application. These messages typically occur after you boot the operating system or when you run your applications. If you receive this type of message, consult your application or operating system manual for help.

2.9.2 System Error Messages

A system error message indicates a problem with the computer itself. A message of this type normally appears during the power-on self-test, before the operating system prompt appears.

Table 2-4 lists the system error messages.

Table 2-4 System Error Messages

Message	Action
CMOS Battery Error	Replace the RTC chip or contact your dealer.
CMOS Checksum Error	Check the RTC chip and the necessary jumper. If the battery is still good, run Setup.
Display Card Mismatch	Run Setup.
Diskette Drive Controller Error or Not Installed	Check and connect the control cable to the diskette controller.
Diskette Drive Error	Diskette may be defective. If not, replace the diskette drive.
Diskette Drive A Type Mismatch	Run Setup and select the proper drive type.
Diskette Drive B Type Mismatch	Run Setup and select the proper drive type.
Equipment Configuration Error	Modify the memory configuration to agree with one of the options in Table 2-3.
Hard disk Controller Error	Run Setup.
Hard disk 0 Error	Check all cable connections. Replace hard disk.
Hard disk 1 Error	Check all cable connections. Replace hard disk.
Keyboard Error or No Keyboard Connected	Check and connect the keyboard to the system unit.
Keyboard Interface Error	Replace the keyboard or contact your dealer.

Table 2-4 System Error Messages (continued)

Message	Action
Memory Error at: MMMM:SSSS:OOO (W:XXXX, R:YYYY) where: M: MB, S: Segment, O: Offset, X/Y: write/read pattern	Check SIMMs on the system board. Contact your dealer.
Memory Size Mismatch CPU Clock Mismatch	Run Setup. Check if the values shown in the memory parameters are correct. If correct, exit Setup and reboot the system. If the error message reappears, seek technical assistance.
Onboard Serial Port 1 Conflict	Run Setup and disable the port.
Onboard Serial Port 2 Conflict	Run Setup and disable the port.
Onboard Parallel Port Conflict	Run Setup and disable the port.
Pointing Device Error	Check and connect pointing device.
Pointing Device Interface Error	Replace the pointing device or contact your dealer.
Press F1 key to continue or Ctrl-Alt-Esc for Setup	Press F1 or CTRL + ALT + ESC to enter Setup.
Real Time Clock Error	Check the RTC chip. If it is still good, run Setup. If not, replace the RTC chip.

2.9.3 Correcting Error Conditions

As a general rule, if an error message says "Press F1 to continue," it is caused by a configuration problem, which can be easily corrected. An equipment malfunction is more likely to cause a fatal error, i.e., an error that causes complete system failure.

Here are some corrective measures for error conditions:

1. Run Setup and ECU. You must know the correct configuration values for your system before you enter Setup, which is why you should write them down when the system is correctly configured. An incorrect configuration is a major cause of power-on error messages, especially for a new system.
2. Remove the system unit cover. Check that the jumpers on the system board and any expansion boards are set correctly.
3. If you cannot access a new disk, it may be because your disk is not properly formatted.
4. Check that all connectors and boards are securely plugged in.

If you go through the corrective steps above and still receive an error message, the cause may be an equipment malfunction.

If you are sure that your configuration values are correct and your battery is in good condition, the problem may lie in a damaged or defective chip.

In either case, contact an authorized service center for assistance.

Chapter 3 BIOS Utility

Most systems are already configured by the manufacturer or the dealer. There is no need to run Setup when starting the computer unless you get a Run Setup message.

The Setup program loads configuration values into the battery-backed nonvolatile memory called CMOS RAM. This memory area is not part of the system RAM.



If you repeatedly receive Run Setup messages, the battery may be bad. In this case, the system cannot retain configuration values in CMOS. Ask a qualified technician for assistance.

Before running Setup, have the following information ready:

- **Diskette drive type** The standard type is a 3.5-inch 1.44 MB diskette drive.


3.1 Entering Setup

To enter Setup, press the key combination **b + a + ^** .



*You must press **b + a + ^** while the system is booting. This key combination does not work any other time.*

The BIOS Utility main menu then appears:

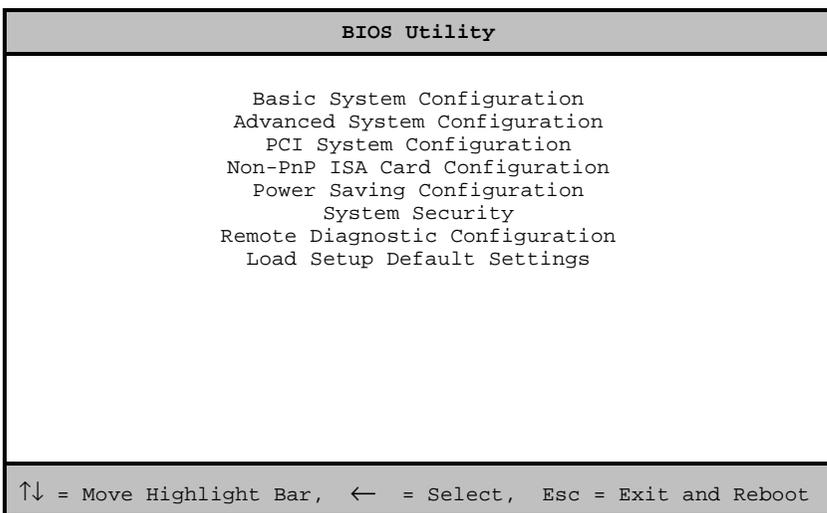

The parameters on the screens show default values. These values may not be the same as those in your system.

The grayed items (denoted with asterisks) on the screens have fixed settings and are not user-configurable.

3.2 Basic System Configuration

Select Basic System Configuration to input configuration values such as date, time, and disk types.

The following screen shows the Basic System Configuration menu.

Basic System Configuration		Page 1/2		
Date	[MM/DD/YY]			
Time	[HH:MM:SS]			
Diskette Drive A	[1.44 MB 3.5-inch]			
Diskette Drive B	[None]			
		Cylinder	Head	Sector
Hard Disk 0 (xxx MB).....	[None]	xx	xx	xx
Hard Disk 1 (xxx MB).....	[None]	xx	xx	xx
*Base Memory	[640] KB			
*Extended Memory	[xxxx] KB			
*Total Memory	[xxxx] KB			
*Math Coprocessor	[Installed]			
*Video Display	[VGA/EGA]			
↑↓ = Move Highlight Bar, → ← = Change Setting				
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit				

The command line at the bottom of the menu tells you how to highlight items, change settings, and move from one screen to another.

Press **W** or **y** on the cursor-edit keypad to highlight the desired parameter.

Press **X** or **Z** to select the desired option for an item.

Press **}** to move to the next page or **{** to return to the previous page.

Press **^** to exit the configuration menu.

The following screen shows page 2 of the Basic System Configuration menu.

Basic System Configuration		Page 2/2
Communication Settings		
Baud Rate	[9600] BPS
Parity	[None]
Stop Bits	[1] Bits
Data Length	[8] Bits
Enhanced IDE Features		
Hard Disk Block Mode	[Disabled]
Hard Disk Size > 504MB	[Disabled]
Large Memory Support Mode	[Normal]
Num Lock After Boot	[Enabled]
Memory Test	[Disabled]
Auto Configuration Mode	[Disabled]
Fast Boot Mode	[Disabled]
↑↓ = Move Highlight Bar, → ← = Change Setting PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit		

The following sections explain the different parameters and their settings.

3.2.1 Date and Time

The real-time clock keeps the system date and time. After setting the date and time, you need not enter them every time you turn on the system. As long as the internal battery remains good (approximately seven years) and connected, the clock continues to keep the date and time accurately even when the power is off.

Date

Highlight the items on the date parameter and press **X** or **Z** to set the date following the month-day-year format.

Valid values for month, day, and year are:

- Month 1 to 12
- Day 1 to 31
- Year 00 to 99

Time

Highlight the items on the time parameter and press **X** or **Z** to set the time following the hour-minute-second format.

Valid values for hour, minute, and second are:

- Hour 00 to 23
- Minute 00 to 59
- Second 00 to 59

3.2.2 Diskette Drives

To enter the configuration value for the first diskette drive (drive A), highlight the Diskette Drive A parameter. Press **X** or **Z** key to view the options and select the appropriate value.

Possible settings for the Diskette Drive parameters:

- [None]
- [360 KB, 5.25-inch]
- [1.2 MB, 5.25-inch]
- [720 KB, 3.5-inch]
- [1.44 MB, 3.5-inch]
- [2.88 MB, 3.5-inch]

Follow the same procedure for Diskette Drive B. Choose **None** if you do not have a second diskette drive.

3.2.3 Hard Disk Drives

Move the highlight bar to the hard disk 0 parameter to configure the first hard disk (drive C). Press **X** or **Z** to display the hard disk types with their respective values. Select the type that corresponds to your hard disk drive. Follow the same procedure for the other hard disks, if any. Choose **None** if you do not have other drives or are booting from a SCSI hard drive. The default setting is **None**.

When booting from a SCSI fixed disk installation, have both of these options set to None.



The following sections, “Selecting the Auto Option” and “Selecting the User Option,” describe functions used for IDE drives only.

Selecting the “Auto” Option

If you do not know the exact type of your IDE fixed disk, select the option **Auto**. During the power-on self-test (POST), when the system performs self-testing and self-initialization before loading the operating system and applications, the BIOS utility automatically determines your hard disk type. You can see the drive type and its values when you enter the BIOS Utility.

	Cylinder	Head	Sector
Hard Disk 0 (xx MB) ... [Auto]	xx	xx	xx

If desired, you can save the values under the option **User**.

	Cylinder	Head	Sector
Hard Disk 0 (xx MB) ... [User]	xx	xx	xx

The next time you boot the system, the BIOS utility does not have to auto-configure your hard disk as it detects the saved disk information during POST.



We recommend that you copy the IDE disk drive values and keep them in a safe place in case you have to reconfigure the disk in the future.

Follow the same procedure to auto-configure other IDE hard disks.

Selecting the “User” Option

There are cases when you cannot use the option **Auto**, instead you have to select **User**. Choose the **User** option when you have installed an IDE fixed disk that was previously formatted but does not use the disk native parameters or structure, that is, the disk type may be in the hard disk types list but the number of cylinders, heads, and sectors differ.

Follow these steps to configure a hard disk with the **User** option:

1. Highlight a hard disk parameter.
2. Select the option **User** and press \ominus .
3. Type in the number of cylinders, heads, and sectors of the drive under the appropriate columns.



Be sure to have the correct hard disk information beforehand.

4. Choose **Yes** when asked if you want to save CMOS data.

3.2.4 System Memory

The system automatically detects the total amount of onboard memory during the POST and sets the memory parameters accordingly. If you install additional memory, the system adjusts the Total Memory parameter to display the new memory size (refer to section 2.6.5). When changing your system’s memory configuration, be sure to run the ECU to add in the changes.

3.2.5 Math Coprocessor

The CPU includes a math coprocessor so this parameter shows **Installed** by default.

3.2.6 Video Display

The video display is the monitor on which the operating system prompt appears when you boot the system. The system automatically detects the video mode of your primary display and sets the configuration value accordingly. Values for this parameter are:

- [Monochrome]
- [CGA 40 columns x 25 rows]
- [CGA 80 columns x 25 rows]
- [VGA/EGA]

3.2.7 Communication Settings

The Communication Settings parameters allow you to set the baud rate, parity, stop bit and data length for the first serial port (COM 1). The values for this parameter are:

- Baud rate : 110 to 9600 bits per second (BPS)
- Parity : odd, even, or none
- Stop bit : 1 or 2 stop bits
- Data length : 7- or 8-bit data word



The baud rate maximum value 9600 BPS applies only to POST under UNIX environment. The system I/O chipset SMC 37C665 supports up to 115.2K BPS.

3.2.8 Enhanced IDE Features

Hard Disk Block Mode

This function enhances disk performance depending on the hard disk in use. If you set this parameter to **Enabled**, it allows data transfer in block (multiple sectors) by increasing the data transfer rate to 256 bytes per cycle. If your system does not boot after enabling this parameter, change the setting to **Disabled**. This parameter is normally set to **Disabled**.

Hard Disk Size > 504 MB

This enhanced IDE feature works only under DOS and Windows 3.x environments. If enabled, it allows you to use a hard disk with a capacity of more than 504 MB. This is made possible through the Logical Block Address (LBA) mode translation. Other operating systems require this parameter to be set to **Disabled**.

To prevent data loss, set this parameter set to **Enabled** if you are using a hard disk with more than 504 MB capacity that was previously configured through LBA mode. If you use a hard disk configured through cylinder-head-sector (CHS) mode, set this item to **Disabled**.

3.2.9 Large Memory Support Mode

This parameter allows the system to support an extended memory higher than 64 MB. Set this parameter to **Advanced** if you are working under Windows NT environment and the system memory size is greater than or equal to 64 MB, otherwise, set it to **Normal**. The default setting is **Normal**.

3.2.10 Num Lock After Boot

This parameter allows you to activate the Num Lock function upon booting. The default setting is **Enabled**.

3.2.11 Memory Test

When set to **Enabled**, this parameter allows the system to perform a RAM test during the POST routine. When set to **Disabled**, the system detects only the memory size and bypasses the test routine. The default setting is **Disabled**.

This item is fixed to **Disabled** and is not user-configurable if you enabled the Auto Configuration Mode and the Fast Boot Mode parameters on page 2 of the Basic System Configuration menu. See sections 3.2.12 and 3.2.13.

3.2.12 Auto Configuration Mode

When enabled, this parameter automatically sets the system configuration values to their optimized settings. At the same time, it causes the Memory Test parameter to be fixed to **Disabled** and the shadow RAM regions for system and video BIOS to **Enabled**. See sections 3.2.11 and 3.3.1.

This parameter is **Disabled** by default.

3.2.13 Fast Boot Mode

When enabled, this parameter allows the system to boot faster by skipping some POST routines. It bypasses memory test, enables Shadow RAM, and enables primary- and second-level cache. This parameter is **Disabled** by default.

When set to **Enabled**, this parameter causes the Memory Test parameter to be fixed to **Disabled** and the shadow RAM regions for system and video BIOS to **Enabled**. See sections 3.2.11 and 3.3.1.

3.3 Advanced System Configuration

The Advanced System Configuration option allows you to configure the advanced system memory functions.



To avoid damaging the system, do not change any settings in the Advanced Configuration unless you are a qualified technician.

The following screen shows page one of the Advanced System Configuration parameters.

Advanced System Configuration		Page 1/1
Shadow RAM		
*E000h -	FFFFh (System BIOS) ...	[Enabled]
*C000h -	C7FFh (Video BIOS)	[Enabled]
C800h -	CBFFh	[Disabled]
CC00h -	CFFFh	[Disabled]
D000h -	D3FFh	[Disabled]
D400h -	D7FFh	[Disabled]
D800h -	DBFFh	[Disabled]
DC00h -	DFFFh	[Disabled]
Internal Cache (CPU Cache)		[Enabled]
External Cache		[Enabled]
ECC/Parity Mode Selection		[ECC]
*Operation of ECC		[None]
Memory at 15MB-16MB Reserved for		[System] Use

↑↓ = Move Highlight Bar, → ← = Change Setting
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit



The grayed parameters (denoted with asterisks) are not user-configurable.

3.3.1 Shadow RAM

The system reserves 384 KB of random access memory (RAM) for the shadow RAM function. This parameter has eight range addresses. When you set these addresses to **Enabled**, the system BIOS, video BIOS, and I/O ROM functions run directly from the shadow RAM for faster operation. When you set them to **Disabled**, the functions run normally from ROM.

The address range E0000h - FFFFFh is for shadowing the system BIOS. This item is always set to **Enabled** and is not user-configurable. The address range C0000h - C7FFFh is for shadowing the video BIOS. This item is fixed to **Enabled** and is not user-configurable if the Auto Configuration Mode and the Fast Boot Mode parameters on page 2 of the Basic System Configuration menu are enabled. Otherwise, you can choose to disable this item.

The remaining address ranges are for I/O ROM functions.

3.3.2 Internal Cache (CPU Cache)

This parameter enables or disables the internal cache memory. This item is fixed to **Enabled** and is not user-configurable if you enabled the Auto configuration Mode and Fast Boot Mode parameters on page 2 of the Basic System Configuration menu. Otherwise, you can choose to disable this item. The default setting is **Enabled**.

3.3.3 External Cache

This parameter enables or disables the external cache memory. This item is fixed to **Enabled** and is not user-configurable if you enabled the Auto Configuration Mode and Fast Boot Mode parameters on page 2 of the Basic System Configuration menu. Otherwise, you can choose to disable this item. The default setting is **Enabled**.

3.3.4 ECC/Parity Mode Selection

This parameter allows you to enable or disable the ECC and parity check feature. Fast-page mode SIMMs support both ECC and parity mode while EDO SIMMs support only ECC mode.

You must disable this parameter if you installed SIMMs without parity.

Operation of ECC

This parameter is not user-configurable.

3.3.5 Memory at 15MB-16MB

To prevent memory address conflicts between the system and expansion boards, reserve this memory range for the use of either the system or an expansion board. Before setting this parameter, check your add-on card manual to determine if your add-on card needs this memory space. If not, the default setting is **System Use**.

3.4 PCI System Configuration

The PCI System Configuration allows you to specify the settings for your PCI devices.

PCI System Configuration		Page 1/1			
PCI IRQ Setting	[Auto]				
		INTA	INTB	INTC	INTD
*PCI Slot 1	[--]	[--]	[9]	[11]	
*PCI Slot 2	[--]	[9]	[11]	[--]	
*PCI Slot 3	[--]	[--]	[--]	[--]	
*PCI Slot 4	[--]	[--]	[--]	[--]	
*PCI Slot 5	[--]	[--]	[--]	[--]	
*Onboard VGA	[9]				
*Onboard SCSI	[11]				
VGA Palette Snoop	[Disabled]				
Onboard SCSI	[Enabled]				
Boot Device	[Enabled]				

↑↓ = Move Highlight Bar, → ← = Change Setting
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit

3.4.1 PCI IRQ Setting

This parameter allows for **Auto** or **Manual** configuration of PCI devices. If you use plug-and-play (PnP) devices, you can keep the default setting **Auto**. The system then automatically configures the PnP devices. If your PCI device is not a PnP, you can manually assign the interrupt for each device. Refer to your manual for technical information about the PCI card.

PCI Slots

These parameters allow you to specify the appropriate interrupt for each of the PCI devices. You can assign IRQ3, IRQ4, IRQ5, IRQ7, IRQ9, IRQ10, IRQ11, IRQ12, or IRQ15 to the slots.



Make sure that the interrupt you assign in any of the PCI slots are not used by other devices to avoid conflicts. Some resources may be assigned only after disabling onboard devices.

Use the **W** or **Y** key to move between fields. Use the **X** or **Z** key to select options.

3.4.2 VGA Palette Snoop

PCI devices support a palette snooping technique that enables the device to control access to their palette registers. Set this parameter to **Enabled** to activate the palette snooping function in the PCI VGA devices installed in your system. Check your VGA card manual for more information about this function. The default setting is **Disabled**.

3.4.3 Onboard SCSI

This parameter allows you to enable or disable the onboard SCSI controller. The default setting is **Enabled**.

Boot Device

This parameter allows you to enable or disable the onboard SCSI as the boot controller. The default setting is **Enabled**.

3.5 Non-PnP ISA Card Configuration

The Non-PnP ISA Card Configuration parameters allow you to specify the settings for cards without plug-and-play (PnP) features.

System Resources Used by Non-PnP ISA Cards

IRQ 00 ... [---]*	IRQ 08 ... [---]*	DMA 0 ... [No]
IRQ 01 ... [---]*	IRQ 09 ... [No]	DMA 1 ... [No]
IRQ 02 ... [---]*	IRQ 10 ... [No]	DMA 2 ... [---]*
IRQ 03 ... [No]	IRQ 11 ... [No]	DMA 3 ... [No]
IRQ 04 ... [No]	IRQ 12 ... [No]	DMA 4 ... [---]*
IRQ 05 ... [No]	IRQ 13 ... [---]*	DMA 5 ... [No]
IRQ 06 ... [---]*	IRQ 14 ... [---]*	DMA 6 ... [No]
IRQ 07 ... [No]	IRQ 15 ... [No]	DMA 7 ... [No]

Expansion ROM Region

C8000h - CBFFFh [No]	D4000h - D7FFFh [No]
CC000h - CFFFFh [No]	D8000h - DBFFFh [No]
D0000h - D3FFFh [No]	DC000h - DFFFFh [No]

↑↓ = Move Highlight Bar, → ← = Change Setting
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit



The grayed items (denoted with asterisks) have fixed settings and are not user-configurable.

I/O Region

100h-10Fh .. [No]	200h-20Fh . [No]	300h-30Fh .. [No]
110h-11Fh .. [No]	210h-21Fh . [No]	310h-31Fh .. [No]
120h-12Fh .. [No]	220h-22Fh . [No]	320h-32Fh .. [No]
130h-13Fh .. [No]	230h-23Fh . [No]	330h-33Fh .. [No]
140h-14Fh .. [No]	240h-24Fh . [No]	340h-34Fh .. [No]
150h-15Fh .. [No]	250h-25Fh . [No]	350h-35Fh .. [No]
160h-16Fh .. [No]	260h-26Fh . [No]	360h-36Fh .. [No]
170h-17Fh .. [No]	270h-27Fh . [No]	370h-37Fh .. [No]
180h-18Fh .. [No]	280h-28Fh . [No]	380h-38Fh .. [No]
190h-19Fh .. [No]	290h-29Fh . [No]	390h-39Fh .. [No]
1A0h-1AFh .. [No]	2A0h-2AFh . [No]	3A0h-3AFh .. [No]
1B0h-1BFh .. [No]	2B0h-2BFh . [No]	3B0h-3BFh .. [No]
1C0h-1CFh .. [No]	2C0h-2CFh . [No]	3C0h-3CFh .. [No]
1D0h-1DFh .. [No]	2D0h-2DFh . [No]	3D0h-3DFh .. [No]
1E0h-1EFh .. [No]	2E0h-2EFh . [No]	3E0h-3EFh .. [No]
1F0h-1FFh .. [---]*	2F0h-2FFh . [No]	3F0h-3FFh .. [No]

↑↓ = Move Highlight Bar, → ← = Change Setting
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit



Refer to your non-PnP ISA card manual when setting the following parameters.

3.5.1 IRQ/DMA

This parameter allows you to assign specific IRQ and DMA channels to non-PnP ISA cards. The system will not use such IRQ and DMA channels when it automatically assigns channels to PnP cards.

3.5.2 Expansion ROM Region

This parameter specifies the memory regions available for add-on card use. It allows you to manually assign specific regions to non-PnP cards so that the system will not use those regions anymore when it automatically configures PnP cards.

3.5.3 I/O Region

The items under this parameter allow you to reserve 16-byte memory address ranges for non-PnP cards. When the system configures PnP cards, the address ranges that you marked will not be used anymore.

You can assign memory addresses to non-PnP cards at random as long as you cover the address range required by the card. For example, for a card that requires 178h-188h address, you have to set regions 170h-17Fh and 180h-18Fh to Yes.

3.6 Power Saving Configuration

The Power Saving Configuration parameters are configurable only if your system supports the power management feature.



Most multi-user operating systems do not support a Power Saving feature. Consult your operating system manual or call your operating system vendor for information.

The following screen shows the Power Saving Configuration parameters and their default settings:

Power Saving Configuration		Page 1/1
Power Management Mode[Disabled]		
*IDE Fixed Disk Standby Timer[OFF]		
*System Standby Timer[OFF]		
System/Wakeup Events		
IRQ 0 [Disabled]*	IRQ 8 [Disabled]	
IRQ 1 [Enabled]*	IRQ 9 [Disabled]	
IRQ 3 [Disabled]	IRQ 10 [Disabled]	
IRQ 4 [Disabled]	IRQ 11 [Disabled]	
IRQ 5 [Disabled]	IRQ 12 [Enabled]*	
IRQ 6 [Disabled]	IRQ 13 [Disabled]	
IRQ 7 [Disabled]	IRQ 14 [Disabled]	
	IRQ 15 [Disabled]	
↑↓ = Move Highlight Bar, → ← = Change Setting		
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit		

3.6.1 Power Management Mode

This parameter allows you to reduce power consumption. When this parameter is set to **Enabled**, you can configure the system timers. Setting to **Disabled** deactivates the power management feature and all the timers. The default setting is **Disabled**.

IDE Fixed Disk Standby Timer

This parameter allows the hard disk to enter standby mode after inactivity of 1 to 15 minutes, depending on your setting. When you access the hard disk again, allow 3 to 5 seconds (depending on the hard disk) for the disk to return to the normal speed. Set this parameter to **Off** if your hard disk does not support this function.

System Standby Timer

This parameter sets the system to a "fast-on" power saving mode. It automatically enters the standby mode after a specified period of inactivity. Any keyboard or mouse action, or any enabled monitored activities occurring through the IRQ channels, resume system operation. See section 3.6.2.

3.6.2 System/Wakeup Events

This parameter allows you to monitor system activities occurring through the IRQ and determine whether or not to enter power saving mode.

For example, if you assign IRQ 3 to a fax/modem and you set this item to **Enabled**, any fax/modem activity wakes up the system from suspend mode.

3.7 System Security Setup

The Setup program has a number of security features to prevent unauthorized access to the system and its data.

Enter the Setup program and select System Security. The following screen appears:

System Security		Page 1/1
Disk Drive Control		
Diskette Drive	[Normal]
Hard Disk Drive	[Normal]
System Boot Drive	[Drive A then C]
Onboard Communication Ports		
Serial Port 1 Base Address	[3F8h]
Serial Port 2 Base Address	[2F8h]
Parallel Port Base Address	[3BC (IRQ 7]
Operation Mode	[Enhanced Parallel Port (EPP)] Mode
*ECP DMA Channel.....	[-]
Onboard PS/2 Mouse (IRQ12) ...	[Enabled]
Setup Password	[None]
Power On Password	[None]
↑↓ = Move Highlight Bar, → ← = Change Setting PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit		

3.7.1 Disk Drive Control

The disk drive control features allow you to enable or disable the read/write functions of a disk drive. These features can also control the diskette drive or the hard disk drive boot function to prevent loading operating systems or other programs from a certain drive while the other drives are operational.

Table 3-1 lists the drive control settings and their corresponding functions.

Table 3-1 Drive Control Settings

Diskette Drive	
Setting	Description
Normal	Diskette drive functions normally
Write Protect All Sectors	Disables the write function on all sectors
Write Protect Boot Sector	Disables the write function only on boot sector
Disabled	Disables all diskette functions
Hard Disk Drive	
Setting	Description
Normal	Hard disk drive functions normally
Write Protect All Sectors	Disables the write function on all sectors
Write Protect Boot Sector	Disables the write function only on boot sector
Disabled	Disables all hard disk functions
System Boot Drive	
Setting	Description
Drive A then C	System boots from drive A to C
Drive C then A	System boots from drive C to A
C:	System always boots from drive C
A:	System always boots from drive A

3.7.2 Onboard Communication Ports

Serial Port 1 Base Address

This parameter enables serial port 1 as COM1 and sets its base address.

Table 3-2 Serial Port 1 Settings

Setting	Function
Serial 1 (3F8h)	COM1 with address 3F8h
2F8h	COM2 with address 2F8h
3E8h	COM3 with address 3E8h
2E8h	COM4 with address 2E8h
Disabled	Disables serial port 1

Serial Port 2 Base Address

This parameter enables serial port 2 as COM2 and sets its base address.

Table 3-3 Serial Port 2 Settings

Setting	Function
Serial 2 (2F8h)	COM2 with address 2F8h
3F8h	COM1 with address 3F8h
2E8h	COM4 with address 2E8h
3E8h	COM3 with address 3E8h
Disabled	Disables serial port 2

Parallel Port Base Address

The system has one parallel port. Table 3-4 lists the options for selecting the parallel port address. You also have the option to disable the parallel port.

Table 3-4 Parallel Port Settings

Setting	Function
3BCh (IRQ 7)	Corresponds to the parallel port with address 3BCh
378h (IRQ 7)	Corresponds to the parallel port with address 378h
278h (IRQ 5)	Corresponds to the parallel port with address 278h
Disabled	Disables the parallel port

To deactivate the parallel port, select the **Disabled** option. If you install an add-on card that has a parallel port whose address conflicts with the parallel port onboard, the system automatically disables the onboard functions.

Check the parallel port address on the add-on card and change the address to one that does not conflict. The default setting is **3BCh**.

Operation Mode

This item allows you to set the operation mode of the parallel port. Table 3-5 lists the different operation modes. The default setting is **EPP**.

Table 3-5 Parallel Port Operation Mode Settings

Setting	Function
Standard Parallel Port (SPP)	Allows normal speed one-way operation
Standard and Bidirectional	Allows normal speed operation in a two-way mode
Enhanced Parallel Port (EPP)	Allows bidirectional parallel port operation at maximum speed
Extended Capabilities Port (ECP)	Allows parallel port to operate in bidirectional mode and at a speed higher than the maximum data transfer rate

ECP DMA Channel

This item becomes active only if you select **Extended Capabilities Port (ECP)** as the operation mode. It allows you to select DMA channel 1 or DMA channel 3 (as required in Windows95).

3.7.3 Onboard PS/2 Mouse (IRQ12)

This parameter enables or disables the onboard PS/2 mouse. When set to **Enabled**, it allows you to use the onboard PS/2 mouse assigned with IRQ12. When set to **Disabled**, it deactivates the mouse and frees IRQ12 for the use of other devices.

3.7.4 Setup Password

The Setup Password prevents unauthorized access to the BIOS utility.



Set jumper JP2 to pins 1-2 to enable the password function.

Setting a Password

1. Highlight the Setup Password parameter and press the left- or right-arrow key. The password prompt appears:

2. Type a password. The password may consist of up to seven characters.



Exercise caution when typing your password because the characters do not appear on the screen.

3. Press \ominus . A prompt asks you to retype the password to verify your first entry.

4. Retype the password then press \ominus .

After setting the password, the system automatically sets the Setup Password parameter to **Present**. The next time you want to enter the BIOS utility, you must key-in your Setup password.

If You Forget the Password

If you forget your password, you must return the configuration values stored in CMOS to their default values. Should this happen, call your dealer for assistance.

3.7.5 Power On Password

The Power On Password secures your system against unauthorized use. Once you set this password, you have to type it whenever you boot the system. To set this password, follow the same procedure as in setting the Setup password.

3.8 Remote Diagnostic Configuration



Remote Diagnostic Configuration is not supported at this time. Future applications will be available supporting this feature.

The following screens show the Remote Diagnostic Configuration parameters.


Remote Diagnostic Configuration		Page 1/2
RDM Mode Number[Disabled]		
↑↓ = Move Highlight Bar, → ← = Change Setting PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit		

Remote Diagnostic Configuration		Page 2/2
RDM system critical paging no.	[]
RDM remote connection phone no.	[]
RDM remote connection password.	[]
↑↓ = Move Highlight Bar, → ← = Change Setting PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit		

3.9 Load Setup Default Settings

Use this option to load the default settings for the optimized system configuration. When you load the default settings, some of the parameters are grayed-out with their fixed settings. These grayed parameters are not user-configurable. If you want to change the settings of these items, disable the Fast Boot Mode parameter in the Basic System Configuration menu.

The following dialog box appears when you select Load Setup Default Settings from the main menu.

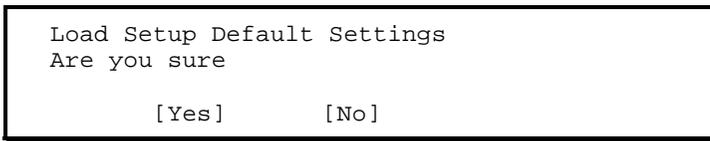

Select **[Yes]** to load the default settings.

3.10 Leaving Setup

Examine the system configuration values. When you are satisfied that all the values are correct, write them down. Store the recorded values in a safe place. In the future, if the battery loses power or the CMOS chip is damaged, you will know what values to enter when you rerun Setup.

Press \wedge to leave the system configuration setup. If there is any change in the BIOS utility functions, the following screen appears:

```
Do you want to save CMOS data?  
      [Yes]      [No]
```

Use the arrow keys to select your response. Select **Yes** to store the new data in CMOS. Select **No** to retain the old configuration values. Press \ominus .

Chapter 4 *SCSISelect* Configuration Utility

4.1 The *SCSISelect* Configuration Utility

The *SCSISelect* configuration utility allows you to change SCSI controller settings without opening the computer or changing jumpers.

4.1.1 Default Values

Table 4-1 lists the settings you can change with the *SCSISelect* utility and the default value for each setting. Some settings apply globally to the SCSI controller and all SCSI devices on the bus; other settings apply individually to each device on the bus.

Table 4-1 Default Settings for SCSI Controller and All Devices

Global Settings for SCSI Controller and All Devices	Default Value
Host Adapter SCSI ID	7
SCSI Parity Checking	Enabled
Host Adapter SCSI Termination	Enabled Low OFF/High ON
Boot Device Option	0 (zero)
Host Adapter BIOS ¹	Enabled
Support Removable Disks Under BIOS as Fixed Disks	Boot only
Extended BIOS Translation for DOS Drives > 1 Gbyte	Disabled
Display <Ctrl-A> Message During BIOS Initialization	Enabled
Multiple Lun Support	Disabled
BIOS Support for More Than 2 Drives ¹	Enabled
BIOS Support for Bootable CD-ROM	Enabled
BIOS Support for Int13 Extensions	Enabled
Support for Ultra SCSI Speed	Disabled
Individual Settings for Each SCSI Device	Default Value
Initiate Sync Negotiation	Yes
Maximum Sync Transfer Rate	20 MBytes/sec.
Enable Disconnection	Yes
Send Start Unit SCSI Command ¹	No
Initiate Wide Negotiation	Yes

¹ Settings are valid only if host adapter BIOS is enabled.

4.1.2 When to Use the SCSISelect Utility

Use the SCSISelect utility if you need to

- Change any of the default values listed in Table 4-1
- Check and/or change SCSI device settings that may conflict with those of other devices (e.g, SCSI ID)
- Perform low-level formatting on new SCSI disk devices

4.1.3 Running the SCSISelect Utility

To start SCSISelect, press **Ctrl+A** when the following is displayed during power-up or reset:

```
Press <Ctrl> <A> for SCSISelect™ Utility!
```



*Your screen may show the key sequence as
<Ctrl> <Hot Key> instead of <Ctrl> <A>.
The correct sequence is <Ctrl> <A>.*

This message appears after BIOS and POST information displays, and after the banner listing the Adaptec AIC-7880 version number.

4.2 SCSISelect Utility Options

When the SCSISelect utility detects the AIC-7880 SCSI controller in your computer, it displays the Options menu shown in Figure 4-1.

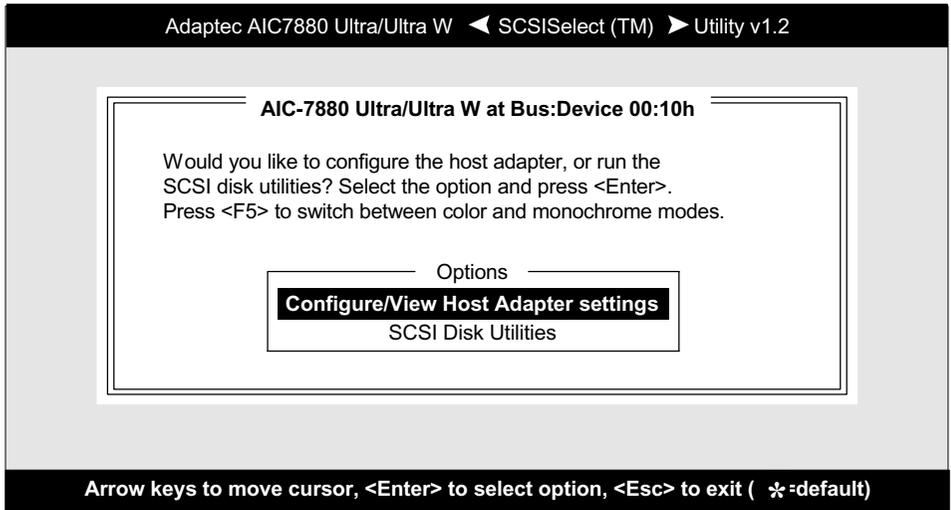


Figure 4-1 Options Menu Screen

Use the ↑ and ↓ keys and the **Enter** key to make selections in the SCSISelect utility. Press **Esc** at any time to return to the previous menu.



You can press **F5** to toggle the display between color and monochrome modes. (This feature may not work on some kinds of monitors.)

4.2.1 Configure/View Host Adapter Settings Menu

The Configure/View Host Adapter Settings menu lists three settings under SCSI Bus Interface Definitions and three additional options, as shown in Figure 4-2:

- **Host Adapter SCSI ID:** changes the host controller SCSI ID from its default value of 7
- **SCSI Parity Checking:** enables or disables host controller SCSI parity checking
- **Host Adapter SCSI Termination:** configures host controller SCSI termination

Advanced users can access Boot Device Options, SCSI Device Configuration, and Advanced Configuration Options through this menu.

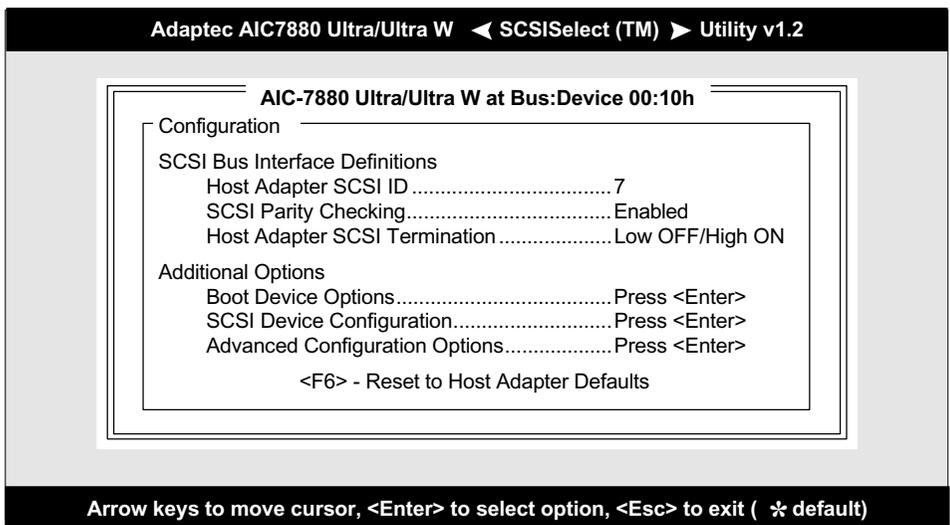


Figure 4-2 Configure/View Host Adapter Settings Screen

Use the cursor (↑ ↓) to move to your selection. Press **Enter** to display a pop-up menu of choices or to make selections. Press **Esc** at any time to return to the previous menu.



Press **F6** to reset all settings to the SCSI controller defaults. SCSI controller default settings are marked with an asterisk (*) throughout the selection submenus.

Host Adapter SCSI ID

This option allows you to change the host controller SCSI ID. Figure 4-3 shows the available IDs for use with the AIC-7880. The default setting is SCSI ID 7. (We recommend that you not change this setting.) Some operating system software will not run unless the SCSI controller ID is set at ID 7.

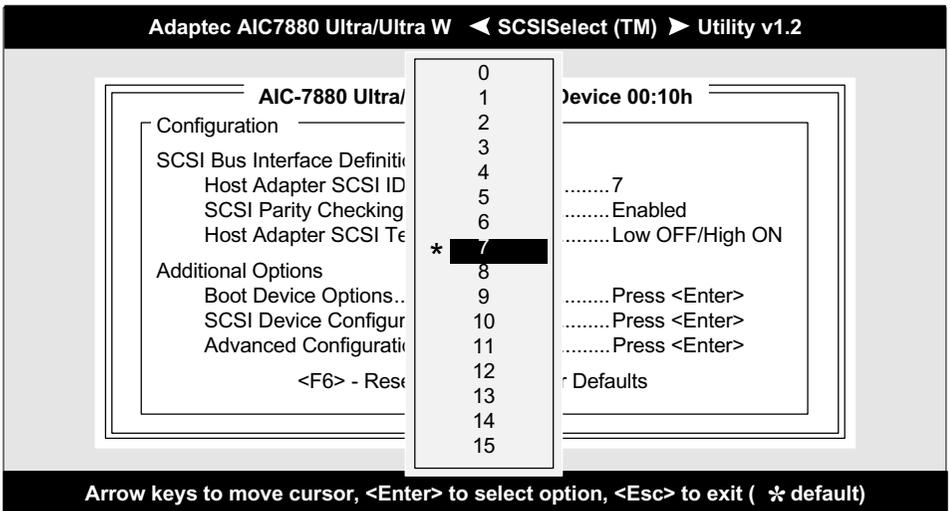


Figure 4-3 Host Adapter SCSI ID Selection Screen for AIC-7880

Each SCSI device on the SCSI bus, including the SCSI controller, must be set to a unique SCSI ID. The SCSI ID serves two purposes: it uniquely identifies each SCSI device on the bus, and it determines the device's priority on the bus during the Arbitration phase. The Arbitration phase determines which device controls the bus when two or more devices request use of it.

Use the cursor (↑ ↓) and **Enter** keys to select the SCSI ID, if you need to change it. Press **Esc** at any time to return to the previous menu.

SCSI Parity Checking

Select this option to enable or disable SCSI Parity Checking on the SCSI controller. Figure 4-4 displays your choices. The default setting is Enabled.

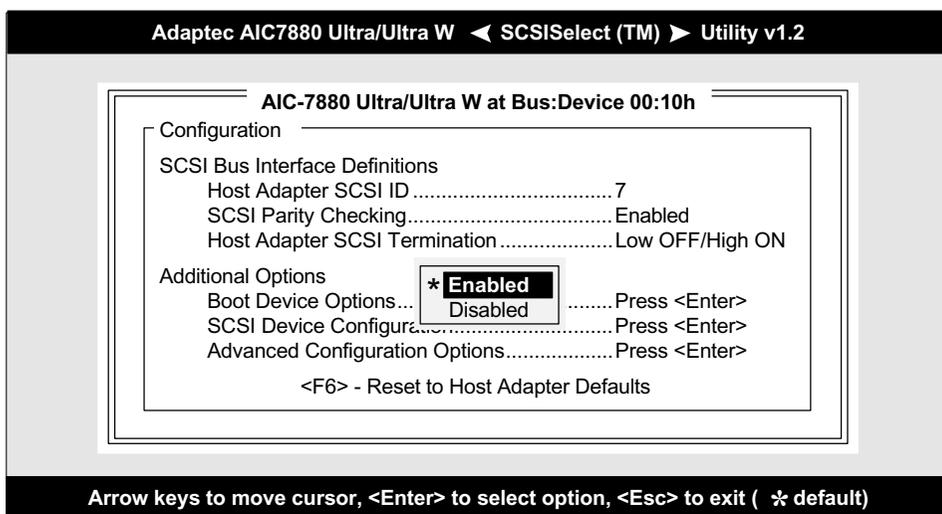


Figure 4-4 SCSI Parity Checking Selection

The SCSI controller always checks parity when reading from the SCSI bus to verify the correct transmission of data from your SCSI devices. You should disable SCSI Parity Checking if any attached SCSI devices do not support SCSI parity. (Most currently available SCSI devices do support SCSI parity.)

Use the cursor (↑ ↓) and **Enter** keys to make selections. Press **Esc** at any time to return to the previous menu.

Host Adapter SCSI Termination

This option allows you to configure host controller SCSI termination. Figure 4-5 shows the choices available if you have an AIC-7880. The default setting is *Low OFF/High ON*.

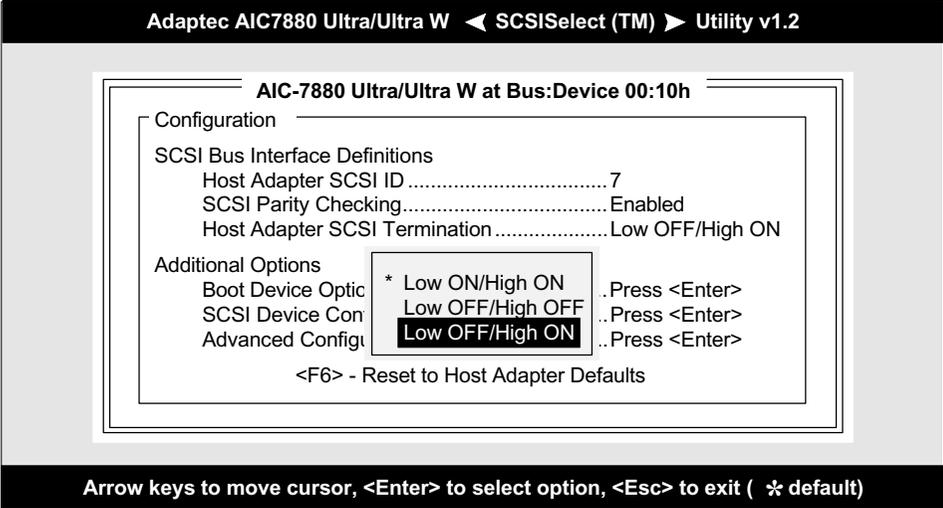


Figure 4-5 Host Adapter SCSI Termination Selection for AIC-7880

Use the cursor (↑ ↓) and **Enter** keys to make your selection.



Since the system contains both wide (68-pin) SCSI devices and narrow (50-pin) SCSI devices, termination must be set to allow each section of the SCSI bus to be terminated. The narrow device in this system is terminated, causing the LOW byte on the motherboard to be turned off. On the other end, the back panel terminates both bytes (Low OFF/High ON).

Boot Device Options

This option shows the target ID of the device you are booting from. The default setting is 0 (zero). We recommend that you not change this setting. Some operating systems will not run unless the boot device is set at zero.

Figure 4-6 shows the Boot Device Options screen.

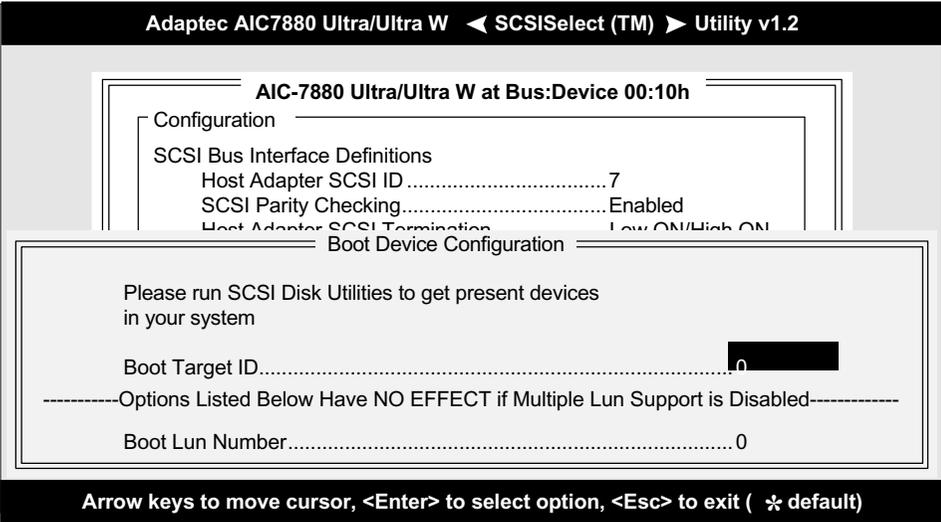


Figure 4-6 Boot Device Options Screen

SCSI Device Configuration

This option allows you to configure certain parameters of each SCSI device on the SCSI bus. A screen similar to Figure 4-7 appears. The screen shows a column of information for each SCSI ID, even if some SCSI IDs are not assigned to a device. To configure a specific SCSI device, you need to know which SCSI ID it uses. See *SCSI Disk Utilities* later in this section to learn how to determine which SCSI ID is used by which device.

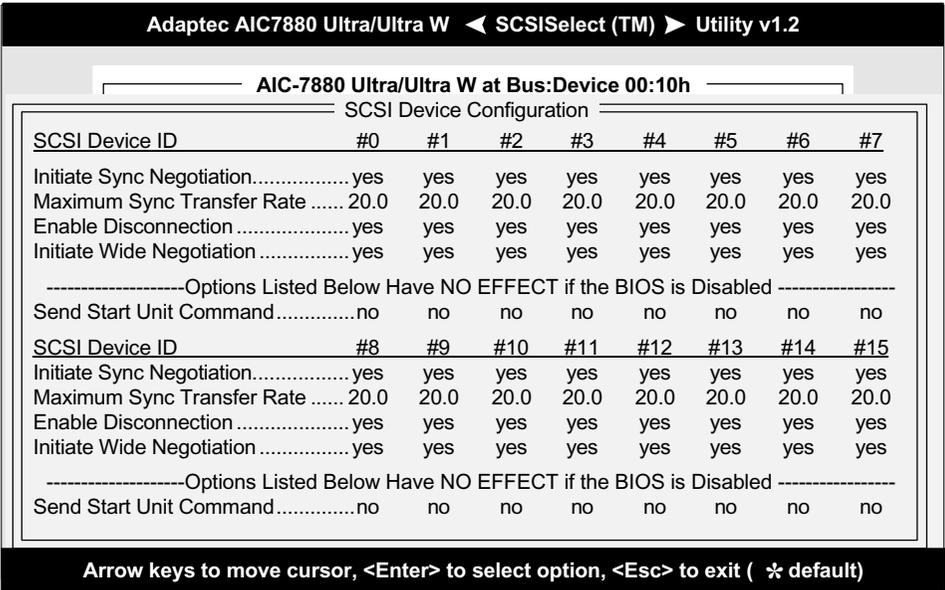


Figure 4-7 SCSI Device Configuration Screen for AIC-7880

Use the cursor keys (↑ ↓) to move between options. Press **Enter** to display a pop-up menu with a selection of values. Use the cursor keys (↑ ↓) to select a value, and press **Enter** to make your selection.

Initiate Sync Negotiation

This option determines whether the SCSI controller initiates synchronous negotiation with the SCSI device.

When set to **yes**, the SCSI controller initiates synchronous negotiation with the SCSI device. When set to **no**, the SCSI controller does not initiate synchronous negotiation. The SCSI controller, however, always *responds* to synchronous negotiation if the SCSI device initiates it. The default setting is **yes**.

Data is transferred in asynchronous mode if neither the SCSI controller nor the SCSI peripheral negotiates for synchronous data transfers.



*Some older SCSI-1 devices do not support synchronous negotiation. This may cause your computer to operate erratically or hang if Initiate Sync Negotiation is enabled. Set Initiate Sync Negotiation to **no** for these devices.*

Maximum Sync Transfer Rate

This option determines the maximum synchronous data transfer rate that the SCSI controller can support. The SCSI controller supports rates up to the Fast Wide SCSI maximum of 20.0 MBytes/sec. The default value is 20.0.

In most cases, you can use the maximum value of 20.0. If the SCSI controller is set *not* to negotiate for synchronous data transfer (i.e., Initiate Sync Negotiation is set to **no**), then the value selected here is the maximum rate that the SCSI controller accepts from the device during negotiation. (This is standard SCSI protocol.)



*Some older SCSI-1 devices do not support Fast SCSI data transfer rates. This may cause your computer to operate erratically or hang if the transfer rate is set too high. Set Initiate Sync Negotiation to **no** for these devices.*

Enable Disconnection

This option determines whether the SCSI controller allows a SCSI device to disconnect from the SCSI bus (sometimes called Disconnect/Reconnect). Disconnect/Reconnect allows the SCSI controller to perform other operations on the SCSI bus while the SCSI device is temporarily disconnected.

When set to **yes**, the SCSI device may disconnect from the SCSI bus. The SCSI device, however, may choose not to disconnect, even if permitted by the SCSI controller (this can usually be configured on the SCSI device). When set to **no**, the SCSI device is not allowed to disconnect from the SCSI bus. The default setting is **yes**.

You should leave Enable Disconnection set to **yes** if two or more SCSI devices are connected to the SCSI controller. This optimizes SCSI bus performance. If only one SCSI device is connected to the SCSI controller, set Enable Disconnection to **no** to achieve slightly better performance.

Initiate Wide Negotiation

This option allows communication between all devices (lower 8-bit or upper 8-bit) on the wide (16-bit) SCSI bus. When set to **yes**, each device can connect on the bus. When set to **no** (disabled), communication can only occur on the lower 8-bits of the 16-bit SCSI bus. The default setting is *yes*.

Send Start Unit Command

This option, which is supported by some SCSI devices, determines whether the Start Unit Command (SCSI command 1B) is sent to the SCSI device (most devices do not require this). Enabling this option reduces the load on your computer's power supply by allowing the SCSI controller to power-up SCSI devices one-at-a-time when you boot your computer. Otherwise, the devices all power-up at the same time. Most devices require you to set a jumper before they can respond to this command.

When set to **yes**, the Start Unit Command is sent to the SCSI device during bootup. When set to **no**, each SCSI device powers-up in its normal fashion. The default setting is *no*.



The Send Start Unit Command setting is valid only if the host adapter BIOS is enabled.

If this option is enabled for more than one SCSI device, the Start Unit Command is sent first to the device with the lowest SCSI ID. When this device responds to the SCSI controller, the Start Unit Command is sent to the next highest SCSI ID with a setting of **yes**. The process continues until all supported devices respond to the SCSI controller.



*If many drives are set to **yes** for Send Start Unit Command, the boot time varies depending on how long it takes each drive to spin up.*

Advanced Configuration Options

When you select Advanced Configuration Options, a screen similar to Figure 4-8 appears. Do not change these options unless absolutely necessary.

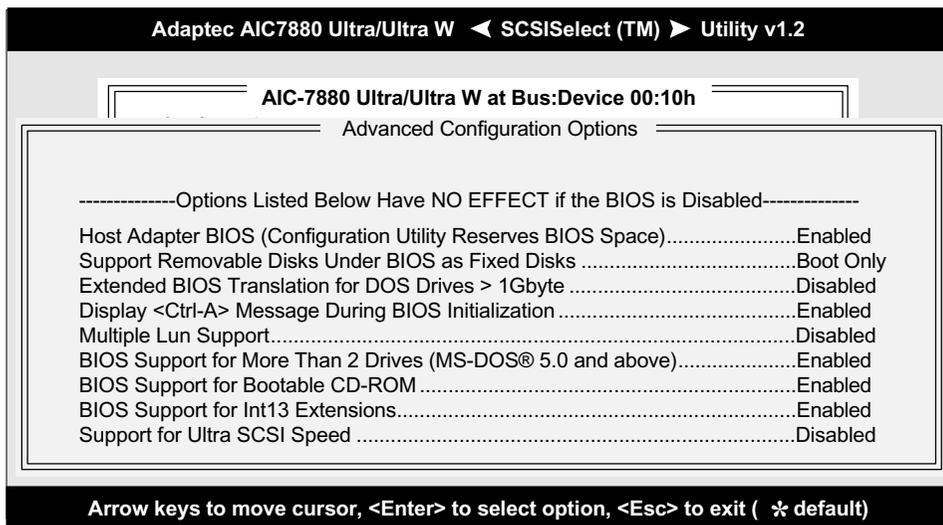


Figure 4-8 Advanced Configuration Options Screen

Use the cursor keys (↑ ↓) to move between options. Press **Enter** to display a pop-up menu with a selection of options. Use the cursor keys (↑ ↓) to select an option, and press **Enter** to make your selection.

Host Adapter BIOS

This option enables or disables the SCSI controller BIOS. The default setting is *Enabled*.

The SCSI controller BIOS must be enabled if you want the computer to boot from a SCSI hard disk drive connected to the SCSI controller. Several *SCSISelect* options cannot be used unless the SCSI controller BIOS is enabled.

Support Removable Disks Under BIOS as Fixed Disks

This option allows you to control which removable-media drives are supported by the SCSI controller BIOS. It is only valid if the SCSI controller BIOS is enabled. The default setting is *Boot Only*. The following choices are available:

- **Boot Only** – Only the removable-media drive designated as the boot device are treated as a hard disk drive.
- **All Disks** – All removable-media drives supported by the BIOS are treated as hard disk drives.
- **Disabled** – No removable-media drives are treated as hard disk drives. In this situation, software drivers are needed because the drives are not controlled by the BIOS.



*Support for removable-media drives means only that the SCSI controller BIOS **allows** you to use a removable-media drive as if it were a hard disk drive; it does **not** mean you can remove the disk media during operation. If a removable-media SCSI device is controlled by the SCSI controller BIOS, **do not** remove the media while the drive is powered-on or you may lose data! If you want to be able to remove media while the power is on, install the removable-media device driver and set this option to **Disabled**.*

Extended BIOS Translation for DOS Drives > 1 GByte

This option allows you to enable or disable extended translation for SCSI hard disks with a capacity greater than 1 GByte. It is only valid if the SCSI controller BIOS is enabled. The default factory setting is *Disabled*.

If this option is enabled, the following translation schemes are used:

- SCSI hard disks < 1 GByte use a translation scheme of 64 heads, 32 sectors per track
- SCSI hard disks > 1 GByte use a translation scheme of 255 heads, 63 sectors per track

See the section “Disk Drives Over 1 Gbyte” in this chapter, for more information on this option. This option should be left *Disabled* for most operating systems except DOS/Windows.

Display <Ctrl-A> Message During BIOS Initialization

This option allows entering the SCSI *Select* utility during BIOS initialization. The default setting is *Enabled*.

Multiple Lun Support

This option allows access to multiple logical unit numbers per SCSI ID. The default setting is *Disabled*.

BIOS Support for More Than 2 Drives

This option allows you to enable or disable BIOS support for more than two SCSI hard disk drives. It is only valid if the SCSI controller BIOS is enabled. This feature is supported by DOS 5.0 and above. The default setting is *Enabled*.

BIOS Support for Bootable CD-ROM

When this option is enabled, a bootable CD-ROM device may be used to directly load an operating system. The default setting is *Enabled*.

BIOS Support for Int13 Extensions

This option allows access to attached SCSI devices through BIOS Int13 functions. The default setting is *Enabled*.

Support for Ultra SCSI Speed

This option enables wide SCSI data transfers at 40 MB/sec. Most hard disk drives or other SCSI devices do not currently support a communication rate this high. If enabled, be sure the device is capable of running at this rate. The default setting is *Disabled*.

4.2.2 SCSI Disk Utilities

When you select SCSI Disk Utilities from the Options menu the *SCSISelect* utility scans the SCSI bus and lists all SCSI devices installed on the SCSI bus. You will see a screen similar to Figure 4-9. You can easily determine from this screen which SCSI ID is assigned to each device on the SCSI bus.

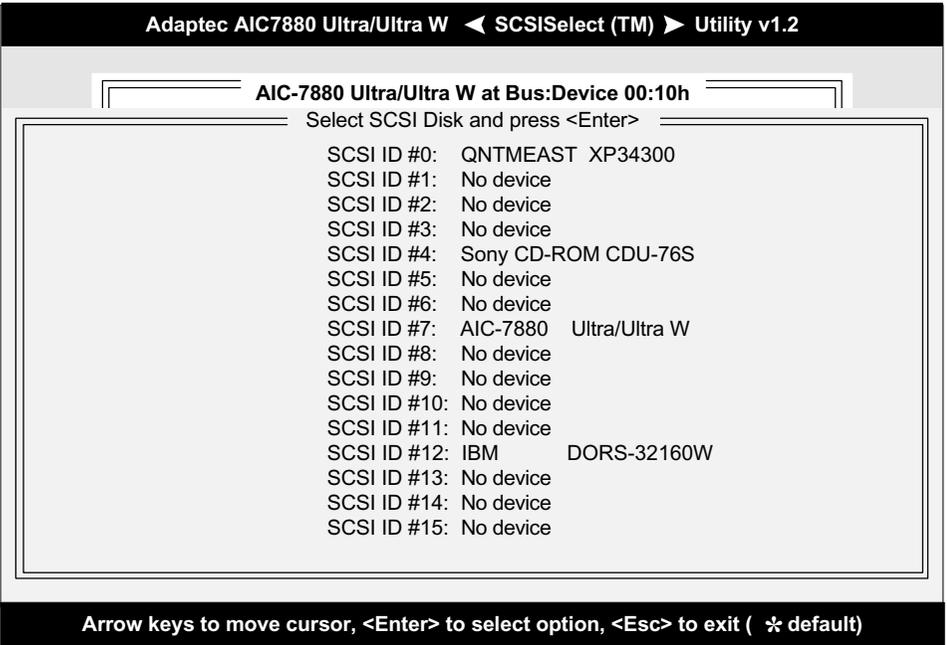


Figure 4-9 SCSI Disk Utilities Screen for AIC-7880

When you highlight a disk device by moving to it with the cursor keys and press **Enter**, a small menu window appears. You then select **Format Disk** or **Verify Media** from this menu.

Use the cursor keys (↑ ↓) to move between options. Press **Enter** to display a pop-up menu with a selection of values. Use the cursor keys (↑ ↓) to select a value, and press **Enter** to make your -selection.

Format Disk

The **Format Disk** utility performs a low-level format on disk devices.

Most SCSI disk devices are preformatted and do not need to be formatted again. The Adaptec **Format Disk** utility is compatible with the vast majority of SCSI disk drives. Run it on hard disk drives or removable-media drives that were previously used with a non-Adaptec SCSI controller.



*A low-level format destroys all data on the drive. Be sure to back up your data before performing this operation. You **cannot** abort a low-level format once it is started.*

Verify Disk Media

The **Verify Disk Media** utility scans the selected device's media for defects. If the utility finds bad blocks, it prompts you to reassign them; if you select *yes*, those blocks will no longer be used.



*You can press **Esc** at any time to abort the **Verify Disk Media** utility.*

4.3 Configuring Multiple SCSI Controllers



The AHA-2940/WIUW SCSI controller is used as an example in the following discussion.

To use multiple PCI SCSI controllers, do the following:

- Install the boot SCSI controller in the lowest PCI **Device** number. The **Device** number is determined by the slot number on the PCI bus.

To find out the **Device** number of the AHA-2940 SCSI controller(s), run the *SCSISelect* utility (by pressing the key combination **Ctrl + A** when it is displayed onscreen at bootup). Look on the first screen of *SCSISelect* in the upper right hand corner for **Bus:Device xx:xxh** (given in hex).

If the **Device** number is high, move the AHA-2940 to a PCI slot at the other end of the motherboard and rerun *SCSISelect* to see if the number is lower.



This step is a recommended solution for most PCI motherboards. You can also simply switch the AHA-2940 SCSI controller into another PCI slot if the boot order is not what is desired.

- If you are booting from the AHA-2940 and using ISA/EISA-based host adapters as secondary devices, you must disable the BIOS on all ISA/EISA-based SCSI controllers.
- If you are booting from ISA/EISA-based SCSI controllers and using the AHA-2940 as a secondary device, see your ISA/EISA-based SCSI controller documentation to ensure the SCSI controller is at the lowest BIOS base address. ISA/EISA-based SCSI controllers which have their BIOS enabled boot before the AHA-2940.

4.4 Disk Drives Over 1 Gbyte

4.4.1 Extended Translation

Adaptec SCSI controllers have always supported the full range of disk drive capacities under all major operating systems. As disk drives have recently grown beyond 1 GByte in formatted capacity, they have run up against the DOS 1024-cylinder limit.

To continue its support for all SCSI disk drive capacities under DOS, Adaptec has included an extended translation scheme for the AIC-7880 SCSI controllers. This feature supports disk drives of up to 8 GBytes capacity under DOS. *Extended BIOS Translation for DOS Drives > 1 GByte* in this chapter explains how to change the setting of this option in the SCSISelect utility. Most operating systems will leave this option Disabled.

4.4.2 The DOS 1 GByte Limit

All current versions of DOS are limited to 1024 cylinders per drive. The standard translation scheme for SCSI host controllers, using 64 heads and 32 sectors, provides a maximum accessible capacity of 1 GByte.

To eliminate the 1 GByte limit, Adaptec's extended translation feature uses 255 heads and 63 sectors, extending the disk drive capacity limit under DOS to 8 GBytes.



*If you have already partitioned a large disk drive with one translation method, conversion to another method will erase your data. Be sure to **back up** your disk drive prior to any change in the translation method used.*

4.4.3 When to Use Extended Translation

With MS-DOS 5.0 and Above

NetWare 386 (versions 3.0 and above) and the versions of UNIX do not share the 1024 cylinder limit of DOS and do not require extended translation to support large disk drives and should not be enabled.

Drives With Mixed Partitions

Use standard translation, not extended translation, on drives formatted with two or more partitions for different operating systems. Partitions for UNIX and NetWare can be larger than 1 GByte when using standard translation.



The term UNIX, as used here, includes all versions of AT&T/USL UNIX, SCO v3.2.4 (or later), and ISC v3.0 (or later).

Using Fdisk

To install a new disk, or to re-partition an existing disk, use the *fdisk* DOS utility as you normally would. The cylinder size increases to 8 MBytes when you enable extended translation. The size of the partition you request must therefore be a multiple of 8 MBytes. If you request a partition size that is not a multiple of 8 MBytes, *fdisk* rounds up to the nearest whole multiple of 8 MBytes.

Questions and Answers About Extended Translation

What happens if I enable extended translation with SCSI drives that are less than 1 GByte in capacity?

Drives handled by the BIOS use extended translation if their formatted capacity is greater than 1 GByte. Drives with less than 1 GByte of formatted capacity use standard translation regardless of whether extended translation is enabled.

4.5 SCSI Troubleshooting Checklist

The AIC-7880 SCSI controller has been tested for compatibility with a wide range of SCSI devices. Most problems that occur during installation result from errors in preparing and connecting devices on the SCSI bus.

Answer these questions first if a problem occurs during installation:

- Are the power cables and SCSI interface cables properly connected?

Connect internal SCSI devices to your computer's power supply. Connect the power cables of external SCSI devices to a grounded line power outlet. Follow the instructions in the computer and SCSI device documentation.

- Is pin-1 orientation maintained throughout the SCSI bus?
- Are the PCI bus and slot parameters set correctly in your computer's **Setup** program?

The PCI bus is designed to assign IRQ, port address, and BIOS address settings automatically to the SCSI controller. But you may need to assign some of these values manually in the **Setup** program.

- Is each SCSI device, including the SCSI controller, set to a unique SCSI ID?
- Is SCSI termination set correctly?

If your problem is still not resolved, continue with the next section.

4.6 BIOS Startup Messages

After you have configured your SCSI controller, the SCSI controller BIOS displays a message when you boot your computer. Normally, this message lists the SCSI ID, manufacturer, model number and other information for each SCSI device that the BIOS detects.

If an initialization failure occurs, however, the SCSI controller BIOS displays a specific error message followed by a *BIOS Installation Failure* message. Here are some of these error messages and their meaning:

```
WARNING!!!
```

```
A drive larger than 1 gigabyte has been detected with 64 head / 32 sector
partitioning. This drive is not compatible with the 255 head / 63 sector
translation which has been enabled on this adapter. Data could be
corrupted! Please check your system setup!
```

```
Press any key to continue.
```

This message occurs only if Extended BIOS Translation is enabled in the *SCSISelect* utility. It means that the BIOS detected a large capacity drive with invalid partition information in the master boot record.

Extended BIOS Translation is used only with MS-DOS 5.0 or above. You do not need to enable this option if you are using another operating system such as OS/2® or UNIX®.

If you are using a drive larger than 1 GByte under MS-DOS 5.0 or above and this message appears, do the following:

1. Run the *SCSISelect* utility and set Extended BIOS Translation to **Disabled**. (See Extended BIOS Translation for DOS Drives > 1 GByte in the Advanced Configuration Options section)
2. Exit from the *SCSISelect* utility and back up the data on the disk drive, if you want to save it.

3. Perform a SCSI low-level format with the **Format Disk** utility under SCSI Disk Utilities in the SCSISelect utility.



*All data on the target drive will be lost when you run the **Format Disk** utility. Back up your data before you run it!*

4. In the SCSISelect Advanced Configuration Options menu, set Extended BIOS - Translation to **Enabled**.
5. Partition the drive again.
6. Restore data to the drive, if necessary.

4.6.1 Device connected, but not ready.

This message appears if the SCSI controller receives no answer when it requests data from an installed SCSI device. The SCSI controller skips this device and moves on to the next device on the bus.

Do the following if you see this message when you request data from a SCSI drive:

1. Run the SCSISelect utility and access SCSI Device Configuration. Locate the host controller's SCSI ID and set Send Start Unit Command to **yes**.
2. Exit the SCSISelect utility and request data from the drive again.
3. If the message still appears, follow the drive manufacturer's instructions to make sure the drive is set to spin-up when the power is switched ON.

4.6.2 Start unit request failed.

The BIOS was unable to send a Start Unit Command to the device. Run the *SCSISelect* utility and disable Send Start Unit Command for the device.

Time-out failure during SCSI Inquiry command!

or

Time-out failure during SCSI Test Unit Ready command!

or

Time-out failure during Start Unit command!

An unexpected time-out occurred. Check SCSI bus termination. Try disconnecting the SCSI peripheral cables from the SCSI controller and then starting the computer. If the computer successfully restarts, check SCSI bus termination and cable connections. One of the devices on the SCSI bus may be defective.

4.6.3 Disk Drive Configuration Problems

This section describes situations that may occur if your computer has multiple disk drives, including combinations of standard disk drives and SCSI disk drives.



“Standard disk drive” means a disk drive attached to the computer through a standard ISA/EISA, non-SCSI disk controller—for example, an IDE drive.

Standard hard disk drives can be set to the *installed* or *not installed* state by the **Setup** program supplied with the host computer. The **Setup** program allows you to select the number of standard hard disks that are recognized by the computer, regardless of whether they are physically installed. SCSI drives are not controlled through the **Setup** program.

If both SCSI and non-SCSI disk drives are installed, then the non-SCSI disk drive is *always* the boot device.

Booting the Computer from a SCSI Drive



The following items may apply for multiple SCSI controller configurations. See the section “Configuring Multiple SCSI Controllers” for more detailed information.

- Be sure that both standard hard disks are mapped out of the computer using the **Setup** program by setting the **Setup** program to **No Drives Installed**.
- Be sure that the SCSI boot drive is set to SCSI ID 0 and that there are no SCSI ID conflicts. Check the drive installation manual for information about setting the SCSI ID for that device. You can use the *SCSISelect* utility to determine the SCSI IDs of devices on the SCSI bus.
- Be sure that parity checking is consistently enabled or disabled on all devices on the SCSI bus. See the section “SCSI Parity Checking”.
- Try enabling Include in BIOS Scan in the SCSI Device Configuration option of the *SCSISelect* utility. See the section “SCSI Device Configuration”.
- Be sure to cycle the power OFF and ON after changing any values on a SCSI controller, in a **Setup** program, or on a SCSI device. Doing this ensures that the new initial values are loaded.
- Be sure that the SCSI bus is properly terminated. See the section “Setting SCSI Bus Termination”.
- Be sure that the intended boot disk has an active partition and has been formatted.
- Check cable connections and pin-1 orientation.

Using a Standard Drive as C and a SCSI Drive as D

- Use the **Setup** program to map the second standard hard disk (if one exists) out of the configuration.
- Be sure that the SCSI drive to be used as drive D is set to SCSI ID 0. Check the drive manual for information on setting the SCSI ID for that device. You can also use the *SCSISelect* utility to determine the SCSI addresses of peripherals on the SCSI bus.
- Be sure that SCSI parity checking is consistently enabled or disabled on all devices on the SCSI bus.
- Verify that the SCSI controller and the SCSI devices are properly configured and installed.
- Be sure to cycle the power OFF and ON after changing any values on a SCSI controller, in a **Setup** program, or on a SCSI device. Doing this ensures that the new initial values are loaded.
- Be sure that the SCSI bus is properly terminated.
- Be sure that the disk is formatted and has a partition.
- Check cable connections and pin-1 orientation.

Using a SCSI Drive as C and Another SCSI Drive as D

- Make sure your computer's CMOS **Setup** is set to **No Drives Installed**, as is required for SCSI host controllers.
- Be sure that the SCSI drive to be used as drive C is set to SCSI ID 0. Check the disk drive manual for information on setting the SCSI ID for that device. You can also use the *SCSISelect* utility to determine the SCSI addresses of peripherals on the SCSI bus.
- Set the SCSI drive to be used as drive D to SCSI ID 1. Check the drive manual for information on setting the SCSI ID for that device.

- Try enabling **Include in BIOS Scan** in the SCSI Device Configuration option of the *SCSISelect* utility. See the section “SCSI Device Configuration”.
- Be sure to cycle the power OFF and ON after changing any values on a SCSI controller, in a **Setup** program, or on a SCSI device. This ensures that the new initial values are loaded.
- Be sure that SCSI parity checking is consistently enabled or disabled on all devices on the SCSI bus.
- Verify that the SCSI controllers and the SCSI devices are properly configured and installed.
- Be sure that the SCSI bus is properly terminated.
- Be sure that, if necessary, the disk has a partition and is formatted.

Computer Hangs, or SCSI Controller Cannot Always Find the Drives

- Check SCSI parity for consistency and be sure SCSI termination is set correctly.
- Check cable length and integrity. Check pin-1 orientation.
- If the SCSI controller LED remains on when the computer hangs, the host adapter may be interfering with your computer's operation. It may be installed in a motherboard slot that does not support First-Party DMA (i.e., Bus Master) data transfers. See your computer documentation.

Chapter 5 EISA Configuration Utility

5.1 EISA Configuration Utility

The EISA Configuration Utility (ECU) is a program that allows you to easily configure your EISA computer. Use this utility when you set up your EISA computer for the first time or any time you change your configuration by adding or removing an EISA or ISA board or memory. The program stores the configuration information in the computer's nonvolatile memory where it is available whenever you use your computer.

5.1.1 Functions

The ECU does the following:

- Configures memory and main board options.
- Supports EISA and ISA boards, PCI devices, and plug-and-play ISA boards.
- Automatically detects EISA boards, PCI devices, and plug-and-play ISA boards installed in the computer.
- Helps you configure ISA boards by providing the appropriate switch and jumper settings, if the ISA board has a CFG file.
- Notifies you if a conflict occurs during configuration.
- Creates and maintains the System Configuration Information (SCI) file as a backup for the computer's nonvolatile memory.
- Supports configuration (CFG) file extensions.

5.1.2 Making Menu Selections

You can either use the keyboard or the mouse (if a mouse driver was loaded) to make menu selections in the EISA Configuration Utility program.

Using the Keyboard

Table 5-1 Keyboard Function Keys

Key	Function
Tab or y	Moves the cursor to the next field
j + Tab or W	Moves the cursor to the previous field
W or y	Moves the cursor between items within a list
e	Selects an item
^	Cancel the most recent action
{ , } , W or y	Scrolls a screen
g	Moves the cursor to the top of a list
d	Moves the cursor to the bottom of a list
b + g	Moves the cursor to the beginning of a menu
b + d	Moves the cursor to the end of a menu

Using the mouse



A mouse driver must be loaded in order to use the mouse. When you access the ECU through Acer StartUp, a mouse driver is loaded.

Follow these steps to use the mouse when making menu selections:

1. Position the cursor over the desired option then click on the left mouse button to select it.
2. When a sub-menu appears, click on the left button again to make a selection.
3. If a scroll bar appears on the right side of the screen, place the mouse cursor over the arrow at the top or at the bottom of the scroll bar, then click and hold the left mouse button to scroll up or down the page.

5.1.3 Getting Help

The EISA Configuration Utility automatically displays information about each choice on the ECU main menu and the second-level menus. The utility also allows you to access online help once you begin the configuration process.

Press | to display the help menu. Press ^ to remove the help menu from the screen.

5.2 Starting the ECU

1. You can access the ECU two ways:
 - From the Acer StartUp main menu, click on the **EISA Configuration** icon, then click on the **EISA Configuration** button on the System Configuration menu.
 - Use **Diskette Maker** in Acer StartUp to make an ECU diskette, then insert the ECU diskette into drive A and reboot the system.
2. System messages display, then the ECU logo screen appears. Press any key to continue.
3. A welcome screen appears. Press **Enter** to leave the Welcome screen and display the ECU main menu—Steps in Configuring Your Computer (see Figure 5-1).

5.3 ECU Main Menu —Steps in Configuring Your Computer

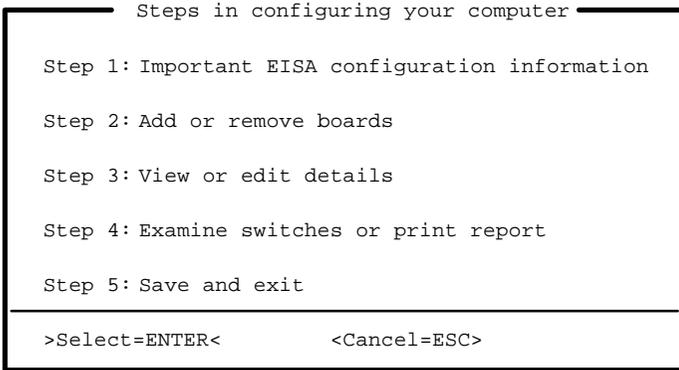


Figure 5-1 ECU Main Menu — Steps in Configuring Your Computer

The five selections on the ECU main menu are briefly described below. Specific tasks, such as configuring your computer for the first time (section 5.4), adding or removing boards (section 5.5), and configuring memory (section 5.6) are discussed in detail later in this chapter.

All the ECU screens have a command bar at the bottom to guide you through the utility.

5.3.1 Main Menu Selections

Step 1: Important EISA Configuration Information

This selection is highlighted when you first enter the main menu. It gives an overview of how to configure your computer with the EISA Configuration Utility. Press **Enter** to select this item. Then press the up and down arrow keys to move up or down the text. When you select **Step 1: Important EISA Configuration Information**, the following screen displays:

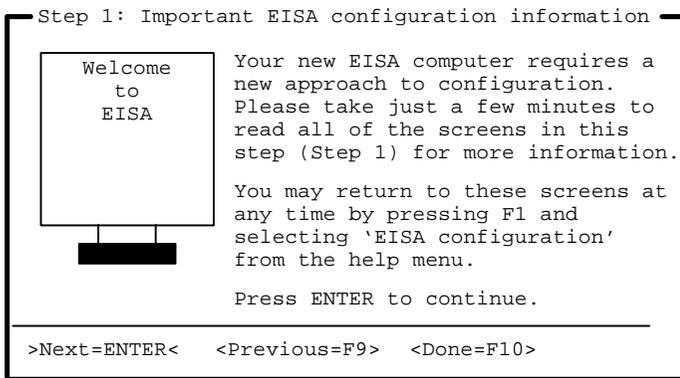


Figure 5-2 Important EISA Configuration Information

Take a few moments to read all seven screens in this step. The screens provide details about using the ECU program to configure EISA and ISA boards. You can learn how to determine if a board is EISA or ISA and how to use steps 2, 3, and 4 on the ECU main menu. The last screen in the series summarizes the steps to follow when configuring your computer.

You can move between screens by pressing **Enter** to go to the next screen, or **F9** to go back to the previous screen. After viewing the screens, press **Enter** or **F10** to return to the ECU main menu.

Additional information is available in the Help sub-menus that automatically display at the bottom right of the window. The Help submenus consist of a series of screens that describe the ECU process and how the process differs for EISA and ISA boards.

Use the up and down arrow keys to read a short explanation of each of the configuration steps.

Step 2: Add or Remove Boards

Each time you add or remove a configurable board, you must reconfigure the computer using the ECU program. When you select this item, the screen displays a list of the boards and options installed in your computer.

The screen contains the configuration data that the ECU read from your CFG file. It includes the number of EISA slots and device controllers detected.

Figure 5-3 shows a sample Add or Remove Boards screen.

```
Step 2: Add or remove boards

Listed are the board and options detected in your
computer.

Press INSERT to add the boards or options which
could not be detected or which you plan to install.
Press DEL to remove the highlighted board from your
configuration.
Press F7 to move the highlighted board to another
slot.
Press F10 when you have completed this step.

> AcerAltos Server
  Slot 1 (Empty)
  Slot 2 (Empty)
  Slot 3 (Empty)
  Embedded PCI SCSI Controller

>Add=INSERT< <Remove=DEL> <Move=F7> <Done=F10>
```

Figure 5-3 Add or Remove Boards

See the section “Adding or Removing Boards” for a detailed procedure.

Step 3: View or Edit Details

The ECU also allows you to view or edit your system configuration information. You may have to edit your system settings when you add or remove boards, when you make other hardware changes or when there are device assignment conflicts. Figure 5-4 shows a sample View or Edit Details screen.

The configuration data on the following screen depends on your CFG file and may not be exactly the same as the one on your actual screen.

Press ↑ and ↓ to see all information.

See also: Advanced Menus ⇒ View Additional System Information ⇒
 Used Resources and Available Resources

Step 3: View or Edit Details

Press ↑ and ↓ to see all information.

Press ENTER to edit the functions of the highlighted item.

Press F6 to edit its resources (IRQs, DMAs, I/O ports, or memory).

Press F10 when you have finished this step.

System - AcerAltos 9000

System BIOS Type	RAM BIOS Enable (128 K)
System Processor	Pentium at 166 MHz
Special System Ports	Special System Ports
EISA Reserved Devices	EISA Reserved Devices

System Memory Functions

Base System Memory	Enabled
8 - 16 MB System Memory ..	16 MB System Memory
.....	with 15-16MB System Use
16 - 64 MB System Memory ..	Enabled
64 - 128 MB System Memory ..	Enabled
128 - 192 MB System Memory ...	Enabled
192 - 256 MB System Memory ...	Enabled
256 - 320 MB System Memory ...	Enabled
320 - 384 MB System Memory ...	Enabled
384 - 448 MB System Memory ...	Enabled
448 - 512 MB System Memory ...	Enabled

Mouse Port	Enabled
Keyboard Port	Enabled
Floppy Disk Controller	Enabled
IDE HDD Interface	Disabled
Parallel Port	Enabled
Serial Ports	
0 - 4 COM Port Address ..	3F8h

>Edit=ENTER< <Edit Resources=F6> <Advanced=F7> <Done=F10>

Figure 5-4 View or Edit Details

Step 4: Examine Switches or Print Report

This selection lists the boards installed in your computer. Figure 5-5 shows a sample Examine Switches or Print Report screen.

Boards marked with an arrow on the screen may have defined jumpers and switches that you must physically verify. It may also mean that there is a software statement with additional information about the board.

To view the switch and jumper settings, highlight the board marked with an arrow and press **Enter**.

You can print a hard copy of the switch and jumpers settings or you can print the information to a TXT file (see the section “Configuring Your Computer for the First Time” for details).

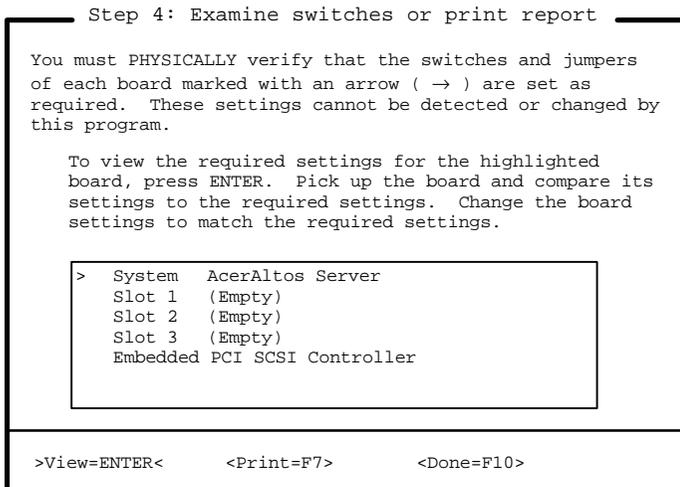


Figure 5-5 Examine Switches or Print Report

Step 5: Save and Exit

Figure 5-6 shows the Save and Exit screen. Press **Enter** to save your configuration and exit the ECU program. You can also exit without saving in this step.

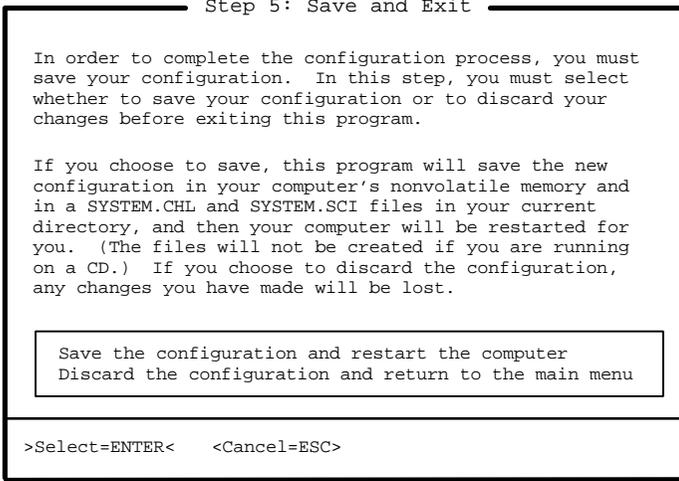


Figure 5-6 Save and Exit

5.4 Configuring Your Computer for the First Time

Follow these steps when configuring your computer for the first time:

1. Select **Step 1: Important EISA Configuration Information** from the ECU main menu. Read through the information then press **F10** when you are done.
2. Select **Step 4: Examine switches or print report**, then press **Enter** to display the screen shown below.

```
Step 4: Examine switches or print report

You must PHYSICALLY verify that the switches and jumpers
of each board marked with an arrow ( → ) are set as
required. These settings cannot be detected or changed by
this program.

To view the required settings for the highlighted
board, press ENTER. Pick up the board and compare its
settings to the required settings. Change the board
settings to match the required settings.

> System  AcerAltos Server
  Slot 1   (Empty)
  Slot 2   (Empty)
  Slot 3   (Empty)
  Embedded PCI SCSI Controller

>View=ENTER<      <Print=F7>      <Done=F10>
```

Figure 5-7 Examine Switches or Print Report

3. Notice the boards marked with an arrow on the screen, if any. The arrow indicates that the boards in your computer may have defined jumpers and switches that you must physically verify. It may also mean that there is a software statement with additional information about the board.

4. To view the switch and jumper settings, highlight the board marked with an arrow and press **Enter**. The switch/jumpers settings screen for the board appears.
5. Scroll through the switch and jumper settings for the board, and press **F10** when you have finished viewing the information.
6. To print the information, select **Print** by pressing **F7**. The Print Settings screen appears.
 - If you have a printer attached to your computer, select **Print all configuration settings** or **Print settings for selected board or option**, then press **Enter** to print a hard copy of the switch and jumper settings and other configuration information.
 - If you do not have a printer, select **Print all configuration settings to a file** or **Print settings for selected board or option to a file**. A Print Information to TXT File screen appears.
 - If you want to print the switch and jumper settings to a different diskette, insert a diskette in drive A and press **Enter**. Another Print Information to TXT File screen appears. Enter the name of your file or choose an existing filename and press **Enter**.



If you inserted a different diskette, remember to reinsert the ECU diskette after printing is complete.

7. Press **F10** when you are through. The ECU main menu, Steps in Configuring Your Computer, reappears.

8. Select **Step 5: Save and Exit**, then press **Enter**. The following screen appears.

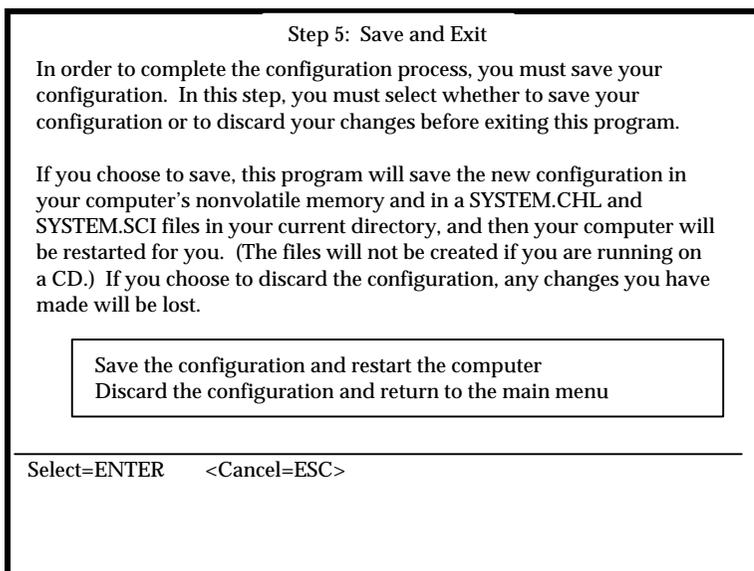


Figure 5-8 Save and Exit

9. To save your changes, select **Save the configuration and restart the computer**, then press **Enter**.

To discard the changes, choose the option **Discard the configuration and return to the main menu**. Any changes that you made are lost.

10. When the reboot screen appears, press **Enter**.
11. Turn off the computer and remove the ECU diskette, if not running from CD.

5.5 Adding or Removing Boards

Each time you add or remove a board, you must reconfigure the computer using the EISA Configuration Utility program.

Adding Boards

Follow these steps when adding a board:

1. Select **Step 2: Add or remove boards** from the ECU main menu. Press **Enter** to display the following screen:

Step 2: Add or remove boards

Listed are the board and options detected in your computer.

Press INSERT to add the boards or options which could not be detected or which you plan to install.

Press DEL to remove the highlighted board from your configuration.

Press F7 to move the highlighted board to another slot.

Press F10 when you have completed this step.

```
AcerAltos Server
Slot 1   (Empty)
Slot 2   (Empty)
Slot 3   (Empty)
Embedded PCI SCSI Controller
```

Add=INSERT <Remove=DEL> <Move=F7> <Done=F10>

Figure 5-9 Add or Remove Boards

The screen contains the configuration data that the ECU read from your CFG file. It includes the number of EISA slots and device controllers detected.

2. If you want to add or have already added a board, highlight a slot and press **h** to select an option from the list that appears.
3. Press **F10** when done. The ECU main menu displays.
4. Select **Step 4: Examine switches or print report**, then press **Enter**.

5. On the Examine Switches or Print Report screen that displays, notice the boards marked with an arrow, if any. The arrow indicates that the boards in your computer may have defined jumpers and switches that you must physically verify. It may also mean that there is a software statement with additional information about the board.
6. To view the switch and jumper settings, highlight the board marked with an arrow and press **Enter**.
7. When the switch/jumpers settings screen for the board displays, scroll through the switch and jumper settings for the board. Press **F10** when you have finished viewing the information.
8. To print the information, select **Print** by pressing **F7**. The Print Settings screen appears.
 - If you have a printer attached to your computer, select **Print all configuration settings** or **Print settings for selected board or option**, then press **Enter** to print a hard copy of the switch and jumper settings and other configuration information.
 - If you do not have a printer, select **Print all configuration settings to a file** or **Print settings for selected board or option to a file**. A Print Information to TXT File screen appears.
 - If you want to print the switch and jumper settings to a different diskette, insert a diskette in drive A and press **Enter**. Another Print Information to TXT File screen appears. Enter the name of your file or choose an existing filename and press **Enter**.



If you inserted a different diskette, remember to reinsert the ECU diskette after printing is complete.

9. Press **F10** when you are through. The ECU main menu, Steps in Configuring Your Computer, reappears.

10. Select **Step 5: Save and Exit**, then press **Enter**. The Save and Exit screen displays.
11. To save your changes, select **Save the configuration and restart the computer**, then press **Enter**.

To discard the changes, choose the option **Discard the configuration and return to the main menu**. Any changes that you made are lost.
12. When the reboot screen appears, press **Enter**.
13. Turn off the computer and remove the ECU diskette, if not running from CD.

Removing a Board

Follow these steps when you remove a board:

1. Select **Step 2: Add or remove boards** from the ECU main menu.
2. Select the board that you want to remove from the configuration and press **C** . A remove confirmation screen appears.
3. Press **Enter**. The Add or Remove Boards screen reappears.
4. Press **F10** when done. The ECU main menu displays.
5. Follow steps 4 to 13 in the previous section, Adding a Board, to complete your configuration.

5.6 Configuring Memory

Each time you change your system's memory configuration, you must reconfigure the computer using the ECU.



*When removing memory, run the ECU and change memory size **before** physically removing the memory; otherwise, the system may become inoperable.*

The following discussion describes how to configure a system for 96 MB of memory.

1. Highlight **Step 3: View or edit details** from the ECU main menu, then press **Enter**. The View or Edit details screen displays (a sample screen is shown in Figure 5-4).
2. Use the up and down arrow keys to highlight the memory function you wish to configure. In this example, your basic system configuration is installed with 32 MB; therefore, the **16 - 64MB System Memory** parameter is the first memory function you must configure.
 - a) Highlight **16 - 64MB System Memory**, then press **Enter**.
 - b) The System Memory Functions screen displays, showing the function is enabled:

```

                                System Memory Functions
16 - 64MB System Memory

        (*) Enabled
        ( ) Disabled

Press F6 to edit the resources (IRQs, DMAs, I/O ports or
memory) of the highlighted setting.

Done = F10          Edit Resources = F6          Cancel = ESC

```

- c) Press **F6** to edit resources. The Enabled screen displays. Use the Tab key or the up and down arrow keys to move between fields. Use the plus and minus keys to change resources.

```

                                Enabled

These are the resources used by this choice. Use the PLUS (+)
and MINUS (-) keys to change items marked with a plus/minus
symbol.

        Memory Address 16M
        Memory Amount  16M

Done = F10          Cancel = ESC

```

- d) On the above screen, the **Memory Address** field shows the beginning memory address (16M); the **Memory Amount** field shows 16M. Configure additional memory by changing the **Memory Amount** field, as described below.

64MB is the total amount that can be configured within each memory function parameter. Therefore, for the 16 - 64MB parameter, change the **Memory Amount** field to 48M.

Memory Address:	16M
Memory Amount:	48M
Total	<hr/> 64M

Press **F10** to return to the View or Edit Details screen.

3. Use the up and down arrow keys to highlight the next memory function, **64 - 128MB System Memory**, then press **Enter** to display the System Memory Function screen. Press **F6** to edit resources.

Change the **Memory Amount** field as described below:

64MB is the total amount that can be configured within each memory function parameter. Therefore, for the 64 - 128MB parameter, change the **Memory Amount** field to 32M.

Memory Address:	64M
Memory Amount:	32M
Total	<hr/> 96M

Press **F10** to return to the View or Edit Details screen.

4. Your system is now configured with 96 MB of memory as follows:

8 - 16 MB System Memory	16 MB
16 - 64 MB System Memory	48 MB
64 - 128 MB System Memory	32 MB
	<hr/>
	96 MB

5. Repeat the process to configure additional memory, starting with the last modified field not equaling 64MB. Do not leave gaps between memory addresses. This can cause your system to become inoperable.

6. Press **F10** when you are through. The ECU main menu, Steps in Configuring Your Computer, reappears.
7. Select **Step 5: Save and exit**, then press **Enter**. The Save and Exit screen displays.
8. To save your changes, select **Save the configuration and restart the computer**, then press **Enter**.

To discard the changes, choose the option **Discard the configuration and return to the main menu**. Any changes that you made are lost.

9. When the reboot screen appears, press **Enter**.
10. Turn off the computer and remove the ECU diskette, if not running from CD.

5.7 Viewing or Editing Configuration Details

The ECU also allows you to view or edit your system configuration information. You may have to edit your system settings when you add or remove boards, when you made any other hardware changes, or when there are device assignment conflicts.

To view or edit your configuration, simply click on **Step 3: View or edit details** from the ECU main menu then press **Enter** to display the screen shown in Figure 5-4.

Advanced Menus

Press **F7** from the View or Edit Details screen to display the Advanced menu. This menu contains four options: Lock/unlock boards, View additional system information menu, Set verification mode menu, and Maintain SCI files menu.

Lock/unlock boards

This option allows you to secure choices for the current board or the entire system to the current selections, or to unlock those choices so that changes can be made. Locking a board prevents changes to a board's settings. An exclamation point (!) next to the selection indicates that a board is locked.

View additional system information

This option allows you to choose from a menu of options for displaying detailed information about system specifications and resources, including:

- **Board specifications**
Displays information about the identification and physical characteristics of your boards
- **System specifications**
Displays system statistics and information about the slots in your computer.
- **Used resources**
Displays information about which boards and functions are using your computer's resources, including DMA channels, IRQ levels, I/O ports, and memory addresses.
- **Available resources**
Displays a list of those resources which are unassigned and are available for allocation to boards.

Set verification mode menu

This option allows you to specify whether your computer's configuration should be checked each time you make a change or only when you choose.

Select **Automatic** to have the computer's configuration verified automatically each time a change is made and have conflicts identified and resolved as they occur.

Select **Manual** to verify your computer's configuration only when you select the <Verify> push-button on the **Step 3: View or edit details** screen. Note that the <Verify> push-button displays only when the program is in **Manual** verification mode.

Maintain SCI files menu

This option allows you to select from a menu of options regarding System Configuration Information (SCI) files.

Select **Open...** to display a previously created System Configuration Information (SCI) file.



This will cause the current configuration information to be lost.

Select **Save as...** to save the current configuration information to a backup file.

5.8 What To Do If Your Nonvolatile Memory Is Invalid

If the nonvolatile memory has become invalid or it has not been initialized, the following screen may display before the ECU main menu appears.

```
The EISA configuration nonvolatile memory for this system is invalid. A
backup system configuration information (SYSTEM.SCI) file, however, does
exist.

Press ENTER to use this backup SCI file to restore your configuration.

Press ESC if you prefer to reconfigure your system and you do not want to
load the backup.

    ( * ) Use backup SCI file

    ( ) Do not use backup SCI file

Select = ENTER                Cancel = ESC
```

If you have previously run the ECU from floppy disk and saved your system configuration, select **Use backup SCI file**.

For systems where the nonvolatile memory has not been initialized, select **Do not use backup SCI file** and proceed with the system configuration.

Appendix A System Resources

A.1 Memory Map

Table A-1 System Memory Map

Address	Size	Function
0000000 ~ 009FFFF	640 KB system memory	Onboard DRAM
00A0000 ~ 00BFFFF	128 KB video RAM	Reserved for graphics display buffer, non-cacheable
00C0000 ~ 00C7FFF	32 KB for VGA BIOS	Reserved for ROM on I/O adapters
00C8000 ~ 00CFFFF	32 KB I/O expansion ROM	Reserved for ROM on I/O adapters
00D0000 ~ 00D3FFF	16 KB I/O expansion ROM	Reserved for ROM on I/O adapters
00D4000 ~ 00D7FFF	16 KB I/O expansion ROM	Reserved for ROM on I/O adapters
00D8000 ~ 00DBFFF	16 KB I/O expansion ROM	Reserved for ROM on I/O adapters
00DC000 ~ 00DFFFF	16 KB I/O expansion ROM	Reserved for ROM on I/O adapters
00E0000 ~ 00E7FFF	32 KB for SCSI BIOS	Reserved SCSI BIOS
00E8000 ~ 00EFFFF	32 KB	Reserved onboard (video RAM BIOS)
00F0000 ~ 00FFFFFF	64 KB BIOS	System ROM BIOS (ROM) System RAM BIOS (DRAM)
0100000 ~ 0F9FFFF	System memory	Onboard DRAM
0FA0000 ~ 0FFFFFFF	384 KB I/O card memory	Reserved for memory map I/O card, non-cacheable
1000000 ~ FFFFFFFF	System memory	Onboard DRAM

A.2 I/O Address Map

Table A-2 System I/O Address Map

Address Range (hex)	Device
000 ~ 01F	DMA controller 1
020 ~ 027	Interrupt controller 1
030 ~ 037	Interrupt controller 1
040 ~ 047	System timer
050 ~ 057	System timer
060 ~ 06F	Keyboard controller
070 ~ 07F	Real-time clock, NMI mask
080 ~ 09F	DMA page register/speed status register
0A0 ~ 0BF	Interrupt controller 2
0C0 ~ 0DF	DMA controller 2
0F0	Clear math coprocessor
0F1	Reset math coprocessor
0F8 ~ 0FF	Math coprocessor
4F0	AEN4 enables (onboard VGA enabled) Flash ROM programming IRQ12 enabled 3.5-inch diskette 3 -mode selection DMA channel 1 selection DMA channel 3 selection
4F1	ASM data read/write port
4F2	ASM index write port
0CF8	PCI configuration address regulation

Table A-2 System I/O Address Map (continued)

Address Range (hex)	Device
0CFC	PCI configuration data regulation
1F0 ~ 1F7	Hard disk
278 ~ 27F	Parallel port 3
2F8 ~ 2FF	Serial port 2
378 ~ 37F	Parallel port 2
3B0 ~ 3BF	Parallel port 1
3C0 ~ 3CF	EGA, VGA, SVGA
3D0 ~ 3DF	CGA, VGA, SVGA
3F0 ~ 3F7	Diskette drive controller
3F7 ~ 3FF	Serial port 1

A.3 Interrupt Channels

Table A-3 *Interrupt Channels*

Channel	Function
IRQ0	Timer output 0
IRQ1	Keyboard
IRQ2	Reserved
IRQ3	Serial port 2
IRQ4	Serial port 1
IRQ5	Reserved
IRQ6	Diskette drive
IRQ7	Parallel port
IRQ8	Real-time clock
IRQ9	Reserved
IRQ10	Reserved
IRQ11	Reserved
IRQ12	PS/2 mouse
IRQ13	Math coprocessor
IRQ14	IDE
IRQ15	Reserved

A.4 System Default Configuration

The following tables show your system's factory default configuration.

Table A-4 Basic System Configuration (Page 1/2)

Parameter	Default Setting
Diskette Drive A	1.44 MB 3.5-inch
Diskette Drive B	None
Fixed Disk 0	None
Fixed Disk 1	None
Base Memory is always 640 KB, while the total amount is determined by configuration.	
Math coprocessor is always installed.	
Video display is automatically detected.	

Table A-5 Basic System Configuration (Page 2/2)

Parameter	Default Setting
Baud Rate	9600BPS
Parity	None
Stop Bits	1
Data Length	8
Hard Disk Block Mode	Disabled
Hard Disk Size > 504 MB	Disabled
Large Memory Support Mode	Normal
NUM Lock After Boot	Enabled
Memory Test	Disabled
Auto Configuration Mode	Disabled
Fast Boot Mode	Disabled

Table A-6 Advanced System Configuration (Page 1/1)

Parameter	Default Setting
E0000h - FFFFFh	Enabled
C0000h - C7FFFh	Enabled
C8000h - CBFFFh	Disabled
CC000h - CFFFFh	Disabled
D0000h - D3FFFh	Disabled
D4000h - D7FFFh	Disabled
D8000h - DBFFFh	Disabled
DC000h - DFFFFh	Disabled
Internal Cache	Enabled
External Cache	Enabled
ECC/Parity Mode Selection	ECC
Memory at 15 MB - 16 MB	System Use

Table A-7 PCI System Configuration

Parameter	Default Setting
PCI IRQ Setting	Auto
PCI Slots 1, 2, 3, 4, and 5	Not Configured
Onboard SCSI	11
Onboard VGA	9
VGA Palette Snoop	Disabled
Onboard SCSI	Enabled
Boot Device	Enabled

Table A-8 System Security

Parameter	Default Setting
Disk Drive Control	
Diskette Drive	Normal
Fixed Disk Drive	Normal
System Boot Drive	Drive A then C
On-board Communication Ports	
Serial Port 1	3F8h
Serial Port 2	2F8h
Parallel Port	3BC (IRQ 7)
Operation Mode	Enhanced Parallel Port
Onboard PS/2 Mouse	Enabled
Setup Password	None
Power-On Password	None

Table A-9 EISA Configuration Utility - ECU

Parameter	Default Setting
Step 3: View or edit details	
Base System Memory	640 KB Base Memory
8 - 16 MB Extended Memory	16 MB Ext Memory with 15 - 16 MB System Use
16 - 64 MB System Memory	16M
Peripheral Device Status	
Mouse Port	Enabled
Keyboard Port	Enabled
Floppy Disk Controller	Enabled
IDE HDD Interface	Disabled
Parallel Port	Enabled
Serial Port 1 (9-pin)	Enabled as COM1 (3F8h)
Serial Port 2 (25-pin)	Enabled as COM2 (2F8h)

Appendix B Drive Tray Management System (DTMS)

B.1 Introduction


The BP-W8 wide SCSI backplane subsystem consists of a backplane board and drive trays that support wide SCSI hard disk drives. The BP-W8 backplane is specifically designed for a tower housing that accommodates up to eight SCSI drives.

The backplane subsystem has the following major features:

- “Hot-swap” feature that allows replacement of a defective hard drive even while the system is in full operation. This feature requires a RAID controller board and RAID drivers.
- Two LEDs on the SCSI drive tray front panel to indicate power and drive failure. The drive failure feature requires an additional driver.
- Allows “split” (dual-channel) and “combine” (single-channel) SCSI configurations
- SCSI ID strapping that allows wide SCSI HDD ID configuration through the backplane switches instead of configuring the individual drive IDs
- Fixed 2.85-volt active termination

B.1.1 Major Components

Backplane Board

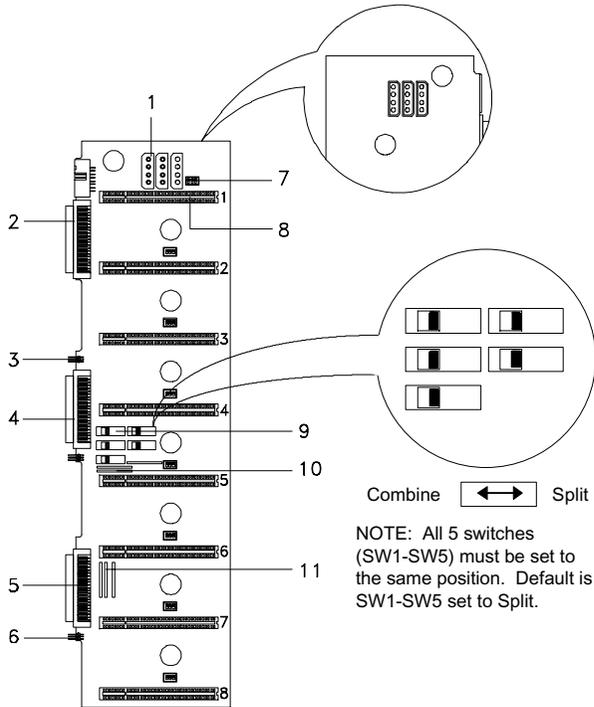


- | | | | |
|---|-------------------------|----|--------------------------------|
| 1 | Power connectors | 7 | SCSI ID switch (8X) |
| 2 | SCSI channel 1 (input) | 8 | SCSI drive slot (8X) |
| 3 | HDD ID/ term power (J3) | 9 | Channel configuration switches |
| 4 | SCSI channel 2 (input) | 10 | Terminators RA4, RA5, RA6 |
| 5 | SCSI out connector | 11 | Terminators RA1, RA2, RA3 |
| 6 | HDD ID/ term power (J4) | | |

Figure B-1 Backplane Board Components

Hot-plug SCSI Drive Tray

The backplane subsystem comes with 68-pin wide SCSI drive trays.

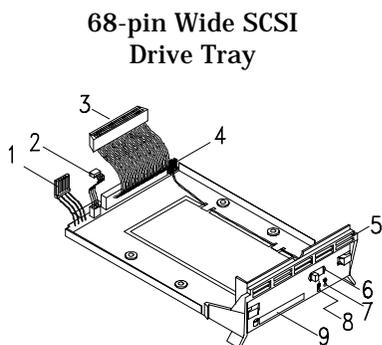

- 1 Power Connector
- 2 8/12-pin Wide SCSI ID Cable*
- 3 68-pin Wide SCSI Connector
- 4 Power Control Connector (J4)
- 5 Drive Tray Handle
- 6 Power Switch
- 7 Power LED
- 8 Drive Fault LED
- 9 Drive Activity LED Window

Figure B-2 Hot-plug SCSI Drive Tray Components

* The 8-pin connector connects to J2 on the drive tray while the 12-pin connector on the other end connects to the SCSI hard disk.

B.2 Jumper Settings

The backplane has two channel configuration jumpers, J3 and J4, that allow you to select the terminator power source and to set drive IDs. J3 supports the four upper drive slots (slots 1, 2, 3, and 4) on the backplane. J4 supports the four lower drive slots (slots 5, 6, 7, and 8). See “Hard Disk ID Setting Options” for details on hard disk ID settings.



The double jumper between J3 and J4 is reserved and should always be open.

Figure B-3 shows the settings for jumpers J3 and J4.

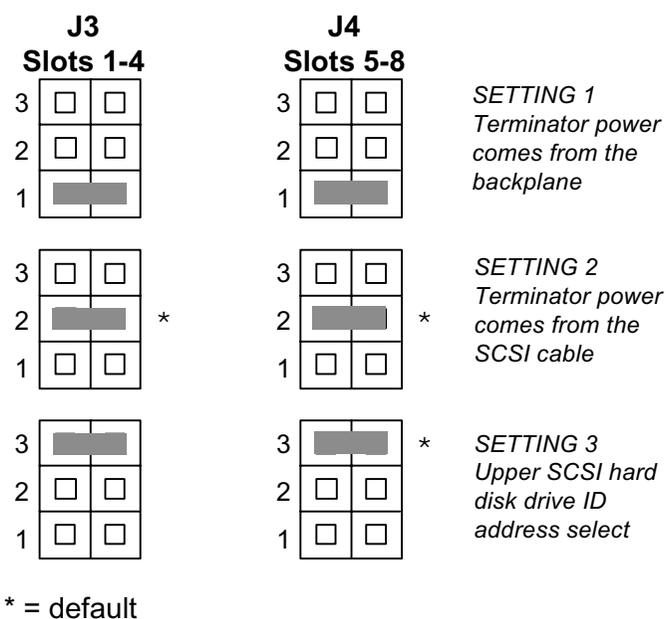


Figure B-3 Channel Configuration Jumper Settings



You may also set J3 to setting 1 and J4 to setting 2, or vice versa.

For single-channel configuration, settings 1 and 2 for J3 are disabled since terminators RA4, RA5, and RA6 are removed.

B.3 Hard Disk ID Setting Options

The wide SCSI hot-plug drive tray includes an 8/12-pin ID cable (see Figure B-2). This cable allows you to define the hard disk ID using the ID switches on the backplane board.

The ID setting feature on the backplane board does not work if you do not connect an ID cable.

Figure B-4 shows the pin definition of ID cable connector J2 on the drive tray to help you connect the cable properly. Make sure to match pin 1 on the cable with pin 1 on J2.

8-Pin Connector for Wide
SCSI ID Cable

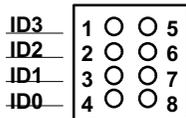


Figure B-4 ID Cable Connector Pin Definitions

Figure B-5 shows the ID switches default settings with the corresponding hard disk IDs.

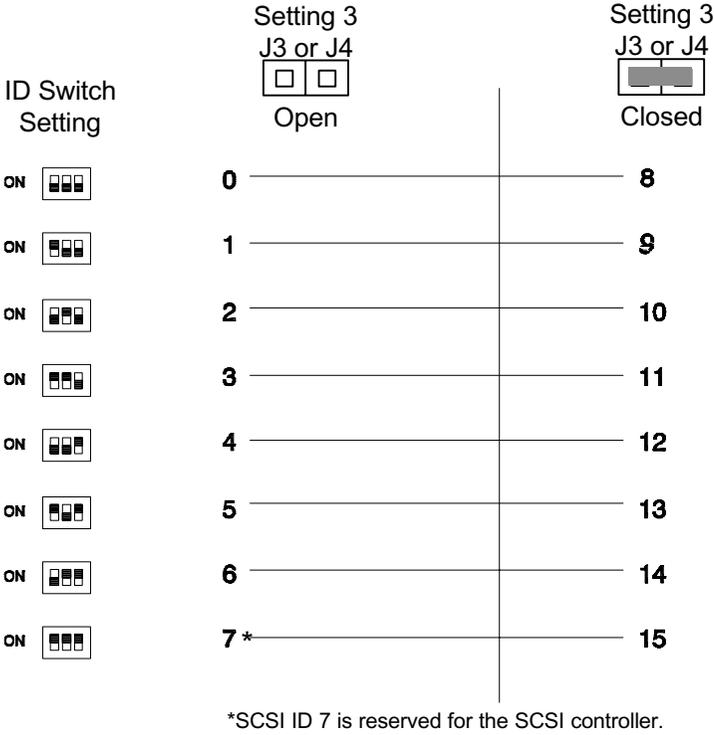


Figure B-5 Hard Disk ID Switch Settings



Normally, SCSI ID7 is reserved for the SCSI controller board.

Figure B-6 describes the defaults for the configuration jumpers as well as the slots they control.

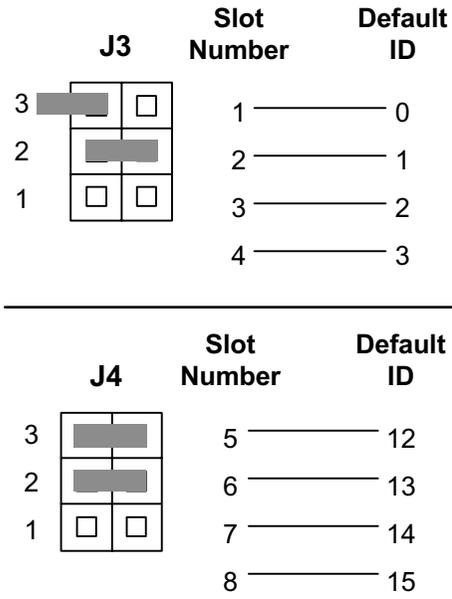


Figure B-6 Channel Configuration Jumpers and Slot Number IDs

B.4 SCSI Channel Configurations

You may configure the backplane as either a single SCSI channel (combine) or a dual SCSI channel (split).

Single-Channel Configuration

In a single-channel configuration, channel 1 supports the SCSI devices plugged into slots 1 to 8. Set the channel configuration switches to “Combine” (see Figure B-1) and set the terminators accordingly (Table B-1) to achieve a single-channel configuration.

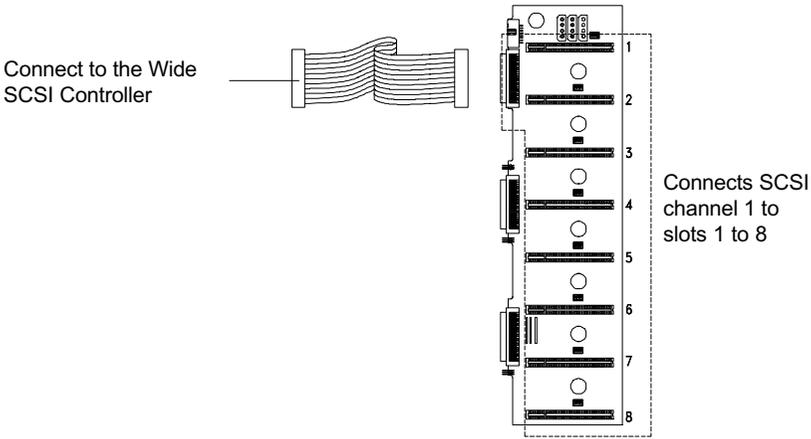


Figure B-7 Single-Channel Configuration

Table B-1 lists the terminator settings for a single-channel configuration.

Table B-1 Terminator Settings for Single-Channel Configuration

Terminator	Setting
With External Device	
RA1, RA2, RA3	Removed
RA4, RA5, RA6	Removed (see note)
Without External Device	
RA1, RA2, RA3	Installed
RA4, RA5, RA6	Removed



For configurations with an external device, terminate the channel at the external device.

Dual-Channel Configuration

In a dual-channel configuration, channel 1 supports devices in slots 1 to 4, and channel 2 supports devices in slots 5 to 8. Set the channel configuration switches to “Split” and set the terminators accordingly (Table B-2) to achieve a dual-channel configuration. See Figure B-1 for the locations of the switches and terminators.

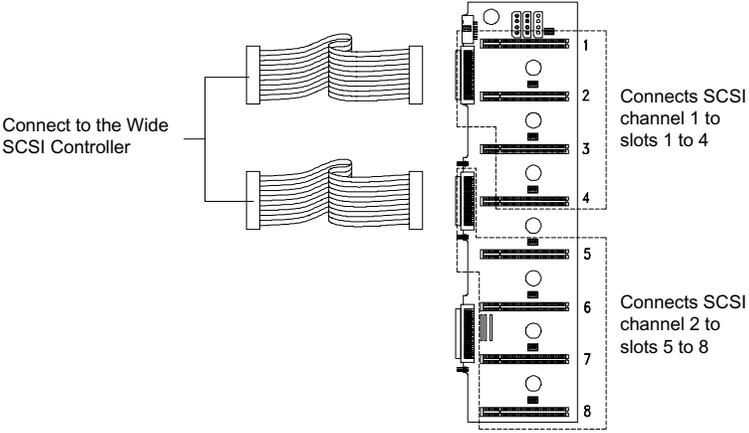


Figure B-8 Dual-Channel Configuration

Table B-2 lists the terminator settings for the dual-channel configuration.

Table B-2 Terminator Settings for Dual-Channel Configuration

Terminator	Setting
With External Device	
RA1, RA2, RA3	Removed
RA4, RA5, RA6	Installed
Without External Device	
RA1, RA2, RA3	Installed
RA4, RA5, RA6	Installed

B.5 Installing a SCSI Hard Disk

Follow these steps to install a SCSI hard disk in a hot-plug drive tray:

1. Remove the terminators or jumpers controlling termination on each SCSI drive that you install.
2. Position the drive over the hot-plug tray and connect the SCSI cable, drive ID cable, and power cable.



By not using the drive ID cable, the drive SCSI ID will be used.

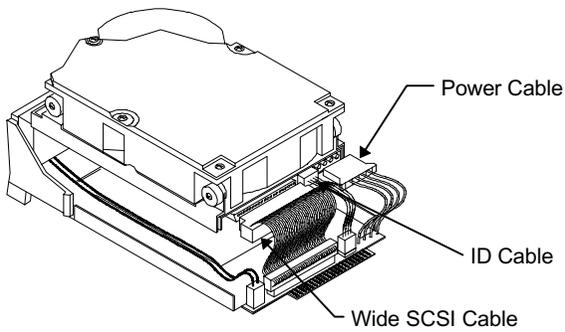


Figure B-9 Connecting the Drive Cables (Wide SCSI Drive)

3. From the bottom, secure the drive to the tray using four screws.

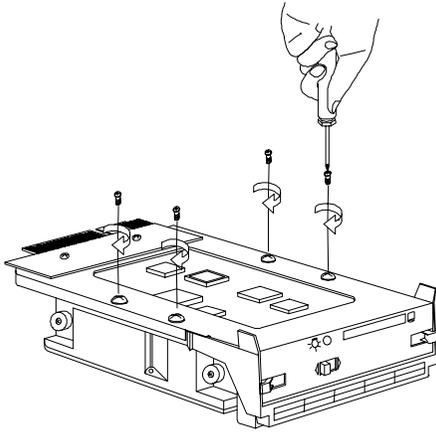


Figure B-10 Securing a Drive to the Hot-plug Tray

4. Install the drive tray into the backplane board. See Figure B-11 on the following page. Be sure the tray is fully seated into the backplane connector.



Make sure that the power switch on the drive tray is set to the Unlock/Power Off position and the handle is in the UP position before you plug it into the board.

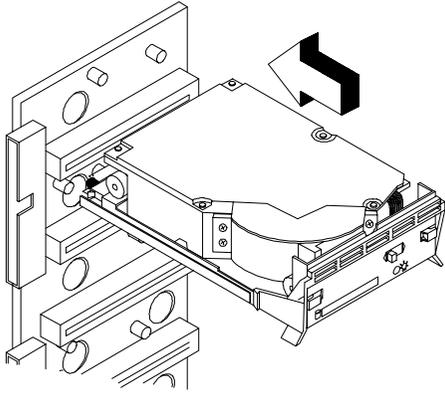


Figure B-11 Installing the Hot-plug Drive Tray

5. Slide the power switch of the drive tray to the Lock/Power On position. The power LED will light up.

B.6 Using the Hot-swap Feature

The backplane board supports a hot-swap feature that allows you to replace defective drives even while the system is running.



The hot-swap feature requires a RAID controller board and RAID drivers.

The drive fault indicator¹ on the hot-plug drive tray lights up whenever the drive that it carries becomes bad or defective. When this happens, you can replace the defective drive without shutting off the system.

Follow these steps to use the hot-swap feature:

1. Set the hot-swap drive tray power switch to the Unlock/Power Off position.
2. Pull out the drive tray.
3. Take the defective drive out of the tray.
4. Configure the new hard disk. If you are not using an ID cable, make sure that the new drive ID is the same as the old drive ID. If you are using an ID cable, make sure that you connect the cable properly.
5. Install the new disk according to the installation steps in “Installing a SCSI Hard Disk.”



Make sure that the power switch on the drive tray is set to the Unlock/Power Off position before you plug it into the backplane board.

¹ This feature requires a software driver that coordinates the system signals prompting the indicator to light up.

Index

A

- adding memory modules • 2-7
- advanced system configuration • 3-12
 - external cache • 3-13
 - internal cache (CPU cache) • 3-13
 - memory at 15 MB - 16 MB • 3-14
 - shadow RAM • 3-13
- “Auto” option • 3-6, 3-7
- auto configuration mode • 3-4, 3-11

B

- basic system configuration • 3-3
- battery • 2-2, 2-17, 3-1, 3-5, 3-31
 - BIOS • 2-2, 2-5
 - BIOS Utility • 3-1, 3-7
 - Run Setup message • 3-1
- buzzer • 2-3

C

- cache
 - second-level • 2-1, 2-2
 - write-back • 2
- CMOS RAM • 2-2, 3-1
- COM1 • 2-1, 2-3
- COM2 • 2-1, 2-3
- communication settings • 3-9
- connecting cables
 - drive cables • 1-23, B-12
- connecting components
 - keyboard • 1-10
 - monitor • 1-12
 - mouse • 1-11
 - printer • 1-13

- connector locations • 2-4
- connector functions • 2-6
- CPU • 1-27, 2-3, 2-10
 - slot • 2-3
 - ZIF socket • 2-1

D

- date • 3-5
- disassembly • 1-15, 1-16
- disk drive control • 3-22
- diskette drive, installing 3.5-inch • 1-19
- diskette drive type • 3-1
- diskette drives • 3-6
- DRAM • 2-2
- drive cables, connecting • 1-23, B-12
- drive, installing 5.25-inch • 1-21
- Drive Tray Management System (DTMS)
 - Hot-plug backplane • 1, 1-29, B-1
 - dual-channel configuration • B-11
 - hard disk ID setting options • B-6
 - installing a hard disk drive • B-12
 - hot-plug SCSI drive tray • B-3
 - jumper settings • B-4
 - major components • B-2
 - SCSI channel configurations • B-9
 - single-channel configuration • B-9
 - using the hot-swap feature • B-15
- DTMS • see Drive Tray Management System (DTMS) hot-plug backplane

E

- ECC/parity mode selection • 3-14
 - operation of ECC • 3-14
- ECP DMA channel • 3-26
- EDO • 2-1, 2-7
- EPP/ECP • 2

- EISA • 1, 2-1, 2-2
- EISA configuration utility
 - adding or removing boards • 5-15
 - advanced menus • 5-23
 - configuring computer first time • 5-12
 - configuring memory • 5-19
 - functions • 5-1
 - getting help • 5-3
 - invalid nonvolatile memory • 5-25
 - making menu selections • 5-2
 - main menu • 5-5
 - main menu selections • 5-6
 - starting the ECU • 5-4
 - viewing/editing configuration details • 5-22
- enhanced IDE features • 3-10
 - hard disk block mode • 3-4, 3-10
 - hard disk size > 504 MB • 3-4, 3-10
- error messages • 2-14
 - correcting • 2-17
 - software • 2-14
 - system • 2-14
- ESD precautions • 1-15, 2-7
- exiting Setup • 3-31
- expansion ROM region • 3-19
- external cache • 3-13

F

- fan connector • 2-3
- fast boot mode • 3-4, 3-11
- Fast Page Mode • 2-1, 2-7
- front panel
 - features • 1-1

G

- getting started • 1-5

H

- hard disk block mode • 3-4, 3-10

- hard disk size > 504 MB • 3-4, 3-10
- hard disk drives • 3-6
- hot-plug backplane • see Drive Tray Management System
- hot swap • see Drive Tray Management System

I

- IDE • 3-6, 3-10
 - enhanced IDE feature • 3-10
 - hard disk configuration • 3-6
 - type • 3-7
- IDE fixed disk standby timer • 3-21
- installing options • 1-15
 - installing CPU board • 1-27
 - installing expansion boards • 1-25
 - installing drives • 1-19
 - installing a 5.25-inch drive • 1-21
 - installing a 3.5-inch diskette drive • 1-19
- internal cache (CPU cache) • 3-13
- interrupt channels • A-4
- I/O address map • A-2
- I/O region • 3-19
- ISA • 5-1

J

- jumper
 - functions • 2-6
 - locations • 2-4
 - settings • 2-5

K

- keyboard
 - connector • 12, 1-3, 2-2

L

- large memory support mode • 3-10
- leaving setup • 3-31
- load setup default settings • 3-30
- local bus • 2-1

M

- major components • 2-2
- math coprocessor • 3-9
- memory
 - adding • 2-7
 - configurations • 2-8
 - rules for adding • 2-8
 - system • 3-8
 - upgrade • 2-7
- memory map • A-1
- memory test • 3-4, 3-11
- mouse
 - connector • 2, 1-3, 2-2

N

- Non-PnP ISA card configuration • 3-17
- Num Lock After Boot • 3-4, 3-11

O

- onboard communication ports • 3-24
- onboard PS/2 mouse (IRQ 12) • 3-26
- onboard SCSI • 3-17
- opening the system • 1-16
- options, installing • 1-15

P

- parallel port • 1-3, 2-1, 2-2
- password, if you forget • 3-28

- PCI • 1, 2-1, 2-2
 - local bus • 2-1
 - PCI IRQ setting • 3-15, 3-16
 - slots • 2-1, 2-2, 2-3, 3-15, 3-16
- PCI system configuration • 3-15, 3-16
- PCI local bus • 2-1
- ports • 2-1, 2-2, 2-3
 - EPP/ECP • 2
 - external • 2-2
 - keyboard • 2-1, 2-2
 - mouse • 2-1, 2-2
 - parallel • 2-1, 2-2
 - serial • 2-1, 2-2
- positioning the system • 1-7
- POST • 3-7
- power on password • 3-28
- power on self test (POST) • 2-14
- power saving configuration • 3-20
- power management mode • 3-20, 3-21
 - IDE fixed disk standby timer • 3-20, 3-21
 - system standby timer • 3-20, 3-21
- power
 - LED • 1-1, 2-6
 - supply fan • 1, 2-2
- processor • 1, 2-1, 2-2

R

- rear panel
 - features • 1-3
- Remote Diagnostic Configuration • 3-29
- removing a slot bracket cover • 1-25
- reconfiguring the system • 2-11, 2-17
- Run Setup message • 3-1

S

- safety instructions • i v
- SCSISelect configuration utility
 - advanced configuration options • 4-16
 - BIOS startup messages • 4-26
 - configuring multiple SCSI controllers • 4-22

- default values • 4-1
- disk drives over 1 Gbyte • 4-23
- options • 4-4
- running • 4-3
- SCSI troubleshooting checklist • 4-25
- when to use • 4-3
- selecting site • 1-5
- second-level cache • 2-1
- Setup • 2-15, 2-16, 2-17, 3-1
 - advanced system configuration • 3-12
 - basic system configuration • 3-3
 - entering Setup • 3-2
 - leaving Setup • 3-31
- setup password • 3-27
- setting a password • 3-27
- shadow RAM • 3-12, 3-13
- SIMMs • 2-1, 2-2
 - double-density • 2-7
 - installing • 2-9
 - removing • 2-10
 - single-density • 2-7
 - sockets • 2-1, 2-2, 2-3, 2-9, 2-10
- system
 - reconfiguring • 2-11, 2-17
 - memory • 3-8
- system board
 - connector functions • 2-6
 - connector locations • 2-4
 - jumper locations • 2-4
 - jumper settings • 2-5
 - layout • 2-3
- system security setup • 3-22
 - disk drive control • 3-22
 - onboard communication ports • 3-24
 - onboard PS/2 mouse (IRQ 12) • 3-26
 - power on password • 3-28
 - setup password • 3-27
- system standby timer • 3-21
- system/wakeup events • 3-21

T

- time • 3-5

U

- unpacking the system • 1-6
- “User” option • 3-6, 3-7

V

- VGA Palette Snoop • 3-15, 3-17
- video display • 3-9
- video memory • 2-12
 - upgrade • 2-12
- video upgrade sockets • 2-2, 2-3

W

- write-back • 2

Z

- ZIF socket • 2-1

Release Note

AcerAltos 9000 Update

Thank you for purchasing an AcerAltos 9000 server. We want to provide you with the most up-to-date information about your new server.

This release note updates the *AcerAltos 9000 User's Guide* (P/N 49.AA984.001) with information about RDM, a key component in Acer's manageability suite. **For the latest information about RDM, look to this release note and the *Remote Diagnostic Manager (RDM) User's Guide* included with your server.**

Similarly, for the latest information about ASM Pro, refer to the *Advanced Server Manager Pro (ASM Pro) User's Guide* included with your server.


In addition, the information on page 1-6 of the *AcerAltos 9000 User's Guide*, "Unpacking the System," can now be found on the System Contents sheet included with your system.

RDM LED Location

The figure below shows the location of the RDM LED indicator. This indicator remains lit (on) whenever RDM is activated. The figure below replaces the figure on page 1-1 of the *AcerAltos 9000 User's Guide*. For more information about RDM hardware, including how to reinstall the RDM module and LED, refer to the *Remote Diagnostic Manager (RDM) User's Guide*.



The RDM module and LED are pre-installed at the Acer factory.

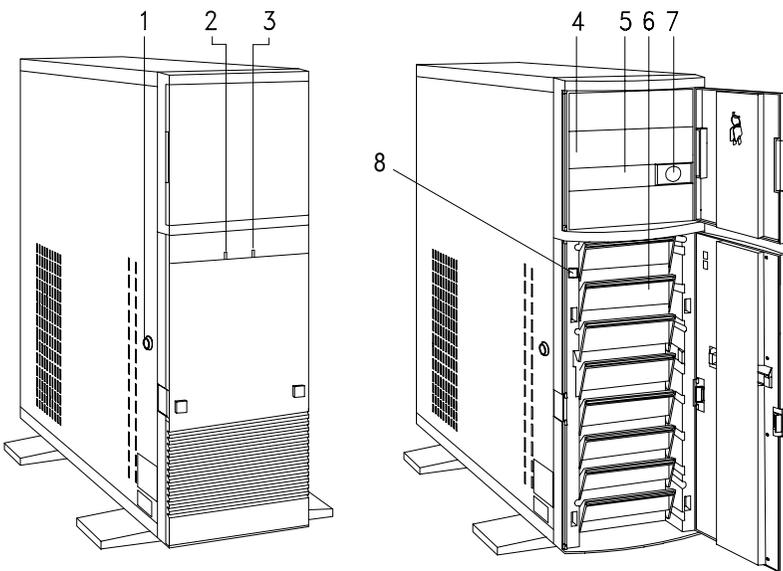


- 1 Keylock
- 2 Hard Disk Drive LED
- 3 Power LED
- 4 5.25-inch Drive Bays

- 5 3.5-inch Drive Bay
- 6 Hard Disk Drive Trays
- 7 Power Button
- 8 RDM LED

RDM Connector Locations

The figure below shows the location of the RDM connectors (CN6 and CN7) on the system board.

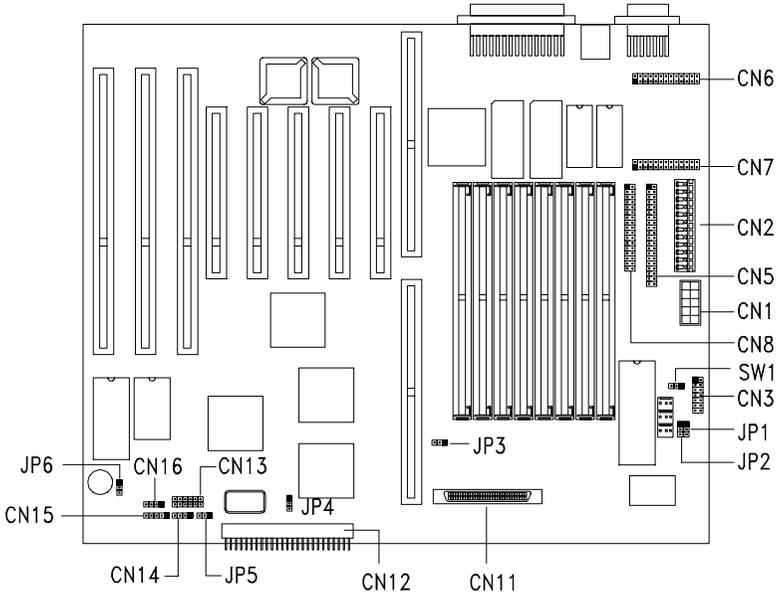

RDM BIOS Utility

Refer to the *RDM User's Guide* for the latest information about the RDM BIOS Utility.

Advanced Server Manager (ASM) Pro

References in the *AcerAltos 9000 User's Guide* to Acer Server Manager (ASM) Pro should read Advanced Server Manager (ASM) Pro.

Remote Diagnostic Manager (RDM)

References in the *AcerAltos 9000 User's Guide* to Remote Device Manager (RDM) should read Remote Diagnostic Manager (RDM).