



Jumper Settings

Jumper Table

Jumper Table Summary of AP5K

Setting the CPU Voltage

Jumper Settings

CPU Freq.	JP1	JP7	JP8	JP9	JP10
Intel Pentium P54C					
75 MHz	1-2, 3-4	1-2, 3-4	1-2, 3-4	Open	1-2
90 MHz	1-2	1-2, 3-4	1-2, 3-4	Open	1-2
100 MHz	3-4	1-2, 3-4	1-2, 3-4	Open	1-2
120 MHz	1-2	3-4, 5-6	1-2, 3-4	Open	1-2
133 MHz	3-4	3-4, 5-6	1-2, 3-4	Open	1-2
150 MHz	1-2	5-6, 7-8	1-2, 3-4	Open	1-2
166 MHz	3-4	5-6, 7-8	1-2, 3-4	Open	1-2
200MHz	3-4	1-2, 7-8	1-2, 3-4	Open	1-2
Intel Pentium P55C					
150MHz	1-2	5-6, 7-8	Open	1-2, 3-4	9-10
166MHz	3-4	5-6, 7-8	Open	1-2, 3-4	9-10
200MHz	3-4	1-2, 7-8	Open	1-2, 3-4	9-10
AMD K5					
PR75	1-2, 3-4	1-2	1-2, 3-4	Open	1-2
PR90	1-2	1-2	1-2, 3-4	Open	1-2
PR100	3-4	1-2	1-2, 3-4	Open	1-2
Cyrix 6x86					
P120+	1-2, 3-4	Open	1-2, 3-4	Open	3-4
P133+	Open	Open	1-2, 3-4	Open	3-4
P150+	1-2	Open	1-2, 3-4	Open	3-4
P166+	3-4	Open	1-2, 3-4	Open	3-4

CPU Core Voltage

CPU Core Voltage	JP10
3.45V	1-2
3.52V	3-4
2.5V	5-6
2.7V	7-8
2.8V	9-10
2.9V	11-12

Vio

Voltage	JP5
3.45V	1-2
3.52V	3-4

Flash ROM Type

Flash ROM	JP9
5V	1-2
12V	2-3

Super I/O Controller

Function	JP6
Enabled	1-2
Disabled	2-3

PS/2 Mouse

Function	JP4
Enabled	Closed
Disabled	Open

CMOS

Function	JP6
Normal	1-2-32
Clear CMOS	