

## ATREND ATC 5200 V1

### FULL VOLTAGE AND FSB SETTINGS

#### FSB settings SW1

FSB (MHz)	SW1-1	SW1-2	SW1-3
66	OFF	OFF	OFF
68,5	ON	ON	ON
75	OFF	ON	OFF
83,5	ON	ON	OFF
95	ON	OFF	ON
100	OFF	OFF	ON
112	OFF	ON	ON
125	ON	OFF	OFF

#### Voltage settings SW2

V core (V)	SW2-1	SW2-2	SW2-3	SW2-4
2,0	OFF	OFF	OFF	OFF
2,1	ON	OFF	OFF	OFF
2,2	OFF	ON	OFF	OFF
2,3	ON	ON	OFF	OFF
2,4	OFF	OFF	ON	OFF
2,5	ON	OFF	ON	OFF
2,6	OFF	ON	ON	OFF
2,7	ON	ON	ON	OFF
2,8	OFF	OFF	OFF	ON
2,9	ON	OFF	OFF	ON
3,0	OFF	ON	OFF	ON
3,1	ON	ON	OFF	ON
3,2	OFF	OFF	ON	ON
3,3	ON	OFF	ON	ON
3,4	OFF	ON	ON	ON
3,5	ON	ON	ON	ON