

Cobalt System board

Super IO (all IO functions)

JPA	19-21
Enabled	Open
Disabled	Closed

Parallel Port IRQ

JPA	9-11	11-13
IRQ 7	Close	Open
IRQ 5	Open	Close

Parallel Port DMA

JPA	10-12	12-14
DMA 1 ECP	Close	Open
DMA 3 ECP	Open	Close

Cache Size

JPH	1-3	2-4	3-5	4-6	7-8	9-10
128K	Close	---	---	Close	Open	Open
256K	---	Close	Close	---	Open	Close
512K	---	---	Close	Close	Close	Close

Onboard Video

JPI	3-5	5-7	9-10
Enable	Open	Close	Close
Disable	Close	Open	Open

Printer Port IRQ

JPJ	1-2	2-3
DACK1	Close	Open
DACK3	Open	Close
