 



JP2: CPU cooling fan Connector




JP4: Open (Reserved for factory)

JP7: Dual channel USB port

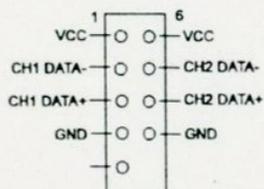


JP8: Infrared connector

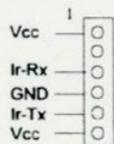

JP9: Clear CMOS data jumper
 1~2 short : Clear CMOS data
 2~3 short : Normal (default)

J12: Front Panel Connector Set

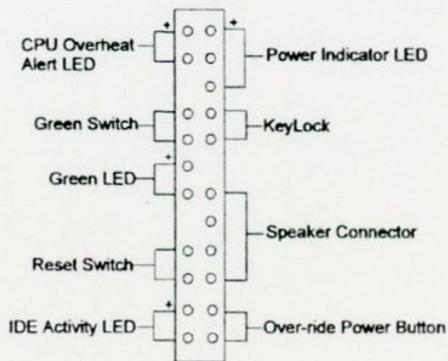

Set the CPU type via BIOS :

CPU-type		CPU Power Voltage		System freq./Freq. ratio						
		I/O Vcc	Core Vcc	MHz	Speed rate					
Intel	P54C-90	3.5	3.5	60	x1.5					
	P54C-120				x2					
	P54C-150				x2.5					
	P54C-100			66	3.5	66	x1.5			
	P54C-133						x2			
	P54C-166						x2.5			
	P54C-200						x3			
	Pentium w/MMX 166MHz						3.3	2.8	66	x2.5
	Pentium w/MMX 200MHz									x3
Pentium w/MMX 233MHz	x3.5									
Cyrilx /IBM	6x86-PR133+ @110MHz	3.5	3.5	55	x2					
	6x86-PR150+ @120MHz			60						
	6x86-PR166+ @133MHz			66						
	6x86L-PR166+ @133MHz			3.3		2.8				
AMD	K5-PR90	3.5	3.5	60	x1.5					
	K5-PR100			66						
	K5-PR120 @90MHz			60	x2					
	K5-PR133 @100MHz			66						
	K5-PR150 @105MHz			60						
	K5-PR166 @116.7MHz			66	x2.5					
	K6/PR2-200			3.3		2.9	66	x3		