


EL330-DR

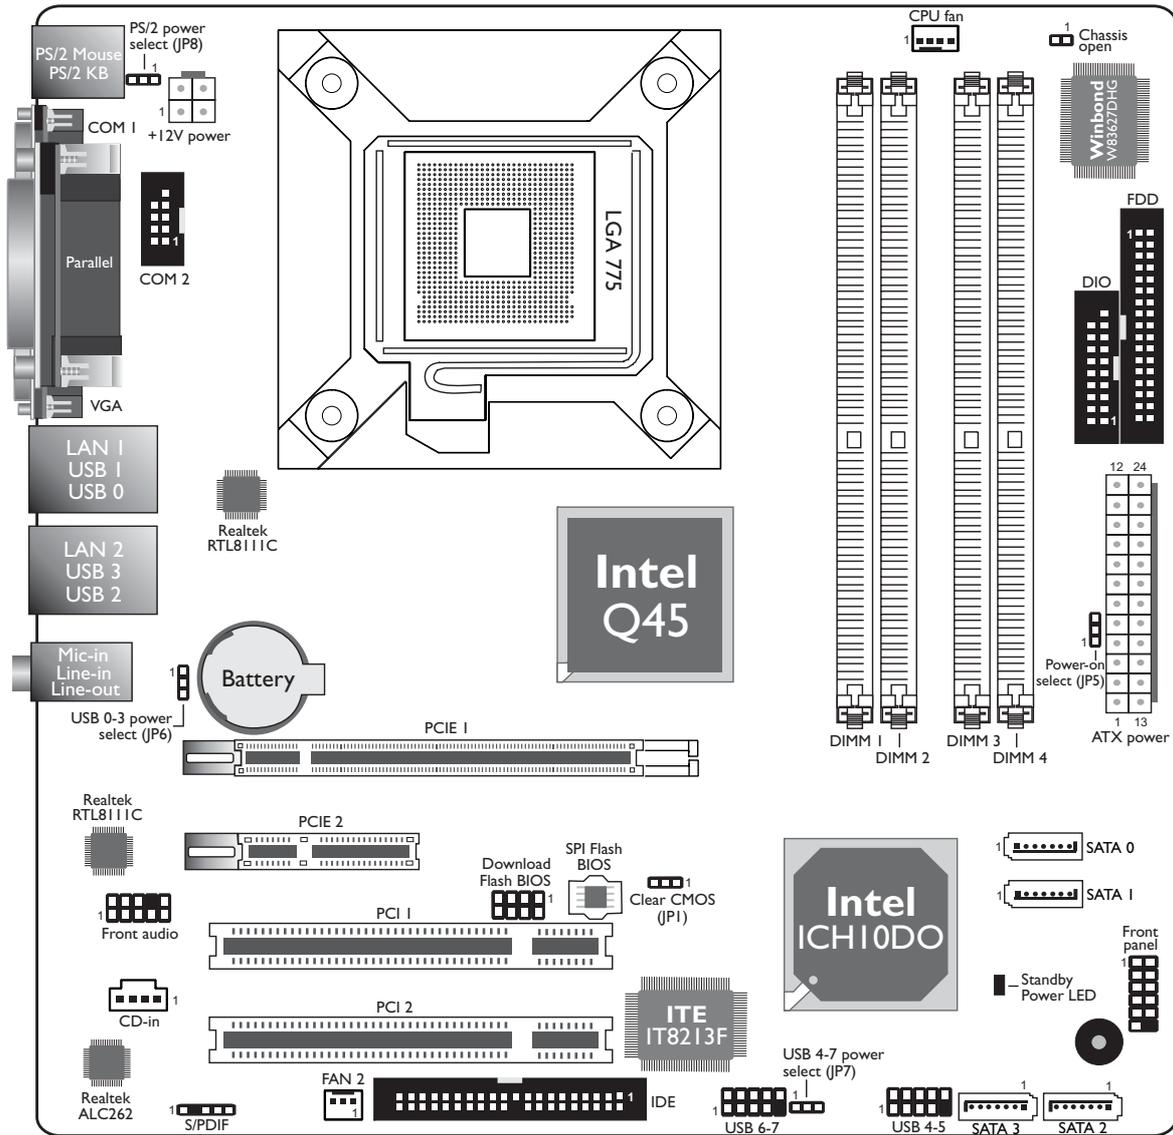

PS/2 Power	JP8	USB Power: 0-3 (JP6), 4-7 (JP7)	
5V (default)	1-2 On	5V (default)	1-2 On
5V_standby	2-3 On	5V_standby	2-3 On
Clear CMOS Data	JPI	Power-on Select	JP5
Normal (default)	1-2 On	Power-on via power button (default)	1-2 On
Clear CMOS Data	2-3 On	Power-on via AC power	2-3 On