

# answers<sup>2</sup>

Technisches Handbuch / Technical Manual

## Mainboard D1607 / D1605

Deutsch / English / Français



FUJITSU<sup>®</sup> COMPUTERS  
SIEMENS

## Sie haben ...

... technische Fragen oder Probleme?

Wenden Sie sich bitte an:

- Ihren zuständigen Vertriebspartner
- Ihre Verkaufsstelle

Aktuelle Informationen und Updates (z. B. BIOS-Update) zu unseren Mainboards finden Sie im Internet: <http://www.fujitsu-siemens.com/mainboards>

## Are there ...

... any technical problems or other questions you need clarified?

Please contact:

- your sales partner
- your sales outlet

The latest information and updates (e.g. BIOS update) on our mainboards can be found on the Internet under: <http://www.fujitsu-siemens.com/mainboards>

## Vous avez ...

...des questions techniques ou des problèmes ?

Veillez contacter :

- Votre partenaire Commercial
- Votre point de Vente

 
Les dernières informations ainsi que les updates (p.ex. BIOS-Update) par rapport à nos cartes mères sont à votre disposition sur Internet : <http://www.fujitsu-siemens.com/mainboards>



Dieses Handbuch wurde auf Recycling-Papier gedruckt.  
This manual has been printed on recycled paper.  
Ce manuel est imprimé sur du papier recyclé.  
Este manual ha sido impreso sobre papel reciclado.  
Questo manuale è stato stampato su carta da riciclaggio.  
Denna handbok är tryckt på recyclingpapper.  
Dit handboek werd op recycling-papier gedrukt.

Herausgegeben von/Published by  
Fujitsu Siemens Computers GmbH

Bestell-Nr./Order No.: **A26361-D1607-Z122-1-6319**  
Printed in the Federal Republic of Germany  
AG 0304 03/04



A26361-D1607-Z122-1-6319

# **Mainboard D1607 / D1605**

## **Technisches Handbuch Technical Manual**

**Ausgabe März 2004  
March 2004 edition**

Deutsch

English

Français



AMD, AMD Arrow logo, AMD Athlon, AMD Opteron und Kombinationen sowie 3DNow! sind Warenzeichen von Advanced Micro Devices, Inc.

HyperTransport ist ein lizenziertes Warenzeichen von HyperTransport Technology Consortium.

Microsoft, MS, MS-DOS und Windows sind eingetragene Warenzeichen der Microsoft Corporation.

PS/2 und OS/2 Warp sind eingetragene Warenzeichen von International Business Machines, Inc.

Alle weiteren genannten Warenzeichen sind Warenzeichen oder eingetragene Warenzeichen der jeweiligen Inhaber und werden als geschützt anerkannt.

Alle Rechte vorbehalten, insbesondere (auch auszugsweise) die der Übersetzung, des Nachdrucks, der Wiedergabe durch Kopieren oder ähnliche Verfahren.

Zu widerhandlungen verpflichten zu Schadenersatz.

Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder GM-Eintragung.

Liefermöglichkeiten und technische Änderungen vorbehalten.

Dieses Handbuch wurde erstellt von  
cognitas. Gesellschaft für Technik-Dokumentation mbH  
[www.cognitas.de](http://www.cognitas.de)

Copyright © Fujitsu Siemens Computers GmbH 2004

AMD, AMD Arrow logo, AMD Athlon, AMD Opteron and combinations thereof, and 3DNow! are trademarks of Advanced Micro Devices, Inc.

HyperTransport is a licensed trademark of the HyperTransport Technology Consortium.

Microsoft, MS, MS-DOS and Windows are registered trademarks of Microsoft Corporation.

PS/2 and OS/2 Warp are registered trademarks of International Business Machines, Inc.

All other trademarks referenced are trademarks or registered trademarks of their respective owners, whose protected rights are acknowledged.

All rights, including rights of translation, reproduction by printing, copying or similar methods, even of parts are reserved.

Offenders will be liable for damages.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved. Delivery subject to availability.

Right of technical modification reserved.

This manual was produced by  
cognitas. Gesellschaft für Technik-Dokumentation mbH  
[www.cognitas.de](http://www.cognitas.de)





---

# Contents

<b>Übersicht/Overview Mainboard D1607 / D1605</b> .....	<b>1</b>
<b>Mainboard D1607 / D1605</b> .....	<b>1</b>
Notational conventions.....	1
Important notes .....	2
Information about boards .....	2
List of features.....	3
Special features.....	5
Brief instructions on installing mainboard.....	7
Prior to installation .....	7
<b>Interfaces and connectors</b> .....	<b>9</b>
External ports .....	9
LAN connector.....	9
Audio ports and audio configuration.....	10
Internal ports and connectors .....	12
Hard disk connection .....	12
Audio front panel.....	12
Pin assignment of internal ports.....	13
<b>Settings with switches and jumpers</b> .....	<b>19</b>
<b>Add-on modules / Upgrading</b> .....	<b>21</b>
Replacing processor .....	21
Removing and installing processors .....	21
Upgrading main memory .....	23
Upgrading AGP screen controllers.....	24
Adding PCI cards.....	24
PCI bus interrupts - Selecting correct PCI slot.....	25
Replacing the lithium battery.....	26
BIOS update.....	27
BIOS Recovery - Recovering System BIOS.....	27
Drivers.....	28
<b>Annex</b> .....	<b>29</b>
Electrical Properties.....	29
APM and ACPI system status, energy-saving modes.....	30
Mainboard Revision and BIOS Version.....	31
<b>Error messages</b> .....	<b>32</b>
<b>Glossary</b> .....	<b>35</b>



---

# Mainboard D1607 / D1605

Your mainboard is available in different configuration levels. Depending on the configuration chosen, some of the hardware components described may not be available on your mainboard.

## Additional information

Information on the *BIOS Setup* and additional descriptions of the drivers are contained:

- in the readme files on your hard disk
- on the driver floppy disks included
- on the CD "Drivers & Utilities Collection" or "Drivers & Utilities" or "ServerStart".



The programme *Acrobat Reader* must be installed to be able to open the manuals. You will find the programme on the CD-ROM directory: `utls/acrobat`.

For more details please read the according `readme.txt` files.

## Notational conventions

The meanings of the symbols and fonts used in this manual are as follows:



indicates information which is important for your health or for preventing physical damage.



indicates additional information which is required to use the system properly.

► Text which follows this symbol describes activities that must be performed in the order shown.



This symbol indicates that you must press the Enter key.

`Text in this typeface` indicates screen outputs.

**Text in this bold typeface** indicates the entries you make via the keyboard.

*Text in italics* indicates commands or menu items.

"Quotation marks" indicate names of chapters or terms.

# Important notes

With the mainboard installed you must open the system to access the mainboard. How to dismantle and reassemble the system is described in the operating manual accompanying the system.

Connecting cables for peripherals must be adequately insulated to avoid interference.



Observe the safety notes in the operating manual of your system.

Incorrect replacement of the lithium battery may lead to a risk of explosion. It is therefore essential to observe the instructions in the "Add-on modules / Upgrading" - "Replacing the lithium battery" section.

Components can become very hot during operation. Ensure you do not touch components when making extensions to the mainboard. There is a danger of burns!



The shipped version of this board complies with the requirements of the EEC directive 89/336/EEC "Electromagnetic compatibility".

Compliance was tested in a typical PC configuration.

When installing the board, refer to the specific installation information in the manual for the receiving device.



The warranty is invalidated if the system is damaged during the installation or replacement of expansions. Information on which expansions you can use is available from your sales outlet or the customer service centre.

## Information about boards

To prevent damage to the mainboard, the components and conductors on it, please take great care when you insert or remove boards. Take great care to ensure that extension boards are slotted in straight, without damaging components or conductors on the mainboard, or any other components, for example EMI spring contacts.

Remove the plug from the mains outlet so that system and mainboard are totally disconnected from the mains voltage.

Be careful with the locking mechanisms (catches, centring pins etc.) when you replace the mainboard or components on it, for example memory modules or processors.

Never use sharp objects (screwdrivers) for leverage.



Boards with electrostatic sensitive devices (ESD) are identifiable by the label shown.

When you handle boards fitted with ESDs, you must, under all circumstances, observe the following:

- You must always discharge static build up (e.g. by touching a grounded object) before working.
- The equipment and tools you use must be free of static charges.
- Remove the power plug from the mains supply before inserting or removing boards containing ESDs.
- Always hold boards with ESDs by their edges.
- Never touch pins or conductors on boards fitted with ESDs.

## List of features

Onboard features	D1607-G/A	D1605-A
Chipset	VIA K8T800	VIA K8T800
Board size	ATX	ATX
VGA	-	-
Audio / 6-channel / S/PDIF 5.1	✓/✓/✓	✓/✓/✓
Buzzer / int. Speaker Support	✓/ -	✓/ -
LAN 1 Gbit / 100 Mbit / 10 Mbit	-/✓/✓	-/✓/✓
LAN / with Alert-on-LAN / WoL / Boot	-/ -/✓/✓	-/ -/✓/✓
SATA / ATA / RAID	✓/✓/✓	✓/✓/ -
FireWire™ / HI-SPEED USB 2.0	✓/✓	✓/✓
Fan monitoring PSU** / CPU / AUX1 / AUX2	-/✓/✓/ -	-/ -/ -
Fan control PSU** / CPU / AUX1 / AUX2	-/✓/✓/ -	-/✓/ -/ -
Temperature monitoring CPU/ONB1/ONB2/OFFB	✓/✓/ -/✓	✓/ -/ -

### Special onboard features

Silent Fan / Silent Fan LT	✓/ -	-/✓
System Guard / Silent Drives	✓/✓	-/✓
Recovery BIOS / Desk Update / Multi Boot	✓/✓/✓	✓/✓/✓
HDD Password / USB Security	-/✓	-/✓
Logo Boot / Intel On Screen Branding	✓/ -	-/ -

### Internal ports

DIMM slots (DDR 400 SDRAM, PC3200)	2	2
AGP Slot (2/4/8x, 32 bit, 66 MHz, 1.5 V)	1	1
PCI slot (32 bit, 33 MHz, 5 V and 3.3 V)	6	6
CNR Slot (Type A, AC'97 only)	-	-
Serial ATA interface (150 Mbyte/s) / ATA interface (100 Mbyte/s) / Floppy interface	2 / 2 / 1	2 / 2 / 1
S/PDIF 5,1 (digital Audio)* OUT / IN	-/1	-/ -
CD audio input / AUX audio input	1/1	-/1
Front panel Audio (9-pin for headphone, microphone)	1	1
FireWire™ * (9-Pin, Intel standard header)	1	1
USB Ports* (2.0, ~480 MB/s)	4	4

## List of features

---

<b>Internal ports (continued)</b>	<b>D1607-G/A</b>	<b>D1605-A</b>
SMBus Connector* (Case Temperature)	1	-
Cover monitoring* (Casing open)	-	-
Power Connectors ATX / ATX12V / AGP PRO	1 / 1 / -	1 / 1 / -
Serial Ports* (FIFO, 16550 compatible)	-	-
Fan Connectors PSU** / CPU / AUX1 / AUX2	- / 1 / 1 / -	- / 1 / 1 / -

### External ports

VGA	-	-
Audio Mic. In / Line in / Line out (or configurable with driver)	1 / 1 / 1	1 / 1 / 1
S/PDIF 5.1 (digital audio, cinch)* OUT / IN	1 / -	1 / -
LAN (RJ-45)	1	1
PS/2 mouse/keyboard	1 / 1	1 / 1
FireWire™ * (6-Pin, IEEE 1394 port)	1	1
USB Ports (2.0, ~480 MB/s)	4	4
Serial Ports (RS232, FIFO, 16550 compatible)	1	1
Parallel Port (EPP/ECP)	1	1

\* for use with internal devices or optional Front or Rear panel

\*\* not supported by standard power supplies

## Special features

Your mainboard is available in different configuration levels. Depending on the configuration, your mainboard is equipped with or supports the features described in the following.

### Silent Fan



A micro controller developed by Fujitsu Siemens Computers monitors and controls the fans in the PC and thus prevents any unnecessary noise annoyance. Should the processor become in spite of full turning ventilator too hot, then the processor clock rate will automatically be reduced so that the system continues to run stably. The microcontroller operates independently of the operating system and the processor. Therefore the micro controller protects your PC reliably against overheating and loss of data or even damage of the processor.

In addition, the microcontroller offers monitoring of, for example, system voltages (12 V, 5 V, CMOS), opening of the case and a watchdog function.

### Silent Fan LT



A controller regulates the processor fan in the PC and thus prevents unnecessary noise pollution. The controller operates independently of the operating system and the processor.

### SystemGuard



With *SystemGuard* the function of the onboard Silent Fan Controller is displayed. *SystemGuard* indicates temperature, rotational speed of the fan and voltages, which are measured by the Silent Fan Controller. Moreover the software offers various setting options to optimise the noise level. *SystemGuard* is a freeware-tool, which is available on the internet.

### Silent Drives



After the fans, hard disks and optical drives (CD-ROM, CD-RW, DVD etc.) are one of the greatest sources of noise in a PC and can be switched into a quieter mode via the BIOS. Together with the fan control via *Silent Fan* on our Premium mainboards, this results in an extremely quiet PC.

### Recovery BIOS



*Recovery BIOS* permits the recovery of the BIOS as often as desired following destruction of the BIOS content due to an incomplete flash process.

### DeskUpdate



*DeskUpdate* enables simple, automatic driver installation. The function is available both on the OEM CD "Drivers & Utilities" and on the Internet.

### Multi Boot



The BIOS of the Fujitsu Siemens Computers mainboards enables booting from all types mass storage devices. In addition to IDE hard disks, this also includes optical drives, such as CD-ROM, DVD and external drives that can be connected to USB or FireWire.

### USB Security



*USB Security* is a BIOS function that offers protection against unauthorised access regardless of the operating system used. After the feature has been activated with a Fujitsu Siemens Memorybird, the system can only be started when this Memorybird is connected to one of the available USB ports.

## Brief instructions on installing mainboard

If you have purchased a separate mainboard, you can install it in your system in accordance with the following brief instructions.

The activities described here assume a basic knowledge of PCs and cannot be carried out by a layperson. If you are not sure whether you have the necessary specialised knowledge, then leave this work to an expert.


The illustrations of the system show examples of possible cases.

### Prior to installation

- ▶ Please take note of the safety information in the "Important notes" chapter.
- ▶ Check whether the processor, memory modules and power supply are suitable for this mainboard:
  - processor (see "Replacing processor" chapter).
  - memory modules (see "Upgrading main memory" chapter).
  - power supply (see "Electrical Properties" chapter).
- ▶ Make sure the current requirement of the fans (processor, case) does not exceed the loadability of the fan connections (see chapter entitled "Electrical Properties").
- ▶ First only install the components absolutely necessary (graphics card, processor and heat sink, one memory module) and only connect the required connections (power supply unit, case connections such as ATX on/off switch, hard disk or floppy disk drive). You should not install additional cards and devices until this minimum configuration successfully boots (see chapter entitled "Add-on modules / Upgrading").

### Installation


- ▶ Equip the mainboard with the processor, heat sink and memory modules before installation if possible. Further information can be found in "Replacing processor" chapter.

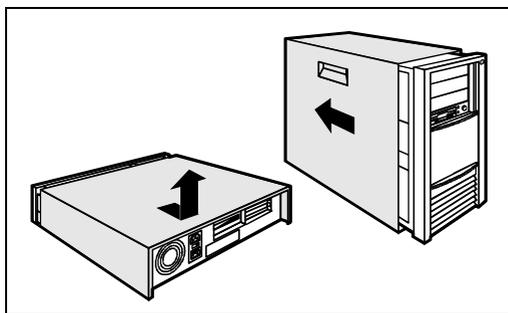

- ▶ Open the casing as described in the operating manual.

## Brief instructions on installing mainboard

---

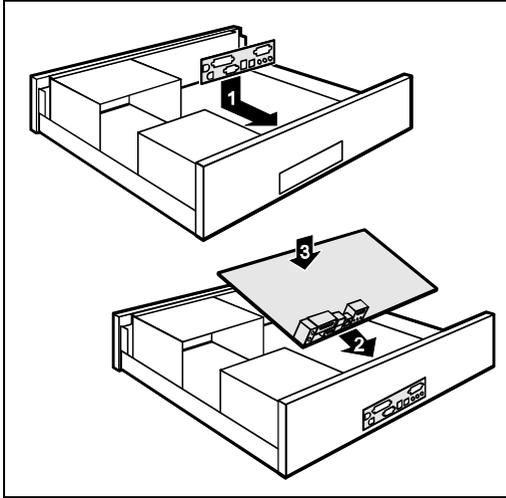

- ▶ Should no suitable connection field be provided in the case, then you must install the connection field (1) provided.

Ensure the plate is aligned properly so that the connections are suitable for the mainboard later.

- ▶ Set the mainboard on the edge on which the connection field is located (2) and then insert the board in the case (3).

Make sure that spacers in the housing are only mounted at points at which there are mounting holes in the mainboard.

- ▶ Fasten the mainboard with the screws.

- ▶ Connect the plugs for the power supply, control panel and drives to the corresponding connections on the mainboard.

## Driver installation

- ▶ Install the drivers for the chipset. You may find the driver on the "Drivers & Utilities" CD. Please refer to chapter "Drivers" for a description of installing drivers.

# Interfaces and connectors

The positions of the interfaces and connectors are shown on page "Cover".

The components and connectors marked are not necessarily present on the mainboard.

## External ports

The positions of the external ports are shown on page "Cover".

 
	PS/2 keyboard port, purple		PS/2 mouse port, green
	Serial interface, turquoise		Parallel port/Printer, burgundy
	LAN connector		USB - Universal Serial Bus, black
	Audio output (Line out), light green or Front*		Microphone jack, pink or Surround*
	Audio input (Line in), light blue or Centre / Low*		1394 FireWire™, grey
	digital 6-channel audio output, orange		

\* Switching over to 6-channel audio is carried out using a driver.

## LAN connector

This mainboard has an ADMtek AN983B LAN controller. The LAN controller is equipped with a 2 KB transmission and receiving buffer (FIFO) and supports WOL function through Magic Packet™.


The LAN RJ45 connector has two LEDs (light emitting diodes).



LED 1	lights green: flashes green:	A connection exists (e.g. to a hub). Activity
LED 2	glows yellow: off:	100 Mbit/s 10 Mbit/s

# Audio ports and audio configuration

## Audio ports

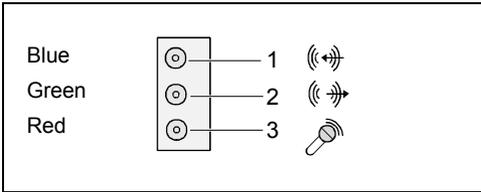

### Connecting loudspeakers

The mainboard supports 2, 4 or 6-channel audio mode. For surround sound it is possible to connect up to 6 analogue speakers and use the digital S/PDIF output.

### Analogue 2-channel audio output

With the 2-channel configuration the functions Line-In, Line-Out and MIC are available. MIC can be configured for operation at the front or rear of the PC (see "Audio configuration" section).

1 = Stereo L/R In

2 = Stereo L/R Out

3 = MIC In or no function (see the "Audio configuration" section)

### Analogue 2-channel audio output with headphones

With the 2-channel configuration with headphones the functions Line-In, Headphones-Out and MIC are available. MIC can be configured for operation at the front or rear of the PC (see "Audio configuration" section).

1 = Stereo L/R In

2 = Headphones Out

3 = MIC In or no function (see the "Audio configuration" section)

### Analogue 4-channel audio output

1 = Surround L/R Out

2 = Stereo L/R Out

3 = MIC

### Analogue 6-channel audio output

The centre and subwoofer channel can be interchanged.

1 = Surround L/R Out

2 = Stereo L/R Out

3 = centre and subwoofer channel



Depending on driver, software or hardware version and operating system the functions may differ from this presentation. If necessary, further information is provided in the respective help system as well as in the "Audio configuration" section.

## Audio configuration

The mainboard supports 2, 4 or 6-channel audio mode. For surround sound it is possible to connect up to 6 analogue speakers and use the digital S/PDIF output (see "Audio ports" section).

Depending on the operating system used, the audio driver and additionally installed software, you can configure the audio properties.



MIC can be configured for operation at the front or rear of the PC, if the case has a properly connected front MIC-In (see the "Pin assignment of internal ports" section, in the "Audio front panel" chapter). You can switch in the *BIOS Setup* or by using the software *Sigmatel JackSharing*, which is either automatically installed or may be found on the CD "Drivers & Utilities" supplied with your mainboard.

### Drivers

A corresponding driver must be installed for the 2, 4 or 6-channel audio mode. If the drive is not installed yet, proceed as described in the chapter "Add-on modules / Upgrading", in the section "Drivers".

### Software

To configure MIC-In and fully utilize all audio-functions of your Mainboard, it may be necessary to install additional software. If the required software was not preinstalled, it can be found on the supplied "Drivers & Utilities" CD.

### BIOS

In a current BIOS MIC-In can be configured for operation at the front or rear of the PC Additional information is contained in the "BIOS Setup" manual.

# Internal ports and connectors

The positions of the internal ports and connectors are shown on the Cover. Additional information on some ports is also provided here.

## Hard disk connection

An ultra ATA/66, ultra ATA/100 or ultra ATA/133 hard disk must be connected with a cable especially designed for the ultra ATA/66, ultra ATA/100 or ultra ATA/133 mode.

- ▶ Connect the end of the cable marked with blue to the mainboard.

A serial ATA/150 hard disk must be connected with a serial ATA cable.

- ▶ Connect the cable to the hard disk and to the connector on the mainboard.

If you have connected one or two hard disks to a serial ATA (one hard disk is possible per serial ATA connection), you must configure the respective settings in the *BIOS Setup* (further information you can find in the *BIOS Setup* manual).

## Audio front panel

If you want to use the internal connection for the audio front panel for the front side of the system, then proceed as follows:

- ▶ Remove all plug-in jumpers from the audio front panel connection.
- ▶ Connect the cable for the audio front panel.



If you connect audio devices on both the front and the back of the system, you can only use the connections Line out and Microphone once each.

If you have connected audio devices to both Line out connections, only the connection on the front of the system is active.

If you have connected audio devices to both Microphone connections, only the connection on the back of the system is active.

## Pin assignment of internal ports


The pin assignment of some internal connections is shown in English in the following.



Some of the following connectors may be optional!


### Front panel

Watch the poling of the LEDs. The positive pole of the connection cables is often indicated with a coloured wire.

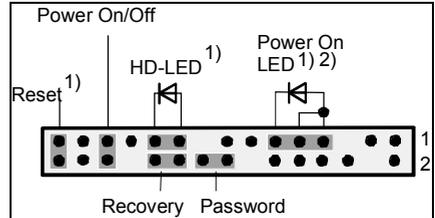


Connection	Note
Reset	
Power On/Off	
HD LED	
Power On LED	Indicates the system state APM or ACPI (see annex, "APM and ACPI system status, energy-saving modes" section).
Password	see "Settings with switches and jumpers" chapter
Recovery	see "Settings with switches and jumpers" chapter

## IDE interface

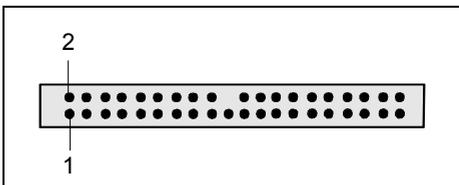


Pin	Signal	Pin	Signal
1	Reset drive (low asserted)	21	DRQ (high asserted)
2	GND	22	GND
3	Data 7 (high asserted)	23	I/O write (low asserted)
4	Data 8 (high asserted)	24	GND
5	Data 6 (high asserted)	25	I/O read (low asserted)
6	Data 9 (high asserted)	26	GND
7	Data 5 (high asserted)	27	I/O ready (high asserted)
8	Data 10 (high asserted)	28	Cable select
9	Data 4 (high asserted)	29	DAK (low asserted)
10	Data 11 (high asserted)	30	GND
11	Data 3 (high asserted)	31	IRQ (high asserted)
12	Data 12 (high asserted)	32	not connected
13	Data 2 (high asserted)	33	ADR 1 (high asserted)
14	Data 13 (high asserted)	34	ATA 66 Detect (low asserted)
15	Data 1 (high asserted)	35	ADR 0 (high asserted)
16	Data 14 (high asserted)	36	ADR 2 (high asserted)
17	Data 0 (high asserted)	37	CS 1 (low asserted)
18	Data 15 (high asserted)	38	CS 3 (low asserted)
19	GND	39	IDE-LED (low asserted)
20	Key	40	GND

## Serial ATA (internal)

 


Pin	Signal	Pin	Signal
1	GND	2	Transmit data positive
3	Transmit data negative	4	GND
5	Receive data negative	6	Receive data positive
7	GND	8	Key

## Floppy interface

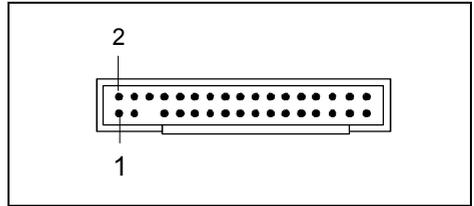


Pin	Signal	Pin	Signal
1	GND	18	Step DIR (low asserted)
2	FDHDIN (low asserted)	19	GND
3	GND	20	Step Pulse (low asserted)
4	not connected	21	GND
5	Key	22	Write Data (low asserted)
6	not connected	23	GND
7	GND	24	Write Enable (low asserted)
8	Index (low asserted)	25	GND
9	GND	26	Track 0 (low asserted)
10	Motor A Enable (low asserted)	27	GND
11	GND	28	Write Protect (low asserted)
12	Drive B Select (low asserted)	29	GND
13	GND	30	Read Data (low asserted)
14	Drive A Select (low asserted)	31	GND
15	GND	32	Side 1 Select (low asserted)
16	Motor B Enable (low asserted)	33	GND
17	GND	34	Disk Change (low asserted)

## Audio S/PDIF In

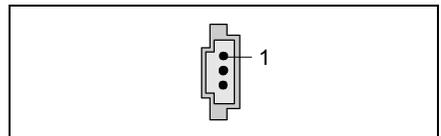


Pin	Signal
1	VCC
2	SPDIF in
3	GND

### AUX audio in

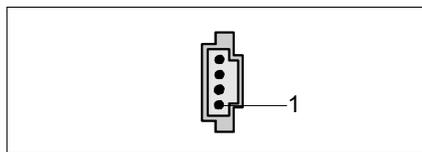


Pin	Signal
1	Left AUX audio input
2	Analogue GND
3	Analogue GND
4	Right AUX audio input

### CD-ROM audio in

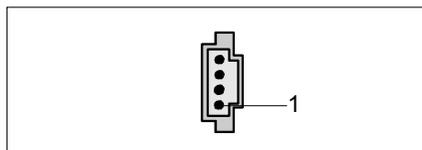

Pin	Signal
1	Left CD audio input
2	CD GND
3	CD GND
4	Right CD audio input


### Audio front panel

 

Pin	Signal	Pin	Signal
1	Micro input	2	Analogue GND
3	Micro bias	4	Analogue VCC
5	Right line output	6	Right line return
7	not connected	8	Key
9	Left line output	10	Left line return

If the audio front panel is not used, you must plug jumpers on pin pairs 5/6 and 9/10.


**FireWire / IEEE 1394**

 

Pin	Signal	Pin	Signal
1	TPA+	2	TPA-
3	GND	4	GND
5	TPB+	6	TPB-
7	+12 V	8	+12 V
9	Key	10	GND

**USB  
- dual channel**


(internal or external via special cable)

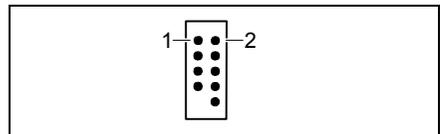

Pin	Signal	Pin	Signal
1	VCC C	2	VCC D
3	Data negative C	4	Data negative D
5	Data positive C	6	Data positive D
7	GND	8	GND
9	Key	10	not connected


**Fan 1 CPU  
Fan 2 AUX**

 (processor fan - only for 3 pin fans)




Pin	Signal
1	GND
2	Controlled Fan voltage (0 V, +6 V...+12 V, max. 1 A) or fix Fan voltage (+12 V, max. 1 A)
3	Fan sense

**Power supply ATX**

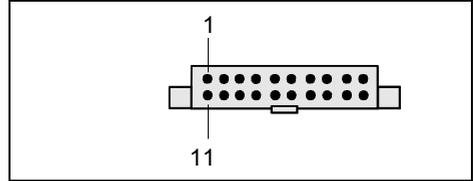


Pin	Signal	Pin	Signal
1	+3.3V(P2V2P)	11	+3.3V(P2V2P)
2	+3.3V(P2V2P)	12	-12V (P12VN)
3	GND	13	GND
4	+5V (VCC)	14	PS on (low asserted)
5	GND	15	GND
6	+5V (VCC)	16	GND
7	GND	17	GND
8	Powergood (high asserted)	18	-5V (5PVN)
9	+5V Auxiliary (VCC Aux)	19	+5V (VCC)
10	+12V (P12VP)	20	+5V (VCC)

**Power supply ATX12 V**

 

Pin	Signal	Pin	Signal
1	GND	2	GND
3	+12 V	4	+12 V

**SMB for Temperature sensor**

 


Pin	Signal
1	P3V3P_DUAL
2	SMB_PIC_CLK_H
3	SMB_PIC_DATA_H
4	GND

# Settings with switches and jumpers

 
Your mainboard is optionally equipped with switches or jumpers. The positions of the switches or jumpers are shown on page "Cover".

## Setting with switches




Switch 1 = Skipping system and BIOS Setup password  
Switch 2 = System BIOS recovery  
Switch 3 = must be set to *off*  
Switch 4 = must be set to *off*

## Setting with jumpers

 

Pin pair 1 inserted =  
Skipping system and BIOS Setup password  
Pin pair 2 inserted =  
System BIOS recovery  
Any other setting =  
State of supply; jumper has no function

## connection panel

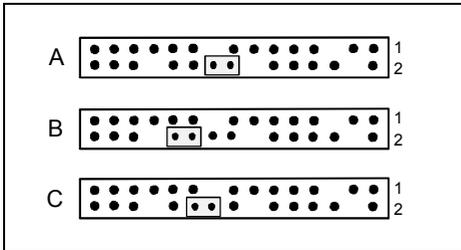

Pin pair A inserted =  
Skipping system and BIOS Setup password  
Pin pair B inserted =  
System BIOS recovery  
Pin pair C inserted =  
factory setting



Please pay attention on the exact position of the pin pairs!

---

### **Skipping system and BIOS Setup password - switch 1 / pin pair 1 / pin pair A**

Switch 1 / pin pair 1 / pin pair A enables skipping the system and BIOS Setup password.

*On / inserted* System and BIOS Setup password are skipped when the device is switched on and may be changed.

*Off / not inserted* System and BIOS Setup password must be entered when the device is switched on.

### **Recovering System BIOS - switch 2 / pin pair 2/ pin pair B**

Switch 2 / pin pair 2 / pin pair B enables recovery of the old system BIOS after an attempt to update has failed. To restore the old BIOS you need a Flash BIOS Diskette (see "BIOS update" chapter).

*On / inserted* The System BIOS executes from floppy drive A: and the inserted "Flash-BIOS-Diskette" restores the System BIOS on the mainboard.

*Off / not inserted* Normal operation (default setting).

### **Reserved - switch 3 and switch 4 (if present)**

Switch 3 and 4 are reserved. The position of the switch doesn't matter.

# Add-on modules / Upgrading



Exit energy-saving mode, switch off the system and remove the power plug from the mains outlet, before carrying out any of the procedures described in this chapter! Even when you have switched off the device, parts (e.g. memory modules, AGP and PCI extension boards) are still supplied with power.

## Replacing processor


### Technical data

- AMD Athlon™ 64 with HyperTransport™ Link (1600 MT/s) in the mPGA754 design.

A current list of the processors supported by this mainboard is available on the Internet at: [www.fujitsu-siemens.com/mainboards](http://www.fujitsu-siemens.com/mainboards).

## Removing and installing processors

- ▶ Remove the fan that there may be and the heat sink.

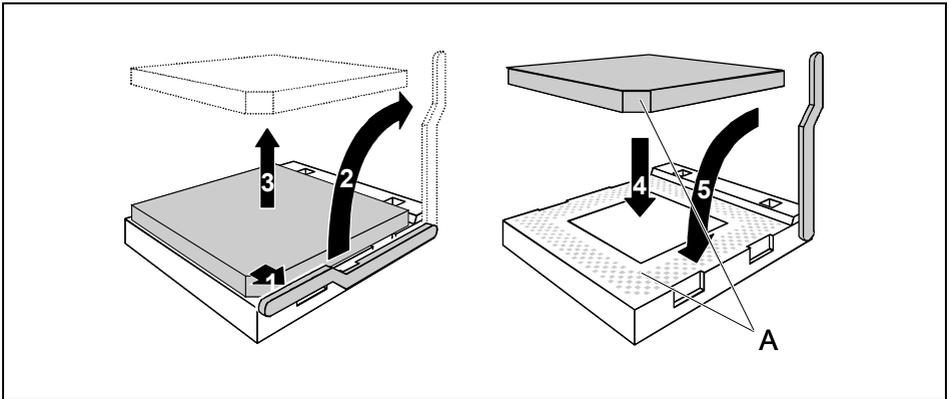

- ▶ Pull the lever in the direction of the arrow (1) and lift it as far as it will go (2).
- ▶ Remove the old processor from the socket (3).
- ▶ Insert the new processor in the socket so that the angled corner of the processor matches the coding on the socket (A) with regard to the position (4).



The angled corner of the processor can also be at a different location than shown in the illustration.


- ▶ Push the lever back down until it clicks into place (5).

### Mounting heat sink

Be sure to use heat conducting material between the processor and the heat sink. If a heat conducting pad (rubber-like foil) is already applied to the heat sink, then use it. Otherwise you must apply a very thin layer of heat conducting paste.

Heat conducting pads can only be used once. If you remove the heat sink, you must clean it and apply new heat conducting paste before you remount it.

Please note that, depending on the heat sink used, different heat sink mounts are required on the mainboard.

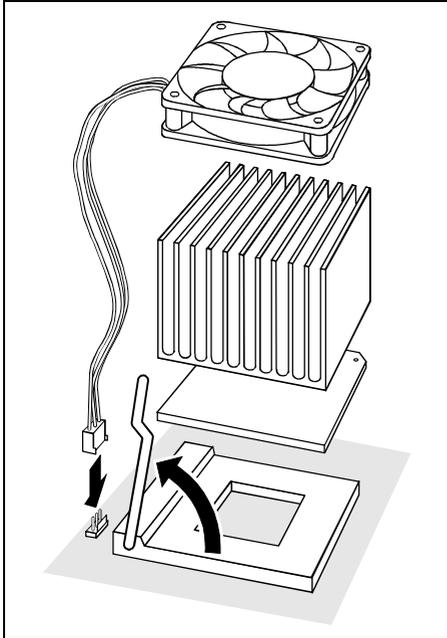

Schematic illustration

- ▶ Depending on the configuration variant, you must pull a protective foil off the heat sink or coat the heat sink with heat conducting paste before fitting it.

Depending on the processor variant, clips may also be supplied for mounting the heat sink that fix it in place.

- ▶ When you have mounted the optional fan, connect the fan plug to the corresponding connection on the mainboard.

# Upgrading main memory

## Technical data

Technology: DDR 333 or DDR 400 unbuffered DIMM modules  
184-Pin; 2.5 V; 64 Bit, with or without ECC

Size: 128 Mbyte up to 2 Gbyte

Granularity: 128, 256, 512 or 1024 Mbyte for one socket

A current list of the memory modules recommended for this mainboard is available on the Internet at: [www.fujitsu-siemens.com/mainboards](http://www.fujitsu-siemens.com/mainboards).

At least one memory module must be installed.


Memory modules with different memory capacities can be combined.



You may only use unbuffered 2,5 V memory modules. Buffered memory modules are not supported. ECC is supported.

DDR-DRAM memory modules must meet the PC2700 or PC3200 specification.

## Installing a memory module

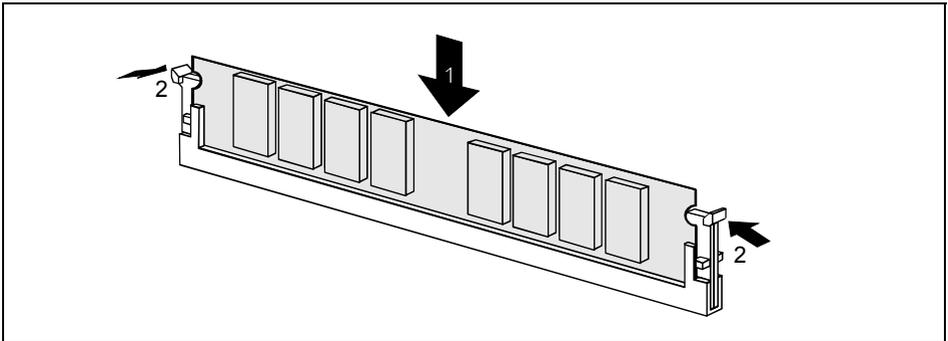


- ▶ Push the holders on each side of the memory slot outwards.
- ▶ Insert the memory module into the location (1).
- ▶ At the same time flip the lateral holders upwards until the memory module snaps in place (2).

## Upgrading AGP screen controllers

---

### Removing a memory module

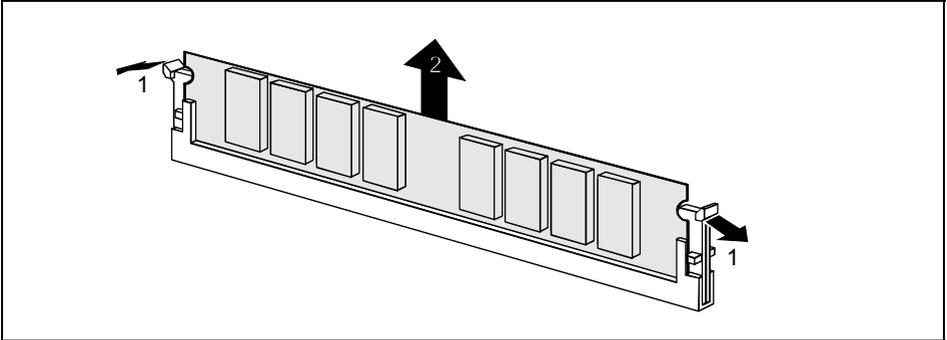

- ▶ Push the clips on the right and left of the memory slot outward (1).
- ▶ Pull the memory module out of the memory slot (2).

## Upgrading AGP screen controllers

### Technical data:

The AGP slot supports the modes 2x/4x/8x with 32 bits and 66 MHz. Only 1.5 V AGP graphics cards are supported.



Some older 3.3 V AGP graphics cards are coded like 1.5 V AGP graphics cards. The installation of such 3.3 V AGP graphics cards can cause serious damage to the mainboard and the AGP graphics cards.

## Adding PCI cards

### Technical data:

32 bit / 33 MHz PCI slots  
5 V and 3.3 V supply voltage  
3.3 V auxiliary voltage

## PCI bus interrupts - Selecting correct PCI slot



To achieve optimum stability, performance and compatibility, avoid the multiple use of ISA IRQs or PCI IRQ Lines (IRQ sharing). Should IRQ sharing be unavoidable, then all involved devices and their drivers must support IRQ sharing.

PCI IRQ Lines connect AGP slots, PCI slots and onboard components to the interrupt controller. PCI IRQ Lines are permanently wired on the mainboard.

Which ISA IRQs are assigned to the PCI IRQ Lines is normally automatically specified by the BIOS (see description in "BIOS Setup").

### Monofunctional expansions cards:

Standard AGP and PCI expansion cards require a maximum of one interrupt, which is called the PCI interrupt INT A. Expansion cards that do not require an interrupt can be installed in any desired slot.

### Multifunctional expansion cards or expansion cards with integrated PCI-PCI bridge:

These expansion cards require up to four PCI interrupts: INT A, INT B, INT C, INT D. How many and which of these interrupts are used is specified in the documentation provided with the card.

The assignment of the PCI interrupts to the PCI IRQ Lines is shown in the following table:

PCI INT LINE	Controller or slot INT															
	On board controller										Mechanical slot					
	USB 1.1				USB 2.0	SMBus	SATA	AC97		LAN	Fire Wire	AGP	PCI Slot			
	1	2	3	4				Audio	Modem				1	2	3	4
1 (A)	A					A					A				D	C
2 (B)		A			A						B	A				D
3 (C)			A	A			A	A				B	A			
4 (D)					A				A			C	B	A		
5 (E)												D	C	B	A	
6 (F)													D	C	B	A
7 (G)										A				D	C	B
8 (H)														D	C	B

Use the first PCI slots that have a single PCI IRQ Line (no IRQ sharing). If you must use another PCI slot with IRQ sharing, check whether the expansion card properly supports IRQ sharing with the other devices on this PCI IRQ Line. The drivers of all cards and components on this PCI IRQ Line must also support IRQ sharing.

### Replacing the lithium battery

In order to permanently save the system information, a lithium battery is installed to provide the CMOS-memory with a current. A corresponding error message notifies the user when the charge is too low or the battery is empty. The lithium battery must then be replaced.




Incorrect replacement of the lithium battery may lead to a risk of explosion!

The lithium battery may be replaced only with an identical battery or with a type recommended by the manufacturer.

Do not throw lithium batteries into the household waste. They must be disposed of in accordance with local regulations concerning special waste.

Make sure that you insert the battery the right way round. The plus pole must be on the top!

The lithium battery holder exists in different designs that function in the same way.

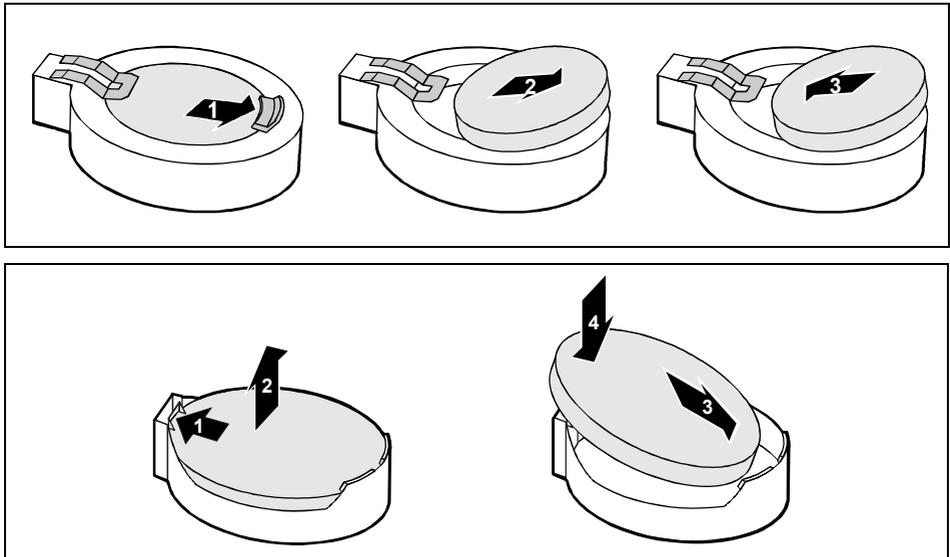

- ▶ Press the locking lug in the direction of the arrow; the battery jumps somewhat out of the holder (1).
- ▶ Remove the battery (2).
- ▶ Push the new lithium battery of the identical type into the holder (3) and press it downward until it engages (4).

# BIOS update

## When should a BIOS update be carried out?

Fujitsu Siemens Computers makes new BIOS versions available to ensure compatibility to new operating systems, new software or new hardware. In addition, new BIOS functions can also be integrated.

A BIOS update should always also be carried out when a problem exists that cannot be solved with new drivers or new software.

## Where can I obtain BIOS updates?

The BIOS updates are available on the Internet at [www.fujitsu-siemens.de/mainboards](http://www.fujitsu-siemens.de/mainboards).

## How does a BIOS update work?

You have two ways of doing this:

### 1. BIOS update under DOS with bootable BIOS update floppy disk - brief description

- ▶ Download the update file from our website to your PC.
- ▶ Insert an empty floppy disk (1.44 MB).
- ▶ Run the update file (e.g. *1607103.EXE*).
- ▶ A bootable update floppy disk is created. Leave this floppy disk in the drive.
- ▶ Restart the PC.
- ▶ Follow the instructions on screen.



Detailed information on the BIOS update under DOS is provided in the manual on "BIOS Setup" ("Drivers & Utilities" CD).

### 2. BIOS update under Windows with DeskFlash utility

A BIOS update can also be carried out directly under Windows with the *DeskFlash* utility. *DeskFlash* is contained on the "Drivers & Utilities" CD (under *DeskUpdate*).

# BIOS Recovery - Recovering System BIOS



All BIOS settings are reset to the default values.

- ▶ Open the casing as described in the operating manual.
- ▶ Set the switch for "Restore system BIOS" to *ON*.
- ▶ Close the casing as described in the operating manual.
- ▶ Insert a BIOS update floppy disk and start the PC.
- ▶ Note the signals issued from the loudspeaker. You have successfully restored the BIOS if you hear the signal sequence "short-short- long- long- long" and the diskette access indicator is dark. This can take a few minutes.
- ▶ Open the casing as described in the operating manual.

- ▶ Set the switch for "Restore system BIOS" to *OFF*.
- ▶ Close the casing as described in the operating manual.
- ▶ Remove the floppy disk from the drive.
- ▶ Start the PC and invoke *BIOS Setup*.
- ▶ Select the menu item *Reset Configuration* in the menu *Advanced* and change the setting to *Yes*.
- ▶ Save the change and terminate *BIOS Setup*.

The BIOS recovery has now been completed. The system restarts.



Detailed information on the BIOS recovery is contained in the manual "BIOS Setup" ("Drivers & Utilities" CD).

## Drivers

Only when no drivers are installed on your system, or you want to update these, proceed as follows:

- ▶ Insert the CD "Drivers & Utilities Collection" into the CD-ROM drive.
- ▶ If the CD does not start automatically, run the *START.EXE* programme in the main directory of the CD.
- ▶ Select *DeskUpdate - Fully automatic installation*.
- ▶ Follow the instructions on screen.

# Annex

## Electrical Properties

### Loadability for connections and fuses



Make sure that the connected devices do not overload the connections.

Fuse no.	Fuse	Connection	Maximum loadability
-	-	Fan1, Fan2	1000 mA each
1	750 mA	Keyboard Mouse VGA port	Not specified Not specified Minimum 50 mA
2	2000 mA	USB port A USB port B USB port C USB port D	500 mA
3	2000 mA	USB port E USB port F USB port G USB port H	500 mA

The fuses on this mainboard can be used several times (polyfuses). Shortly after the error state has been eliminated, the fuses reset to the original state.

### Mainboard current requirement (TBD)

You require a Pentium4 power supply nit as per the ATX12V specification for this mainboard. If you do not have a PC from Fujitsu Siemens Computers, make sure that the power supply unit provides the required amperages.

Resource	Voltage	Maximum difference	Current typ. (max.)*
ATX12V power supply	+12 V	±5 %	7,8 A (12,0 A)
ATX12V power supply	-12 V	±10 %	0,05 A
ATX12V power supply	+5,0 V	±5 %	1,1 A (19,5 A)
ATX12V power supply	+3,3 V	±5 %	4 A
Standby voltage of power supply unit	+5.0 V SB	±5 %	2 A

The specifications apply to the onboard components and represent the least favourable case. In addition, at least 350 mA is required for PCI on 3.3 V, and 500 mA per connected device for USB on 5 V.

\* The values in clamps are the maximal values. The values before the clamps are the typical values.

## APM and ACPI system status, energy-saving modes

System status	ACPI Status*		APM Status	Power LED	Power consumption	Wake-up time
Normal operation	G0	S0	On	On	Normal	
Simple energy-saving mode	G1	S1	Standby	flashing	Almost like normal	Almost immediately
Maximum energy-saving mode ** "Save to DRAM"		S3			RAM, wake-up components	approx. 5 s
Maximum energy-saving mode ** "Save To Disk"		S4		Off	Wake-up components	approx. 20 s
"Soft Off"		G2		S5	Soft Off	Nearly zero
Mechanically Off	G3		Off		Zero	Full boot time

\* G = Global status; S = System status

\*\* The power supply unit must provide sufficiently loadable 5 V standby voltage.


To use the WOL functionality the power supply must provide a 5 V auxiliary voltage (5V SB) of at least 1 A.

## Mainboard Revision and BIOS Version

The compatibility, e.g. with new processors, can be independent of the BIOS version or the revision status of the mainboard used. The CPU and BIOS compatibility lists are available on the Internet at [www.fujitsu-siemens.de/mainboards](http://www.fujitsu-siemens.de/mainboards).

### Mainboard Revision

The revision status of the mainboard exactly identifies which mainboard you have. It is indicated on a sticker on the edge of the mainboard:

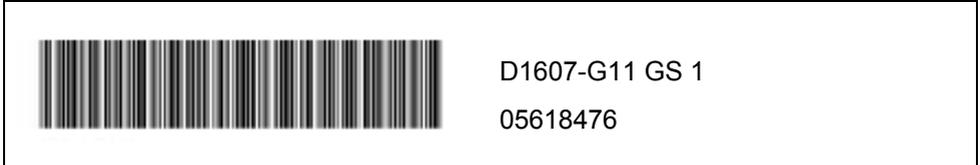

Example Mainboard-Revision

### BIOS version

The BIOS version can be displayed in the *BIOS Setup*.

- ▶ Press **F2** during booting to open the *BIOS Setup*.
- ▶ Press **F1**.

The BIOS version is specified on the displayed information page under the entry *BIOS Release*.

---

# Error messages

This chapter contains error messages generated by the mainboard.

Available CPUs do not support the same bus frequency - System halted!  
Memory type mixing detected  
Non Fujitsu Siemens Memory Module detected - Warranty void  
There are more than 32 RDRAM devices in the system

Check whether the system configuration has changed. If necessary, correct the settings.

Check date and time settings

The system date and time are invalid. Set the current date and time in the *Main* menu of the *BIOS Setup*.

CPU ID 0x failed

Switch the server off and on again. If the message is still displayed, go into the *BIOS setup* and set the corresponding processor to *Disabled* in the *Server - CPU Status* menu; please contact your sales outlet or customer service centre.

CPU mismatch detected

You have replaced the processor or changed the frequency setting. As a result, the characteristic data of the processor have changed. Confirm this change by running the *BIOS Setup* and exiting it again.

Diskette drive A error

Diskette drive B error

Check the entry for the diskette drive in the *Main* menu of the *BIOS Setup*. Check the connections to the diskette drive.

DMA test failed

EISA CMOS not writable

Extended RAM Failed at offset: nnnn

Extended RAM Failed at address line: nnnn

Failing Bits: nnnn

Fail-Safe Timer NMI failed

Multiple-bit ECC error occurred

Memory decreased in size

Memory size found by POST differed from EISA CMOS

Single-bit ECC error occurred

Software NMI failed

System memory exceeds the CPU's caching limit

System RAM Failed at offset: nnnn

Shadow RAM Failed at offset: nnnn

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

Failure Fixed Disk 0

Failure Fixed Disk 1

Fixed Disk Controller Failure

Check the entry for the hard disk drive in the *Main* menu and the entry for the IDE drive controller in the *Advanced - Peripheral Configuration* menu of the *BIOS Setup*. Check the hard disk drive's connections and jumpers.

Incorrect Drive A - run SETUP  
Incorrect Drive B - run SETUP

Correct the entry for the diskette drive in the *Main* menu of the *BIOS Setup*.

Invalid NVRAM media type

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

Invalid System Configuration Data

In the *Advanced* menu of the *BIOS Setup* set the entry *Reset Configuration Data* to *Yes*.

Invalid System Configuration Data - run configuration utility  
Press F1 to resume, F2 to Setup

This error message may be displayed if the machine was switched off during system start-up.

Call *BIOS Setup* and switch to the *Advanced* menu. Select the menu item *Reset Configuration Data* and change the setting to *Yes*. Save the change and terminate *BIOS Setup*. Reboot the device.

Keyboard controller error

Connect another keyboard or another mouse. If the message is still displayed, please contact your sales outlet or customer service centre.

Keyboard error

Check that the keyboard is connected properly.

Keyboard error nn  
nn Stuck Key

Release the key on the keyboard (*nn* is the hexadecimal code for the key).

Missing or invalid NVRAM token

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

Monitor type does not match CMOS - RUN SETUP

Correct the entry for the monitor type in the *Main* menu of the *BIOS Setup*.

On Board PCI VGA not configured for Bus Master

In the *BIOS Setup*, in the *Advanced* menu, submenu *PCI Configuration*, set the *Shared PCI Master Assignment* entry to *VGA*.

One or more RDRAM devices are not used  
One or more RDRAM devices have bad architecture/timing  
One or more RDRAM devices are disabled

Contact your system administrator or contact our customer service centre.

Operating system not found

Check the entries for the hard disk drive and the floppy disk drive in the *Main* menu and the entries for *Boot Sequence* submenu of the *BIOS Setup*.

Parity Check 1  
Parity Check 2

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

## Error messages

---

Previous boot incomplete - Default configuration used

By pressing function key **[F2]** you can check and correct the settings in *BIOS Setup*. By pressing function key **[F1]** the system starts with incomplete system configuration. If the message is still displayed, please contact your sales outlet or customer service centre.

Real time clock error

Call the *BIOS Setup* and enter the correct time in the *Main* menu. If the message is still displayed, please contact your sales outlet or customer service centre.

Service Processor not properly installed

The server management controller has not been correctly installed. If the message is still displayed, please contact your sales outlet or customer service centre.

Storage Extension Group = xy

Configuration error, x Storage Extensions(s) found, configured are y SE(s).

Device List: k1, k2 ...

The specified number of storage expansion units (SEs) in the *BIOS Setup* menu *Server - Storage Extensions - Number of connected SE* is incorrect. Check how many SEs within the group are connected at the server and change the setting in *BIOS Setup*. Check whether you have assigned the same device ID twice.

xy = Group number

x = Number of SEs found on the communication bus

y = Number of SEs entered in *Number of connected SE*

k1, k2 ... = Device ID of the storage extensions found

System battery is dead - Replace and run SETUP

Replace the lithium battery on the mainboard and redo the settings in the *BIOS Setup*.

System Cache Error - Cache disabled

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

System CMOS checksum bad - - Default configuration used

Call the *BIOS Setup* and correct the previously made entries or set the default entries.

System Management Configuration changed or Problem occurred

A system fan or system sensor has failed. Check the hardware operation.

System timer error

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

Uncorrectable ECC DRAM error

DRAM Parity error

Unknown PCI error

Switch the device off and on again. If the message is still displayed, please contact your sales outlet or customer service centre.

Verify CPU frequency selection in Setup

The frequency setting for the processor is invalid. Correct the *BIOS Setup* and the setting.

# Glossary

The technical terms and abbreviations given below represent only a selection of the full list of common technical terms and abbreviations.

Not all technical terms and abbreviations listed here are valid for the described mainboard.

AC'97	Audio Codec '97
ACPI	Advanced Configuration and Power Management Interface
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
AOL	Alert On LAN
APM	Advanced Power Management
ASF	Alert Standard Format
ATA	Advanced Technology Attachment
BIOS	Basic Input Output System
BMC	Baseboard management controller
CAN	Controller Area Network
CNR	Communication Network Riser
CPU	Central Processing Unit
C-RIMM	Continuity Rambus Inline Memory Module
DIMM	Dual Inline Memory Module
ECC	Error Correcting Code
EEPROM	Electrical Erasable Programmable Read Only Memory
FDC	Floppy disk controller
FIFO	First-In First-Out
FSB	Front Side Bus
FWH	Firmware Hub
GMCH	Graphics and Memory Controller Hub
GPA	Graphics Performance Accelerator
I <sup>2</sup> C	Inter Integrated Circuit
IAPC	Instantly Available Power Managed Desktop PC Design
ICH	I/O Controller Hub
IDE	Intelligent Drive Electronics

IPSEC	Internet Protocol Security
ISA	Industrial Standard Architecture
LAN	Local Area Network
LSA	LAN Desk Service Agent
MCH	Memory Controller Hub
MMX	MultiMedia eXtension
MT/s	Mega Transfers per second
P64H	PCI64 Hub
PCI	Peripheral Component Interconnect
PSB	Processor System Bus
PXE	Preboot eXecution Environment
RAM	Random Access Memory
RAMDAC	Random Access Memory Digital Analogue Converter
RDRAM	Rambus Dynamic Random Access Memory
RIMM	Rambus Inline Memory Module
RTC	Real Time Clock
S/PDIF	Sony/Philips Digital Interface
SATA	Serial ATA (Advanced Technology Attachment)
SB	Soundblaster
SDRAM	Synchronous Dynamic Random Access Memory
SGRAM	Synchronous Graphic Random Access Memory
SIMD	Streaming Mode Instruction (Single Instruction Multiple Data)
SMBus	System Management Bus
SVGA	Super Video Graphic Adapter
USB	Universal Serial Bus
VGA	Video Graphic Adapter
WOL	Wake On LAN