

SYSTEMBAUGRUPPE D1250
SYSTEM BOARD D1250

TECHNISCHES HANDBUCH
TECHNICAL MANUAL

FUJITSU COMPUTERS
SIEMENS

Sie haben ...

... technische Fragen oder Probleme?

Wenden Sie sich bitte an:

- unsere Hotline:
Mo-Fr: 9 - 18 Uhr
Sa: 9 - 14 Uhr
Tel.: ++49 (0) 180 3777 000
- Ihren zuständigen Vertriebspartner
- Ihre Verkaufsstelle

Weitere Informationen finden Sie im Handbuch "Sicherheit, Garantie und Ergonomie".

Aktuelle Informationen zu unseren Produkten, Tipps, Updates usw. finden Sie im Internet:

<http://www.fujitsu-siemens.com>

Are there ...

... any technical problems or other questions you need clarified?

Please contact:

- your sales partner
- your sales outlet

You will find further information in the manual "Safety, Warranty and Ergonomics".

The latest information on our products, tips, updates, etc., can be found on the Internet under:

<http://www.fujitsu-siemens.com>



Dieses Handbuch wurde auf Recycling-Papier gedruckt.
This manual has been printed on recycled paper.
Ce manuel est imprimé sur du papier recyclé.
Este manual ha sido impreso sobre papel reciclado.
Questo manuale è stato stampato su carta da riciclaggio.
Denna handbok är tryckt på recyclingpapper.
Dit handboek werd op recycling-papier gedrukt.

Herausgegeben von/Published by
Fujitsu Siemens Computers GmbH

Bestell-Nr./Order No.: **A26361-D1250-Z120-1-7419**

Printed in the Federal Republic of Germany
AG 0301 03/01



A26361-D1250-Z120-1-7419

Table Of Content


Feature Summary	P.1
D1250 Motherboard Layout	P.3
Page Index for CPU Speed Setup / Connectors / Panel and Jumper Definition	P.4
Four Speaker & SPDIF Introduction	P.15
Memory Installation	P.19
Page Index for BIOS Setup	P.23
Appendix	P.44

Feature Summary

Form Factor	<ul style="list-style-type: none">• 24.4 cm x 22.2 cm Micro ATX size form factor, 4 layers PCB.
CPU	<ul style="list-style-type: none">• AMD Athlon™/Duron™ (K7) Socket A Processor• 256K/64K L2 cache on die• Supports 600MHz ~ 1GHz• Front Side Bus 200 MHz
Chipset	Pro Savage KM133, consisting of: <ul style="list-style-type: none">• VT8365 Memory/AGP/PCI Controller (PAC)• VT82C686B PCI Super-I/O Integrated Peripheral Controller (PSIPC)
Memory	<ul style="list-style-type: none">• 2 168-pin DIMM sockets• Supports PC-100/133• Supports up to 1.0GB DRAM• Supports only 3.3V SDRAM DIMM
I/O Control	<ul style="list-style-type: none">• VT82C686B
Slots	<ul style="list-style-type: none">• 1 AGP slot supports 4X mode & AGP 2.0 compliant• 3 PCI slots supports 33MHz & PCI 2.2 compliant• 1 CNR slot
Onboard IDE	<ul style="list-style-type: none">• 2 IDE bus master (UDMA 33/ATA 66/ATA100) IDE ports for up to 4 ATAPI devices• Supports PIO mode 3, 4 (UDMA 33/ATA 66/ATA100) IDE & ATAPI CD-ROM
Onboard Peripherals	<ul style="list-style-type: none">• 1 floppy port supports 2 FDD with 360K, 720K, 1.2M, 1.44M and 2.88M bytes• 1 parallel port supports Normal/EPP/ECP mode• 1 serial port (COM A)• 4 USB ports
Hardware Monitor	<ul style="list-style-type: none">• CPU/System fan revolution detection• CPU/System fan control• System voltage detection• CPU/System temperature detection

PS/2 Connector	<ul style="list-style-type: none"> • PS/2® Keyboard interface and PS/2® Mouse interface
Onboard VGA	<ul style="list-style-type: none"> • Build S3 Savage4 (86C370) in VT8365 • Support shared memory architecture
Onboard Sound	<ul style="list-style-type: none"> • AC'97 CODEC • Line In / Line Out / Mic In / AUX In / CD In / TEL / SPDIF / Game Port
BIOS	<ul style="list-style-type: none"> • Licensed AMI BIOS, 2M bit flash ROM
Additional Features	<ul style="list-style-type: none"> • Support Wake-On-LAN (WOL) • Support Internal / External Modem Ring On • Support USB KB/MS Wake up from S3-S5 • Includes 3 fan power connectors • Poly fuse for keyboard over-current protection

D1250 Motherboard Layout

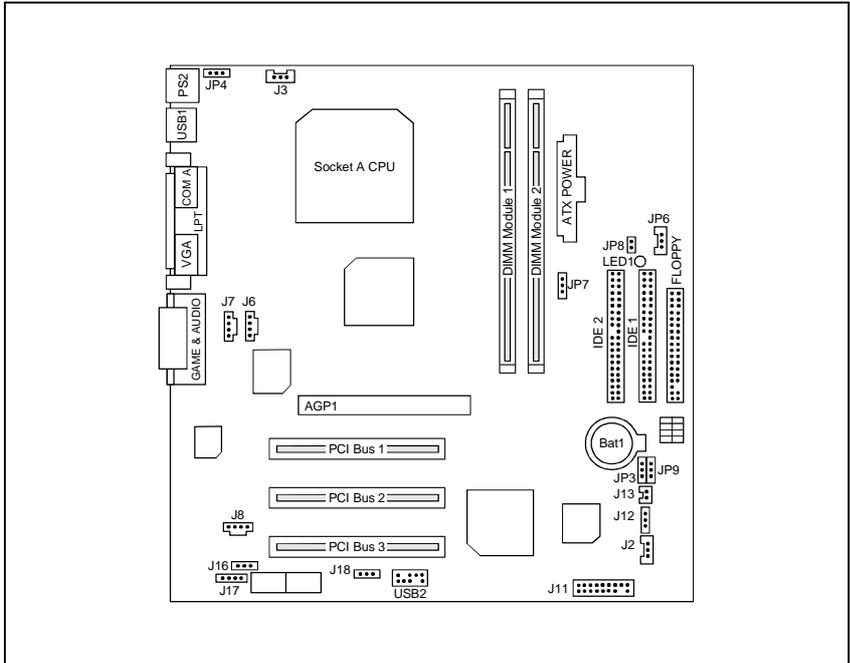


Page Index for CPU Speed Setup/Connectors/Panel and Jumper Definition	Page
CPU Speed Setup	P.5
SW1	P.5
Connectors	P.6
ATX Power	P.6
COM A / VGA / LPT Port	P.6
Floppy Connector	P.7
Game & Audio Port	P.7
IDE 1(Primary) / IDE 2(Secondary) Connector	P.8
J2 (System Fan)	P.8
J3 (CPU Fan)	P.9
J7 (AUX_IN)	P.9
J8 (TEL)	P.10
J9 (CD Audio Line In)	P.10
J12 (Wake On LAN)	P.11
J13 (Ring Power On)	P.11
JP6 (Power Fan)	P.12
JP8 / LED1 (DIMM LED Connector & DIMM LED)	P.13
PS/2 Keyboard & PS/2 Mouse Port	P.13
USB1 (Rear USB Port)	P.14
USB2 (Front USB Connector)	P.14
Panel and Jumper Definition	P.15
BAT1 (Battery)	P.15
J11 (2x11 Pins Front Panel)	P.15
J16/J17/J18 (AMR Select) [Optional]	P.16
JP3 (Clear CMOS Function) [Optional]	P.17
JP4 (USB Device Wake up Selection)	P.18
JP7 (STR Function Enable)	P.18
JP9 (BIOS Write Protect Function)	P.19

CPU Speed Setup

The system bus speed is fixed at 100MHz. The user is not allowed to change the system bus speed.

SW1: CPU Speed Setup

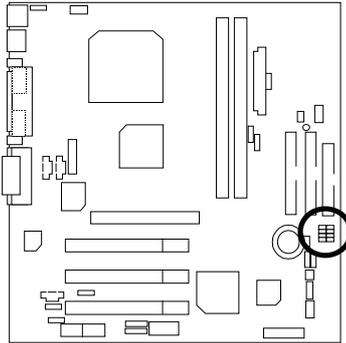

SW1: O: ON, X: OFF

FSB	1	2	3	4
100	X	O	X	X



⚠️ **AMD CPU Heat Sink Installation:**

Beware: Please check that the heat sink is in good contact with the CPU before you turn on your system.

The poor contact will cause over heat, and might cause damage to your processor.



Connectors

ATX Power

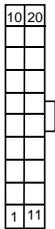
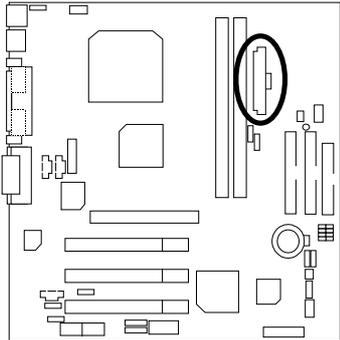


Pin No.	Definition
3,5,7,13,15-17	GND
1,2,11	3.3V
4,6,19,20	VCC
10	+12V
12	-12V
18	-5V
8	Power Good
9	5V SB stand by+5V
14	PS-ON(Soft On/Off)



COM A / VGA / LPT Port

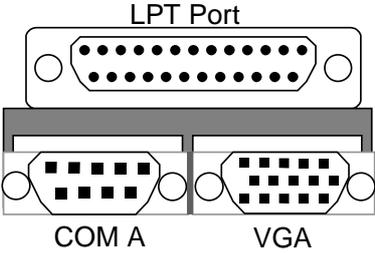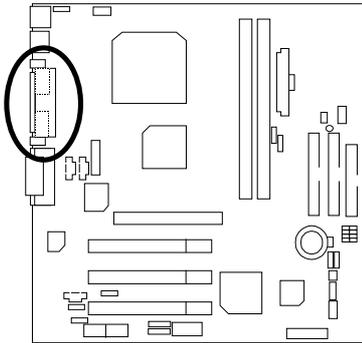

Floppy Connector

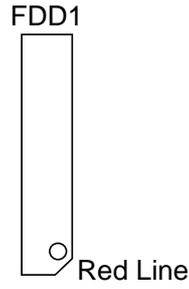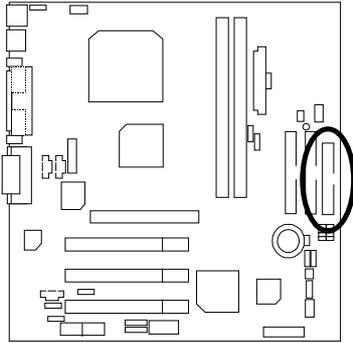



Game & Audio Port

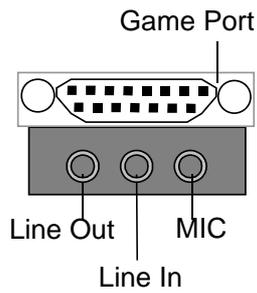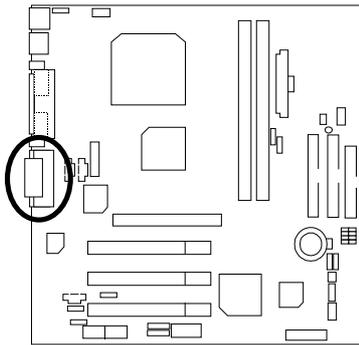


Line Out 1: Line Out or SPDIF (The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby digital decoder). To enable SPDIF, simply insert SPDIF connector into Line Out1. Line Out1 will become SPDIF Out automatically. (see page 34 for more information).

To enable Four Speaker (for Creative 5880 audio only), simply follow instructions on page 32 and Line In will become Line Out2 to support second pair of stereo speakers.

IDE1 (Primary), IDE2 (Secondary) Connector

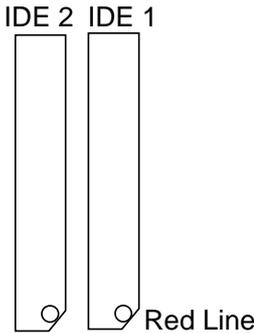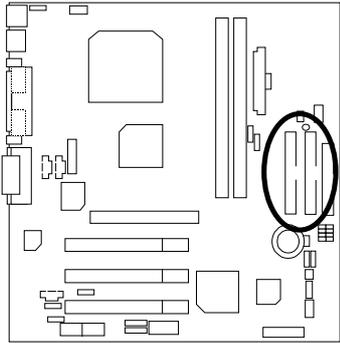


J2: System Fan

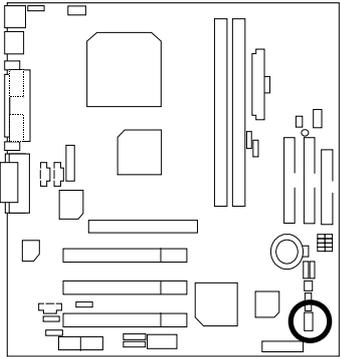



Pin No.	Definition
1	Control
2	+12V
3	SENSE

J3: CPU Fan

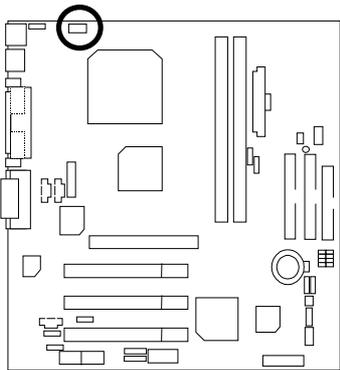



Pin No.	Definition
1	Control
2	+12V
3	SENSE

J7: AUX_IN

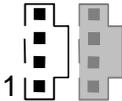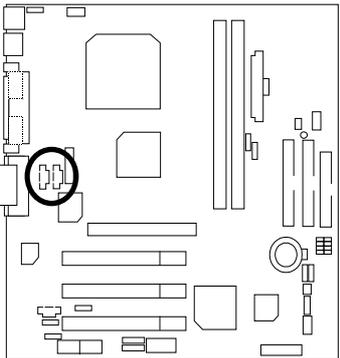



Pin No.	Definition
1	AUX-L
2	GND
3	GND
4	AUX-R

J8 TEL: The connector is for Modem with internal voice connector

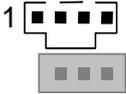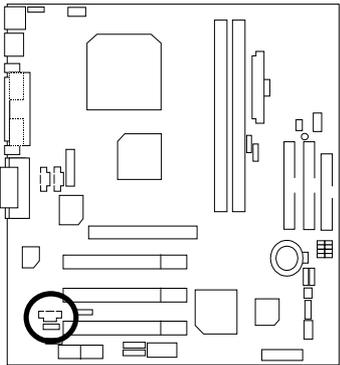


Pin No.	Definition
1	Signal-In
2	GND
3	GND
4	Signal-Out

J9: CD Audio Line In

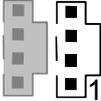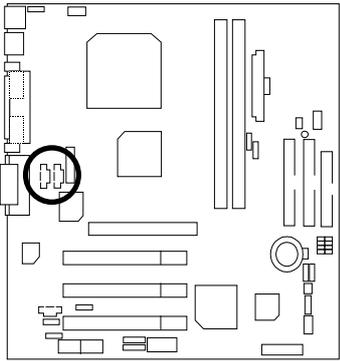


Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

J12: Wake On LAN

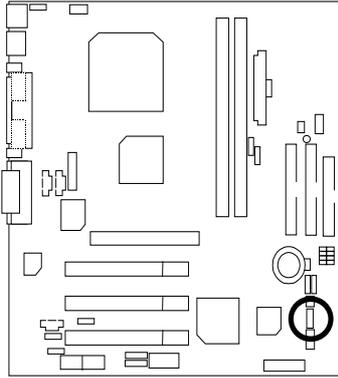


Pin No.	Definition
1	+5V SB
2	GND
3	Signal

J13: Ring Power On (Internal Modem Card Wake Up)

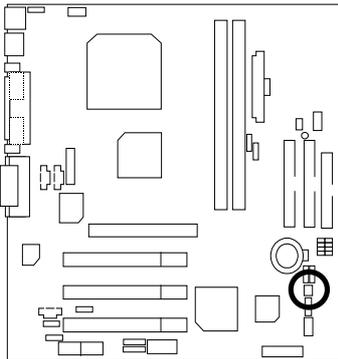


Pin No.	Definition
1	Signal
2	GND

JP6: Power Fan

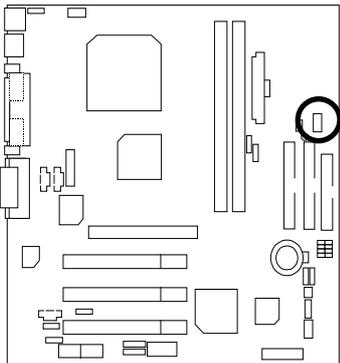

Pin No.	Definition
1	Control
2	+12V
3	NC



JP8 / LED1: STR LED Connector & DIMM LED

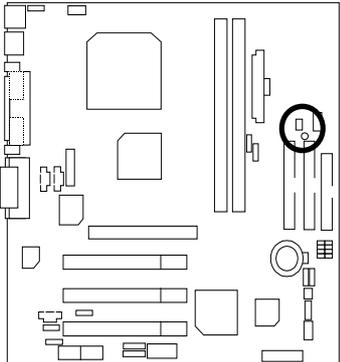

STR LED Connector External.





PS/2 Keyboard & PS/2 Mouse Port

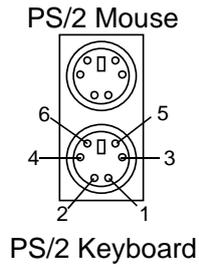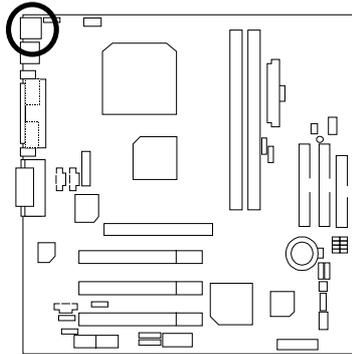

PS/2 Mouse/Keyboard	
Pin No.	Definition
1	Data
2	NC
3	GND
4	VCC(+5V)
5	Clock
6	NC



USB 1:

Rear USB Port

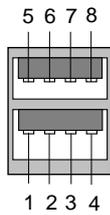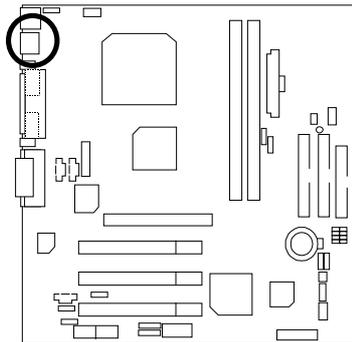

Pin No.	Definition
1	USB V0
2	USB D0-
3	USB D0+
4	GND
5	USB V1
6	USB D1-
7	USB D1+
8	GND


USB 2: Front USB Connector

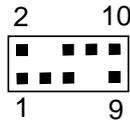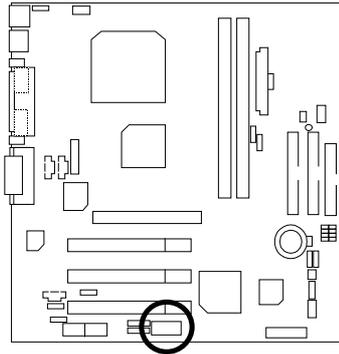

Pin No.	Definition
1	+5V
2	GND
3	USB D2-
4	NC
5	USB D2+
6	USB D3+
7	NC
8	USB D3-
9	GND
10	+5V

Panel And Jumper Definition



BAT1: Battery

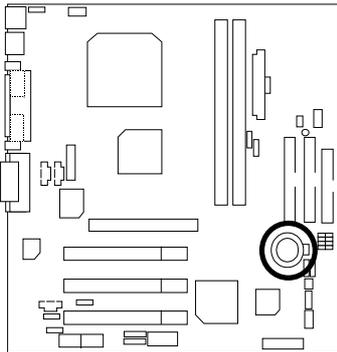

CAUTION



- ⚠ Danger of explosion if battery is incorrectly replaced.
- ⚠ Replace only with the same or equivalent type recommended by the manufacturer.
- ⚠ Dispose of used batteries according to the manufacturer's instructions.

J11: 2x11 Pins Front Panel

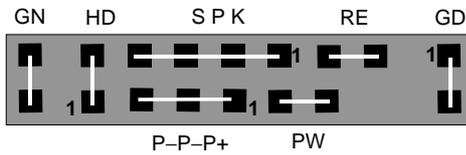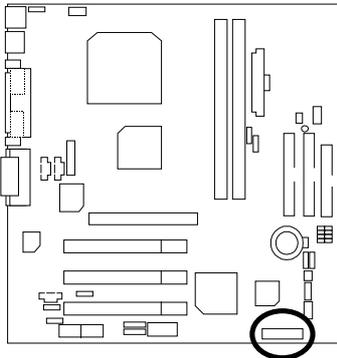



GN (Green Switch)	Open: Normal Operation Close: Entering Green Mode
GD (Green LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
SPK (Speaker Connector)	Pin 1: VCC(+) Pin 2- Pin 3: NC Pin 4: Data(-)
RE (Reset Switch)	Open: Normal Operation Close: Reset Hardware System
P+P-P-(Power LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-) Pin 3: LED cathode(-)
PW (Soft Power Connector)	Open: Normal Operation Close: Power On/Off

J16 /J17/J18: CNR (Primary or Secondary) Select [Optional]

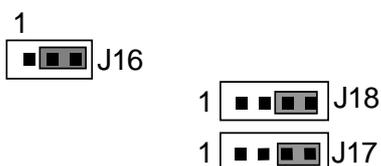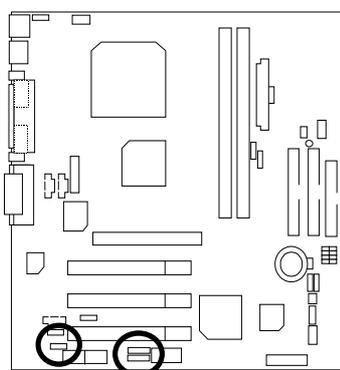


	J16	J17	J18
Onboard AC97	1-2	1-2	1-2
AMR (Primary) (Default)	2-3	3-4	3-4
Onboard AC97 MR (Secondary)	1-2	1-2 3-4	1-2

JP3: Clear CMOS Function (Optional)

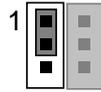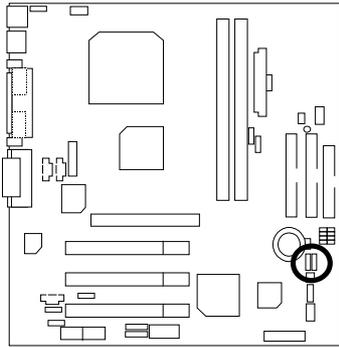

Pin No.	Definition
1-2 close	Normal (Default)
2-3 close	Clear CMOS



JP4: USB Device Wake up Selection

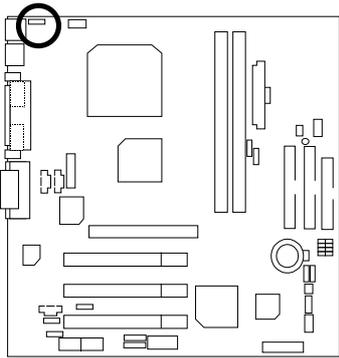

Pin No.	Definition
1-2 close	Normal (Default)
2-3 close	USB Device Wake up


(If you want to use "USB Dev Wakeup from S3~S5" function, you have to set the BIOS setting "USB Dev Wakeup from S3~S5" enabled, and the jumper "JP4" enabled)
 *(Power on the computer and as soon as memory counting starts, press . You will enter BIOS Setup. Select the item "POWER MANAGEMENT SETUP", then select "USB Dev Wakeup from S3~S5". Remember to save the setting by pressing "ESC" and choose the "SAVE & EXIT SETUP" option.)

JP7: STR Function Enable

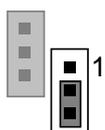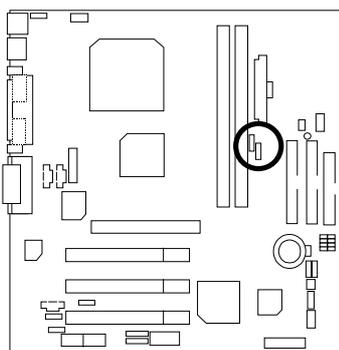

Pin No.	Definition
1-2 close	STR Enable
2-3 close	Normal (Default)

JP9: BIOS Write Protect Function

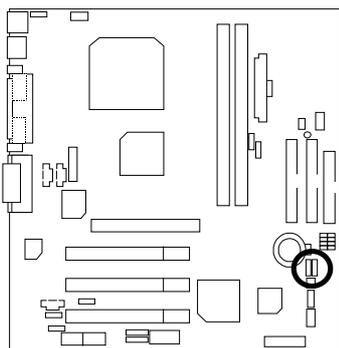

Pin No.	Definition
1-2 close	Write Protect Enable
2-3 close	Write Protect Disable (Default)

⚠ Please set Jumper JP9 to "2-3 close" to enabled BIOS write function when you update new BIOS or new device.

P10z: CPU Clock Frequency (Optional)

CPU Clock = is set to 100 MHz



Memory Installation

The motherboard has 2 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM Slot .The DIMM module can only fit in one direction due to the two notch. Memory size can vary between sockets.

Install memory in any combination table:

DIMM	168-pin SDRAM DIMM Modules	
DIMM 1	Supports 16 / 32 / 64 / 128 / 256 / 512 MB	X 1 pcs
DIMM 2	Supports 16 / 32 / 64 / 128 / 256 / 512 MB	X 1 pcs

Total System Memory (Max 1.0GB)

Page Index for BIOS Setup	Page
The Main Menu	P.23
Standard CMOS Setup	P.25
BIOS Features Setup	P.28
Chipset Features Setup	P.30
PNP/ PCI Configuration	P.34
Load BIOS Defaults	P.35
Load Setup Defaults	P.36
Integrated Peripherals	P.37
Hardware Monitor	P.39
Supervisor Password / User Password	P.40
IDE HDD Auto Detection	P.41
Save & Exit Setup	P.42
Exit Without Saving	P.43

BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Power ON the computer and press immediately will allow you to enter Setup. If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously press <Ctrl> – <Alt>– keys.

CONTROL KEYS

<↑>	Move to previous item
<↓>	Move to next item
<←>	Move to the item in the left hand
<→>	Move to the item in the right hand
<Esc>	Main Menu - Quit and not save changes into CMOS. Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Reserved
<F3>	Reserved
<F4>	Reserved
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the default CMOS value from BIOS default table, only for Option Page Setup Menu
<F7>	Load the Setup Defaults
<F8>	Reserved
<F9>	Reserved
<F10>	Save all the CMOS changes, only for Main Menu

GETTING HELP

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

The Main Menu

Once you enter AMI BIOS CMOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. The Main Menu allows you to select from nine setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

AMBIOS SIMPLE SETUP UTILITY-VERSION 1.24a (C) 1999 American Megatrends, Inc. All Rights Reserved	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	HARDWARE MONITOR SETUP
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD
POWER MANAGEMENT SETUP	USER PASSWORD
PNP/PCI CONFIGURATION	IDE HDD AUTO DETECTION
LOAD BIOS DEFAULTS	SAVE & EXIT SETUP
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING
ESC : Quit ↑↓←→ : Select Item (Shift) F2 : Change Color F5 : Old Values F6 : Load BIOS Defaults F7: Load Setup Defaults F10: Save & Exit	
Time, Date, Hard Disk Type, ...	

Figure 1: Main Menu

●Standard CMOS Setup

This setup page includes all the items in standard compatible BIOS.

●BIOS Features Setup

This setup page includes all the items of AMI special enhanced features.

●Chipset Features Setup

This setup page includes all the items of chipset special features.

● **Power Management Setup**

This setup page includes all the items of Green function features.

● **PnP/PCI Configurations**

This setup page includes all the configurations of PCI & PnP ISA resources.

● **Load BIOS Defaults**

Bios Defaults indicates the value of the system parameter which the system would be in the safe configuration.

● **Load Setup Defaults**

Setup Defaults indicates the value of the system parameter which the system would be in the most appropriate configuration.

● **Integrated Peripherals**

This setup page includes all onboard peripherals.

● **Hardware Monitor Setup**

This setup page is auto detect fan and temperature status.

● **Supervisor password**

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

● **User password**

Change, set, or disable password. It allows you to limit access to the system.

● **IDE HDD auto detection**

Automatically configure hard disk parameters.

●**Save & Exit Setup**

Save CMOS value settings to CMOS and exit setup.

●**Exit Without Saving**

Abandon all CMOS value changes and exit setup.

Standard CMOS Setup

The items in Standard CMOS Features Menu (Figure 2) are divided into 9 categories. Each category includes no, one or more than one setup items. Use the arrows to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

AMIBIOS SETUP – STANDARD CMOS SETUP (C) 1999 American Megatrends, Inc. All Rights Reserved	
Date (mm/dd/yyyy) : Tue Jan 25, 2000 Time (hh/mm/ss) : 10:36:24	
TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE	
Pri Master : Auto Pri Slave : Auto Sec Master : Auto Sec Slave : Auto	
Floppy Drive A: 1.44 MB 3 ½ Floppy Drive B: Not Installed	Base Memory : 640 Kb Other Memory: 384 Kb Extended Memory: 30Mb Total Memory: 31Mb
Boot Sector Virus Protection : Disabled	
Month: Jan – Dec Day: 01 – 31 Year: 1990– 2099	ESC : Exit ↑↓ : Select Item PU/PD/+/- : Modify (Shift)F2 : Color

Figure 2: Standard CMOS Setup

●**Date**

The date format is <Week> <Month> <Day>, <Year>.

Week	The week, from Sun to Sat, determined by the BIOS and is display-only
Month	The month, Jan. Through Dec.
Day	The day, from 1 to 31 (or the maximum allowed in the month)
Year	The year, from 1990 through 2099

●Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

●Primary Master, Slave / Secondary Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and user definable type. User type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

CYLS.	Number of cylinders
HEADS	Number of heads
PRECOMP	write precomp
LANDZONE	Landing zone
SECTORS	Number of sectors

If a hard disk has not been installed select NONE and press <Enter>.

●Floppy Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

None	No floppy drive installed
360K, 5.25 in.	5.25 inch PC-type standard drive; 360K byte capacity.
1.2M, 5.25 in.	5.25 inch AT-type high-density drive; 1.2M byte capacity (3.5 inch when 3 Mode is Enabled).
720K, 3.5 in.	3.5 inch double-sided drive; 720K byte capacity
1.44M, 3.5 in.	3.5 inch double-sided drive; 1.44M byte capacity.
2.88M, 3.5 in.	3.5 inch double-sided drive; 2.88M byte capacity.

●**Boot Sector Virus Protection**

If it is set to enable, the category will flash on the screen when there is any attempt to write to the boot sector or partition table of the hard disk drive. The system will halt and the following error message will appear in the mean time. You can run anti-virus program to locate the problem.

Enabled	Activate automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table
Disabled	No warning message to appear when anything attempts to access the boot sector or hard disk partition table. (Default Value)

●**Memory**

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512 K for systems with 512 K memory installed on the motherboard, or 640 K for systems with 640 K or more memory installed on the motherboard.

Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.

Other Memory

This refers to the memory located in the 640 K to 1024 K address space. This is memory that can be used for different applications.

DOS uses this area to load device drivers to keep as much base memory free for application programs. Most use for this area is Shadow RAM

BIOS Features Setup

AMIBIOS SETUP – BIOS FEATURES SETUP (C) 1999 American Megatrends, Inc. All Rights Reserved	
1st Boot Device	Floppy
2nd Boot Device	IDE-0
3rd Boot Device	CDROM
S.M.A.R.T. for Hard Disks	Disabled
BootUp Num-Lock	On
Floppy Drive Seek	Disabled
Password Check	Setup
ESC : Quit ↑↓→← : Select Item F1 : Help PU/PD+/-/ : Modify F5 :Old Values (Shift)F2:Color F6 : Load BIOS Defaults F7 : Load SETUP Defaults	

Figure 3: BIOS Features Setup

●1st / 2nd / 3rd Boot Device

Floppy	Boot Device by Floppy.
ZIP A: / LS120	Boot Device by ZIP A: / LS120.
CDROM	Boot Device by CDROM.
SCSI	Boot Device by SCSI.
NETWORK	Boot Device by NETWORK.
USB FDD	Boot Device by USB FDD.
IDE-0~IDE-3	Boot Device by IDE-0~IDE-3.
Disabled	Boot Device by Disabled.
ATAPI ZIP C:	Boot Device by ATAPI ZIP C:.

●S.M.A.R.T. for Hard Disks

Enabled	Enable S.M.A.R.T. Hard for Disks.
Disabled	Disable S.M.A.R.T. Hard for Disks. (Default Value)

●**Boot Up Num-Lock**

On	Keypad is number keys. (Default Value)
Off	Keypad is arrow keys.

●**Floppy Drive Seek**

During POST, BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. 360 type is 40 tracks while 720 , 1.2 and 1.44 are all 80 tracks.

Enabled	BIOS searches for floppy disk drive to determine if it is 40 or 80 tracks. Note that BIOS can not tell from 720, 1.2 or 1.44 drive type as they are all 80 tracks.
Disabled	BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360. (Default Value)

●**Password Check**

Setup	Set Password Check to Setup. (Default Value)
Always	Set Password Check to Always.

Chipset Features Setup

AMIBIOS SETUP – CHIPSET FEATURES SETUP (C) 1999 American Megatrends, Inc. All Rights Reserved	
Configure Timing by SPD	Disabled
DRAM Frequency	100MHz
SDRAM CAS# Latency	3
AGP Mode	4X
AGP Comp. Driving	Auto
Manual AGP Comp. Driving	CB
AGP Fast Write	Disabled
AGP Aperture Size	64MB
ClkGen Spread Spectrum	Enabled
USB Controller	All USB Port
USB Legacy Support	Disabled
ESC : Quit ↑↓→←: Select Item F1 : Help PU/PD+/-/ : Modify F5 :Old Values (Shift)F2:Color F6 : Load BIOS Defaults F7 : Load SETUP Defaults	

Figure 4: Chipset Features Setup

●Configure Time by SPD

Disabled	Disable Configure Time by SPD function.
Enabled	Enable Configure Time by SPD function.
Auto	Auto Configuration (Default Value)

●DRAM Frequency

100MHz	Set DRAM Frequency to 100MHz.
133MHz	Set DRAM Frequency to 133MHz.
Auto	Auto Configuration (Default Value)

●SDRAM CAS# Latency

2	For Fastest SDRAM DIMM module.
3	For Slower SDRAM DIMM module.
Auto	Auto Configuration (Default Value)

●AGP Mode

4X	Set AGP Mode to 4X. (Default Value)
1X	Set AGP Mode to 1X.
2X	Set AGP Mode to 2X.

●AGP Comp. Driving

Auto	Set AGP Comp. Driving to Auto. (Default Value)
Manual	Set AGP Comp. Driving to Manual.

If AGP Comp. Driving is Manual.

Manual AGP Comp. Driving:	00-FF
---------------------------	-------

●AGP Fast Write

Enabled	Enable AGP Fast Write function.
Disabled	Disable this function. (Default Value)

●AGP Aperture Size

4MB	Set AGP Aperture Size to 4MB.
8MB	Set AGP Aperture Size to 8 MB.
16MB	Set AGP Aperture Size to 16 MB.
32MB	Set AGP Aperture Size to 32 MB.
64MB	Set AGP Aperture Size to 64 MB. (Default Value)
128MB	Set AGP Aperture Size to 128 MB.
256MB	Set AGP Aperture Size to 256 MB.

●ClkGen Spread Spectrum

Disabled	Disable ClkGen Spread Spectrum.
Enabled	Enable ClkGen Spread Spectrum. (Default Value)

●USB Controller

All USB Port	Set USB Controller to All USB Port. (Default Value)
Disabled	Disable USB Controller.
USB Port 0&1	Set USB Controller to USB Port 0&1.
USB Port 2&3	Set USB Controller to USB Port 2&3.

●USB Legacy Support

Keyboard/FDD	Set USB Legacy Support Keyboard / Floppy.
KB/Mouse/FDD	Set USB Legacy Support Keyboard / Mouse / Floppy.
Disabled	Disable USB Legacy Support Function. (Default Value)

Power Management Setup

AMIBIOS SETUP – POWER MANAGEMENT SETUP (C) 1999 American Megatrends, Inc. All Rights Reserved			
ACPI Standby State	S1/POS	RTC Alarm Hour	12
USB Dev Wakeup From S3~S5	Disabled	RTC Alarm Minute	30
Suspend Time Out (Minute)	Disabled	RTC Alarm Second	30
Display Activity	Ignore		
IRQ3	Monitor		
IRQ4	Monitor		
IRQ5	Ignore		
IRQ7	Monitor		
IRQ9	Ignore		
IRQ10	Ignore		
IRQ11	Ignore		
IRQ13	Ignore		
IRQ14	Monitor		
IRQ15	Ignore		
Soft-Off by Power Button	Instant-Off		
System after AC Back	Last State	ESC : Quit	↑↓→← : Select Item
Resume On Ring/LAN	Enabled	F1 : Help	PU/PD+/- : Modify
Resume On PME#	Enabled	F5 : Old Values	(Shift)F2:Color
Resume On RTC Alarm	Disabled	F6 : Load BIOS Defaults	
RTC Alarm Date	15	F7 : Load SETUP Defaults	

Figure 5: Power Management Setup

●ACPI Standby State

S1/POS	Set ACPI Standby State to S1. (Default Value)
S3/STR	Set ACPI Standby State to S3.

●USB Dev Wakeup From S3-S5

Enabled	Enable USB Dev Wakeup from ACPI S3, S4 and S5 mode.
Disabled	Disable USB Dev Wakeup from ACPI S3, S4 and S5 mode. (Default Value)

●Suspend Time Out (Minute.)

Disabled	Disable Suspend Time Out Function. (Default Value)
1	Enable Suspend Time Out after 1min.
2	Enable Suspend Time Out after 2min.
4	Enable Suspend Time Out after 4min.
8	Enable Suspend Time Out after 8min.
10	Enable Suspend Time Out after 10min.
20	Enable Suspend Time Out after 20min.
30	Enable Suspend Time Out after 30min.
40	Enable Suspend Time Out after 40min.
50	Enable Suspend Time Out after 50min.
60	Enable Suspend Time Out after 60min.

●Display Activity

Ignore	Ignore Display Activity. (Default Value)
Monitor	Monitor Display Activity.

●IRQ 3-IRQ15

Ignore	Ignore IRQ3 -IRQ15.
Monitor	Monitor IRQ3-IRQ15.

●Soft-off by Power Button

Instant-off	Soft switch ON/OFF for POWER ON/OFF. (Default value)
Suspend	Soft switch to enter Suspend Mode.

•System after AC Back

Last State	System power on depends on the status before AC lost. (Default Value)
Off	Always in Off state when AC back.
On	Always power on the system when AC back.

• Resume On Ring / LAN

Disabled	Disable Resume On Ring / LAN.
Enabled	Enable Resume On Ring / LAN. (Default Value)

• Resume On PME#

Disabled	Disable Resume On PME#.
Enabled	Enable Resume On PME#. (Default Value)

•Resume On RTC Alarm

You can set "Resume On RTC Alarm" item to enabled and key in Data/time to power on system.

Disabled	Disable this function. (Default Value)
Enabled	Enable alarm function to POWER ON system.

If the default value is Enabled.

RTC Alarm Date:	Every Day, 1~31
RTC Alarm Hour:	0~23
RTC Alarm Minute:	0~59
RTC Alarm Second:	0~59

PNP/PCI Configurations

AMIBIOS SETUP – PNP / PCI CONFIGURATION	
(C) 1999 American Megatrends, Inc. All Rights Reserved	
VGA Frame Buffer Size	16MB
VGA Boot from	PCI
IRQ 3	PCI/PnP
IRQ 4	PCI/PnP
IRQ 5	PCI/PnP
IRQ 7	PCI/PnP
IRQ 9	PCI/PnP
IRQ 10	PCI/PnP
IRQ 11	PCI/PnP
IRQ 14	PCI/PnP
IRQ 15	PCI/PnP
ESC: Quit ↑↓→←: Select Item F1 : Help PU/PD+/-/: Modify F5 :Old Values (Shift)F2:Color F6 : Load BIOS Defaults F7 : Load SETUP Defaults	

Figure 6: PNP/PCI Configuration

●VGA Frame Buffer Size

16MB	Set VGA Frame Buffer Size to 16MB. (Default Value)
32MB	Set VGA Frame Buffer Size to 32MB.

●VGA Boot From

AGP	Primary Graphics Adapter From AGP.
PCI	Primary Graphics Adapter From PCI. (Default Value)

●IRQ (3, 4, 5, 7, 9, 10, 11, 14, 15)

ISA/EISA	The resource is used by Legacy ISA device.
PCI/PnP	The resource is used by PCI/ PnP device. (Default Value)

Load BIOS Defaults

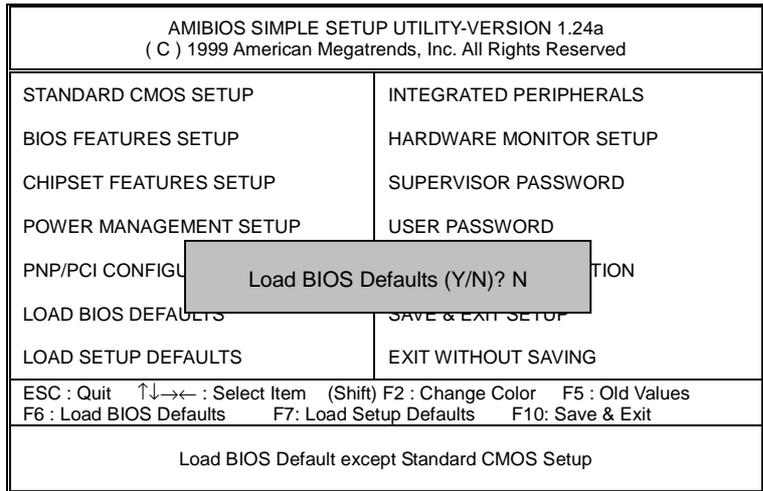


Figure 7: Load BIOS Defaults

●Load BIOS Defaults

BIOS defaults contain the most appropriate values of the system parameters that allow minimum system performance.

Load Setup Defaults

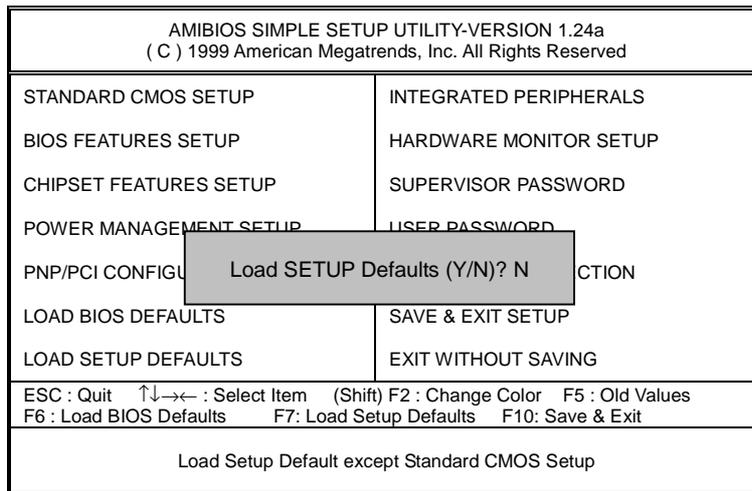


Figure 8: Load Setup Defaults

● **Load Setup Defaults**

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

Integrated Peripherals

AMIBIOS SETUP – INTEGRATED PERIPHERALS (C) 1999 American Megatrends, Inc. All Rights Reserved	
OnBoard FDC	Auto
OnBoard Serial Port 1	Auto
OnBoard Parallel Port	Auto
Parallel Port Mode	ECP
Parallel Port DMA	Auto
Parallel Port IRQ	Auto
OnBoard IDE	Both
OnBoard AC'97 Audio	Auto
OnBoard MC'97 Modem	Auto
ESC: Quit ↑↓→←: Select Item F1 : Help PU/PD+/-: Modify F5 :Old Values (Shift)F2:Color F6 : Load BIOS Defaults F7 : Load SETUP Defaults	

Figure 9: Integrated Peripherals

● **Onboard FDC**

Auto	Auto detect onboard Floppy disk controller. (Default value)
Enabled	Enable onboard Floppy disk controller.
Disabled	Disable onboard Floppy disk controller.

● **Onboard Serial Port 1**

Auto	BIOS will automatically setup the port 1 address. (Default Value)
3F8/COM1	Enable onboard Serial port 1 and address is 3F8.
2F8/COM2	Enable onboard Serial port 1 and address is 2F8.
3E8/COM3	Enable onboard Serial port 1 and address is 3E8.
2E8/COM4	Enable onboard Serial port 1 and address is 2E8.
Disabled	Disable onboard Serial port 1.

● **Onboard Parallel port**

378	Enable onboard LPT port and address to 378.
278	Enable onboard LPT port and address to 278.
3BC	Enable onboard LPT port and address to 3BC.
Auto	Set onboard LPT port to Auto. (Default Value)
Disabled	Disable onboard LPT port.

•Parallel Port Mode (BI-Dir)

EPP	Using Parallel port as Enhanced Parallel Port.
ECP	Using Parallel port as Extended Capabilities Port. (Default Value)
Normal	Normal Operation.
EPP+ECP	Using Parallel port as Enhanced Parallel Port & Extended Capabilities Port.

•Parallel Port DMA

Auto	Set Auto to parallel port mode DMA Channel. . (Default Value) .
3	Set Parallel Port DMA to 3.
1	Set Parallel Port DMA to 1.
0	Set Parallel Port DMA to 0.

•Parallel Port IRQ

7	Set Parallel Port IRQ to 7.
Auto	Set Auto to parallel Port IRQ DMA Channel. (Default Value)
5	Set Parallel Port IRQ to 5.

•Onboard IDE

Disabled	Disable onboard IDE.
Both	Set onboard IDE to Both. (Default Value)
Primary	Set onboard IDE to Primary.
Secondary	Set onboard IDE to Secondary.

•Onboard AC'97 Audio

Auto	Auto detect onboard AC'97 Audio. (Default Value)
Disabled	Disable onboard AC'97 Audio.

•Onboard MC'97 Modem

Auto	Auto detect onboard MC'97 Modem. (Default Value)
Enabled	Enable onboard MC'97 Modem.
Disabled	Disable onboard MC'97 Modem.

● **Hardware Monitor**

AMIBIOS SETUP – HARDWARE MONITOR SETUP	
(C) 1999 American Megatrends, Inc. All Rights Reserved	
CPU Temperature	47°C/116°F
System Temperature	32°C/89°F
CPU Fan Speed	7123 RPM
System Fan Speed	0 RPM
Vcore	1.750 V
Vdd	3.050 V
Vcc3	3.340 V
+5.000V	4.996 V
+12.000V	12.166 V

ESC: Quit	↑↓→←: Select Item
F1 : Help	PU/PD+/-/: Modify
F5 :Old Values	(Shift)F2:Color
F6 : Load BIOS Defaults	
F7 : Load Setup Defaults	

Figure 10: Hardware Monitor

● **CPU Temperature. (°C / °F)**

Detect CPU Temperature automatically.

● **System Temperature. (°C / °F)**

Detect System Temperature automatically.

● **CPU Fan Speed**

Detect CPU Fan speed status automatically.

● **System Fan Speed**

Detect System Fan speed status automatically.

● **Voltage (V) Vcore / Vdd / Vcc3 / +5V / +12V**

Detect system's voltage status automatically.

Set Supervisor / User Password

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

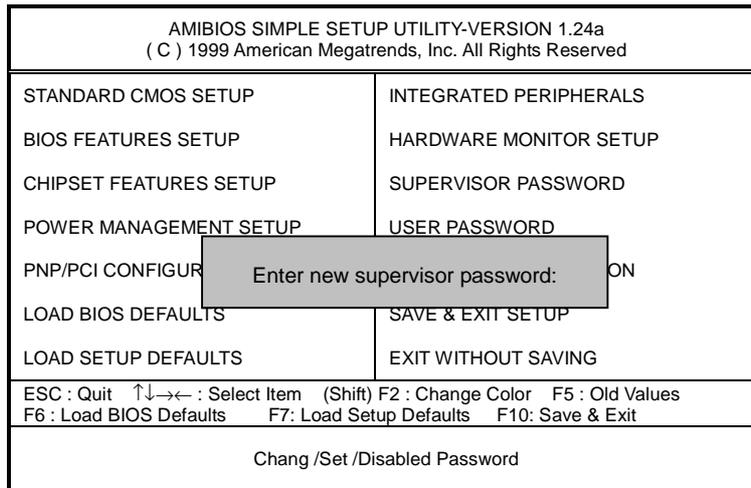


Figure 11: Password Setting

Type the password, up to six characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message **"PASSWORD DISABLED"** will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords: a **SUPERVISOR PASSWORD** and a **USER PASSWORD**. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select **"Always"** at **"Password Check"** in BIOS Features Setup Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select **"Setup"** at **"Password Check"** in BIOS Features Setup Menu, you will be prompted only when you try to enter Setup.

IDE HDD AUTO Detection

AMIBIOS SETUP – STANDARD CMOS SETUP (C) 1999 American Megatrends, Inc. All Rights Reserved	
Date (mm/dd/yyyy) : Tue Jan 25, 2000 Time (hh/mm/ss) : 10:36:24	
TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE	
Pri Master : Not Installed Pri Slave : Not Installed Sec Master : Not Installed Sec Slave : Not Installed	
Floppy Drive A: 1.44 MB 3 ½ Floppy Drive B: Not Installed	Base Memory : 640 Kb Other Memory: 384 Kb Extended Memory: 31Mb Total Memory: 32Mb
Boot Sector Virus Protection : Disabled	
Month: Jan – Dec Day: 01 – 31 Year: 1990– 2099	ESC : Exit ↑↓ : Select Item PU/PD/+/- : Modify (Shift)F2 : Color

Figure 12: IDE HDD Auto Detection

Type "Y" will accept the H.D.D. parameter reported by BIOS.

Type "N" will keep the old H.D.D. parameter setup. If the hard disk cylinder number is over 1024, then the user can select LBA mode or LARGER mode for DOS partition larger than 528 MB.

Save & Exit Setup

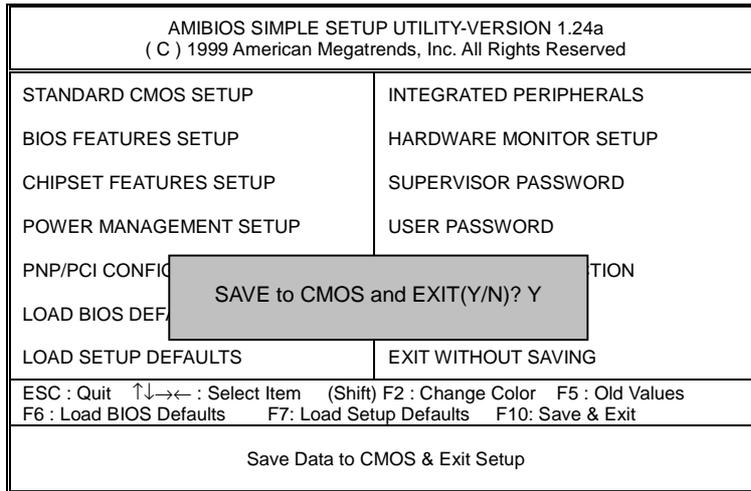


Figure 13: Save & Exit Setup

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

Exit Without Saving

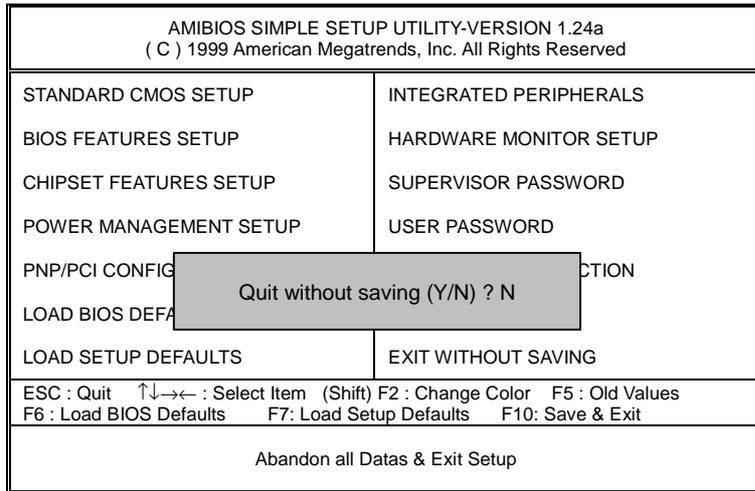


Figure 14: Exit Without Saving

Type "Y" will quit the Setup Utility without saving to RTC CMOS.

Type "N" will return to Setup Utility.

Appendix: Acronyms

Acronyms	Meaning
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
ACR	Audio Communication Riser
BIOS	Basic Input / Output System
CPU	Central Processing Unit
CMOS	Complementary Metal Oxide Semiconductor
CRIMM	Continuity RIMM
CNR	Communication and Networking Riser
DMA	Direct Memory Access
DMI	Desktop Management Interface
DIMM	Dual Inline Memory Module
DRM	Dual Retention Mechanism
DRAM	Dynamic Random Access Memory
DDR	Double Data Rate
ECP	Extended Capabilities Port
ESCD	Extended System Configuration Data
ECC	Error Checking and Correcting
EMC	Electromagnetic Compatibility
EPP	Enhanced Parallel Port
ESD	Electrostatic Discharge
FDD	Floppy Disk Device
HDD	Hard Disk Device
IDE	Integrated Dual Channel Enhanced
IRQ	Interrupt Request
I/O	Input / Output
IOAPIC	Input Output Advanced Programmable Input Controller
ISA	Industry Standard Architecture
LAN	Local Area Network
LBA	Logical Block Addressing
LED	Light Emitting Diode
MHz	Megahertz
MIDI	Musical Interface Digital Interface
MTH	Memory Translator Hub
MPT	Memory Protocol Translator
NIC	Network Interface Card
OS	Operating System

To be continued...

Acronyms	Meaning
OEM	Original Equipment Manufacturer
PAC	PCI A.G.P. Controller
POST	Power-On Self Test
PCI	Peripheral Component Interconnect
RIMM	Rambus in-line Memory Module
SCI	Special Circumstance Instructions
SECC	Single Edge Contact Cartridge
SRAM	Static Random Access Memory
SMP	Symmetric Multi-Processing
SMI	System Management Interrupt
USB	Universal Serial Bus
VID	Voltage ID