

# ***939GT3-PT / 939GT3-PTD***

## ***USER'S MANUAL***

### ***M/B For 64-bit AMD Socket 939 Processor***

***NO. G03939GT3PTDR111***

***Rev:1.0***


***Release date: March 2006***

#### **Trademark:**

\* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

## Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.

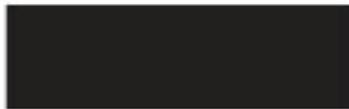

# TABLE OF CONTENT

---

USER'S NOTICE.....	iii
MANUAL REVISION INFORMATION .....	iii
COOLING SOLUTIONS .....	iii
<b>CHAPTER 1 INTRODUCTION OF 939GT3 MOTHERBOARD SERIES</b>	
1-1 FEATURE OF MOTHERBOARD .....	1
1-1.1 SPECIAL FEATURES OF MOTHERBOARD .....	2
1-2 SPECIFICATION.....	3
1-3 PERFORMANCE LIST.....	4
1-4 LAYOUT DIAGRAM & JUMPER SETTING.....	5
<b>CHAPTER 2 HARDWARE INSTALLATION</b>	
2-1 HARDWARE INSTALLATION STEPS .....	7
2-2 CHECKING MOTHERBOARD'S JUMPER SETTING .....	7
2-3 INSTALL CPU.....	8
2-3-1 GLOSSARY.....	8
2-3-2 ABOUT AMD Athlon64 939-PIN CPU.....	9
2-4 INSTALL MEMORY .....	10
2-5 EXPANSION CARD .....	11
2-5-1 PROCEDURE FOR EXPANSION CARD INSTALLATION .....	11
2-5-2 ASSIGNING IRQ FOR EXPANSION CARD .....	11
2-5-3 INTERRUPT REQUEST TABLE FOR THIS MOTHERBOARD .....	12
2-5-4 PCI-Express SLOT .....	12
2-6 CONNECTORS, HEADERS.....	13
2-6-1 CONNECTORS .....	13
2-6-2 HEADERS .....	16
2-7 STARTING UP YOUR COMPUTER .....	20
<b>CHAPTER 3 INTRODUCING BIOS</b>	
3-1 ENTERING SETUP .....	21
3-2 GETTING HELP .....	21
3-3 THE MAIN MENU.....	22
3-4 STANDARD CMOS FEATURES.....	23
3-5 ADVANCED BIOS FEATURES.....	24
3-6 ADVANCED CHIPSET FEATURES.....	26
3-6-1 DRAM TIMING SETTINGS.....	27
3-6-2 VGA SETTINGS.....	28
3-7 INTEGRATED PERIPHERALS .....	28
3-7-1 ONCHIP IDE FUNCTION .....	29
3-7-2 ONCHIP DEVICE FUNCTION.....	30
3-7-3 ONCHIP SUPER IO FUNCTION .....	31
3-8 POWER MANAGEMENT SETUP .....	32
3-9 MISCELLANEOUS CONTROL.....	33
3-9-1 IRQ RESOURCES.....	33
3-10 PC HEALTH STATUS .....	34
3-10-1 SMART FAN CONFIGURATIONS .....	34
3-11 THERMAL THROTTLING OPTIONS .....	35
3-12 POWER USER OVERCLOCK SETTINGS .....	37
3-13 PASSWORD SETTINGS .....	40
3-14 LOAD STANDARD/OPTIMIZED DEFAULTS.....	40
<b>CHAPTER 4 DRIVER &amp; FREE PROGRAM INSTALLATION</b>	
MAGIC INSTALL SUPPORTS WINDOWS 9X/ME/NT4.0/2000/XP .....	41
4-1 NFORCE INSTALL NFORCE INTEGRATED DRIVER .....	42
4-2 SOUND INSTALL ALC850 8-CHANNEL AUDIO DRIVER.....	44
4-3 USB2.0 INSTALL INTEL USB2.0 DRIVER .....	44
4-4 PC-CILLIN INSTALL PC-CILLIN 2005 ANTI-VIRUS PROGRAM.....	45
4-5 PC-HEALTH INSTALL MYGUARD HARDWARE MONITOR UTILITY .....	46
4-6 HOW TO UPDATE BIOS .....	46
4-7 NFORCE4 PLATFORM RAID FUNCTION INSTALLATION.....	47
4-8 Pro Magic Plus Function Introduction .....	49
<i>APPENDIX: Debug Port Post Code.....</i>	<i>il</i>

---

---

---

## USER'S NOTICE

**COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.**

**THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE 939GT3 MOTHER-BOARD AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).**

**PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.**

## Manual Revision Information

Reversion	Revision History	Date
1.0	First Edition	March 2006

### Item Checklist

- 939GT3-PT/939GT3-PTD motherboard
- Cable for IDE/Floppy
- CD for motherboard utilities
- Cable for Serial ATA IDE Port
- SPDIF-IN/SPDIF-OUT Adaptor
- 939GT3-PT / 939GT3-PTD User's Manual

## AMD K8 Processor Family Cooling Solutions

As processor technology pushes to faster speeds and higher performance with increasing operation clock, thermal management becomes increasingly crucial while building computer systems. Maintaining the proper computing environment without thermal increasing is the key to reliable, stable, and 24 hours system operation. The overall goal is keeping the processor below its specified maximum case temperature. Heatsinks induce improved processor heat dissipation through increasing surface area and concentrated airflow from attached active cooling fans. In addition, interface materials allow effective transfers of heat from the processor to the heatsink. For optimum heat transfer, AMD recommends the use of thermal grease and mounting clips to attach the heatsink to the processor.

Please refer to the website below for collection of heatsinks evaluated and recommended for Socket-939 processors by AMD. In addition, this collection is not intended to be a comprehensive listing of all heatsinks that support Socket-939 processors.

For vendor list of heatsinks and Active cooling fans, please visit :

[http://www.amd.com/us-en/Processors/DevelopWithAMD/0,,30\\_2252\\_869\\_9460^9515,00.html](http://www.amd.com/us-en/Processors/DevelopWithAMD/0,,30_2252_869_9460^9515,00.html)

---

---

# Chapter 1

## Introduction of 939GT3 Motherboard Series

### 1-1 Features of motherboard

The 939GT3 motherboard series are based on the latest NVIDIA GeForce 6100 GPU (C51G) chipset and NVIDIA nForce 410 MCP (MCP51G) chipset which supports the innovative and supercharged 64-bit AMD Athlon64 and Sempron processors with HyperTransport Technology up to 1000MHz. 939GT3 motherboard series deliver the outstanding system performance and professional desktop platform solution with the advantages of 64-bit AMD Athlon64 & Sempron processors. By implementing the new generation NVIDIA GeForce 6100 GPU (C51G) integrated graphic processor chipset which adopts the innovative 90nm process technology, the GeForce 6100 GPU (C51G) chipset integrated video graphics array brings more compatibility, stability and reliability with the widest range of games and applications to the desktop platform system, more over, it is easy-to-use for the users, because you need no to install the video graphic array drivers twice with the outstanding UDA technology from NVIDIA. The motherboard supports NVIDIA purevideo™ technology delivering stunning HD(high definition) video in all formats and with superb picture clarity that brings the best visual experience and ultra-realistic effects to the users. With utilizing the 64-bit ready socket-939 processor and the dual channel PC3200 DDR memory which size is expandable to 4.0GB, moreover, 939GT3 motherboard series are embedded with TV-Out function and SPDIF In/Out connectors for the Digital Display and audio devices delivering more flexibility and expandability. 939GT3 motherboard series are the real cost-effective and powerful integrated multimedia platform solutions and meet the demanding usage of computing now and future.

The motherboards incorporate the integrated NVIDIA GeForce 6100 GPU (C51G) which is fully compatible with Microsoft® DirectX® 9.0C and Shader Model 3.0. And it also supports 1000 MHz HyperTransport speed of data transfer rate which also provides with 133MHz / 166MHz / 200MHz memory clock frequency for dual channel DDR266/DDR333/DDR400 DDR DIMM modules up to 4.0 GB. And NVIDIA nForce 410MCP (MCP51G) chipset accommodates ULTRA ATA 133 connectors and Serial ATA2 with RAID 0 and RAID1 functions which support up to four IDE and two Serial ATA2 devices to accelerate hard disk drives and guarantee the data security without failure in advanced computing performance.

The 939GT3-PT&939GT3-PTD motherboards provide 10/100 LAN function with Realtek 8201CL 10/100 LAN PHY which supports 10/100Mbps data transfer rate. Embedded 8-channel AC'97 CODEC is fully compatible with Sound Blaster Pro® standards that provides you with the home cinema quality and absolutely software compatibility.

939GT3 motherboard series offer one PCI-Express x16 graphics slot of 4Gbyte/sec data transfer rate at each relative direction which get 3.5 times of bandwidth more than AGP8X and it's up to a peak concurrent bandwidth of 8Gbyte/sec at full speed to guarantee the fully operational GPU graphics power. Two 32-bit PCI slots guarantee the rich connectivity for the I/O peripheral devices. One PCI Express x1 I/O slot offers 512Mbyte/sec concurrently, over 3.5 times more bandwidth than PCI at 133Mbyte/sec.

---

---

Embedded USB controller as well as capability of expanding to 8 of USB2.0 functional ports delivering 480Mb/s bandwidth and rich connectivity, these motherboards meet the future USB demands which are also equipped with hardware monitor function on system to monitor and protect your system and maintain your non-stop business computing.

Some special features---**CPU Thermal Throttling/ CPU Vcore 7-shift/ CPU Smart Fan/ Debug Port(Option)** in this motherboard are designed for power user to use the over-clocking function in more flexible ways. But please be caution that the over-clocking maybe cause the fails in system reliabilities. This motherboard provides the guaranteed performance and meets the demands of the next generation computing. But if you insist to gain more system performance with variety possibilities of the components you choose, please be careful and make sure to read the detailed descriptions of these value added product features, please get them in the coming section.

## 1-1.1 Special Features of motherboard

### **CPU Thermal Throttling Technology**---(The CPU Overheat Protection Technology)

To prevent the increasing heat from damage of CPU or accidental shutdown while at high workload, the CPU Thermal Throttling Technology will force CPU to enter partially idle mode from 87.5% to 12.5% according to preset CPU operating temperature in BIOS (from 40 °C to 90°C). When the system senses the CPU operating temperature reaching the preset value, the CPU operating bandwidth will be decreased to the preset idle percentage to cool down the processor. When at throttling mode the beeper sound can be optionally selected to indicate it is in working. (*for detail operating please read Section 3-11 Bi-turbo Configuration*)

### **Debug Port (Optional)**--- ( The Professional Hardware Diagnosis System )

Being bugged of abnormal system failure through the tossed and turned nights no more, the embedded Hardware Debug Port offers you the real-time visual system healthy for the demanding usage of computing. No more bugging by unknown system failure and no more time wasted in the first moment of 24-hour nonstop ping business computing, the embedded Debug Port will turn you into a well training hardware professional with the seeing system situation. (The Post Code please refer Appendix)

### **CPU Smart Fan**---( The Noise Management System )

It's never been a good idea to gain the performance of your system by sacrificing its acoustics. CPU Smart Fan Noise Management System is the answer to control the noise level needed for now-a-day's high performance computing system. The system will automatically increase the fan speed when CPU operating loading is high, after the CPU is in normal operating condition, the system will low down the fan speed for the silent operating environment. The system can provide the much longer life cycle for both CPU and the system fans for game use and business requirements.

### **CPU Vcore 7-Shift**--- ( Shift to Higher Performance )

The CPU voltage can be adjusted up by 7 steps for the precisely over-clocking of extra demanding computing performance.

## 1-2 Specification

<b>Spec</b>	<b>Description</b>
<b>Design</b>	* ATX form factor 4 layers PCB size: 24.4x23cm
<b>Chipset</b>	* NVIDIA GeForce 6100 Graphic Processing Unit Chipset (C51G) * NVIDIA nForce 410 Media and Communication Processor Chipset(MCP51G)
<b>CPU Socket 939</b>	* Support 64bit AMD Athlon64 / Sempron 939-Pin package utilizes Flip-Chip Pin Grid Array package processor * Support for future AMD Athlon64 / Sempron 939-pin processors up to 4000+ or above with HTT Frequency up to 1000 MHz
<b>Memory Socket</b>	* 184-pin DDR Module socket x 4 * Support 4pcs DDR266/DDR33/DDR400 DDR Modules Expandable to 4.0GB * Support Dual Channel Function
<b>Expansion Slot</b>	* PCI-Express x16 slot 1pcs deliver up to 8GB/s concurrent bandwidth * PCI-Express x1 slot 1pcs delivers up to 512MB/s concurrent bandwidth * 32-bit PCI slot x 2pcs
<b>Integrate IDE and Serial ATA2 RAID</b>	* Two IDE controllers support PCI Bus Mastering, ATA PIO/DMA and the ULTRA DMA 33/66/100/133 functions that deliver the data transfer rate up to 133 MB/s. * Two Serial ATA2 ports provide 300 MB/sec data transfer rate with RAID 0 and RAID 1 functions.
<b>LAN</b>	* Integrated Realtek RTL8201CL 10/100 LAN for 939GT3-PT&939GT3-PTD. * Supports Fast Ethernet LAN function provide 10/100Mb /s data transfer rate
<b>8CH-Audio</b>	* AC'97 Digital Audio controller integrated * 8-channel AC'97 Audio CODEC onboard * Audio driver and utility included
<b>DVI Connector</b>	* DVI connector support Digital Video Interface Display LCD monitor for 939GT3-PTD only
<b>TV-Out</b>	* Embedded TV-Out functions
<b>BIOS</b>	* Award 4MB Flash ROM
<b>Multi I/O</b>	* PS/2 keyboard and PS/2 mouse connectors * Floppy disk drive connector x1 * Parallel port x1 * SPDIF In/Out port x1(Not for 939GT3-PTD) * VGA port x1 * DVI Connector x1(Only for 939GT3-PTD) * USB2.0 port x 4 and headers x 4 (connecting cable option) * Audio connector (Line-in, Line-out, MIC/ 8CH Audio)

## 1-3 Performance List

The following performance data list is the testing result of some popular benchmark testing programs. These data are just referred by users, and there is no responsibility for different testing data values gotten by users (the different Hardware & Software configuration will result in different benchmark testing results.)

### Performance Test Report

**CPU:** AMD K8 Athlon 64 3200+ ( 939 / 512K L2 cache)  
**DRAM:** KingMax MPTC220D-38HT DDR-500 512M X 2 (1Gbyte) Memory  
**VGA Card :** Onboard VGA share 64M (1024X768X32BIT Color)  
**Hard Disk Driver:** Seagate Barracude 7200.7 SATA150  
**BIOS:** Award Optimal default  
**OS:** Windows XP Professional (SERVICE PACK 2)

	200/200 Single channel (C51G)	200/200 Single channel (GeForce6600GT)
<b>3D Mark 2001SE</b>	5179	4961
<b>3D Mark 2003</b>	1392	1304
<b>3D Mark 2005</b>	704	624
<b>AQUAMRK3</b>	12962 (1440 / 6431)	11512 (1260 / 6635)
<b>PCMark2004</b>		
<b>System / CPU / Memory</b>	3552 / 3822 / 4298	3558 / 3818 / 4307
<b>Graph / HDD</b>	1542 / 4573	1427 / 4594
<b>Content Creation Winstone 2004</b>	31.2	31.1
<b>Business Winstone 2004</b>	22.3	22.4
<b>Winbench 99 V2.0:</b>		
<b>Business/Hi-end Disk Winmark99</b>	10400 / 25600	10900 / 22600
<b>Business/Hi-end Graphic Winmark</b>	849 / 1890	839 / 1900
<b>SISMark 2004: SISMark Rating(Internet Content Creation / Office Productivity )</b>		
<b>SISMark 2004</b>	167 (179 / 155)	165 (176 / 155)
<b>3D Creation / 2D Creation</b>	173 / 209	166 / 208
<b>/ Web publication</b>	158	157
<b>Communication / Document</b>	145 / 173	146 / 171
<b>/ Data Analysis</b>	149	149
<b>SISOFT Sandra 2004 : 1.CPU Arithmetic Benchmark 2.Memory bandwidth Benchmark 3.CPU Multi-Media Benchmark</b>		
<b>1.Dhrystone ALU MIPS</b>	9294	9294
<b>Whetstone FPU iSSE2 FLOPS</b>	3173 / 4107	3173 / 4108
<b>2.Int/Float Buffered MB/S</b>	4495 / 4490	4489 / 4485
<b>3.Integer/Floating-Point IT/S</b>	19162 / 20609	19163 / 20611
<b>UT2003 Benchmark</b>	59.26 / 36.66	56.55 / 34.76
<b>Quake3 DEMO1 / FPS</b>	13.0	12.5
<b>DOOM3 FPS</b>	13.0	12.5
<b>Super Pi (1M) Second</b>	44s	44s
<b>CPUZ System / CPU Clock</b>	200.9 / 200.9 / 2009.2	200.9 / 200.9 / 2009.2



## Jumpers

Jumper	Name	Description	Page
JBAT	CMOS RAM Clear	3-pin Block	P.7
JP1	Keyboard/USB0,1 Power On Enabled/Disabled	3-pin Block	P.8
JP3	USB Power On Enabled/Disabled	3-pin Block	P.8

## Connectors

Connector	Name	Description	Page
ATXPWR24P	ATX Power Connector	24-pin Block	P.13
ATX12V	ATX 12V Power Connector	4-pin Block	P.13
PS2KBMS	PS/2 Mouse & PS/2 Keyboard Connector	6-pin Female	P.14
USB1	USB Port Connector	4-pin Connector	P.14
UL1	10/100 LAN Port Connector	RJ-45 Connector	P.14
PARALLEL	Parallel Port Connector	25-pin Female	P.14
J1	8-CH Audio Connector	6 phone jack Connector	P.14
VGA	Video Graphic Attach Connector	15-pin Female	P.14
SPDIF In/Out	SPDIF In/Out Connector(for 939GT3-PT)	1 jack Connector	P.14
DVI	Digital Video Interface Connector (For 939GT3-PTD)	24-pin Female	P.14
FDD	Floppy Driver Connector	34-pin Block	P.14
IDE1/IDE2	Primary/Secondary IDE Connector	40-pin Block	P.15
SATAII1~2	Serial ATAII IDE Connector	7-pin Connector	P.16

## Headers

Header	Name	Description	Page
AUDIO	SPEAKER, MIC header	9-pin Block	P.16
USB2, USB3	USB Port Headers	9-pin Block	P.17
SPEAK	PC Speaker connector	4-pin Block	P.17
PWR LED	Power LED	3-pin Block	P.17
JW_FP (Power LED/Reset/ IDE LED/Power Button)	Front Panel Header (including Power LED/ IDE activity LED/Reset switch / Power On Button lead)	9-pin Block	P.17
SFAN1, SFAN2,CPUFAN	FAN Headers	3-pin Block	P.18
CDIN	CD Audio-In Header	4-pin Block	P.18
COM2	Serial Port Header	9-pin Block	P.19
SPDIF	Optical In/Out Header	9-pin Block	P.18
TV-OUT	TV-OUT Header	9-pin Block	P.19

## Expansion Sockets

Socket/Slot	Name	Description	Page
ZIF Socket 939	CPU Socket	939-pin mPGAB Athlon64 CPU Socket	P.9
DIMM1~4	DDR Module Socket	184-pin DDR Module Socket	P.10
PCI1~ PCI2	PCI Slot	32-bit PCI Local Bus Expansion slots	P.12
PE1	PCI-Express x1 Slot	PCI-Express x1 Expansion Slot	P.12
PE2	PCI-Express x16 Slot	PCI-Express x16 Expansion Slot	P.12

---

---

# Chapter 2

## Hardware Installation

### 2-1 Hardware installation Steps

Before using your computer, you had better complete the following steps:

1. Check motherboard jumper setting
2. Install CPU and Fan
3. Install System Memory (DIMM)
4. Install Expansion cards
5. Connect IDE and Floppy cables, Front Panel /Back Panel cable
6. Connect ATX Power cable
7. Power-On and Load Standard Default
8. Reboot
9. Install Operating System
10. Install Driver and Utility

### 2-2 Checking Motherboard's Jumper Setting

#### (1) CMOS RAM Clear (3-pin) : JBAT


A battery must be used to retain the motherboard configuration in CMOS RAM short 1-2 pins of JBAT to store the CMOS data.

To clear the CMOS, follow the procedure below:

1. Turn off the system and unplug the AC power
2. Remove ATX power cable from ATX power connector
3. Locate JBAT and short pins 2-3 for a few seconds
4. Return JBAT to its normal setting by shorting pins 1-2
5. Connect ATX power cable back to ATX power connector

**Note: When should clear CMOS**



1. *Troubleshooting*
2. *Forget password*
3. *After over clocking system boot fail*

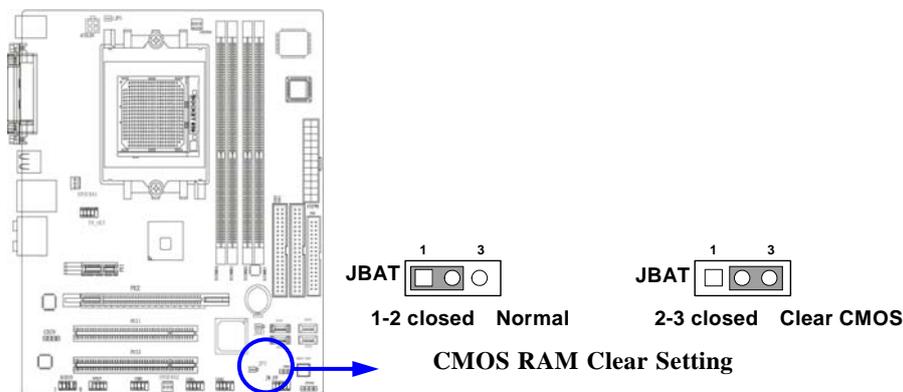

---


---

## (2) Keyboard function Enabled/Disabled: JP1

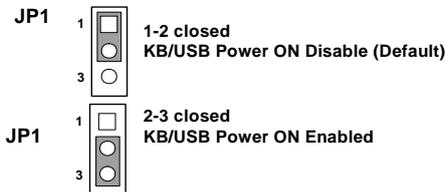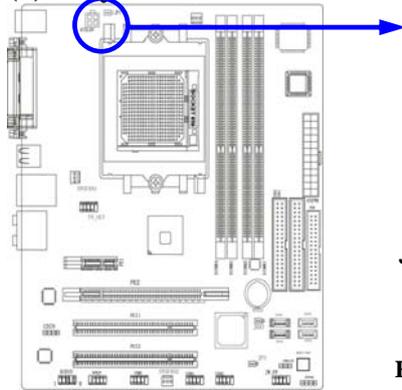

Keyboard/Mouse & USB Power On Setting

## (3) USB Power On function Enabled/Disabled: JP3

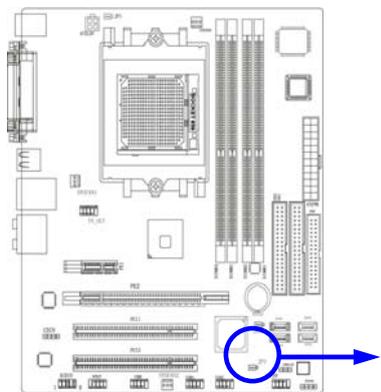

USB2/USB3 Power On Setting

## 2-3 Install CPU

### 2-3-1 Glossary

**Chipset (or core logic)** - two or more integrated circuits which control the interfaces between the system processor, RAM, I/O devices, and adapter cards.

**Processor slot/socket** - the slot or socket used to mount the system processor on the motherboard.

**Slot (PCI-E, PCI, RAM)** - the slots used to mount adapter cards and system RAM.

**AGP - Accelerated Graphics Port** - a high speed interface for video cards; runs at 1X (66MHz), 2X (133MHz), or 4X (266MHz), or 8X (533MHz).

**PCI - Peripheral Component Interconnect** - a high speed interface for video cards, sound cards, network interface cards, and modems; runs at 33MHz.

**PCI Express-** Peripheral Component Interconnect Express- a high speed interface for video cards, sound cards, network interface cards, and modems.

**Serial Port** - a low speed interface typically used for mouse and external modems.

**Parallel Port** - a low speed interface typically used for printers.

**PS/2** - a low speed interface used for mouse and keyboards.

**USB - Universal Serial Bus** - a medium speed interface typically used for mouse, keyboards, scanners, and some digital cameras.

---

---

**Sound** (interface) - the interface between the sound card or integrated sound connectors and speakers, MIC, game controllers, and MIDI sound devices.

**LAN** (interface) - **Local Area Network** - the interface to your local area network.

**BIOS** (**B**asic **I**nput/**O**utput **S**ystem) - the program logic used to boot up a computer and establish the relationship between the various components.

**Driver** - software, which defines the characteristics of a device for use by another device or other software.

**Processor** - the "central processing unit" (CPU); the principal integrated circuit used for doing the "computing" in "personal computer"

**Front Side Bus Frequency** - the working frequency of the motherboard, which is generated by the clock generator for CPU, DRAM and PCI BUS.

**CPU L2 Cache** - the flash memory inside the CPU, normal it depend on CPU type.


## 2-3-2 About AMD Athlon64 939-pin CPU

This motherboard provides a 939-pin surface mount, Zero Insertion Force (ZIF) socket, referred to as the mPGA939 socket supports AMD Athlon64 processor in the 939 Pin package utilizes Flip-Chip Pin Grid Array package technology.

The CPU that comes with the motherboard should have a cooling FAN attached to prevent overheating. If this is not the case, then purchase a correct cooling FAN before you turn on your system.

**WARNING!** Be sure that there is sufficient air circulation across the processor's heatsink and CPU cooling FAN is working correctly, otherwise it may cause the processor and motherboard overheat and damage, you may install an auxiliary cooling FAN, if necessary.

To install a CPU, first turn off your system and remove its cover. Locate the ZIF socket and open it by first pulling the level sideways away from the socket then upward to a 90-degree angle. Insert the CPU with the correct orientation as shown below. The notched corner should point toward the end of the level. Because the CPU has a corner pin for two of the four corners, the CPU will only fit in the orientation as shown.

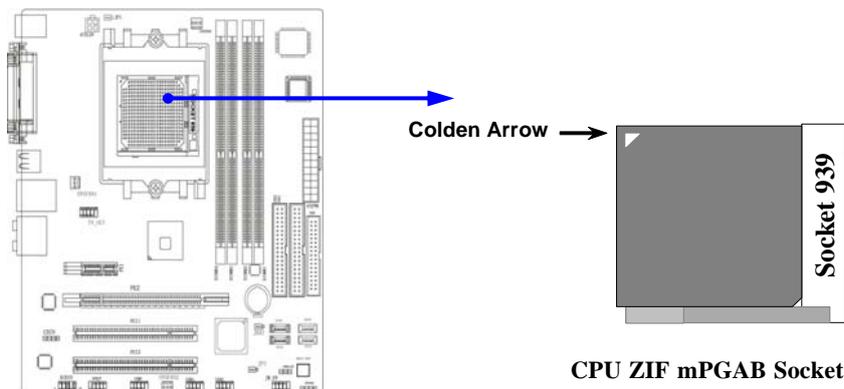

When you put the CPU into the ZIF socket. No force require to insert of the CPU, then press the level to Locate position slightly without any extra force.

## 2-4 Install Memory

This motherboard provides **four** 184-pin DDR DUAL INLINE MEMORY MODULES (DIMM) sites for DDR memory expansion available from minimum memory size of 128MB to maximum memory size of 4.0GB DDR SDRAM.

### Valid Memory Configurations

Bank	184-Pin DIMM	PCS	Total Memory
Bank 0, 1 (DIMM1)	DDR266/DDR333/DDR400	X1	128MB~1.0GB
Bank 2, 3 (DIMM2)	DDR266/DDR333/DDR400	X1	128MB~1.0GB
Bank 4, 5 (DIMM3)	DDR266/DDR333/DDR400	X1	128MB~1.0GB
Bank 6,7 (DIMM4)	DDR266/DDR333/DDR400	X1	128MB~1.0GB
Total	System Memory (Max. 4.0GB)	4	128MB~4.0GB

### Recommend DIMM Module Combination

1. *One DIMM Module ---Plug in DIMM1*
2. *Two DIMM Modules---Plug in DIMM1 and DIMM3 for Dual channel function*
3. *Four DIMM Modules---Plug in DIMM1/DIMM2/DIMM3/DIMM4.*

### For Dual channel Limited!

4. Dual channel function only supports when 2 DIMM Modules plug in either both DIMM1 & DIMM3 or DIMM2 & DIMM4, or four DIMM Modules plug in DIMM1~DIMM4.
5. DIMM1 & DIMM3, or DIMM2 & DIMM4 must be the same type, same size, same frequency for dual channel function.

Generally, installing DDR SDRAM modules to your motherboard is very easy, you can refer to figure 2-4 to see what a 184-Pin DDR266/DDR333/DDR400 DDR SDRAM module looks like.

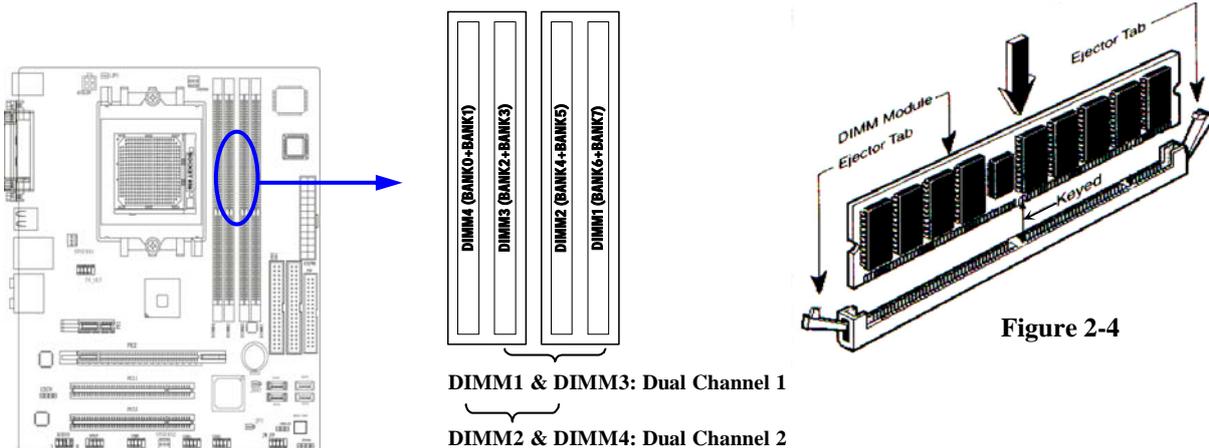


Figure 2-4

### NOTE!

When you install DIMM module fully into the DIMM socket the eject tab should be locked into the DIMM module very firmly and fit into its indentation on both sides.

---

---

**WARNING!** For the DDR SDRAM CLOCK is set at 200MHz, use only DDR400- compliant DDR Modules. When this motherboard operate at 200Mhz, most system will not even boot if non-compliant modules are used because of the strict timing issues, if your DDR Modules are not DDR400-compliant, set the SDRAM clock to 133MHz to ensure system stability.

## 2-5 Expansion Cards

**WARNING!** Turn off your power when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both your motherboard and expansion cards.

### 2-5-1 Procedure For Expansion Card Installation

1. Read the documentation for your expansion card and make any necessary hardware or software setting for your expansion card such as jumpers.
2. Remove your computer's cover and the bracket plate on the slot you intend to use.
3. Align the card's connectors and press firmly.
4. Secure the card on the slot with the screen you remove above.
5. Replace the computer system's cover.
6. Set up the BIOS if necessary.
7. Install the necessary software driver for your expansion card.

### 2-5-2 Assigning IRQs For Expansion Card

Some expansion cards need an IRQ to operate. Generally, an IRQ must exclusively assign to one use. In a standard design, there are 16 IRQs available but most of them are already in use.

#### Standard Interrupt Assignments

IRQ	Priority	Standard function
0	N/A	System Timer
1	N/A	Keyboard Controller
2	N/A	Programmable Interrupt
3 *	8	Communications Port (COM2)
4 *	9	Communications Port (COM1)
5 *	6	Sound Card (sometimes LPT2)
6 *	11	Floppy Disk Controller
7 *	7	Printer Port (LPT1)
8	N/A	System CMOS/Real Time Clock
9 *	10	ACPI Mode when enabled
10 *	3	IRQ Holder for PCI Steering
11 *	2	IRQ Holder for PCI Steering
12 *	4	PS/2 Compatible Mouse Port
13	N/A	Numeric Data Processor
14 *	5	Primary IDE Channel
15 *	1	Secondary IDE Channel

\* These IRQs are usually available for ISA or PCI devices.

---

---

### 2-5-3 Interrupt Request Table For This Motherboard


Interrupt request are shared as shown the table below:

	INT A	INT B	INT C	INT D	INT E	INT F	INT G	INT H
Slot 1		√						
Slot 2			√					
Onboard USB 2	√							
Onboard USB 3		√						
AC97/MC97			√					

**IMPORTANT!** If using PCI cards on shared slots, make sure that the drivers support “Shared IRQ” or that the cards don’t need IRQ assignments. Conflicts will arise between the two PCI groups that will make the system unstable or cards inoperable.

### 2-5-4 PCI Express Slot

One PCI-Express x16 graphics slot offers 4Gbyte/sec data transfer rate at each relative direction.), and one x1 PCI Express Slot. Fully compliant to the *PCI Express Base Specification revision 1.0a* , support PCI Express VGA card, and other PCI Express device.

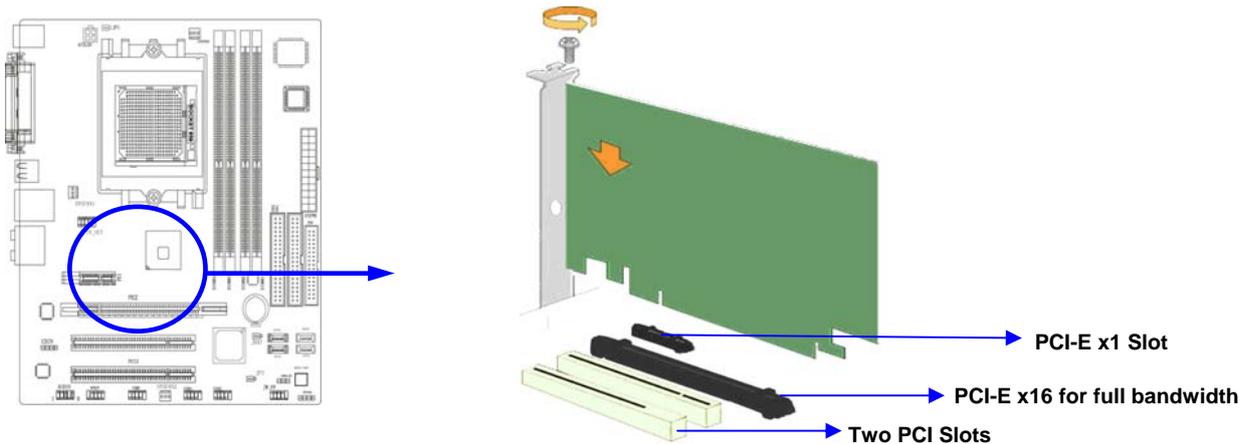


## 2-6 Connectors, Headers

### 2-6-1 Connectors

**(1) Power Connector (24-pin block) : ATXPWR24P**


ATX Power Supply connector. This is a new defined 24-pins connector that usually comes with ATX case. The ATX Power Supply allows to use soft power on momentary switch that connect from the front panel switch to 2-pins Power On jumper pole on the motherboard. When the power switch on the back of the ATX power supply turned on, the full power will not come into the system board until the front panel switch is momentarily pressed. Press this switch again will turn off the power to the system board.

- \*\* We recommend that you use an ATX 12V Specification 2.0-compliant power supply unit (PSU) with a minimum of 350W power rating. This type has 24-pin and 4-pin power plugs.
- \*\* If you intend to use a PSU with 20-pin and 4-pin power plugs, make sure that the 20-pin power plug can provide at least 15A on +12V and the power supply unit has a minimum power rating of 350W. The system may become unstable or may not boot up if the power is inadequate.

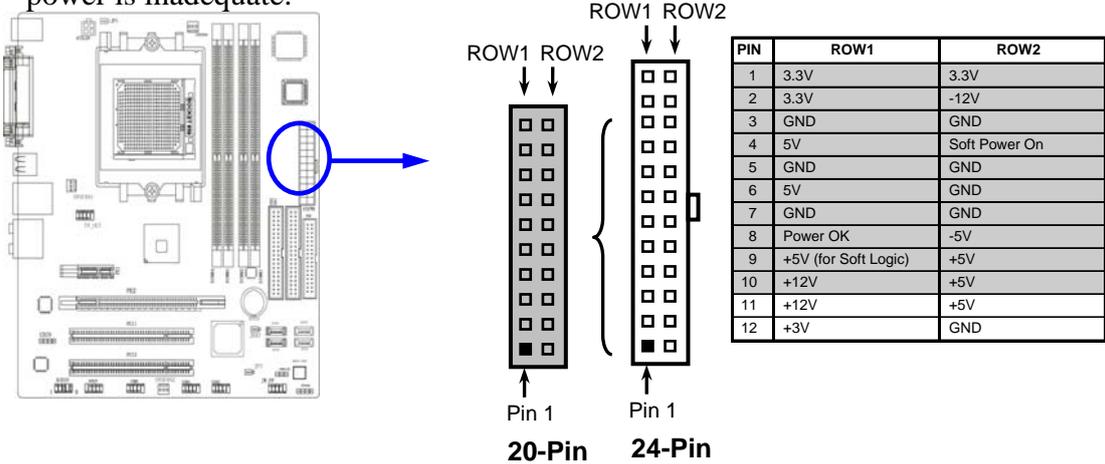

**(2) ATX 12V Power Connector (4-pin block) : ATX12V**

This is a new defined 4-pins connector that usually comes with ATX Power Supply. The ATX Power Supply which fully support Pentium 4 processor must including this connector for support extra 12V voltage to maintain system power consumption. Without this connector might cause system unstable because the power supply can not provide sufficient current for system.

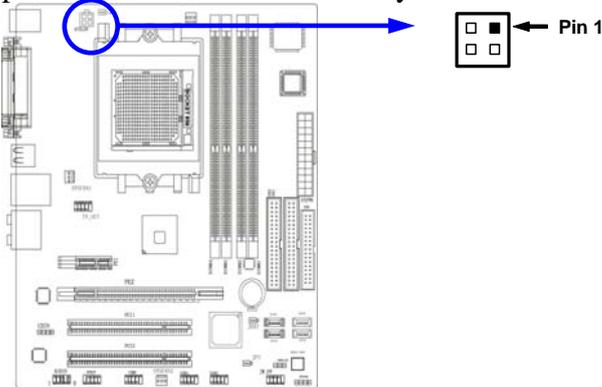

---

---

(3) **PS/2 Mouse & PS/2 Keyboard Connector: PS2KBMS**

The connectors for PS/2 keyboard and PS/2 Mouse.

(4) **USB Port connector: USB1**

The connectors are 4-pin connector that connect USB devices to the system board.

(5) **LAN Port connector: UL1**

This connector is standard RJ45 connector for Network

It supports 10M/100Mb/s data transfer rate(10M/100M/1000Mb/s for 939GT3-GT&939GT3PV-G)

(6) **Parallel Port Connector (25-pin female): PARALLEL**

Parallel Port connector is a 25-pin D-Subminiature Receptacle connector. The On-board Parallel Port can be disabled through the BIOS SETUP. Please refer to Chapter 3 "INTEGRATED PERIPHERALS SETUP" section for more detail information.

(7) **Audio Line-In, Lin-Out, MIC, Surrback, Surround, CEN/LEF Connector : J1**

This Connector are 6 phone Jack for LINE-OUT, LINE-IN, MIC, Surrback, Surround, CEN/LEF

**Line-in : (BLUE)** Audio input to sound chip

**Line-out : (GREEN)** Audio output to speaker

**MIC : (PINK)** Microphone Connector

**Surrback : (ORANGE in 939GT3-PT) (BLACKNESS in 939GT3-PTD)** Audio output to speaker-Rear speaker out


**CEN/LEF : (BLACKNESS in 939GT3-PT) (ORANGE in 939GT3-PTD)** Audio output to speaker-Center/ Subwoofer speaker out

**Surround: (GRAY)** Audio output to speaker-Side speaker out

(8) **SPDIF In/Out&VGA Connector : SPDIF In/Out/VGA**


The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby digital decoder. Use this feature only when your stereo system has digital input function. Use SPDIF IN feature only when your device has digital output function.

VGA is the 15-pin D-Subminiature female connector, it is for the display devices, such as the CRT monitor, LCD monitor and so on.

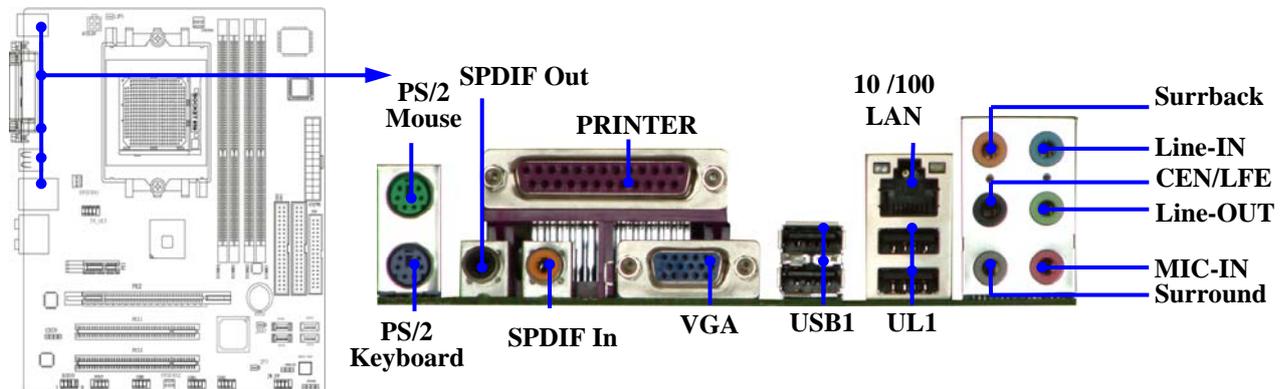


(9) **Digital Video Interface: DVI (For 939GT3-PTD)**

DVI is the 24-pin Digital Video Interface female connector, it is for the display devices, such as the CRT monitor, LCD monitor and so on.

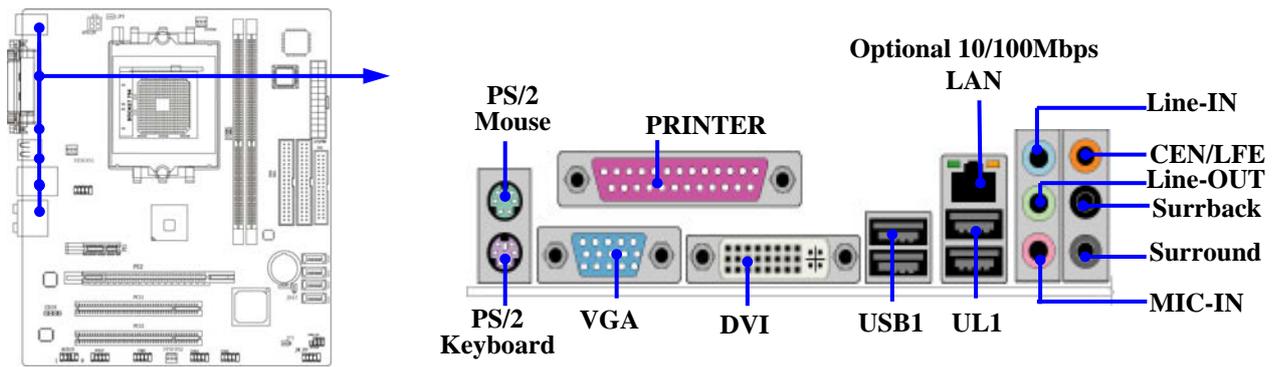


**(10) Floppy drive Connector (34-pin block): FDD**

This connector supports the provided floppy drive ribbon cable. After connecting the single plug end to motherboard, connect the two plugs at other end to the floppy drives.

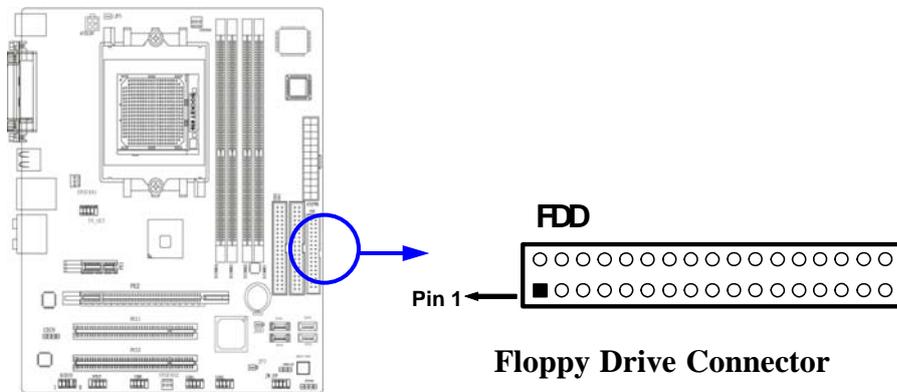

**(11) Primary IDE Connector (40-pin block): IDE1**

This connector supports the provided IDE hard disk ribbon cable. After connecting the single plug end to motherboard, connect the two plugs at other end to your hard disk(s). If you install two hard disks, you must configure the second drive to Slave mode by setting its jumpers accordingly. Please refer to the documentation of your hard disk for the jumper settings.

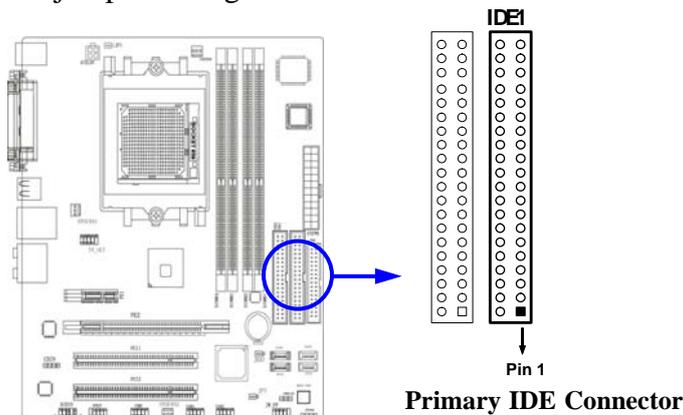


**(12) Secondary IDE Connector (40-pin block): IDE2**

This connector connects to the next set of Master and Slave hard disks. Follow the same procedure described for the primary IDE connector. You may also configure two

---

---


hard disks to be both Masters using one ribbon cable on the primary IDE connector and another ribbon cable on the secondary IDE connector.

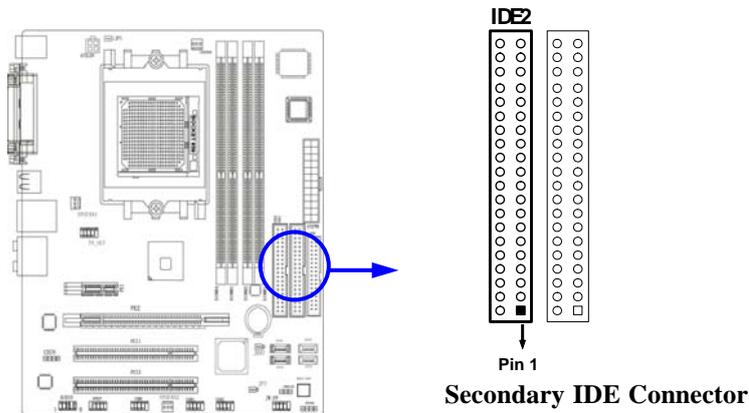

- Two hard disks can be connected to each connector. The first HDD is referred to as the “Master” and the second HDD is referred to as the “Slave”.
- For performance issues, we strongly suggest you don’t install a CD-ROM or DVD-ROM drive on the same IDE channel as a hard disk. Otherwise, the system performance on this channel may drop.

**(13) Serial-ATA2 Port connector: SATA1 / SATA2**

This connector supports the provided Serial ATA2 IDE hard disk cable to connecting the motherboard and serial ATA2 hard disk.

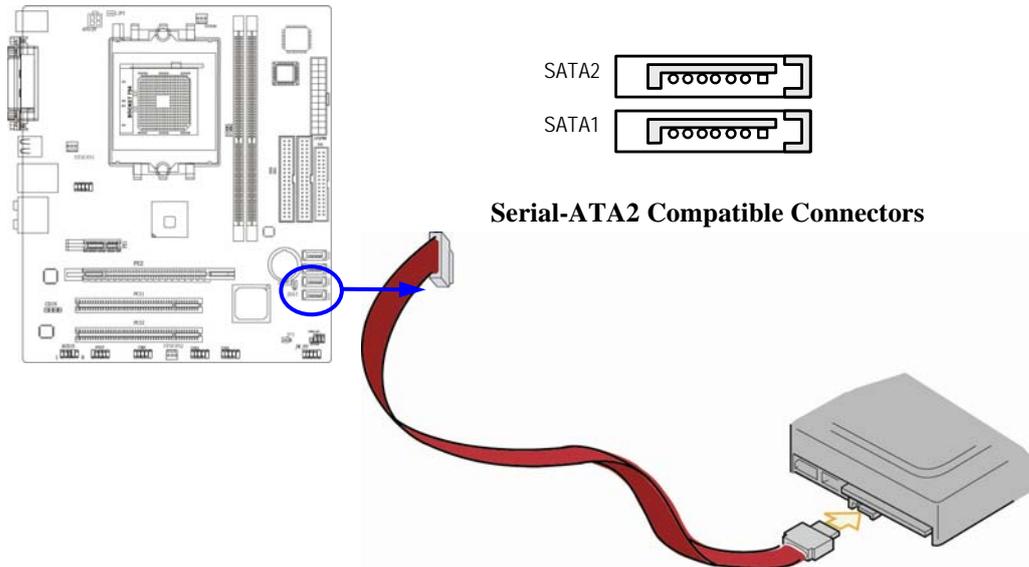


## 2-6-2 Headers

**(1) Line-Out/MIC Header for Front Panel (9-pin): AUDIO**


This header connect to Front Panel Line-out, MIC connector with cable.

Without install the cable, this header default setting is 5-6 short, 9-10 short. When you install the cable you have take off these jumpers.

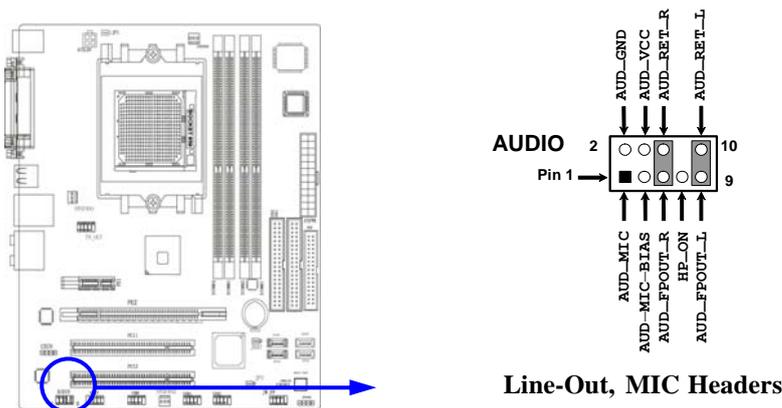

**(2) USB Port Headers (9-pin) : USB2/USB3**

These headers are used for connecting the additional USB port plug. By attaching an option USB cable, your can be provided with two additional USB plugs affixed to the back panel.

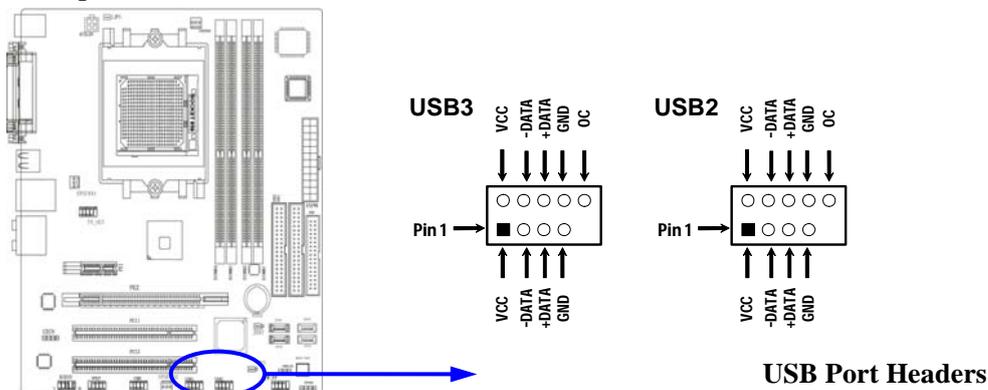

**(3) Speaker connector: SPEAK**

This 4-pin connector connects to the case-mounted speaker. See the figure below.

**(4) Power LED: PWR LED**

The Power LED is light on while the system power is on. Connect the Power LED from the system case to this pin.

**(5) IDE Activity LED: HD LED**


This connector connects to the hard disk activity indicator light on the case.

**(6) Reset switch lead: RESET**

This 2-pin connector connects to the case-mounted reset switch for rebooting your computer without having to turn off your power switch. This is a preferred method of rebooting in order to prolong the life of the system's power supply. See the figure below.


**(7) Power switch: PWR BTN**

This 2-pin connector connects to the case-mounted power switch to power ON/OFF the system.

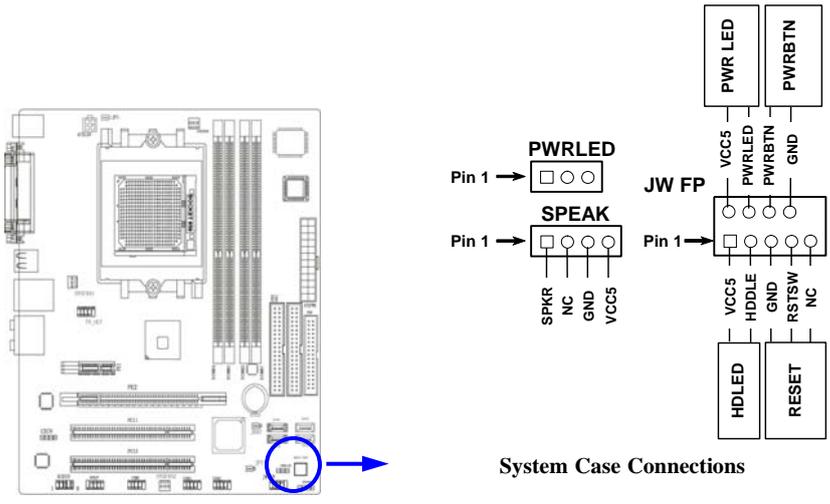



**(8) FAN Headers (3-pin) : SFAN1, SFAN2, CPUFAN**

These connectors support cooling fans of 350mA (4.2 Watts) or less, depending on the fan manufacturer, the wire and plug may be different. The red wire should be positive, while the black should be ground. Connect the fan's plug to the board taking into consideration the polarity of connector.

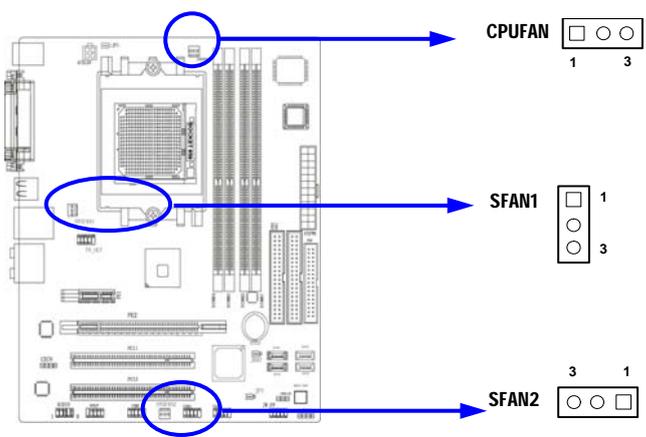



**(9) CD Audio-In Headers (4-pin) : CDIN**

 CDIN are the connectors for CD-Audio Input signal. Please connect it to CD-ROM CD-Audio output connector.

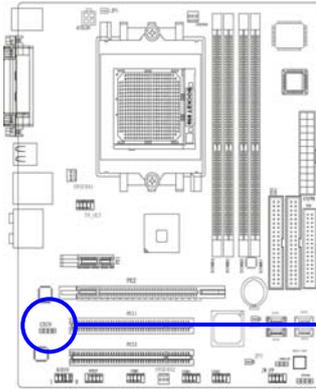

**CD Audio-In Headers**

**(10) In/Out Header: SPDIF (Module Optional)**

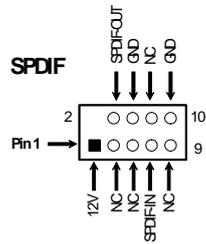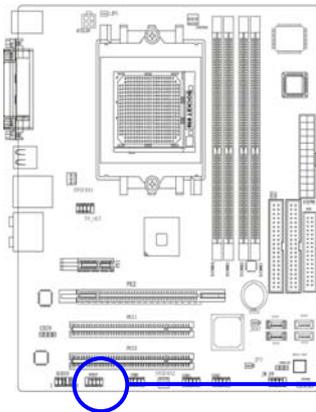

**SPDIF-Bracket Connector**

 



**(11) COM2 Port: COM2**

Com2 is for the serial devices, such as the joystick, the scanner and so on.

**(12) TV-OUT Header: TV-OUT**

This 10 pin connector is for the TV-out port module that allows you to connect a television to your system. Connect one end of the TV-out cable to this connector and the other end to the TV-out module.

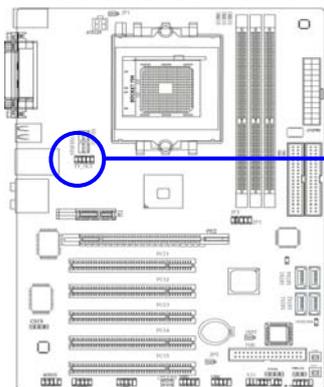

**TV-OUT Port Headers**

---

---

## 2-7 Starting Up Your Computer

1. After all connection are made, close your computer case cover.
2. Be sure all the switch are off, and check that the power supply input voltage is set to proper position, usually in-put voltage is 220V~240V or 110V~120V depending on your country's voltage used.
3. Connect the power supply cord into the power supply located on the back of your system case according to your system user's manual.
4. Turn on your peripheral as following order:
  - a. Your monitor.
  - b. Other external peripheral (Printer, Scanner, External Modem etc...)
  - c. Your system power. For ATX power supplies, you need to turn on the power supply and press the ATX power switch on the front side of the case.
5. The power LED on the front panel of the system case will light. The LED on the monitor may light up or switch between orange and green after the system is on. If it complies with green standards or if it is has a power standby feature. The system will then run power-on test. While the test are running, the BIOS will alarm beeps or additional message will appear on the screen.

If you do not see any thing within 30 seconds from the time you turn on the power. The system may have failed on power-on test. Recheck your jumper settings and connections or call your retailer for assistance.

Beep	Meaning
One short beep when displaying logo	No error during POST
Long beeps in an endless loop	No DRAM install or detected
One long beep followed by three short beeps	Video card not found or video card memory bad
High frequency beeps when system is working	CPU overheated System running at a lower frequency

6. During power-on, press <Delete> key to enter BIOS setup. Follow the instructions in BIOS SETUP.
7. **Power off your computer:** You must first exit or shut down your operating system before switch off the power switch. For ATX power supply, you can press ATX power switching after exiting or shutting down your operating system. If you use Windows 9X, click “**Start**” button, click “**Shut down**” and then click “**Shut down the computer?**” The power supply should turn off after windows shut down.

---

---

## Chapter 3

### Introducing BIOS

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.

In the BIOS Setup main menu of Figure 3-1, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press <Esc> to quit the BIOS Setup.
- Press ↑↓←→ (up, down, left, right) to choose, in the main menu, the option you want to confirm or to modify.
- Press <F10> when you have completed the setup of BIOS parameters to save these parameters and to exit the BIOS Setup menu.
- Press Page Up/Page Down or +/- keys when you want to modify the BIOS parameters for the active option.

### 3-1 Entering Setup

Power on the computer and by pressing <Del> immediately allows you to enter Setup.

If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

**Press <F1> to continue, <Ctrl-Alt-Esc> or <Del> to enter Setup**

### 3-2 Getting Help

#### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

#### Status Page Setup Menu/Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

---

---

### 3-3 The Main Menu

Once you enter Award® BIOS CMOS Setup Utility, the Main Menu (Figure 3-1) will appear on the screen. The Main Menu allows you to select from fourteen setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

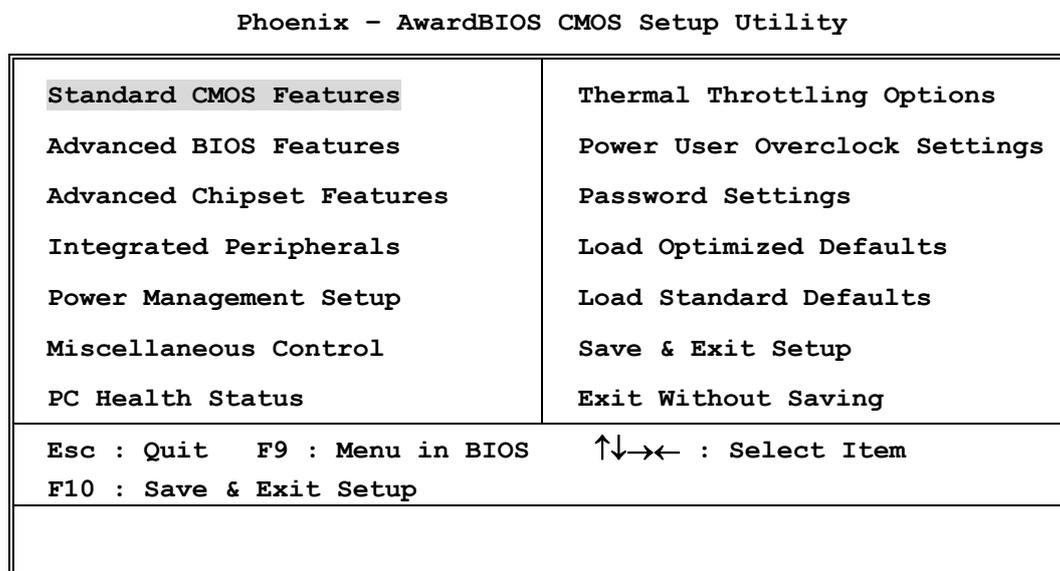


Figure 3-1

#### **Standard CMOS Features**

Use this Menu for basic system configurations.

#### **Advanced BIOS Features**

Use this menu to set the Advanced Features available on your system.

#### **Advanced Chipset Features**

Use this menu to change the values in the chipset registers and optimize your system's performance.

#### **Integrated Peripherals**

Use this menu to specify your settings for integrated peripherals.

#### **Power Management Setup**

Use this menu to specify your settings for power management.

#### **Miscellaneous Control**

Use this menu to specify your settings for Miscellaneous control.

#### **PC Health Status**

This entry shows your PC health status.

#### **Thermal Throttling Options**

The selection is set for activating the active CPU Thermal Protection by flexible CPU loading adjustment in the arrange of temperature you define.

#### **Power User Overclock Settings**

---

---

Use this menu to specify your settings (frequency, Voltage) for overclocking demand

### Password Settings

This entry for setting Supervisor password and User password

### Load Optimized Defaults

Use this menu to load the BIOS default values these are setting for optimal performances system operations for performance use.

### Load Standard Defaults

Use this menu to load the BIOS default values for the stable performance system operation that are factory settings for normal use.

### Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

### Exit Without Saving

Abandon all CMOS value changes and exit setup.

## 3-4 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

**Phoenix - AwardBIOS CMOS Setup Utility**  
**Standard CMOS Features**

Date (mm:dd:yy)	Sun, Jan, 09 2005	Item Help
Time (hh:mm:ss)	16 : 48 : 35	
> IDE Channel 0 Master	None	Menu Level >  Change the day, month, year and century
> IDE Channel 0 Slave	None	
> IDE Channel 1 Master	None	
> IDE Channel 1 Slave	None	
> SATA Channel 1	None	
> SATA Channel 2	None	
Drive A	1.44M, 3.5 in.	
Halt On	All, But Keyboard	
Base Memory	640K	
Extended Memory	195584K	
Total Memory	196608K	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

### Date

The date format is <day><month><date><year>.

**Day** Day of the week, from Sun to Sat, determined by BIOS. Read-only.

**Month** The month from Jan. through Dec.

**Date** The date from 1 to 31 can be keyed by numeric function keys.

**Year** The year depends on the year of the BIOS.

### Time

The time format is <hour><minute><second>.

**IDE Channel 0 Master / Channel 0 Slave / Channel 1 Master / Channel 1 Slave**

### SATA Channel 1, 2, 3, 4

Press PgUp/<+> or PgDn/<-> to select Manual, None, Auto type. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category. If the type of hard disk drives is not matched or listed, you can use Manual to define your own drive type manually.

If you select Manual, related information is asked to be entered to the following items. Enter the information directly from the keyboard. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is SCSI, the selection shall be "None".

If the controller of HDD interface is CD-ROM, the selection shall be "None"

**Access Mode** The settings are Auto Normal, Large, and LBA.

**Cylinder** number of cylinders

**Head** number of heads

**Precomp** write precomp

**Landing Zone** landing zone

**Sector** number of sectors

## 3-5 Advanced BIOS Features

### Phoenix - AwardBIOS CMOS Setup Utility

#### Advanced BIOS Features

		Item Help
Removable Device Priority	Press Enter	
Hard Disk Boot Priority	Press Enter	
CD-ROM BOOT SEQUENCE	Press Enter	
Virus Warning	Disabled	
CPU Internal Cache	Enabled	Menu Level >
External Cache	Enabled	
Quick Power On Self Test	Enabled	
First Boot Device	Removable	
Second Boot Device	Hard Disk	
Third Boot Device	CDROM	
Boot other Device	Enabled	
Boot Up Floppy Seek	Enabled	
Boot Up NumLock Status	On	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
APIC Mode	Enabled	
MPS Version Control For OS	1.4	
OS Select For DRAM > 64MB	Non-OS2	
HDD S.M.A.R.T. Capability	Disabled	
Report No FDD For WIN 95	Yes	
SMALL LOGO	Yes	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

### Removable Device Priority

The selection is for you to choose the removable devices (Such as USB floppy or other related accessories) priorities to boot from.

### Hard Disk Boot Priority

The selection is for you to choose the hard disk drives priorities to boot from.

---

---

### **Virus Warning**

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

**Disabled** (default) No warning message to appear when anything attempts to access the boot sector or hard disk partition table.

**Enabled** Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector of hard disk partition table.

### **CPU Internal Cache**

The default value is Enabled.

**Enabled** (default) Enable cache

**Disabled** Disable cache

*Note: The internal cache is built in the processor.*

### **External Cache**

Choose Enabled or Disabled. This option enables the Level 2 cache memory.

### **Quick Power On Self-Test**

This category speeds up Power On Self Test (POST) after you power on the computer. If this is set to Enabled. BIOS will shorten or skip some check items during POST.

**Enabled** (default) Enable quick POST

**Disabled** Normal POST

### **First/Second/Third Boot Device**

The BIOS attempts to load the operating system from the devices in the sequence selected in these items. The settings are Removable, Hard Disk, CDROM, Legacy LAN, CDROM and Disabled.

### **Boot Up Floppy Seek**

During POST, BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks while 760K, 1.2M and 1.44M are all 80 tracks.

### **Boot Up NumLock Status**

The default value is On.

**On** (default) Keypad is numeric keys.

**Off** Keypad is arrow keys.

### **Typematic Rate Setting**

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected. The settings are: Enabled/Disabled.

### **Typematic Rate (Chars/Sec)**

Sets the number of times a second to repeat a keystroke when you hold the key down. The settings are: 6, 8, 10, 12, 15, 20, 24, and 30.

### **Typematic Delay (Msec)**



The default setting is “↓16↑16” for this selection, and it provides with the adjustable bandwidth selection for you to choose the combination of stream with x16 and x16 bandwidth of upload and down between the processor and system chip.

### DRAM Timing Settings

Please refer to section 3-6-1

### System BIOS Cacheable

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The settings are: Enabled and Disabled.

## 3-6-1 DRAM Timing Settings

### Phoenix - AwardBIOS CMOS Setup Utility DRAM Timing Settings

Auto Configuration	Auto	Item Help	
DRAM CAS Latency	CL=2.5		
RAS Active Time	8T	Menu Level >>	
RAS Precharge Time	2T		
RAS To CAS Delay	4T		
Bottom of 32-Bit[31:24]IO	EO		
DRAM Command Rate	2T		
S/W memory hole Remapping	Disabled		
H/W Memory Hole Remapping	Disabled		
MTRR Mapping Mode	Continuous		
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

### RAS-to-CAS Delay

This field let's you insert a timing delay between the CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. *Fast* gives faster performance; and *Slow* gives more stable performance. This field applies only when synchronous DRAM is installed in the system. The settings are: 4T and 3T.

### RAS Precharge Time

If an insufficient number of cycles is allowed for the RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete and the DRAM may fail to retain date. *Fast* gives faster performance; and *Slow* gives more stable performance. This field applies only when synchronous DRAM is installed in the system. The settings are: 2T and 3T.

### DRAM CAS Latency

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing. The settings are: 2T and 2.5T.

---

---

## 3-6-2 VGA Settings

Phoenix - AwardBIOS CMOS Setup Utility

### VGA Settings

> Obboard VGA Device	Auto	Item Help
> Onboard Share Memory	64MB	
> PMU	Auto	Menu Level >
> RGB/TV Display	Auto	
> TV Mode Support	Auto	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

## 3-7 Integrated Peripherals

Phoenix - AwardBIOS CMOS Setup Utility

### Integrated Peripherals

> OnChip IDE Function	Press Enter	Item Help
> OnChip Device Function	Press Enter	
> OnChip Super IO Function	Press Enter	Menu Level >
Init Display First	PCI Slot	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

### OnChip IDE Function

Please refer to section 3-7-1

### OnChip Device Function

Please refer to section 3-7-2

### OnChip Super IO Function

Please refer to section 3-7-3

### Init Display First

This item allows you to decide to activate whether PCI Slot or AGP VGA first. The settings are: PCI Slot, AGP Slot.

## 3-7-1 OnChip IDE Function

Phoenix - AwardBIOS CMOS Setup Utility

### OnChip IDE Function

RAID Configuration	Press ENTER	Item Help
OnChip IDE Channel0	Enabled	Menu Level >>
Primary Master PIO	Auto	
Primary Slave PIO	Auto	
Primary Master UDMA	Auto	
Primary Slave UDMA	Auto	
OnChip IDE Channel1	Enabled	
Secondary Master PIO	Auto	
Secondary Slave PIO	Auto	
Secondary Master UDMA	Auto	
Secondary Slave UDMA	Auto	
IDE DMA Transfer Access	Enabled	
SATA Channel 1&2	Enabled	
IDE Prefetch Mode	Enabled	
IDE HDD Block Mode	Enabled	
Delay For HDD (Secs)	0	

↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Optimized Defaults F7:Standard Defaults

### OnChip IDE Channal0/Channel1

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select *Enabled* to activate each channel separately. The settings are: Enabled and Disabled.

### Primary/Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device. The settings are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

### Primary/Secondary Master/Slave UDMA

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33 and Ultra DMA/66, select Auto to enable BIOS support. The settings are: Auto, Disabled.

### IDE Prefetch Mode

The selection is for you to set the IDE device as the first priority to activate.

### IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support. The settings are: Enabled, Disabled.

### Delay for HDD (Secs)

The selection is set for you to extend the time to search for the HDD which needs more time to activate.

## 3-7-2 OnChip Device Function

### Phoenix - AwardBIOS CMOS Setup Utility

#### OnChip Device Function

Onboard AC97 Audio Device	Auto	Item Help	
MAC LAN	Auto		
Machine MAC Address	Disabled	Menu Level >>	
Onboard LAN MAC Address Input	Press Enter		
Current NV MAC Address is	003018-xxxxxx		
===== USB Controller System =====			
Onchip USB	V1.1+ V2.0		
USB Memory Type	Shadow		
USB Keyboard Support	Disabled		
USB Mouse Support	Disabled		
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

### Onboard AC97 Audio Device

This item allows you to decide to enable/disable/auto the chipset family to support AC97 Audio. The settings are: Enabled, Disabled, Auto.

### Onboard LAN Device

Setting to [Auto] allows the BIOS to auto-detect the LAN controller and enable it. Setting options:[Auto] and [Disabled] .

### Onboard LAN Device Boot ROM

This item is used to enable or disable the MAC LAN Boot ROM. Setting options:[Disabled],[Enabled].

### Onchip USB

This setting allows you to enable/disable the onboard USB controller. Selecting [Enabled] enables the system to support both USB 1.1 and 2.0 or USB 1.1 spec. setting options:[Disabled],[Enabled].

### USB Keyboard Support

Select *Enabled* if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard. The settings are: Enabled, Disabled.

---

---

### 3-7-3 OnChip Super IO Function

Phoenix - AwardBIOS CMOS Setup Utility

#### Onboard Super IO Function

Onboard FDC Controller	Enabled	Item Help
Onboard Serial Port 1	3F8/IRQ4	
Onboard Serial Port 2	2F8/IRQ3	
Onboard Parallel Port	378/IRQ7	Menu Level >>
Parallel Port Mode	SPP	
ECP Mode Use DMA	3	

↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5:Previous Values F6:Optimized Defaults F7:Standard Defaults

#### Onboard FDD Controller

Select Enabled if your system has a floppy disk controller (FDD) installed on the system board and you wish to use it. If you install add-on FDC or the system has no floppy drive, select Disabled in this field. The settings are: Enabled and Disabled.

#### Onboard Serial Port 1/Port 2

Select an address and corresponding interrupt for the first and the second serial ports. The settings are: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

#### Onboard Parallel Port

There is a built-in parallel port on the on-board Super I/O chipset that Provides Standard, ECP, and EPP features. It has the following option:

##### Disabled

- (3BC/IRQ7)/ Line Printer port 0
- (278/IRQ5)/ Line Printer port 2
- (378/IRQ7) Line Printer port 1

#### Parallel Port Mode

- SPP : Standard Parallel Port
- EPP : Enhanced Parallel Port
- ECP : Extended Capability Port
- ECP+EPP :Extended Capability Port and Enhanced Parallel Port

##### SPP/EPP/ECP/ECP+EPP

To operate the onboard parallel port as Standard Parallel Port only, choose "SPP." To operate the onboard parallel port in the EPP modes simultaneously, choose "EPP." By choosing "ECP", the onboard parallel port will operate in ECP mode only. Choosing "ECP+EPP" will allow the onboard parallel port to support both the ECP and EPP modes simultaneously. The ECP mode has to use the DMA channel, so choose the onboard parallel port with the ECP feature. After selecting it, the following message will appear: "ECP Mode Use DMA" at this time, the user can choose between DMA channels 3 to 1. The onboard parallel port is EPP Spec. compliant, so after the user chooses the onboard parallel port with the EPP function, the following message will be displayed on the screen: "EPP Mode Select." At this time either EPP 1.7 spec. or EPP 1.9 spec. can be chosen.

## 3-8 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy saving while operating in a manner consistent with your own style of computer use.

Phoenix - AwardBIOS CMOS Setup Utility

### Power Management Setup

PS2 KB/MS Wakeup By (S3/S4/S5)	Disabled	Item Help
ACPI Function	Enabled	
ACPI Suspend Type	S1 (POS)	Menu Level >
Power Management	User Define	
Video off Method	DPMS support	
HDD Power Down	Disabled	
Power Button Function	Instant-Off	
AMD K8 Cool'n'Quiet Control	Disabled	
AC Loss Auto Restart	Always-Off	
Wake Up on PCI/LAN/PCIE PME	Disabled	
Wake-Up on Ring	Disabled	
Power-On by Alarm	Disabled	
Day Of Month Alarm	0	
Time (hh:mm:ss) Alarm	0:0:0	
↑↓←→ Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

### ACPI Function

This item allows you to Enabled/Disabled the Advanced Configuration and Power Management (ACPI). The settings are Enabled and Disabled.

### Video Off Method

This determines the manner in which the monitor is blanked.

**DPMS Support** (default) Initial display power management signaling.

**Blank Screen** This option only writes blanks to the video buffer.

**V/H SYNC+Blank** This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

### Power Button Function

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state. The settings are: Delay 4 Sec, Instant-Off.

### Wake Up On Ring/PME

During Disabled, the system will ignore any incoming call from the modem. During Enabled, the system will boot up if there's an incoming call from the modem.

### Date(of month) Alarm

You can choose which month the system will boot up. Set to 0, to boot every day.

### Time(hh:mm:ss) Alarm

You can choose what hour, minute and second the system will boot up.

**Note:** If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work.

## 3-9 Miscellaneous Control

This section is for setting CPU Frequency/Voltage Control.

**Phoenix - AwardBIOS CMOS Setup Utility**  
Miscellaneous Control

CPU Spread Spectrum                    Disabled PCIE Spread Spectrum                  Disabled SATA Spread Spectrum                  Disabled HT Spread Spectrum                    Enabled Reset Configuration Data              Disabled > IRQ Resources                        Press Enter PCI/VGA Palette Snoop                Disabled *** PCIExpress Relative Items *** Maximum Payload Size                 4096	Item Help  Menu Level >
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values    F6:Optimized Defaults    F7:Standard Defaults	

### CPU/SATA/PCIE Spread Spectrum

This item allows you to set the CPU Host / SATA / PCIE clock and Spread Spectrum. The settings are: Disabled, Down Spread .

### IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

Please refer to section 3-9-1

### Maximum Payload Size

This setting specifies the maximum TLP payload size for the PCI Express devices. The unit is byte. Setting options:[128], [256], [512], [1024], [2048], [4096] .

## 3-9-1 IRQ Resources

**Phoenix - AwardBIOS CMOS Setup Utility**  
IRQ Resources

IRQ-5    assigned to                    PCI Device IRQ-9    assigned to                    PCI Device IRQ-10   assigned to                   PCI Device IRQ-11   assigned to                   PCI Device IRQ-14   assigned to                   PCI Device IRQ-15   assigned to                   PCI Device	Item Help  Menu Level >>
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values    F6:Optimized Defaults    F7:Standard Defaults	

## 3-10 PC Health Status

This section shows the Status of you CPU, Fan, Warning for overall system status. This is only available if there is Hardware Monitor onboard.

### Phoenix - AwardBIOS CMOS Setup Utility

#### PC Health Status

Show PC Health in Post	Enabled	Item Help
> Smart FAN Configurations	Press Enter	
Vcore	1.39V	Menu Level >
NB	2.53V	
+5V	4.99V	
+12V	11.9V	
5VSB	4.89V	
VDIMM	2.67V	
VBAT	3.12V	
CPU Temperature	40°C/104°F	
System 1 Temperature	36°C/96°F	
CPUFAN Speed	2504 RPM	
SFAN1 Speed	3375 RPM	
SFAN2 Speed	3375 RPM	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

### Show PC Health in Post

During Enabled, it displays information list below. The choice is either Enabled or Disabled

### Smart FAN Configurations

Please refer to section 3-10-1

**Current CPU Temperature/Current System Temp/Current FAN1, FAN2 Speed/Vcore/Vdd/3.3V/+5V/+12V/-12V/VBAT(V)/5VSB(V)**

This will show the CPU/FAN/System voltage chart and FAN Speed.

## 3-10-1 Smart FAN Configurations

### Phoenix - AwardBIOS CMOS Setup Utility

#### Smart FAN Configurations

CPUFAN Smart Mode	Disabled	Item Help	
CPU SmartFAN Full-Speed Temp	50		
CPU SmartFAN Idle Temp	30	Menu Level >	
SFAN1 Smart Mode	Disabled		
SFAN1 SmartFAN Full-Speed Temp	50		
SFAN1 SmartFAN Idle Temp	30		
SFAN2 Smart Mode	Disabled		
SFAN2 SmartFAN Full-Speed Temp	30		
SFAN2 SmartFAN Idle Temp	30		
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

### CPU/SFAN1 Smart FAN Full-Speed Temp

This item allows you setting the FAN works in full speed when the temperature over the value which out set. If the temperature below the value but over the Idle Temperature, the FAN will works over 60% of full speed, and the higher temperature will gain higher FAN speed, after over the temperature which this item setting, the FAN works in full speed.

### CPU/SFAN1 Smart FAN Idle Temp

This item allows you setting the FAN works in 60% of full speed, when the temperature lower than the temperature which you setting.

## 3-11 Thermal Throttling Options

Phoenix - AwardBIOS CMOS Setup Utility

Thermal Throttling Options

CPU Thermal-Throttling	Disabled	Item Help
CPU Thermal-Throttling Temp	85	
CPU Thermal-Throttling Beep	Enabled	Menu Level >
CPU Thermal-Throttling Duty	50.00%	
<b>CPU Thermal-Throttling</b> Disabled . . . . . [ ] Enabled . . . . . [ ]		
↑↓:Move ENTER:Accept ESC:Abort		
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

Phoenix - AwardBIOS CMOS Setup Utility

Thermal Throttling Options

CPU Thermal-Throttling	Disabled	Item Help
CPU Thermal-Throttling Temp	85	
CPU Thermal-Throttling Beep	Enabled	Menu Level >
CPU Thermal-Throttling Duty	50.00%	
<b>CPU Thermal-Throttling Temp</b> Min = 30 Max = 100 Key in a Integral number:		
↑↓:Move ENTER:Accept ESC:Abort		
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

Phoenix - AwardBIOS CMOS Setup Utility  
Thermal Throttling Options

CPU Thermal-Throttling            Disabled CPU Thermal-Throttling Temp      85 CPU Thermal-Throttling Beep       Enabled CPU Thermal-Throttling Duty       50.00%	Item Help
<div style="border: 1px solid black; background-color: #000080; color: white; padding: 5px; margin: 5px auto; width: 80%;"> <p style="text-align: center; margin: 0;"><b>CPU Thermal-Throttling Duty</b></p> <p style="margin: 0;">87.50% . . . . . [ ]</p> <p style="margin: 0;">75.00% . . . . . [ ]</p> <p style="margin: 0;">62.50% . . . . . [ ]</p> <p style="margin: 0;">50.00% . . . . . [█]</p> <p style="margin: 0;">37.50% . . . . . [ ]</p> <p style="margin: 0;">25.00% . . . . . [ ]</p> <p style="margin: 0;">↑↓:Move ENTER:Accept ESC:Abort</p> </div>	Menu Level >
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults	

**CPU Thermal Throttling Temp**

This item allows you to activate the CPU Thermal Throttling function when the CPU temperature is over the value which you set to low down the CPU temperature when at high workload to protect processor from damage or accidental shutdown.

Phoenix - AwardBIOS CMOS Setup Utility  
Thermal Throttling Options

CPU Thermal-Throttling            Disabled CPU Thermal-Throttling Temp      85 CPU Thermal-Throttling Beep       Enabled CPU Thermal-Throttling Duty       50.00%	Item Help
<div style="border: 1px solid black; background-color: #000080; color: white; padding: 5px; margin: 5px auto; width: 80%;"> <p style="text-align: center; margin: 0;"><b>CPU Thermal-Throttling Beep</b></p> <p style="margin: 0;">Disabled . . . . . [ ]</p> <p style="margin: 0;">Enabled . . . . . [█]</p> <p style="margin: 0;">↑↓:Move ENTER:Accept ESC:Abort</p> </div>	Menu Level >
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults	

---

---

## 3-12 Power User Overclock Settings

Phoenix - AwardBIOS CMOS Setup Utility

Power User Overclock Settings

** Current Host Frequency is	200MHZ **	Item Help
CPU Clock at Next Boot is	200MHZ	
*** Current DRAM Frequency is	200MHZ***	
DRAM Clock at Next Boot is	Auto	Menu Level >
CPU Vcore	Default	
CPU Vcore 7-Shift	Normal(Default)	
NB Voltage	1.20V(Default)	
LDT Voltage	1.25V(Default)	
VRAM Output	2.65V	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

### CPU/DRAM Clock at next Boot is

This item allows you change the CPU Host /DRAM clock for overclock demand. *When the CPU Host clock is over the CPU default value BIOS will auto disabled Bi-Turbo function.*

### CPU Vcore 7-Shift

This item allows you select the CPU Vcore Voltage xx% more than the standard value, by this function for the precise over-clocking for extra demanding of performance.

### VRAM Output

This item allows you to select 2.65V of the DDR Module. The choice are: 2.5V,2.55V, 2.6V, 2.65V, 2.7V,2.75V,2.8V,2.85V,3.05V,3.25V.

### NB Voltage

This item allows you to select value of Voltage for North Bridge Chipset.

### LDT Voltage

This item allows you to select value of Voltage for LDT.

Phoenix - AwardBIOS CMOS Setup Utility

Power User Overclock Settings

<pre> ** Current Host Frequency is      200MHZ ** CPU Clock at Next Boot is        200MHZ *** Current DRAM Frequency is    200MHZ*** DRAM Clock at Next Boot is       Auto CPU Vcore                         Default CPU Vcore 7-Shift                 Normal(Default) NB Voltage                        1.20V(Default) LDT Voltage                       1.25V(Default) VRAM Output                       2.65V         </pre>	<p>Item Help</p> <hr/> <p>Menu Level &gt;</p>
<div style="border: 1px solid black; background-color: blue; color: white; padding: 5px;"> <p>PCIE Clock</p> <hr/> <p>Min= 100</p> <p>Max= 145</p> <hr/> <p>↑↓:Move ENTER:Accept ESC:Abort</p> </div>	
<p>↑↓←→ Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  F5:Previous Values F6:Optimized Defaults F7:Standard Defaults</p>	

Phoenix - AwardBIOS CMOS Setup Utility

Power User Overclock Settings

<pre> ** Current Host Frequency is      200MHZ ** CPU Clock at Next Boot is        200MHZ *** Current DRAM Frequency is    200MHZ*** DRAM Clock at Next Boot is       Auto CPU Vcore                         Default CPU Vcore 7-Shift                 Normal(Default) NB Voltage                        1.20V(Default) LDT Voltage                       1.25V(Default) VRAM Output                       2.65V         </pre>	<p>Item Help</p> <hr/> <p>Menu Level &gt;</p>
<div style="border: 1px solid black; background-color: blue; color: white; padding: 5px;"> <p>CPU Vcore 7-Shift</p> <p>Normal . . . . . [ <input type="checkbox"/> ]</p> <p>+ 50mv . . . . . [ ]</p> <p>+ 100mv . . . . . [ ]</p> <p>+ 150mv . . . . . [ ]</p> <p>+ 200mv . . . . . [ ]</p> <p>+ 250mv . . . . . [ ]</p> <p>+ 300mv . . . . . [ ]</p> <p>+ 350mv . . . . . [ ]</p> <hr/> <p>↑↓:Move ENTER:Accept ESC:Abort</p> </div>	
<p>↑↓←→ Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  F5:Previous Values F6:Optimized Defaults F7:Standard Defaults</p>	

Phoenix - AwardBIOS CMOS Setup Utility

Power User Overclock Settings

<pre> ** Current Host Frequency is      200MHZ ** CPU Clock at Next Boot is        200MHZ *** Current DRAM Frequency is    200MHZ*** DRAM Clock at Next Boot is       Auto CPU Vcore                         Default CPU Vcore 7-Shift                 Normal(Default) NB Voltage                        1.20V(Default) LDT Voltage                       1.25V(Default) VRAM Output                       2.65V         </pre>	<p>Item Help</p> <hr/> <p>Menu Level &gt;</p>
<div style="border: 1px solid black; background-color: #000080; color: white; padding: 5px;"> <p>VRAM Ouput</p> <p>2.55V . . . . . [ ]</p> <p>2.65V(Default) . . . . . [█]</p> <p>2.75V . . . . . [ ]</p> <p>2.85V . . . . . [ ]</p> <p>3.05V . . . . . [ ]</p> <p>3.25V . . . . . [ ]</p> <p>↑↓:Move ENTER:Accept ESC:Abort</p> </div>	
<p>↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  F5:Previous Values F6:Optimized Defaults F7:Standard Defaults</p>	

Phoenix - AwardBIOS CMOS Setup Utility

Power User Overclock Settings

<pre> ** Current Host Frequency is      200MHZ ** CPU Clock at Next Boot is        200MHZ *** Current DRAM Frequency is    200MHZ*** DRAM Clock at Next Boot is       Auto CPU Vcore                         Default CPU Vcore 7-Shift                 Normal(Default) NB Voltage                        1.20V(Default) LDT Voltage                       1.25V(Default) VRAM Output                       2.65V         </pre>	<p>Item Help</p> <hr/> <p>Menu Level &gt;</p>
<div style="border: 1px solid black; background-color: #000080; color: white; padding: 5px;"> <p>NB Voltage</p> <p>1.50V(Default) . . . . . [█]</p> <p>1.60V . . . . . [ ]</p> <p>1.70V . . . . . [ ]</p> <p>↑↓:Move ENTER:Accept ESC:Abort</p> </div>	
<p>↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  F5:Previous Values F6:Optimized Defaults F7:Standard Defaults</p>	

---

---

## 3-13 Password Settings

Phoenix - AwardBIOS CMOS Setup Utility

### Password Settings

Set Supervisor Password Set User Password	Press Enter Press Enter	Item Help
		Menu Level >
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

You can set either supervisor or user password, or both of them. The differences are:

**Supervisor password:** Can enter and change the options of the setup menus.

**User password:** Can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

#### ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm that the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

#### PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration. Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password will be required both at boot and at entry to Setup. If set to "Setup", prompting only occurs when trying to enter Setup.

## 3-14 Load Standard/Optimized Defaults

### Load Standard Defaults

When you press <Enter> on this item, you get confirmation dialog box with a message similar to:

Load Standard Defaults (Y/N)? N

Pressing <Y> loads the BIOS default values for the most stable, minimal-performance system operations.

### Load Optimized Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

Load Optimized Defaults (Y/N)? N

Pressing <Y> loads the default values that are factory settings for optimal performance system operations.

---

---


## Chapter 4

### DRIVER & FREE PROGRAM INSTALLATION

Check your package and there is A MAGIC INSTALL CD included. This CD consists of all DRIVERS you need and some free application programs and utility programs. In addition, this CD also include an auto detect software which can tell you which hardware is installed, and which DRIVERS needed so that your system can function properly. We call this auto detect software MAGIC INSTALL.

#### MAGIC INSTALL supports WINDOWS 9X/NT/2K/XP

Insert CD into your CD-ROM drive and the MAGIC INSTALL Menu should appear as below. If the menu does not appear, double-click MY COMPUTER / double-click CD-ROM drive or click START / click RUN / type X:\SETUP.EXE (assuming X is your CD-ROM drive).

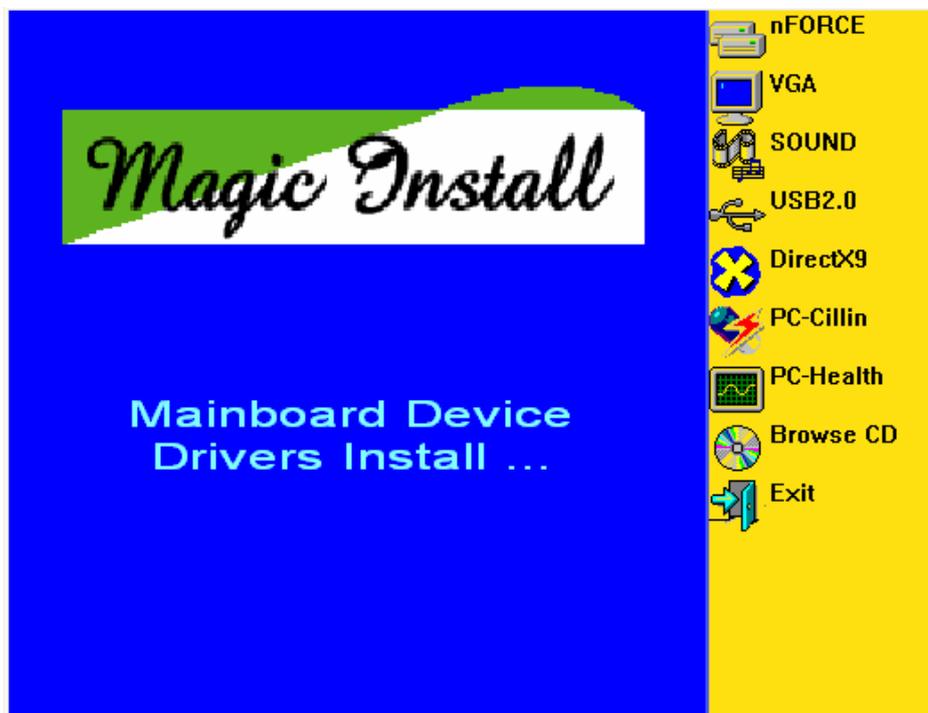

From MAGIC INSTALL MENU you may take 8 selections:

1. nFORCE           install nFORCE integrated driver
2. VGA               install video graphic array driver
3. SOUND            install ALC850 AC97' Codec Audio driver
4. USB2.0           install USB 2.0 driver
5. DirectX9          install Microsoft DirectX 9 driver
6. PC-CILLIN        install PC-CILLIN2005 anti-virus program
7. PC-HEALTH       install My Guard PC-Health utility
8. BROWSE CD       to browse the contents of the CD
9. EXIT              to exit from MAGIC INSTALL menu

---

---

## 4-1 nForce Install nForce Integrated Driver



\* nForce Integrated driver pack include following device driver:

**NVIDIA GART driver :** If you are using an AGP VGA Card, please install NVIDIA AGP GART driver which provides service routines to your VGA driver and interface directly to the hardware for speedy graphic access.

**NVIDIA SMBUS driver :** Install NVIDIA SMBUS driver


**NVIDIA ETHERNET driver :** Install NVIDIA 10/100 Fast Ethernet device driver.  
Install NVIDIA firewall and Forceware Network Access Manager utility.

**NVIDIA IDE driver :** Install NVIDIA IDE driver

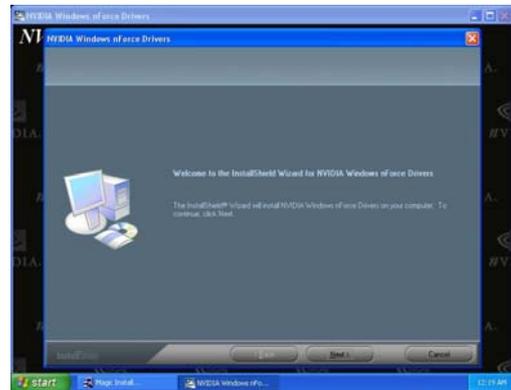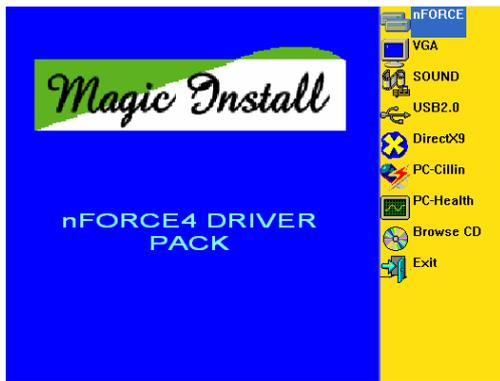


1. Click nForce in the MAGIC INSTALL MENU

2. Click NEXT when nForce Integrated driver Install windows appears


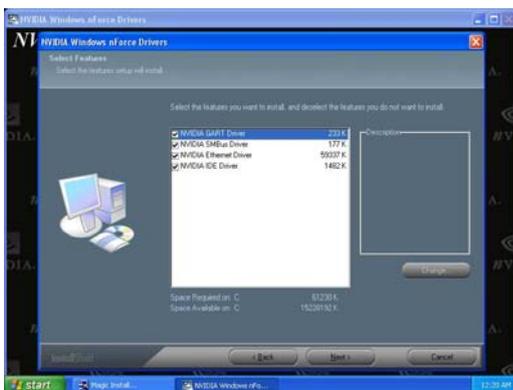


3. Please select the features you wish to install .



4. Click NEXT to install IDE driver and click "Yes" to proceed while system asking "Do you want to install the NVIDIA IDE SW Driver?"

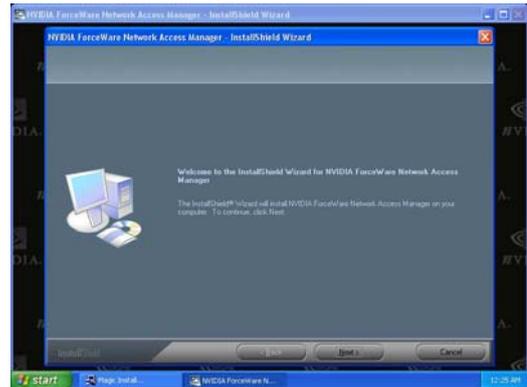

5. Please choose to install the NVIDIA firewall and Forceware Network Access Manager Utility Driver for demanding on you own.
6. If you want to install NVIDIA firewall and Forceware Network Access Manager utility

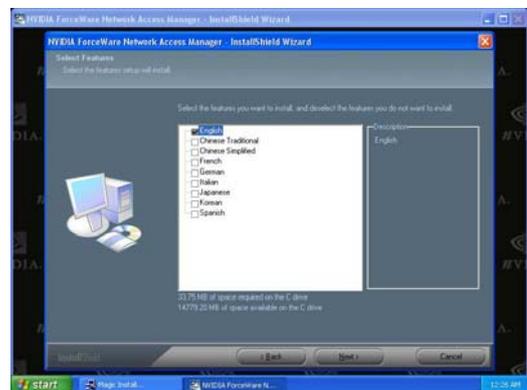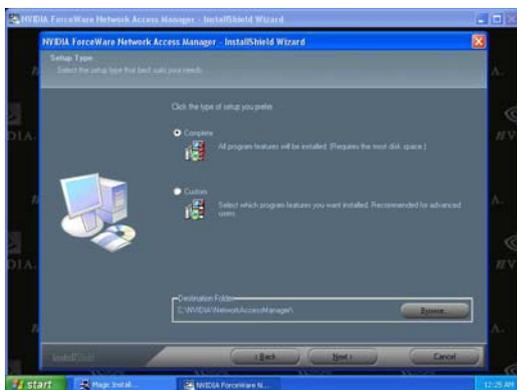

7. Select install complete software and Click NEXT
8. Select interface language and Click NEXT

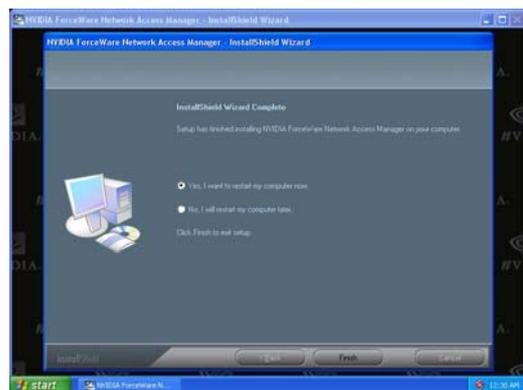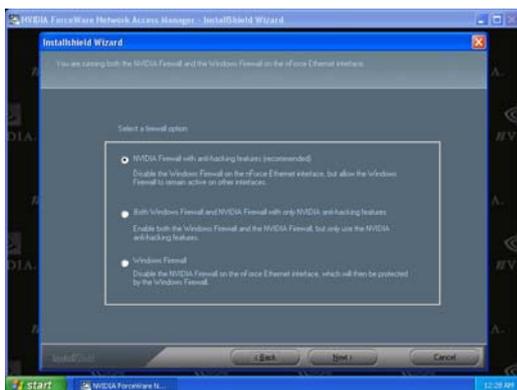

9. Please choose NVIDIA or Windows firewall for your system.
10. Select Finish and restart your computer

\* **The path of the file is X:\NFORCE4\DRIVER\SETUP.EXE**


## 4-2 SOUND install ALC850 8-Channel Audio Driver



1. Click SOUND when MAGIC INSTALL MENU appears



2. Click NEXT When Realtek AC97Audio driver windows appears

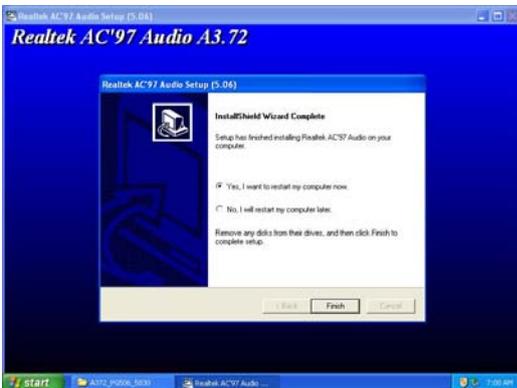

3. Click FINISH and restart your computer



4. Manual Sound Effect Setting



5. Speaker configuration setting



6. SPDIF IN/OUT setting

## 4-3 USB2.0 Install Intel USB2.0 DRIVER

Windows 2000 OS

Please install Windows 2000 service pack 4 or later .

Windows XP OS

Please install Windows XP service pack 1 or later .


---

---

## 4-4 PC-CILLIN Install PC-CILLIN 2005 Anti-virus program




1. Click PC-CILLIN when MAGIC INSTALL MENU appears

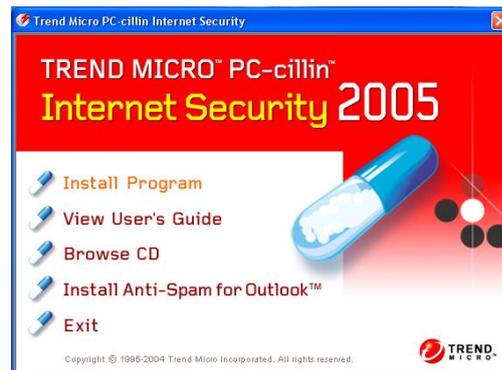

2. Please select “Install program” when the "Trend Micro internet security" installshield wizard windows appears




3. Click NEXT and Enter your Customer Information, Click NEXT or choose Change to change the path for the file to be stored

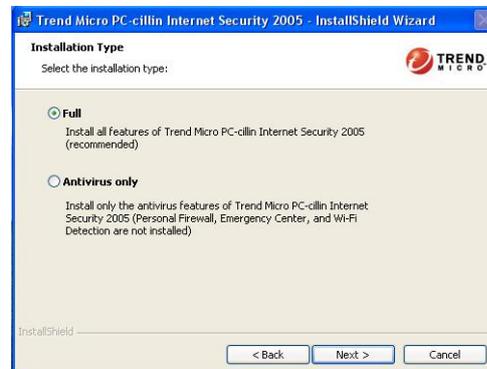

4. Please select install “FULL” function or install “Antivirus software” only



5. We suggest to use “Recommend configuration”.

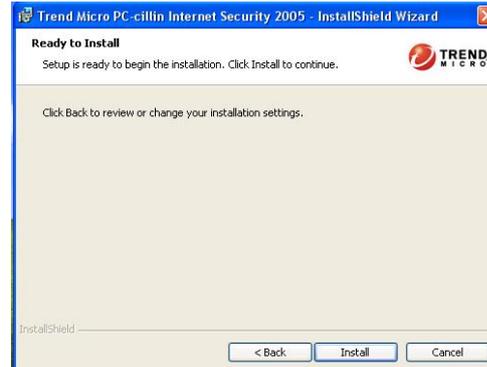


6. Click Install to install PCCILLIN 2005 internet security software , then select to restart your computer

**Note :** Please install ACROBAT READER for reading PC-CILLIN 2005 User Manual which locates at the path “X:\acrobat\adberdr6\_enu\_full.exe”.

---

---

## 4-5 PC-HEALTH Install MyGuard Hardware monitor Utility

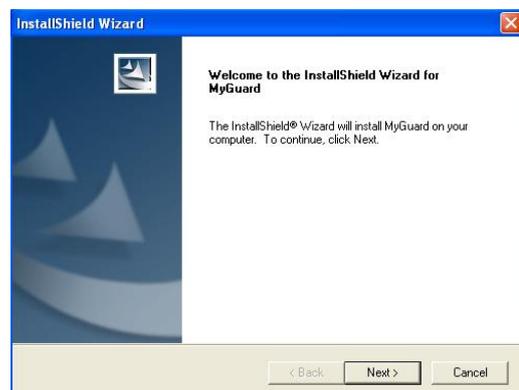

1. Click PC-HEALTH when MAGIC INSTALL MENU appears
2. Click Next when Install shield wizard Window appears, Choose destination location and click Next, when the start copy file windows appear, click next



3. Select Finish after setup complete
4. Execute MY GUARD utility, On-time Monitoring your system health

### NOTE:

MAGIC INSTALL will auto detect file path X:\NFORCE4\MYGUARD\SETUP.EXE

## 4-6 HOW TO UPDATE BIOS

Before updating the BIOS, users have to “Disable” the “Flash Part Write Protect” selection in “Miscellaneous Control” of BIOS SETUP. Otherwise the system the will not allow you to upgrade BIOS by Award Flash Utility.

**STEP 1.** Prepare a boot disc. (you may make one by click START click RUN type SYS A: click OK)

**STEP 2.** Copy utility program to your boot disc. You may copy from DRIVER CD X:\FLASH\AWDFLASH.EXE or download from our web site.

**STEP 3.** Download and make a copy of the latest BIOS for 939GT3 motherboard series from the web site to your boot disc.

**STEP 4.** Insert your boot disc into A:;

start the computer, type “Awdflash A:\939GT3xxx.BIN /SN/PY/CC/R”  
 939GT3xxx.BIN is the file name of latest BIOS it can be 939GT303.BIN or  
 939GT302.BIN

SN means don't save existing BIOS data  
 PY means renew existing BIOS data  
 CC means clear existing CMOS data  
 R means restart computer

**STEP 5.** Push ENTER to update and flash the BIOS, then the system will restart automatically.

## 4-7 Nforce4 Platform RAID Function Installation

### Step 1.

Please get into the location: BIOS setup \ Integrated Peripherals \ Onchip IDE function \ RAID Configuration to enable the RAID function and choose the RAID hard drive channel.

Phoenix - AwardBIOS CMOS Setup Utility

RAID Configuration

RAID Enable		Enabled	Item Help
IDE Primary Master	RAID	Disabled	
IDE Primary Slave	RAID	Disabled	Menu Level >>
IDE Secondary Master	RAID	Disabled	
IDE Secondary Slave	RAID	Disabled	
SATA Channel 1	RAID	Enabled	
SATA Channel 2	RAID	Enabled	
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

### Step 2.

After the System boot up in the second page , you can find the NVIDIA RAID IDE ROM BIOS windows appear. It will ask you to “Press F10 to enter RAID setup utility ...“ ?

Please press “F10” key to RAID utility now , then you can select the RAID functions on your own with the optional RAID functions as below,

1. Mirroring 2. Striping 3. Striping Mirroring 4. Spanning
- Array 1 : NVIDIA MIRROR 74.50G

- Array Detail -

RAID Mode : Mirroring		Striping Width : 1		Striping Block: 64K		
Adapt	Channel	M/S	Index	Disk	Model Name	Capacity
1	0	Master	0	WDC	WD800JB-75JMA0	75.50GB
1	0	Master	0	WDC	WD800JB-75JMA0	75.50GB
[R] Rebuild [D] Delete [C] Clear Disk [ENTER] Return						

### Step 3.

---

---

## Making RAID driver diskette before Install WindowsXP/2000

Before you install the Windows XP or Windows 2000, you will need to make a RAID driver diskette before you start to install the Operating System.

### How to make a RAID driver diskette?

- 1: Insert the diskette which is being formatted in floppy drive on a system which can start OS.
- 2: After booting OS insert the bundle CD in your CD-ROM
- 3: Copy all the files from \Nforce4\RAIDDisk to floppy diskette


Once you have the SATA driver diskette ready, you may start to install Windows XP or Windows 2000 on your System.

### Installation of Windows XP/ Windows 2000

For installation of Windows XP or Windows 2000, please insert Windows XP or Windows 2000 CD into the CD-ROM drive. Then remove the floppy diskette, and boot the system. At the very beginning, you will see the message at the bottom of screen, "Press F6 if you need to install a third party SCSI or RAID driver...."

At this moment, please press <F6> key and follow the instructions of Windows XP or Windows 2000 for the proper installation.

Execute Start → programs → NVIDIA corporation → RAID manager , you can view RAID function status or rebuild RAID function from Windows OS

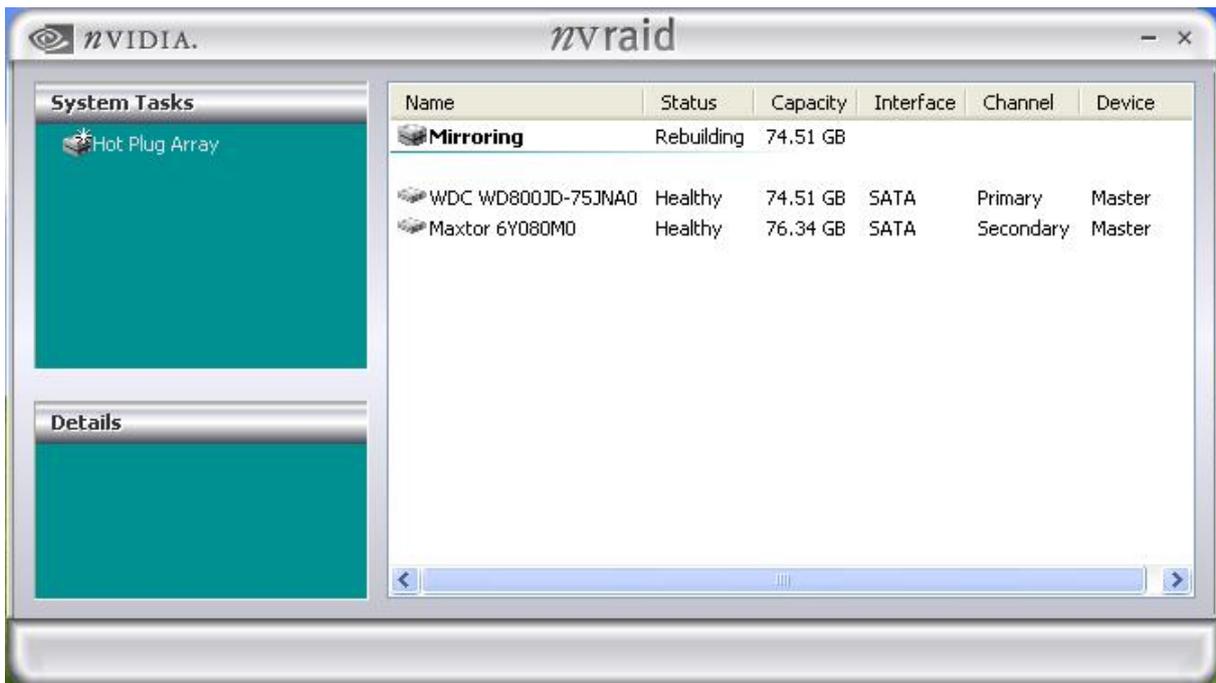

---

---

## 4-8 Pro Magic Plus Function Introduction


### What's Pro Magic Plus?

Tired with reinstall OS each time when it doesn't work? Does your computer often crash down or unable to work after installed new software? Have you had great loses and troubles because of computer problems? Still using time-consuming backup software that occupies lots of HD space?

Pro Magic Plus- an instant system recovery software tailored to solve these problems for you. It combines various application tools (e.g. anti-virus, backup software, uninstall software, multi-boot software) to satisfy your needs of all sorts of system protections.

### What functions does Pro Magic Plus have?

1. **Instant System Restoration** – Regardless of mis-operation or system crash, install Pro Magic Plus beforehand would allow you to instantly restore your system back by simply reboot your computer.
2. **Easy-to-use** – Auto installation from CD ROM; Supports Mouse
3. **System Uninstall** – Pro Magic provides a protection mode, which allows user to freely test any software. If user does not want to keep the software, just reboot the computer to restore back to the previous state, and Pro Magic will remove it completely from you computer.
4. **Password Security** – Pro Magic provides double password protection, including user password for entering each OS and manager password for managing 'Pro Magic', which can effectively prevent others from using your computer without permission or data from being stolen. (disable item for OEM version)
5. **Complete Protection** – Pro Magic not only protects the system disk, but also can protect your data disk, and does not require to reboot when backup or restore data disk.
6. **Multipoint Save/Restore** – You can backup your system whenever you need and restore them back to anytime you wish, 1 hour, 1 day or 1 month ago. Restore points are unlimited. (disable item for OEM version)
7. **Data Disk Protection** – Pro Magic Plus now comes with data disk protection, provides complete protection for your computer! (disable item for OEM version)
8. **You can choose to change the default path of 'My Document', 'My Favorite' and 'Outlook Express'**, so that when you are restoring the system, data in these folders will not be restored as well. (This is optional, you can leave it as it is).

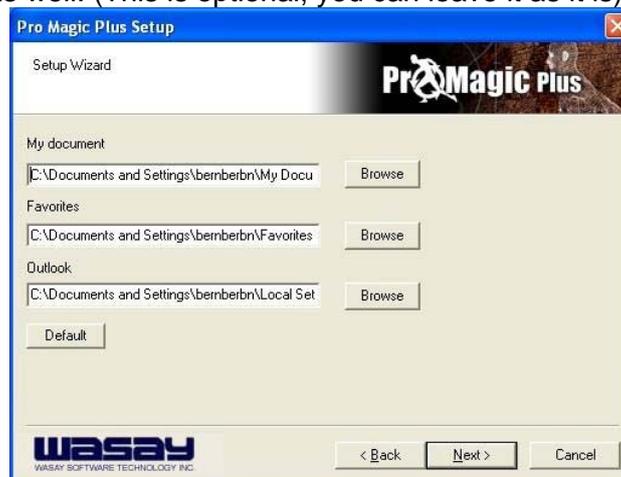

graph 4

---

 **NOTE:** Functions of each version will differ from each other, and will be based on the function descriptions of each version.

---

---

---

## System Requirements

- ◇ First OS must be Windows 98 SE/ME/2000/XP
- ◇ Support Only Windows OS (No Linux)
- ◇ Windows server OS and Windows NT not supported
- ◇ Minimum of Intel 486 or above, 16MB of memory or above
- ◇ Minimum of 500MB free/usable space or above
- ◇ Support for SCSI & SATA Hard disk

---

*Pro Magic Plus only supports SCSI hard disk with Windows 2000 or OS above*

---

## Notice Before Installation

1. Before install Pro Magic Plus, turn off all anti-virus software. (Include BIOS anti-virus function)
2. Pro Magic Plus does not support multiple PRI partitions. If you have multiple PRI partitions, please repartition your HD before installation.
3. If your HDD is not fully partitioned (with un-partitioned/unused space at end of HDD), please repartition the HDD before install Pro Magic Plus.