


G7S600-B

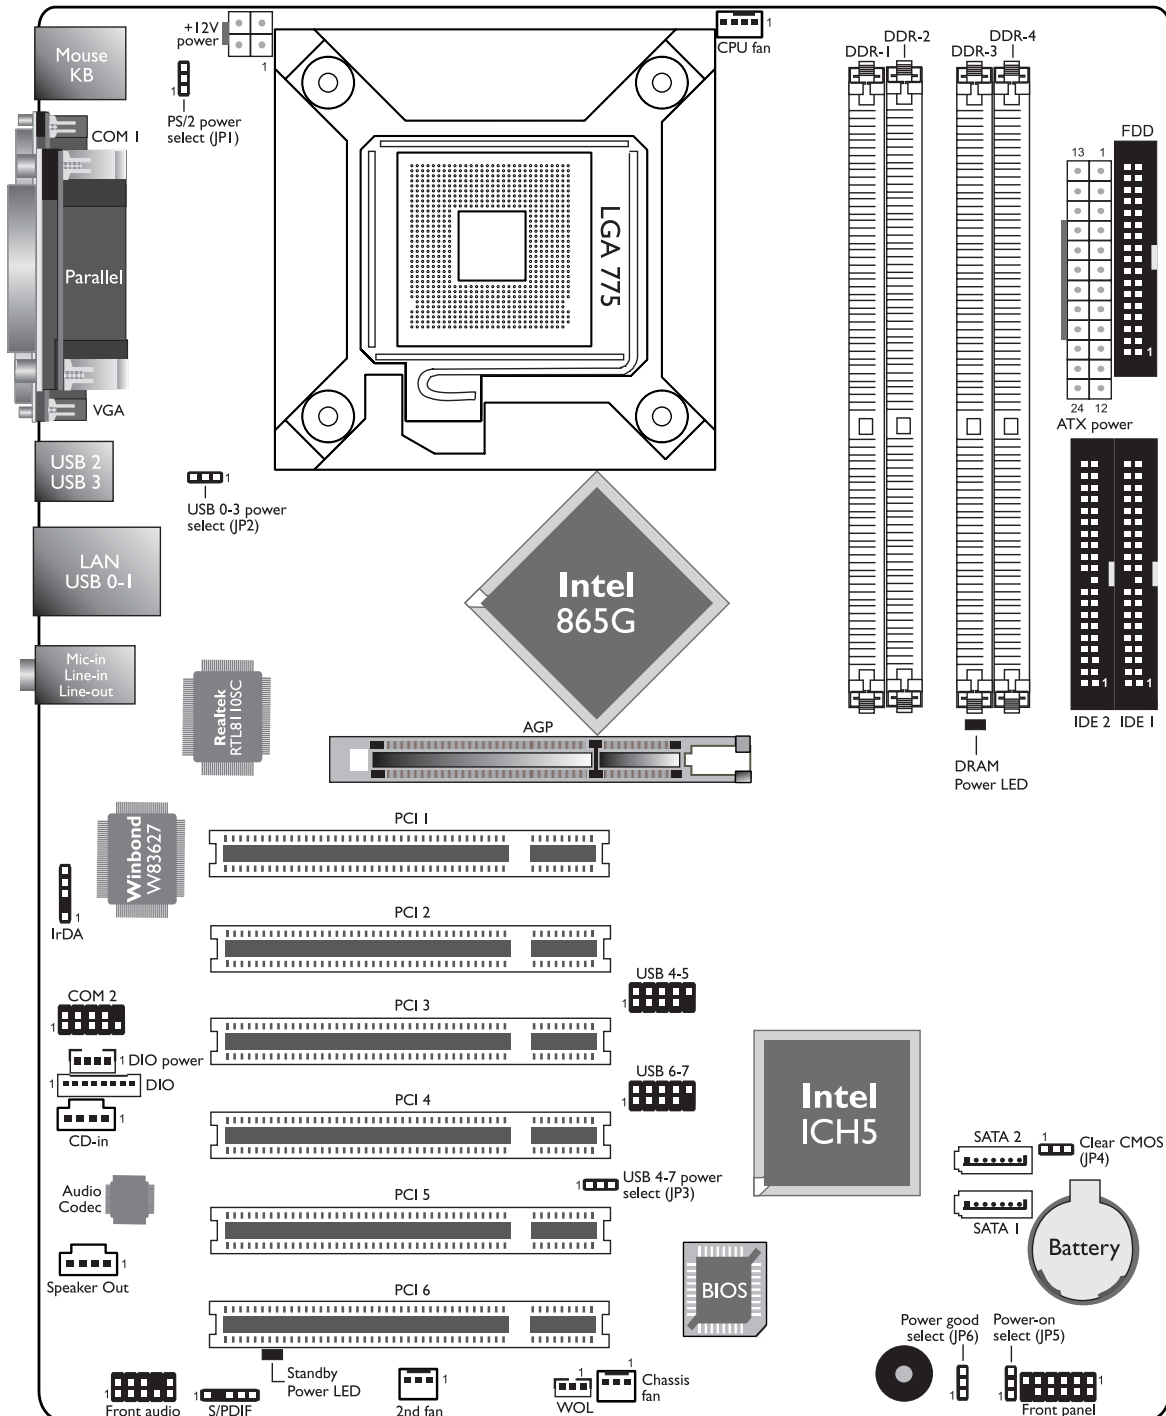

PS/2 Power	JP1	Power-on Select	JP5
5V (default)	1-2 On	Power-on via AC power	1-2 On
5V_standby	2-3 On	Power-on via power button	2-3 On

USB Power: 0-3 (JP2), 4-7 (JP3)	Clear CMOS Data	JP4
5V (default)	Normal (default)	1-2 On
5V_standby	Clear CMOS Data	2-3 On

Power Good Select	JP6
Power Good from MB	1-2 On
Power Good from ATX Power Supply	2-3 On