

Note to Users

This User' s Guide & Technical Reference are for assisting system manufacturers and end users in setting up and installing the motherboard. Every effort has been made to ensure that the information in this manual is accurate. **Champion-First** Electronics Limited is not responsible for printing or clerical errors. Information in this document is subject to change without notice and does not represent a commitment on the part of **Champion-First**. For previous or updated manuals, BIOS, drivers, or product release information, please contact **Champion-First** Electronics Limited at <http://www.champion-first.com> or through any of the means indicated on the following pages.

Companies and products mentioned in this manual are for identification purposes only. Product names appearing in this manual may or may not be registered trademarks or copyrights of their respective owners.

WebSite: <http://www.champion-first.com>
Email: info@champion-first.com
Product Name: GC-810M, GC-810M-E
Version: 1.00
Edition: October, 2001

Table of Contents

| | |
|------------------------------------------------|-----------|
| Chapter 1 Introduction | 3 |
| 1.1 GC-810M motherboard series features | 3 |
| Chapter 2 Installation | 4 |
| 2.1 Installation Instructions | 4 |
| 2.2 Motherboard Layout | 4 |
| 2.3 Jumper Setting | 5 |
| 2.4 Function & Installation Instructions | 6 |
| 2.4.1 ATX Power Supply Connector | 6 |
| 2.4.2 External Connectors | 6 |
| 2.4.3 SDRAM Sockets | 7 |
| 2.4.4 PCI Slots | 8 |
| 2.4.5 AMR Slot | 8 |
| 2.4.6 Floppy Drive Connector | 8 |
| 2.4.7 IDE Connectors | 8 |
| 2.4.8 BIOS | 8 |
| 2.4.9 Wake-On-LAN Interface | 8 |
| 2.4.10 Front Panel Function Connector | 9 |
| 2.4.11 PGA370 CPU Socket | 9 |
| 2.4.12 CPU Fan Connector | 10 |
| 2.4.13 Internal Audio Connectors | 10 |
| Chapter 3 Software Installation | 11 |
| Chapter 4 AMI BIOS Setup | 12 |
| 4.1 Standard CMOS Setup | 14 |
| 4.2 Advanced CMOS Setup | 16 |
| 4.3 Advanced Chipset Setup | 16 |
| 4.4 Power Management Setup | 16 |
| 4.5 PCI/PnP Setup | 16 |
| 4.6 CPU Configuration Setup | 16 |
| 4.7 Save Settings and Exit | 16 |
| 4.8 Exit Without Saving | 16 |

Chapter 1

Introduction

1.1 GC-810M motherboard series features

- ★ Support Intel Pentium III FCPGA, Celeron PPGA or Cyrix III Processor on Socket 370
- ★ Intel 810 Chipset on Model **GC-810M**
 - ★ Support 66/100MHz Processor Front-side Bus
- ★ Intel 810E Chipset on Model **GC-810M-E**
 - ★ Support 66/100/133MHz Processor Front-side Bus
- ★ AGP Graphics Controller Integrated inside Intel 810 / 810E Chipset
 - ★ Dynamic Graphics Memory Allocation on System Memory up to 11MB
 - ★ Hardware Motion Compensation for Accelerated DVD Video Playback
 - ★ High Graphics Resolution up to 1600x1200 with 8-bit Colour
 - ★ Full Support for Microsoft Direct 3D and Direct Draw
- ★ Two DIMM slots Supporting up to 512MB Memory Capacity
- ★ Support 100MHz PC100 SDRAM DIMM
- ★ 1 x AMR slot, 3 x PCI slots
- ★ 2 x USB ports, 1 x PS/2 mouse port, 1 x IrDA port
- ★ 1 x FDD port, 1 x LPT port, 2 x COM ports
- ★ Dual IDE Channels Supporting Four Ultra-DMA33/66 IDE Devices
- ★ Modem Ring Wakeup with External Modem
- ★ Interface Header to Support Wake-On-LAN Enabled Ethernet Card
- ★ AMI BIOS, PC99/ACPI/DMI Compliant
- ★ Micro ATX format, 244mm x 170mm PCB
- ★ Integrated AC97 Audio Onboard (*excluded from NO SOUND model*)
 - ★ AC97 2.1 Compliant Codec with 3D Stereo Enhancement
 - ★ Complete Driver Support for Win95/98/Me/NT/2000
 - ★ 1 x Line-out, 1 x Line-in, 1 x Mic-in
 - ★ 1 x CD-in, 1 x AUX-in, 1 x Telephony Port, 1 x Game Port

Chapter 2

Installation


2.1 Installation Instructions

This section covers External Connectors and Memory Configuration. Please refer to the motherboard layout chart for external connectors, slots and I/O ports. Furthermore, this section lists all necessary connector pin assignments for your reference. The locations of the connectors and ports are illustrated in the following figures. Before inserting these connectors, please pay attention to the orientations.

NOTICE !!!

1. Make sure to unplug your power supply while adding or removing system components
2. Always work on an antistatic surface to avoid possible damage to the motherboard or other components from static discharge.

2.2 Motherboard Layout

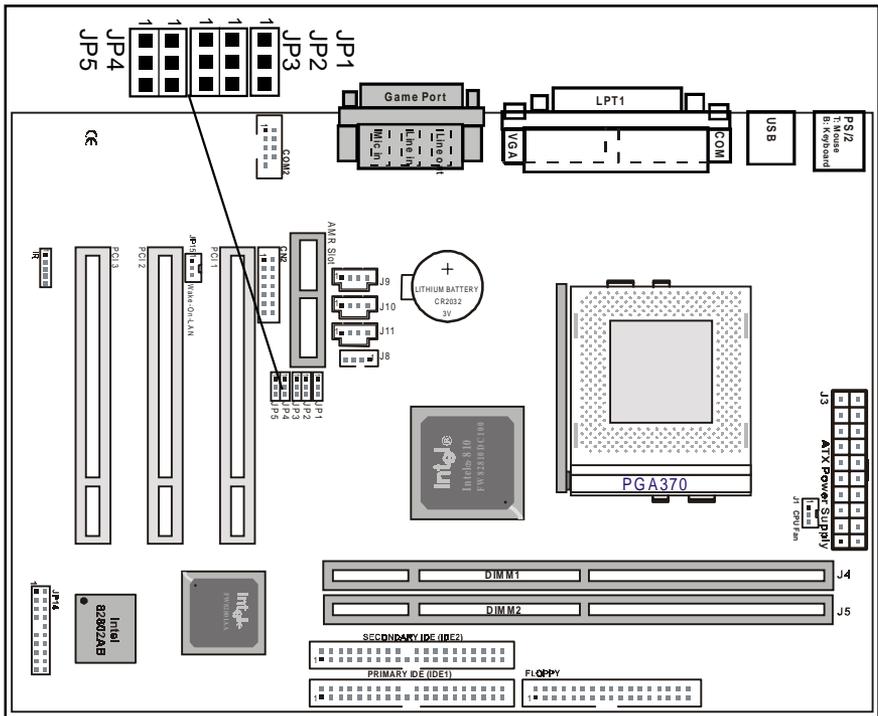

2.3 Jumper Setting

JP1 - CMOS Clear

| JP1 | Function |
|-------------------------------------------------------------------------------------------|-------------------------|
| 1  (1-2) | Normal (Default) |
| 1  (2-3) | CMOS Clear |

JP2, JP3 - CPU Clock Select

| JP2, JP3 | CPU Clock |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| JP2 1  (1-2) JP3 1  (1-2) | Auto Select (Default) |
| JP2 1  (1-2) JP3 1  (2-3) | 100MHz |
| JP2 1  (2-3) JP3 1  (2-3) | 133MHz |

JP4, JP5 - Onboard Audio


| JP4, JP5 | Onboard Audio |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| JP4 1  (1-2) JP5 1  (1-2) | Enable (Default) |
| JP4 1  (2-3) JP5 1  (2-3) | Disable |

Remark:  Open  Close

2.4 Function & Installation Instructions


2.4.1 ATX Power Supply Connector (20-Pin)

This connector connects to an ATX power supply. The plug from ATX power supply will only insert in one orientation because of the different hole sizes. Find the proper orientation and push down firmly making sure that the pins are aligned. The system power can be turned off through software control, like the shut down in Windows 2000 / Me / 98 / 95 start menu. Power management must be enabled in the system BIOS in order to activate this soft-off feature. Once the system BIOS receives the power management command from the OS, it will switch the system power off.

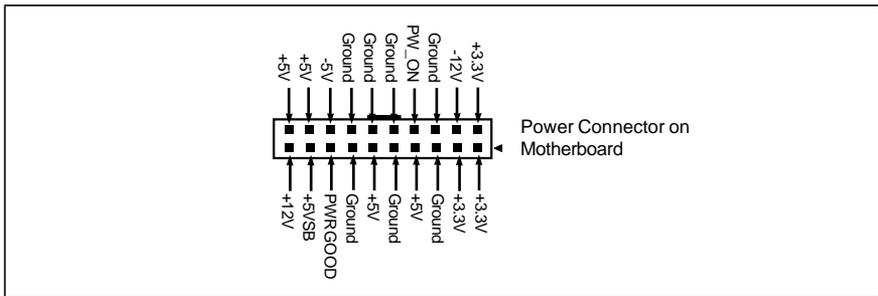

ATX Power Connector

2.4.2 External Connectors

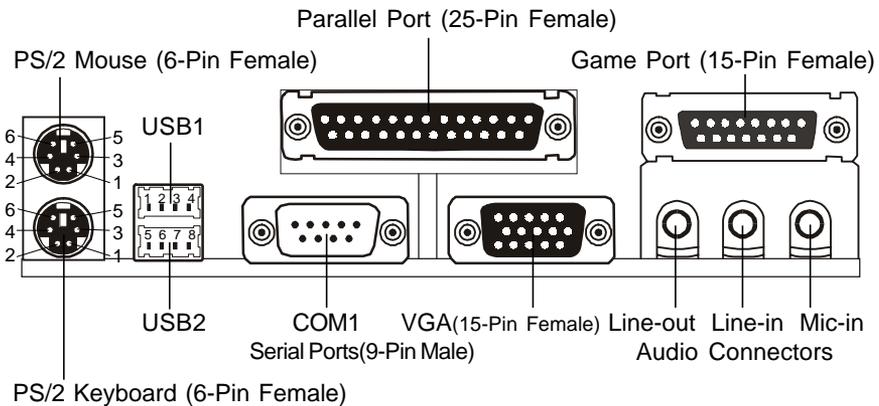

| PS/2 Mouse / Keyboard Connector | | USB Connector | |
|---------------------------------|-------------|---------------|-------------|
| Pin No. | Description | Pin No. | Description |
| 1 | Data | 1 | USB V0 |
| 2 | NC | 2 | USB D0- |
| 3 | GND | 3 | USB D0+ |
| 4 | VCC(+5V) | 4 | GND |
| 5 | Clock | 5 | USB V1 |
| 6 | NC | 6 | USB D1- |
| | | 7 | USB D1+ |
| | | 8 | GND |


EXPANSION CARDS INSTALLATION

Before adding or removing any expansion cards or system components, confirm that you already unplugged your power supply. Otherwise, it may severely damage to your motherboard and expansion cards. Please follow the installation procedures as below:

1. Check carefully if those hardware or software settings for your expansion cards are in the proper position as shown in their User's Manual.
2. Remove your computer case's cover and unscrew the bracket plate for those slots needed to insert.
3. Those expansion cards must be aligned on the slots firmly with good connection.
4. Put on the computer case cover.
5. If needed, set up the BIOS configuration and install the required drivers for your expansion cards.

2.4.3 SDRAM Sockets

There are two SDRAM sockets on-board to provide more flexibility for your system memory upgrade. Because the number of pins are different on either side of the breaks, the DIMM module will only fit the 3.3V 168-pin unbuffered for this motherboard.

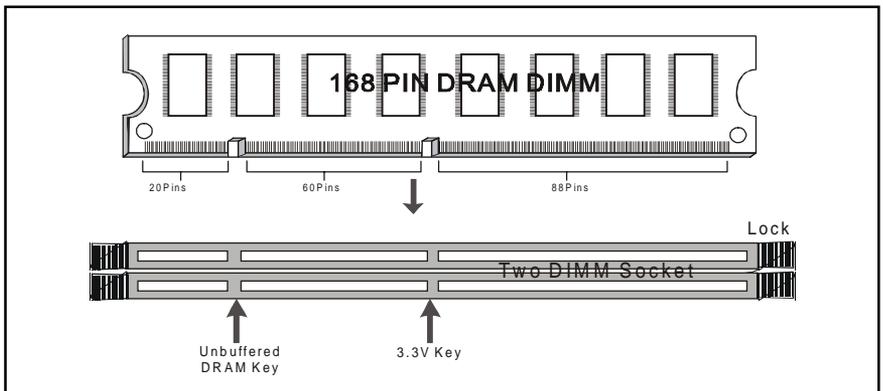

168-Pin SDRAM Module Installation Diagram

2.4.4 PCI Slots

This motherboard provides three full-length 32-bit PCI slots with up to 133MB/sec burst data transfer rate.

2.4.5 AMR Slot (Audio Modem Riser)


This connector supports a specially designed audio and/or modem card called an AMR.

2.4.6 Floppy Drive Connector (34-Pin)

This connector supports the provided floppy drive ribbon cable. After connecting the single end to the on-board "FLOPPY" connector, connect the remaining plugs on the other end to the floppy drives correspondingly.

2.4.7 IDE Connectors (40-Pin)

The IDE connectors support the provided IDE HDD ribbon cable. After connecting the single end to the board, connect the two plugs at the other end to your HDDs. If you install two IDE devices on the same cable, you must configure the second device to slave mode by setting its jumper accordingly. (Refer to your IDE device document for the jumper settings. Pin 20 is removed to prevent inserting in the wrong orientation when using ribbon cables with pin 20 plugged.)

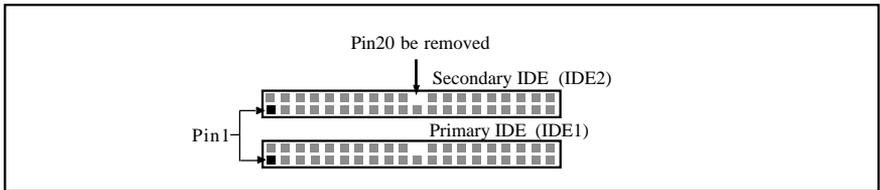

IDE Connectors

2.4.8 BIOS

The motherboard flash BIOS provides users with more flexibility in upgrading their motherboards. The flash BIOS can be easily reprogrammed via software.


2.4.9 Wake-On-LAN Interface

This connector connects to a LAN card with a Wake-On-LAN output. The connector powers up the system when a wakeup signal is received from the network.

2.4.10 Front Panel Function Connector

The front panel integrates: Power On, IDE LED, Keylock, Reset Switch, Sleep, ExtSMI, Speaker, etc...

The connector pin out are described as the figure below:

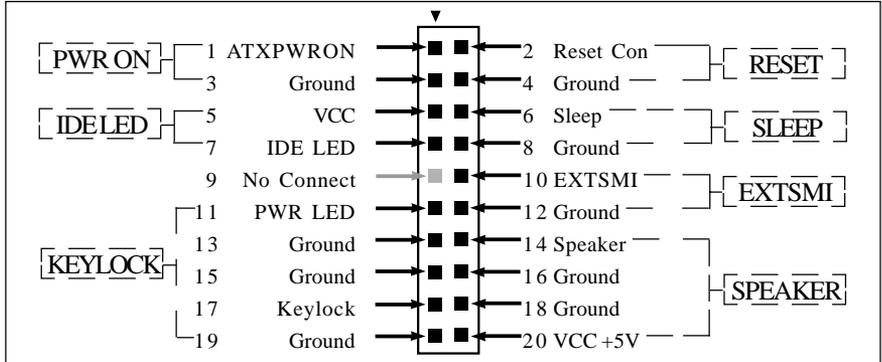

2.4.11 PGA370 CPU Socket

The motherboard provides a ZIF Socket 370. The CPU that comes with the motherboard should have a fan attached to it to prevent overheating. If it is not so, purchase a fan before you turn on your system.

Notice !!!


Be sure that there is a sufficient air circulation across the processor's heatsink by regularly checking that your CPU fan is working. Without sufficient circulation, the processor could be overheated and it may damage both the processor and the motherboard. You may install an auxiliary fan, if necessary.

Installation step:

1. Turn off the power of your system and remove its cover;
2. Locate the ZIF socket and open it by first pulling the lever sideways away from the socket then upwards to a 90-degree angle;
3. Insert the CPU with correct orientation
(The CPU has a corner pin for two of the four corners, that the CPU only fit in the orientation.)
4. Once completely inserted, pull down the socket's lever to horizontal and make sure the CPU is firmly locked in the socket.

2.4.12 CPU Fan Connector

CPU Fan cable plug in the 3-pin CPU Fan connector onboard.

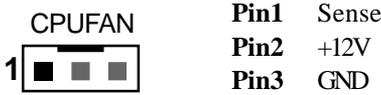

2.4.13 Internal Audio Connectors(CD, AUX, 4-pin Modem)

These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM or MPEG card. The Modem connector allows the onboard audio to interface with an voice modem card with a similar connector. It also allows the sharing of mono_in (such as a phone) and mono_out(such as a speaker) between the onboard audio and the voice modem card.

- J9 (Telephony Input) 1  (1: Mono_in; 2,3: Ground; 4: Mono_out)
- J10 (CD Input) 1  (1,3: Ground; 2: Right Audio Channel; 4: Left Audio Channel)
- J11 (Auxiliary Input) 1  (1: Left Audio Channel; 2,3: Ground; 4: Right Audio Channel)
- J8 (CD Input)  1 (1: Left Audio Channel; 2,3: Ground; 4: Right Audio Channel)

Chapter 3 ***Software Installation***

Note:

Before installation, you must already have Windows 95/98/2000/Me or Windows NT4.0 install on your computer.

The installation procedure is as below:

1. Make sure that Auto-insert detection is enabled for your CDROM drive. It should be enabled by default.
2. Insert this CD disk into your CDROM drive.
3. The Explorer screen will then appear, that gives you instructions for installation.
4. There may require restarts of Windows during some software setup. In these cases, you can just eject then close the CD-tray in order to get back to the Explorer screen. You can then proceed with the next step. You can get more information with open file: *readme.txt* in the CD disk.

Chapter 4


AMI BIOS Setup

This motherboard comes with the AMI BIOS from AMI Software Inc. Enter the AMI BIOS program Main Menu by:

1. Turn on or reboot the system. After a series of diagnostic checks, the following message will appear:

Press to enter setup, ESC to skip memory test

2. Press the key and the main program screen will appear as follows.

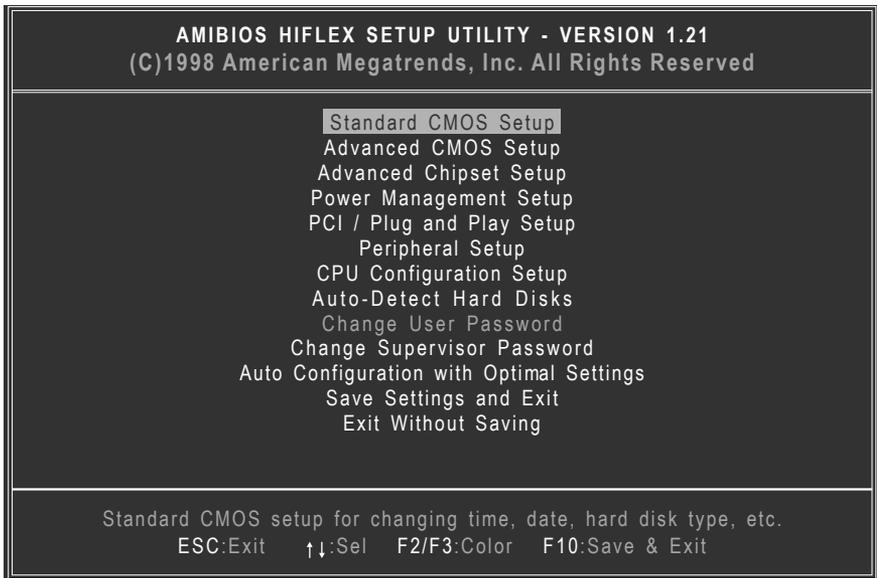

3. Using the arrows $\uparrow\downarrow$ on your keyboard, select an option, and press $\langle\text{Enter}\rangle$. Modify the system parameters to reflect the options installed in your system. Otherwise you may return to the Main Menu anytime by pressing $\langle\text{ESC}\rangle$.

| Types of Setup | Description |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Standard CMOS Setup | Sets time, date, hard disk type, types of floppy drives, monitor type, and if keyboard is installed. |
| Advanced CMOS Setup | Sets Typematic Rate and Delay, Above 1MB Memory Test, Memory Test Tick Sound, Hit $\langle\text{Del}\rangle$ Message Display, System Boot Up Sequence, and others. |
| Advanced Chipset Setup | Sets chipset-specific options and features. |
| Power Management Setup | Controls power conservation options. |
| PCI/PnP Setup | Sets options related to the PCI bus and Plug and Play options. |
| Peripheral Setup | Controls I/O Controller-related options. |
| CPU Configuration Setup | This option selects the type of CPU install in the motherboard. The settings are <i>Auto</i> (AMIBIOS automatically determines the CPU type). |

4. In the Main Menu, “Save Settings and Exit” saves your changes and reboots the system, and “Exit Without Saving” ignores your changes and exits the CMOS Setup.

| Type | How to Configure |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SCSI | Select <i>Type</i> . Select <i>Not Installed</i> the drive parameter screen. The SCSI drivers provided by the SCSI manufacturer should allow you to configure the SCSI drive. |
| IDE | Select <i>Type</i> . Select Auto to let AMIBIOS determine the parameters. Click on OK when AMIBIOS displays the drive parameters. Select <i>LBA/Large Mode</i> . Select <i>On</i> if the drive has a capacity greater than 540 MB. Select Block Mode . Select <i>On</i> to allow block mode data transfers. Select 32-Bit Transfer . Select <i>On</i> to allow 32-bit data transfers. Select the PIO Mode . It is best to select <i>Auto</i> to allow AMIBIOS to determine the PIO mode. If you select a PIO mode that is not supported by the IDE drive, the drive will not work properly. If you are absolutely certain that you know the drive's PIO mode, select PIO mode 0-5, as appropriate. |
| CD-ROM | Select <i>Type</i> . Select <i>CDROM</i> . Click on <i>OK</i> when AMIBIOS displays the drive parameters. |
| Standard MFM | Select <i>Type</i> . You must know the drive parameters. Select the drive type that exactly matches your drive's parameters. |
| Non-Standard MFM | Select <i>Type</i> . If the drive parameters do not match the drive parameters listed for drive types 1-46, select <i>User</i> and enter the correct hard disk drive parameters. |

Entering Drive Parameters

You can also enter the hard disk drive parameters. The drive parameters are

| Parameter | Description |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type | The number for a drive with certain identification parameters. |
| Cylinders | The number of cylinders in the disk drive. |
| Heads | The number of heads. |
| Write Precompensation | The actual physical size of a sector gets progressively smaller as the track diameter diminishes. Yet each sector must still hold 512 bytes. Write precompensation circuitry on the hard disk compensates for the physical difference in sector size by boosting the write current for sectors on inner tracks. This parameter is the track number on the disk surface where write precompensation begins. |
| Landing Zone | This number is the cylinder location where the heads normally park when the system is shut down. |
| Sectors | The number of sectors per track. MFM drives have 17 sectors per track. RLL drives have 26 sectors per track. ESDI drives have 34 sectors per track. SCSI and IDE drives have even more sectors per track. |
| Capacity | The formatted capacity of the drive is the number of heads times the number of cylinders times the number of sectors per track times 512 (bytes per sector). |

4.2 Advanced CMOS Setup

The AMIBIOS Setup options described in this section are selected by choosing Advanced CMOS Setup from the AMIBIOS Setup main menu.

4.3 Advanced Chipset Setup

Choose Chipset Setup on the AMIBIOS Setup main menu. All Chipset Setup options are then displayed. AMIBIOS Setup can be customized.

4.4 Power Management Setup

The AMIBIOS Setup options described in this section are selected by choosing Power Management Setup from the AMIBIOS Setup main menu.

4.5 PCI/PnP Setup

Choose PCI/Plug and Play Setup from the AMIBIOS Setup screen to display the PCI and Plug and Play Setup options.

4.6 CPU Configuration Setup

This system BIOS is capable to detect the CPU type, say Pentium III, Pentium II or Celeron. The user is only required to select the CPU speed. In addition, overclocking option is provided for advanced users who prefer to run the CPU over the specified clock frequency.

4.7 Save Settings and Exit

Choose Save Setting and Exit from the AMIBIOS Setup main menu. Type “Y” to exit the BIOS Setup program and saving the values. Type “N” to return to the Setup program.

4.8 Exit Without Saving

Choose Exit Without Saving from the AMIBIOS Setup main menu. Type “Y” to exit the BIOS Setup program without saving the values. Type “N” to return to the Setup program.

The End