


M6VBE-A

CPU Clock Selection (SW1)

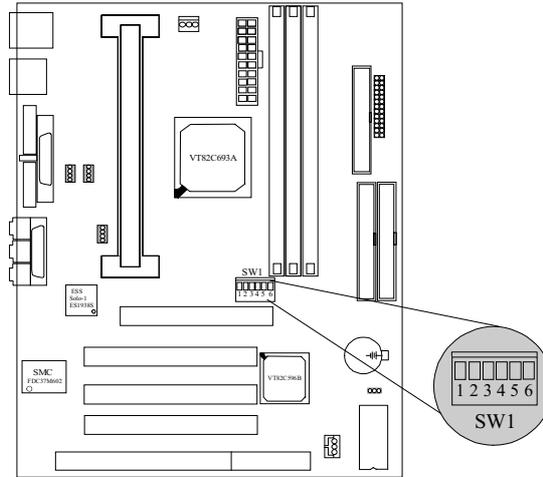


| CPU Speed | RATIO | SW1 (1) | SW1 (2) | SW1 (3) | SW1 (4) | SW1 (5) | SW1 (6) |
|------------|---------------|---------|---------|---------|---------|---------|---------|
| 233MHz | 66 x3.5 | OFF | OFF | ON | ON | ON | ON |
| 266MHz | 66 x4 | ON | ON | OFF | ON | ON | ON |
| 300MHz | 66 x4.5 | OFF | ON | OFF | ON | ON | ON |
| 333MHz | 66 x5 | ON | OFF | OFF | ON | ON | ON |
| 366MHz | 66 x5.5 | OFF | OFF | OFF | ON | ON | ON |
| 400MHz | 66 x6 | ON | ON | ON | ON | ON | OFF |
| 433MHz | 66 x6.5 | OFF | ON | ON | ON | ON | OFF |
| 466MHz | 66 x7 | ON | OFF | ON | ON | ON | OFF |
| 500MHz | 66 x7.5 | OFF | OFF | ON | ON | ON | OFF |
| 533MHz | 66 x8 | ON | ON | OFF | ON | ON | OFF |
| 350/466MHz | 100/133 x3.5 | OFF | OFF | ON | OFF | OFF | ON |
| 400/533MHz | 100/133 x4.0 | ON | ON | OFF | OFF | OFF | ON |
| 450/600MHz | 100/133 x4.5 | OFF | ON | OFF | OFF | OFF | ON |
| 500/666MHz | 100/133 x5.0 | ON | OFF | OFF | OFF | OFF | ON |
| 550/733MHz | 100/133x5.5 | OFF | OFF | OFF | OFF | OFF | ON |
| 600/800MHz | 100/133 x 6 | ON | ON | ON | OFF | OFF | OFF |
| 650/866MHz | 100/133 x 6.5 | OFF | ON | ON | OFF | OFF | OFF |
| 700/933MHz | 100/133 x 7 | ON | OFF | ON | OFF | OFF | OFF |
| 750MHz | 100x7.5 | OFF | OFF | ON | OFF | OFF | OFF |
| 800MHz | 100x8 | ON | ON | OFF | OFF | OFF | OFF |

Jumper Settings

A jumper is two or more pins which may be covered by a plastic jumper cap, allowing you to select different system options.

CMOS Function Selection (JP3)

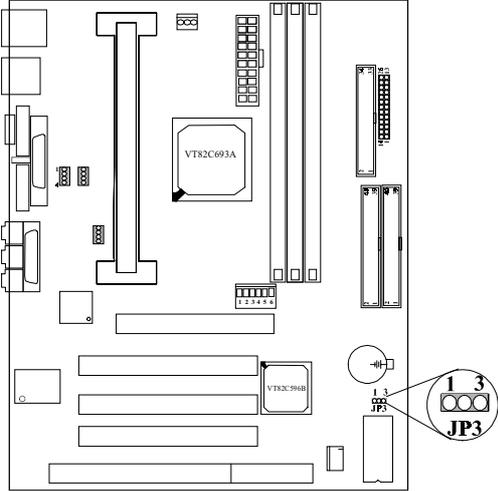

| JP3 | Assignment |
|---|----------------------------|
| 1  3 1-2 Closed | Normal Operation (default) |
| 1  3 2-3 Closed | Clear CMOS Data (*Note) |
| 1  3 Open | Onboard Battery Disabled |

Note : Please follow the procedure as below to clear CMOS Data.
Note : Please follow the procedure as below to clear BIOS Password if your password is lost or forgotten.

