



CERTIFICATE

The TÜV CERT Certification Body
for QM Systems of RWTÜV Systems GmbH

hereby certifies in accordance with TÜV CERT
procedure that

ELITEGROUP COMPUTER SYSTEMS CO., LTD.
ECS MANUFACTURING (SHENZHEN) CO., LTD.
ELITE TECHNOLOGY (SHENZHEN) CO., LTD.

2F, No. 240, Sec. 1, Nei Hu Road, Taipei, Taiwan 114
No. 22, Alley 38, Lane 91, Sec. 1, Nei Hu Road, Taipei, Taiwan 114
No. 20 & No. 26, Free Trade Zone, Shatoujiao, Shenzhen City, Guangdong Province, China

has established and applies a quality system for

**Design, Manufacturing and Sales of Mainboards,
Personal Computers, Notebooks and Peripheral Cards**

An audit was performed, Report No. 2.5-1585/2000

Proof has been furnished that the requirements according to
ISO 9001 : 2000 / EN ISO 9001 : 2000 / JIS Q 9001 : 2000 / ANSI/ASQC Q9001 : 2000

are fulfilled. The certificate is valid until 27 January 2007

Certificate Registration No. 04100 2000 1325

The company has been certified since 2000



Essen, 04.03.2004




The TÜV CERT Certification Body for QM Systems
of RWTÜV Systems GmbH



ISO14001 CERTIFICATE

Certificate No.: 061-04-EI-0065-R1-L

We hereby certify that

ECS MANUFACTURING (SHANZHEN) CO., LTD.

by reason of its

Environmental Management System

has been awarded this certificate for
compliance with the standard

ISO14001:1996

The Environmental Management System
applies in the following area:

ECS MANUFACTURING (SHANZHEN) CO., LTD.
located at No. 20 & 26 (except 1F, 2F), Free Trade Zone,
Shatuoqiao, Shenzhen City, Guangdong Province, P. R. China,
is engaged in manufacturing of Mother Board and Peripheral Card,
and interrelated managerial activities.

Date of issue: 28th Sept. 2004

Date of expiry: 27th Sept. 2007

Signed by:



SHENZHEN SOUTHERN CERTIFICATION CO., LTD.

This publication, including photographs, illustrations and software, is under the protection of international copyright laws, with all rights reserved. Neither this user's guide, nor any of the material contained herein, may be reproduced without the express written consent of the manufacturer.

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, the manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademarks

IBM, VGA, and PS/2 are registered trademarks of International Business Machines.

Intel, Pentium/II/III, Pentium 4, Celeron and MMX are registered trademarks of Intel Corporation.

Microsoft, MS-DOS and Windows 98SE/ME/2000/XP are registered trademarks of Microsoft Corporation.

AMI is a trademark of American Megatrends Inc.

It has been acknowledged that other brands or product names in this manual are trademarks or the properties of their respective owners.

Static Electricity Precautions

1. Don't take this motherboard and components out of their original static-proof package until you are ready to install them.
2. While installing, please wear a grounded wrist strap if possible. If you don't have a wrist strap, discharge static electricity by touching the bare metal of the system chassis.
3. Carefully hold this motherboard by its edges. Do not touch those components unless it is absolutely necessary. Put this motherboard on the top of static-protection package with component side facing up while installing.

Pre-Installation Inspection

1. Inspect this motherboard whether there are any damages to components and connectors on the board.
2. If you suspect this motherboard has been damaged, do not connect power to the system. Contact your motherboard vendor about those damages.

**Copyright © 2005
All Rights Reserved
P13G Series, V3.0A
April 2005**

Table of Contents

Trademark i
Static Electricity Precautions i
Pre-Installation Inspection i

Chapter 1: Introduction 1
Key Features 1
Package Contents 4

Chapter 2: Motherboard Installation 5
Motherboard Components 6
I/O Ports 8
Installing the Processor 9
Installing Memory Modules 10
Jumper Settings 12
Install the Motherboard 13
Connecting Optional Devices 14
Install Other Devices 16
Expansion Slots 18

Chapter 3: BIOS Setup Utility 22
Introduction 22
Running the Setup Utility 22
Standard CMOS Setup Page 23
Advanced Setup Page 24
Features Setup Page 26
Power Management Setup Page 28
PCI/Plug and Play Setup Page 29
BIOS Security Features Setup Page 30
CPU PnP Setup Page 30
Hardware Monitor Page 31
Load Optimal Defaults 32
Save Changes and Exit 32
Discard Changes and Exit 32

Chapter 4: Software & Applications 33
Introduction 33
Installing Support Software 33
Bundled Software Installation 35

Notice:

Owing to Microsoft's certifying schedule is various to every supplier, we might have some drivers not certified yet by Microsoft. Therefore, it might happen under Windows XP that a dialogue box (shown as below) pop out warning you this software has not passed Windows Logo testing to verify its compatibility with Windows XP. Please rest assured that our RD department has already tested and verified these drivers. Just click the "Continue Anyway" button and go ahead the installation.



Chapter 1 Introduction

This motherboard has a **LGA775 socket** for latest **Intel Pentium 4/Celeron D** processors with **Hyper-Threading Technology** and Front-Side Bus (FSB) speeds up to **800/533 MHz**. Hyper-Threading Technology, designed to take advantage of the multitasking features in Windows XP, gives you the power to do more things at once.

This motherboard integrates the **Intel 865GV** Northbridge along with **Intel I/O Controller Hub 5 (ICH5)** that supports the **Serial ATA** interface for high-performance and mainstream desktop PCs; the built-in **USB 2.0** providing higher bandwidth, implementing **Universal Serial Bus Specification Revision 2.0** and is compliant with **UHCI 1.1** and **EHCI 1.0**.

It supports 6-channel **AC'97 Audio Codec** and provides two **IDE Ultra DMA 100/66** channel. It has one **AGPro slot**, one **CNR** and three 32-bit **PCI** slots. There is a full set of I/O ports including two PS/2 ports for mouse and keyboard, one VGA port, one serial port, one parallel port, one LAN port (optional), three audio jacks for micropone, line-in and line-out, and four back-panel USB 2.0 ports. In addition, onboard USB headers provide extra ports by connecting the extended USB module to the motherboard.

It is a **Micro ATX** motherboard and has power connectors for an ATX power supply.

Key Features

The key features of this motherboard include:

LGA775 Socket Processor Support

- Supports the latest **Intel Pentium 4/Celeron D Series** processors with **Hyper-Threading Technology**
- Supports up to **800/533 MHz** Front-Side Bus

Note: **Hyper-Threading** technology enables the operating system into thinking it's hooked up to two processors, allowing two threads to be run in parallel, both on separate 'logical' processors within the same physical processor.

Chipset

There are **Intel 865GV Northbridge** and **Intel I/O Controller Hub 5 (ICH5)** in the chipsets in accordance with an innovative and scalable architecture with proven reliability and performance.

- Host Interface Support
 - One Intel Pentium 4 processor with 512-KB L2 cache on 0.13 micron process / Pentium 4 processor on 90 nm process

Motherboard User's Guide

- Hyper-Threading Technology
- System Memory Controller Support
 - Dual-channel (128 bits wide) DDR memory interface
 - Single-channel (64 bits wide) operation supported
 - Supports DDR266, DDR333, DDR400 DIMM modules
- PCI Bus Interface
 - Supports PCI Revision 2.3 Specification at 33 MHz
- Integrated LAN Controller
 - WfM 2.0 and IEEE 802.3 Compliant
 - 10/100 Mbit/sec Ethernet Support
- Integrated Serial ATA Host Controllers
 - Independent DMA operation on two ports
 - Data transfer rates up to 1.5 Gb/s (150 MB/s)
- Integrated IDE Controller
 - Ultra ATA/100/66/33, BMIDE and PIO modes
- USB 2.0
 - Includes 4 UHCI Host Controllers, increasing the number of external ports to eight
- AC-Link for Audio and Telephony Codecs
 - Support for 3 AC'97 2.3 codecs—533 MT/s (133 MHz) FSB and 800 MT/s (200 MHz) FSB
 - Supports Hyper-Threading Technology (HT Technology)
 - FSB Dynamic Bus Inversion (DBI)

Memory Support

- Three 184-pin 2.5V DIMM sockets for DDR SDRAM **DDR400**/333/266 memory modules
- Maximum installed memory is 3GB

Expansion Slots

- One AGPro slot
- Three 32-bit PCI slots
- One CNR slot

Onboard IDE channels

- Two IDE Channels supporting ATA-33, ATA-66, ATA-100
- Supports PIO (Programmable Input/Output) and DMA (Direct Memory Access) modes
- Supports IDE Ultra DMA bus mastering with transfer rates of **100**/66/33 MB/sec

Serial ATA

- Four Serial ATA Connectors
- Transfer rate exceeding best ATA (~150 MB/s) with scalability to higher rates
- Low pin count for both host and devices

AC'97 Audio Codec

- Compliant with AC'97 2.3 specification
- Front-Out, Surround-Out, MIC-In and LINE-In Jack Sensing
- Three analog line-level stereo inputs with 5-bit volume control: LINE_IN, CD, AUX
- Two analog line-level mono input
- Standard 48-Pin LQFP

Onboard I/O Ports

- Two PS/2 ports for mouse and keyboard
- One serial port
- One parallel port
- One VGA port
- One LAN port (optional)
- Four back-panel USB2.0 ports
- Audio jacks for microphone, line-in and line-out

Fast Ethernet LAN (optional)

- 10 Mb/s and 100 Mb/s operation
- Integrated Fast Ethernet MAC, physical chip, and transceiver onto a single chip
- Supports 10Mb/s and 100Mb/s N-way auto-negotiation
- Support ACPI power management
- Full Duplex Flow Control (IEEE 802.3x) and Half/Full duplex capability

USB 2.0

- Compliant with Universal Serial Bus Specification Revision 2.0
- Compliant with Intel's Enhanced Host Controller Interface Specification Revision 1.0
- Compliant with Universal Host Controller Interface Specification Revision 1.1
- PCI multi-function device consists of two **UHCI Host Controller** cores for full-/low-speed signaling and one **EHCI Host Controller** core for high-speed signaling
- Root hub consists 4 downstream facing ports with integrated physical layer transceivers shared by **UHCI** and **EHCI** Host Controller, up to eight functional ports
- Support PCI-Bus Power Management Interface Specification release 1.1
- Legacy support for all downstream facing ports

BIOS Firmware

This motherboard uses AMI BIOS that enables users to configure many system features including the following:

- Power management
- Wake-up alarms

Motherboard User's Guide

- CPU parameters and memory timing
- CPU and memory timing

The firmware can also be used to set parameters for different processor clock speeds.

Dimensions

- Micro ATX form factor of 244 x 244 mm

Note: Hardware specifications and software items are subject to change without notification.

Package Contents

Your motherboard package ships with the following items:

- The motherboard
- The User's Guide
- One diskette drive ribbon cable (optional)
- One IDE drive ribbon cable
- The Software support CD

Optional Accessories

You can purchase the following optional accessories for this motherboard.

- The Extended USB module
- The CNR v.90 56K Fax/Modem card
- The Serial ATA cable
- The Serial ATA power cable

Note: You can purchase your own optional accessories from the third party, but please contact your local vendor on any issues of the specification and compatibility.

Chapter 2 Motherboard Installation


To install this motherboard in a system, please follow these instructions in this chapter:

- Identify the motherboard components
- Install a CPU
- Install one or more system memory modules
- Make sure all jumpers and switches are set correctly
- Install this motherboard in a system chassis (case)
- Connect any extension brackets or cables to headers/connectors on the motherboard
- Install peripheral devices and make the appropriate connections to headers/connectors on the motherboard

Note:

- 1 Before installing this motherboard, make sure jumper JP1 is under Normal setting. See this chapter for information about locating JP1 and the setting options.
- 2 Never connect power to the system during installation; otherwise, it may damage the motherboard.

Motherboard Components

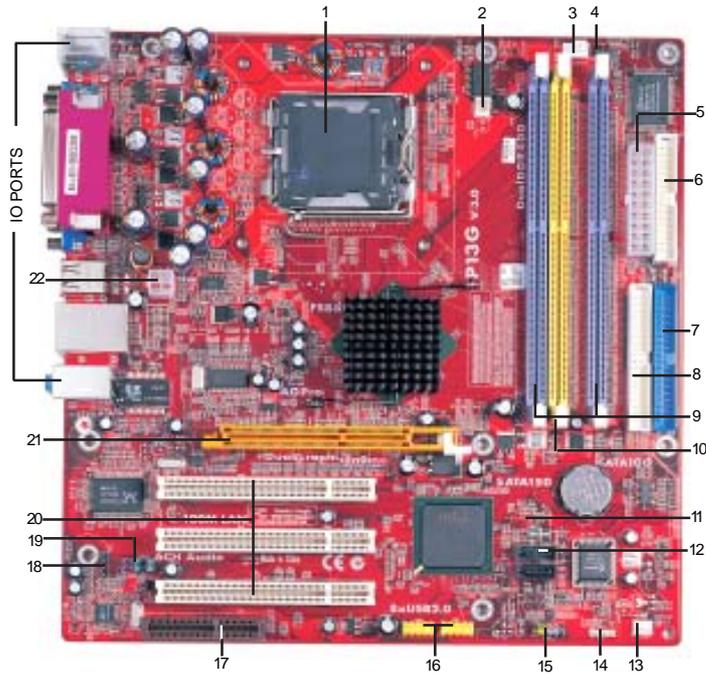

Chapter 2: Motherboard Installation

| ITEM | LABEL | COMPONENTS | COLOR |
|------|----------------|--|--------|
| 1 | CPU Socket | LGA775 Socket for Intel Pentium 4/ Celeron D CPUs | WHITE |
| 2 | PWRFAN | Power fan connector | WHITE |
| 3 | CFUFAN | CPU Fan connector(4PIN) | WHITE |
| 4 | IR1 | Infrared header | BLACK |
| 5 | ATX2 | Standard 20-Pin ATX Power connector | WHITE |
| 6 | FDD1 | Floppy Disk Drive connector | WHITE |
| 7 | IDE1 | Primary IDE connector | BLUE |
| 8 | IDE2 | Secondary IDE connector | WHITE |
| 9 | DIMM1 DIMM3 | 184-pin DDR SDRAM sockets (Support Dual-Channel DDR400) | PURPLE |
| 10 | DIMM2 | 184-pin DDR SDRAM sockets | YELLOW |
| 11 | JP1 | Clear CMOS jumper | RED |
| 12 | SATA 1/2 | Serial ATA connectors | BLACK |
| 13 | SYSFAN | System Fan connector | WHITE |
| 14 | SPK1 | Speaker header | LIME |
| 15 | PANEL1 | Front Panel Switch/LED header | COLOR |
| 16 | USB2/3 | Front Panel USB headers | YELLOW |
| 17 | CNR1 | CNR slot | BROWN |
| 18 | CD1 | Analog Audio Input header | BLACK |
| 19 | AUDIO2 | Front Panel Audio header | PURPLE |
| 20 | PCI 1-3 | 32-bit PCI slots | WHITE |
| 21 | AGPRO | AGPro slot * | ORANGE |
| 22 | ATX3 | Standard 4-Pin ATX Power connector | WHITE |

* Please see Page 19 for more details about AGPro slot.

Motherboard User's Guide

I/O Ports

The illustration below shows a side view of the built-in I/O ports on the motherboard.




| | |
|-----------------------------|---|
| PS/2 Mouse | Use the upper PS/2 port to connect a PS/2 pointing device. |
| PS/2 Keyboard | Use the lower PS/2 port to connect a PS/2 keyboard. |
| Parallel Port (LPT1) | Use the Parallel port to connect printers or other parallel communications devices. |
| COM1 | Use the COM port to connect serial devices such as mice or fax/modems. COM1 is identified by the system as COM1. |
| VGA | Use the VGA port to connect VGA devices. |
| LAN Port (optional) | Connect an RJ-45 jack to the LAN port to connect your computer to the Network. |
| USB Ports | Use the USB ports to connect USB devices. |
| Audio Ports | Use these three audio jacks to connect audio devices. The first jack is for stereo Line-In signal, the second jack for stereo Line-Out signal, and the third jack for Microphone. |

Installing the Processor

This motherboard has a **LGA775** socket for the latest **Intel Pentium 4/Celeron D** processors. When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

CPU Installation Procedure

Follow these instructions to install the CPU:

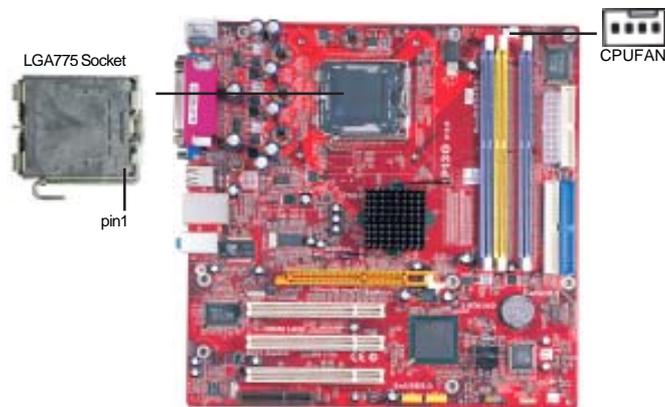

- A. Unload the cap
 - Use thumb & forefinger to hold the lifting tab of the cap.
 - Lift the cap up and remove the cap completely from the socket.
- B. Open the load plate
 - Use thumb & forefinger to hold the hook of the lever, pushing down and pulling aside unlock it.
 - Lift up the lever.
 - Use thumb to open the load plate. Be careful not to touch the contacts.



Motherboard User's Guide

- C. Install the CPU on the socket
- Orientate CPU package to the socket. Make sure you match triangle marker to pin 1 location.
- D. Close the load plate
- Slightly push down the load plate onto the tongue side, and hook the lever.
 - CPU is locked completely.
- E. Apply thermal grease on top of the CPU.
- F. Fasten the cooling fan supporting base onto the CPU socket on the motherboard.
- G. Make sure the CPU fan is plugged to the CPU fan connector. Please refer to the CPU cooling fan user's manual for more detail installation procedure.




Note1:To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 3800 rpm at least. CPU fan and heatsink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.

Note2:The fan connector supports the CPU cooling fan of 1.1A~2.2A (26.4W max.) at +12V.

Installing Memory Modules

This motherboard accommodates three 184-pin 2.5V DIMM sockets (Dual Inline Memory Module) for unbuffered **DDR400**/333/266 memory modules (Double Data Rate SDRAM), and maximum 3.0 GB installed memory. DDR SDRAM is a type of SDRAM that supports data transfers on both edges of each clock cycle (the rising and falling edges), effectively doubling the memory chip's data throughput.

This motherboard provides the Dual Channel Technology; when activating it, the bandwidth of memory bus will be doubled to 6.4 GB/s and Frequency 200 MHz (Channel 1: DIMM1+DIMM3 or Channel 2: DIMM2+DIMM3).

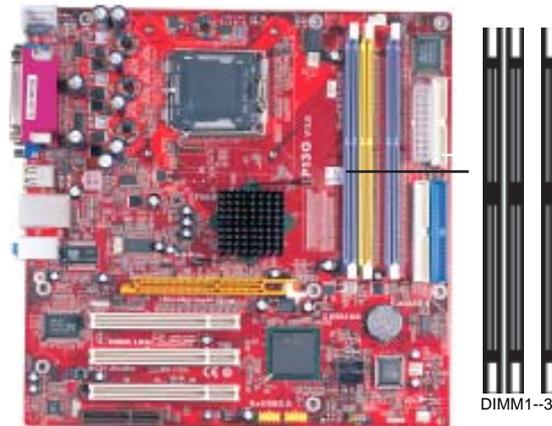

Memory Module Installation Procedure


These modules can be installed with up to 3 GB system memory. Refer to the following to install the memory module.

1. Push down the latches on both sides of the DIMM socket.
2. Align the memory module with the socket. There is a notch on the DIMM socket that you can install the DIMM module in the correct direction. Match the cutout on the DIMM module with the notch on the DIMM socket.
3. Install the DIMM module into the socket and press it firmly down until it is seated correctly. The socket latches are levered upwards and latch on to the edges of the DIMM.
4. Install any remaining DIMM modules.



Jumper Settings

Connecting two pins with a jumper cap is SHORT; removing a jumper cap from these pins, OPEN.

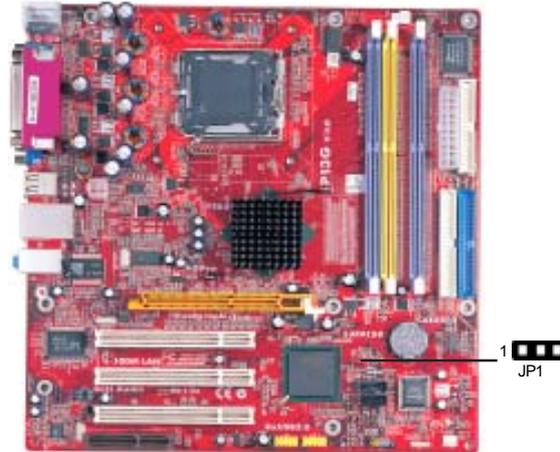

JP1: Clear CMOS Jumper

Use this jumper to clear the contents of the CMOS memory. You may need to clear the CMOS memory if the settings in the Setup Utility are incorrect and prevent your motherboard from operating. To clear the CMOS memory, disconnect all the power cables from the motherboard and then move the jumper cap into the CLEAR setting for a few seconds.


| Function | Jumper |
|------------|----------------|
| Normal | Short Pins 1-2 |
| Clear CMOS | Short Pins 2-3 |

Note: To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to "Load Optimal De-faults" and then "Save Changes and Exit".

Install the Motherboard

Install the motherboard in a system chassis (case). The board is a Micro ATX size motherboard. You can install this motherboard in an ATX case. Make sure your case has an I/O cover plate matching the ports on this motherboard.

Install the motherboard in a case. Follow the case manufacturer's instructions to use the hardware and internal mounting points on the chassis.

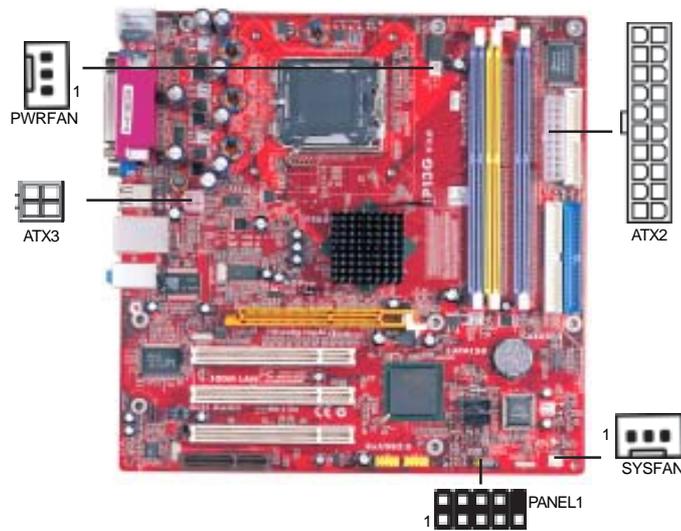

Connect the power connector from the power supply to the **ATX2** connector on the motherboard. The **ATX3** is a +12V connector for CPU Vcore power.

If there is a cooling fan installed in the system chassis, connect the cable from the cooling fan to the **SYSFAN** fan power connector on the motherboard.


Connect the power fan connector to **PWRFAN**.

Connect the case switches and indicator LEDs to the **PANEL1** header. Please refer to the following list of the PANEL1 pin assignments.

| Pin | Signal | Pin | Signal |
|-----|---------------|-----|---------------|
| 1 | HD_LED_P(+) | 2 | FP PWR/SLP(+) |
| 3 | HD_LED_N(-) | 4 | FP PWR/SLP(-) |
| 5 | RESET_SW_N(-) | 6 | POWER_SW_P(+) |
| 7 | RESET_SW_P(+) | 8 | POWER_SW_N(-) |
| 9 | RSVD_DNU | 10 | KEY |

Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

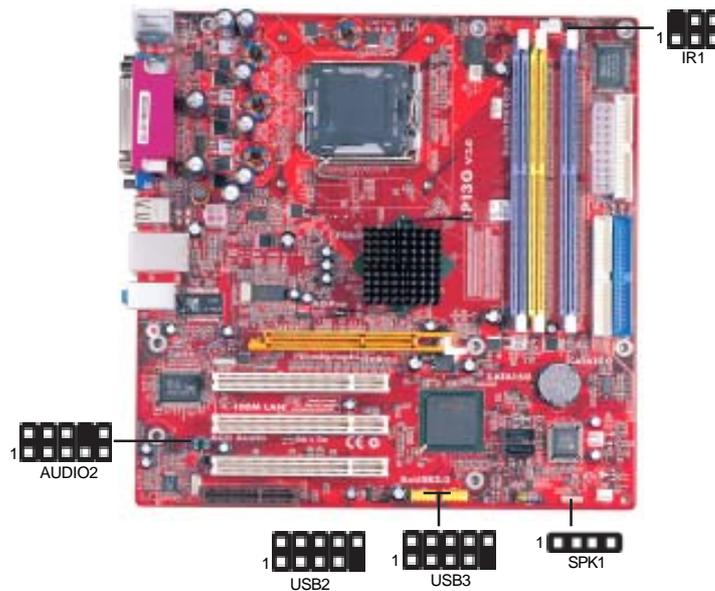

AUDIO2: Front Panel Audio Header

This header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access.

| Pin | Signal | Pin | Signal |
|-----|--------------|-----|-----------|
| 1 | AUD_MIC | 2 | AUD_GND |
| 3 | AUD_MIC_BIAS | 4 | AUD_VCC |
| 5 | AUD_FPOUT_R | 6 | AUD_RET_R |
| 7 | HP_ON | 8 | KEY |
| 9 | AUD_FPOUT_L | 10 | AUD_RET_L |

USB2/USB3: Front Panel USB Header

The motherboard has USB ports installed on the rear edge I/O port array. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB headers USB2/USB3 to connect the front-mounted ports to the motherboard.

Chapter 2: Motherboard Installation

Here is a list of headers USB2/USB3 pin assignments.

| Pin | Signal | Pin | Signal |
|-----|-----------------|-----|-----------------|
| 1 | VERG_FP_USBPWR0 | 2 | VERG_FP_USBPWR0 |
| 3 | USB_FP_P0(-) | 4 | USB_FP_P1(-) |
| 5 | USB_FP_P0(+) | 6 | USB_FP_P1(+) |
| 7 | GROUND | 8 | GROUND |
| 9 | KEY | 10 | USB_FP_OC0 |

- 1 Locate the USB2/USB3 header on the motherboard.
- 2 Plug the bracket cable onto the USB2/USB3 header.
- 3 Remove a slot cover from one of the expansion slots on the system chassis. Install an extension bracket in the opening. Secure the extension bracket to the chassis with a screw.

SPK1: Speaker Header

Connect the cable from the PC speaker to the SPK1 header on the motherboard.

| Pin | Signal |
|-----|--------|
| 1 | SPKR |
| 2 | NC |
| 3 | GND |
| 4 | +5V |

IR1: Infrared Header


The infrared port allows the wireless exchange of information between your computer and similarly equipped devices such as printers, laptops, Personal Digital Assistants (PDAs), and other computers.

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | NC | 2 | KEY |
| 3 | +5V | 4 | GND |
| 5 | IRTX | 6 | IRRX |

- 1 Locate the infrared port-**IR1** header on the motherboard.
- 2 If you are adding an infrared port, connect the ribbon cable from the port to the IR1 header and then secure the port to an appropriate place in your system chassis.

Install Other Devices

Install and connect any other devices in the system following the steps below.

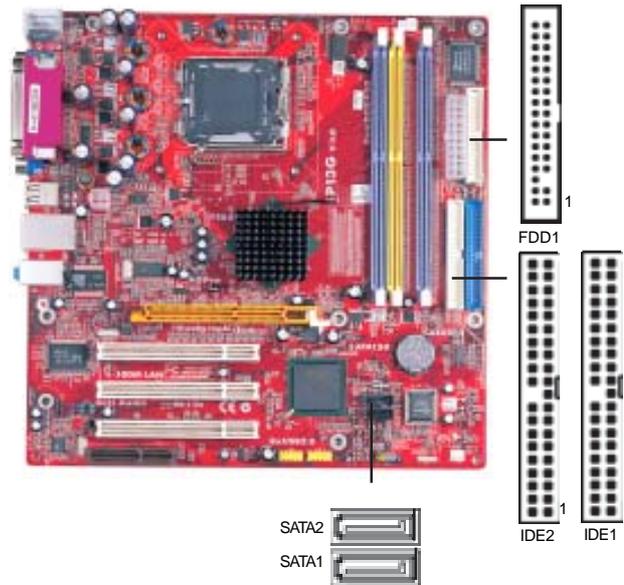

Floppy Disk Drive

The motherboard ships with a floppy disk drive cable that can support one or two drives. Drives can be 3.5" or 5.25" wide, with capacities of 360K, 720K, 1.2MB, 1.44MB, or 2.88MB.

Install your drives and connect power from the system power supply. Use the cable provided to connect the drives to the floppy disk drive connector **FDD1**.

IDE Devices

IDE devices include hard disk drives, high-density diskette drives, and CD-ROM or DVD-ROM drives, among others.

The motherboard ships with an IDE cable that can support one or two IDE devices. **IDE1** can support up to 2 IDE devices, data transporting in ATA-33/66/100 mode.

Serial ATA Devices

The **Serial ATA (Advanced Technology Attachment)** is the standard interface for the IDE hard drives, which is designed to overcome the design limitations

Chapter 2: Motherboard Installation

while enabling the storage interface to scale with the growing media rate demands of PC platforms. It provides you a faster transfer rate of **150 MB/s**. If you have installed a Serial ATA hard drive, you can connect the Serial ATA cables to the Serial ATA hard drive or the connector on the motherboard.

On the motherboard, locate the Serial ATA connectors **SATA1-2**, which support new Serial ATA devices for the highest data transfer rates, simpler disk drive cabling and easier PC assembly.

It eliminates limitations of the current Parallel ATA interface, but maintains register compatibility and software compatibility with Parallel ATA.

Analog Audio Input Header

If you have installed a CD-ROM drive or DVD-ROM drive, you can connect the drive audio cable to the onboard sound system.




When you first start up your system, the BIOS should automatically detect your CD-ROM/DVD drive. If it doesn't, enter the Setup Utility and configure the CD-ROM/DVD drive that you have installed. On the motherboard, locate the 4-pin header **CD1**.

| Pin | Signal |
|-----|---------|
| 1 | CD IN L |
| 2 | GND |
| 3 | GND |
| 4 | CD IN R |

Motherboard User's Guide

Expansion Slots


This motherboard has one CNR, one AGPro and three 32-bit PCI slots.

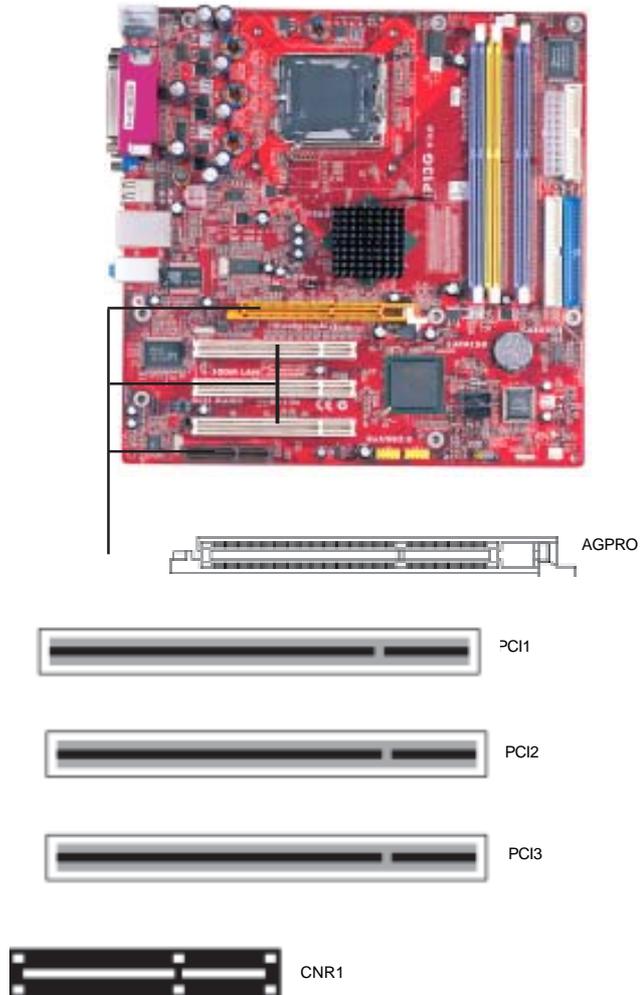

Chapter 2: Motherboard Installation

Follow the steps below to install an CNR/AGPro/PCI expansion card.

- 1 Locate the CNR, AGPro and PCI slots on the motherboard.
- 2 Remove the blanking plate of the slot from the system chassis.
- 3 Install the edge connector of the expansion card into the slot. Ensure the edge connector is correctly seated in the slot.
- 4 Secure the metal bracket of the card to the system chassis with a screw.

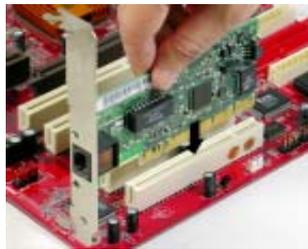

AGPro Slot (AGPRO)

The AGPro slot is used to install AGP graphics card that emulates the AGP function. In order to get better performance and compatibility on our special design AGPro slot, we recommend you should use one of the AGP graphics cards that have been tested by our company. Please refer to the “VGA Card Support List for AGPro Slot” on page 20.

VGA Card Support List for AGPro Slot:

| VENDOR | BUS | CHIPSET | MANUFACTURE |
|---------------------|-------------------------|--------------------|------------------------------|
| ATI | 4X | Radeon 8500 | ATI RADEON 8500 DDR |
| | | Radeon 9000 PRO | Gigabyte GV-R9000PRO |
| | 8X | Radeon 9200 | ECS R9200LE / 64M |
| | | Radeon 9200 | ECS R9200LE / 128M |
| | | Radeon 9250 | ECS R9250-128T |
| | | Radeon 9500 | Power Color ATI 9500 |
| Radeon 9700Pro | Power Color ATI 9700Pro | | |
| nVIDIA | 4X | RIVA TNT2 Model 64 | WINFAST S325 TNT M64 |
| | | GeForce 256 | Creative CT6940 |
| | | GeForce 256 DDR | ASUS V6800 DDR |
| | | GeForce 2 GTS | GIGABYTE GV-GF2010D |
| | | GeForce 2 GTS | ELSA GLADIAC GTS DDR PRO/64M |
| | | GeForce 2 MX | ASUS AGP-V7100 |
| | | GeForce 2 MX | ELSA Gladiac MX |
| | | GeForce 2 MX | Triplex Mohock |
| | | GeForce 2 Ultra | WINFAST GeForce 2 Ultra |
| | | GeForce 2 MX200 | Triplex-MX2200 |
| | | GeForce 2 MX400 | ELSA GLADIAC 511 |
| | | GeForce 3 | ELSA GLADIAC 920 |
| | | GeForce 3 | ASUS V8200 |
| | | GeForce 3 Ti500 | ASUS V8200 |
| | | GeForce 4 MX420 | WINFAST A170TH SDR |
| | | GeForce 4 MX440 | ASUS V8170DDR |
| | GeForce 4 Ti4200 | WINFAST A250TD/64M | |
| | GeForce 4 Ti4400 | ELSA 725DV1 | |
| | GeForce 4 Ti4600 | ELSA 925ViVo | |
| | 8X | GeForce 4 Ti4200 | ASUS V9280TD |
| | | GeForce 4 MX440 | ASUS V9180VS |
| | | GeForce 4 MX4000 | WinFast A180B |
| | | GeForce FX5200 | ASUS V9520 Magic |
| | | GeForce FX5600 | ELSA FX 732 |
| GeForce FX5700 | | ELSA FX 736 | |
| GeForce FX5800 | | MSI FX5800TD | |
| GeForce FX5900Ultra | | MSI FX5900Ultra | |
| GeForce FX5950Ultra | ELSA FX938Ultra | | |
| SIS | 8X | Xabre 200 | ECS AG200E4-D32 |
| | | Xabre 200 | ECS AG200T8_D64 |
| | | Xabre 400 | ECS AG400T8_D64 |
| | | Xabre 400 | ECS-MM.AG400T8_D64 |

Note: Please visit our website for the updated AGP graphics card support list : [Http://www.pcchips.com/support/FAQ](http://www.pcchips.com/support/FAQ)

PCI1-3 Slots

You can install the 32-bit PCI interface expansion cards in the slots.

CNR Slot

You can install CNR (Communications and Networking Riser) cards including LAN, Modem and Audio functions, in this slot.

Dual Monitor

In order to enable “Dual Monitor” Function, users must have “**Two Monitors**”, “**Two Graphics Devices**” (one is for AGP graphics card, and the other for onboard VGA) and Windows 2000 or Windows XP that supports the Dual Monitor Function.

Chapter 3 BIOS Setup Utility

Introduction


The BIOS Setup Utility records settings and information of your computer, such as date and time, the type of hardware installed, and various configuration settings. Your computer applies the information to initialize all the components when booting up and basic functions of coordination between system components.

If the Setup Utility configuration is incorrect, it may cause the system to malfunction. It can even stop your computer booting properly. If it happens, you can use the clear CMOS jumper to clear the CMOS memory which has stored the configuration information; or you can hold down the **Page Up** key while rebooting your computer. Holding down the **Page Up** key also clears the setup information.

You can run the setup utility and manually change the configuration. You might need to do this to configure some hardware installed in or connected to the motherboard, such as the CPU, system memory, disk drives, etc.

Running the Setup Utility

Every time you start your computer, a message appears on the screen before the operating system loading that prompts you to “Hit if you want to run SETUP”. Whenever you see this message, press the **Delete** key, and the Main menu page of the Setup Utility appears on your monitor. If you manually clear CMOS, you need to press the **F1** key that enters the Main menu page of the Setup Utility.

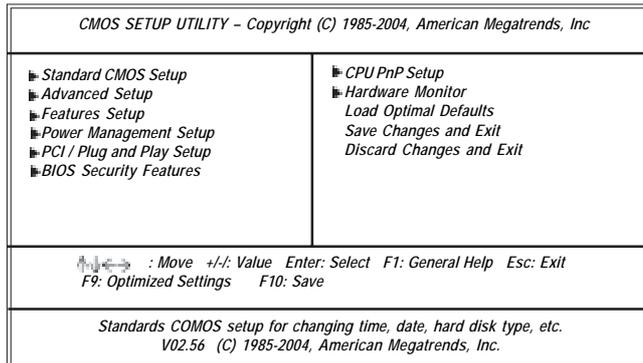

Chapter 3: BIOS Setup Utility

You can use cursor arrow keys to highlight anyone of options on the main menu page. Press **Enter** to select the highlighted option. Press the **Escape** key to leave the setup utility. Press +/- to modify the selected field's values.

Some options on the main menu page lead to tables of items with installed values that you can use cursor arrow keys to highlight one item, and press + and - keys to cycle through alternative values of that item. The other options on the main menu page lead to dialog boxes requiring your answer OK or Cancel by selecting **[OK]** or **[Cancel]**.

If you have already changed the setup utility, press **F10** to save those changes and exit the utility. Press **F1** to display a screen describing all key functions. Press **F9** to install the setup utility with a set of default values.

Standard CMOS Setup Page

This page displays a table of items defining basic information about your system.

| CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc. Standard CMOS Setup | | |
|--|----------------|---|
| System Time | 00:01:25 | Help Item |
| System Date | Thu 05/06/2004 | |
| Primary IDE Master | Not Detected | User [Enter], [TAB] or [SHIFT-TAB] to select a field. Use [+] or [-] to configure system time. |
| Primary IDE Slave | Not Detected | |
| Secondary IDE Master | Not Detected | |
| Secondary IDE Slave | Not Detected | |
| S-ATA0 Master | Not Detected | |
| S-ATA1 Slave | Not Detected | |
| Floppy A | 1.44 MB 3 1/2" | |
| Floppy B | Disabled | |
| ←→: Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults | | |

System Date & System Time

These items set up system date and time.

Primary IDE Master/Primary IDE Slave/Secondary IDE Master/Secondary IDE Slave/S-ATA0/1

Your computer has one IDE channel and each channel can be installed with one or two devices (Master and Slave). In addition, this motherboard supports four SATA channels and each channel allows one SATA device to be installed. Use these items to configure each device on the IDE channel.

Floppy A/B

These items set up size and capacity of the floppy diskette drive installed in the system.

Motherboard User's Guide

Advanced Setup Page

This page sets up more advanced information about your system. Handle this page with caution. Any changes can affect the operation of your computer.

| CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc. Advanced Setup | | |
|---|---------------------|-----------|
| Share Memory Size | 8 MB | Help Item |
| Quick Boot | Enabled | |
| 1st Boot Device | HDD:SS-ST3120026AS | |
| 2nd Boot Device | CD/DVD:3M-Pioneer D | |
| 3rd Boot Device | 1st Floppy Drive | |
| Try Other Boot Device | Yes | |
| BootUp Num-Lock | On | |
| Graphic Win Size | 64 MB | |
| Configure DRAM Timing by SPD | Enabled | |
| Hyper Threading Function | Enabled | |
| Execute Disable Bit | Disabled | |
| Auto Detect DIMM/PCI Clk | Enabled | |
| Spread Spectrum | Disabled | |
| Vdimm Voltage Control | 2.65V | |
| CPU TM Function | TM1 | |
| Max CPUID Value Limit | Disabled | |
| ↑↓←→ : Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults | | |

Share Memory Size

This item lets you allocate a portion of the main memory for the onboard VGA display application with these options of Disabled, 1 MB and 8 MB

Quick Boot

If you enable this item, the system starts up more quickly by elimination of some of the power on test routines.

1st Boot Device/2nd Boot Device/3rd Boot Device

Use these items to determine the device order the computer uses to look for an operating system to load at start-up time.

Try Other Boot Device

If you enable this item, the system will also search for other boot devices if it fails to find an operating system from the first two locations.

BootUp Num-Lock

This item determines if the Num Lock key is active or inactive at system start-up time.

Graphic Win Size

This item defines the size of aperture if you use a graphic adapter.

Configure DRAM Timing by

This item allows you to enable or disable the DRAM timing defined by the Serial Presence Detect electrical.

Hyper Threading Technology

If your P4 CPU is not HT CPU, this item will be hidden.

If your P4 CPU is HT CPU, BIOS will show this item. You can set “Disabled” or “Enabled” to control HT CPU support in O.S. Set “Enabled” to test HT CPU function.

Execute Disable Bit

It allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation. Replacing older computers with Execute Disable Bit-enabled systems can halt worm attacks, reducing the need for virus related repairs.

Auto Detect DIMM/PCI Clk

When this item is enabled, BIOS will disable the clock signal of free DIMM/PCI slots.

Spread Spectrum

If you enable spread spectrum, it can significantly reduce the EMI (Electro-Magnetic interface) generated by the system.

Vdimm Voltage Control

Use this item to adjust the voltage of DRAM memory.

CPU TM Function

For some specific brands of CPU, you can use this item to control the CPU frequency and voltage according to its temperature.

Max CPUID Value Limit

When this item is enabled, you can use Prescott CPU and LGA-775 CPU and there will be a normal NT4.0 installation; otherwise, the automatically restarting will occur while installing.

Motherboard User's Guide

Features Setup Page

This page sets up some parameters for peripheral devices connected to the system.

| <i>CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc.</i> | | |
|--|----------------------|--|
| <i>Features Setup</i> | | |
| | | <i>Help Item</i> |
| <i>OnBoard Floppy Controller</i> | <i>Enabled</i> | |
| <i>Serial Port1 Address</i> | <i>3F8/IRQ4</i> | |
| <i>OnBoard IR Port</i> | <i>Disabled</i> | |
| <i>Parallel Port Address</i> | <i>378</i> | <i>Allows BIOS to Enable or Disable Floppy Controller.</i> |
| <i>Parallel Port Mode</i> | <i>ECP</i> | |
| <i>ECP Mode DMA Channel</i> | <i>DMA3</i> | |
| <i>Parallel Port IRQ</i> | <i>IRQ7</i> | |
| <i>OnBoard PCI IDE Controller</i> | <i>Both</i> | |
| <i>Audio Device</i> | <i>Enabled</i> | |
| <i>Ethernet Device</i> | <i>Enabled</i> | |
| <i>MODEM Device</i> | <i>Auto</i> | |
| <i>OnBoard USB Function</i> | <i>Enabled</i> | |
| <i>USB Function for DOS</i> | <i>Disabled</i> | |
| <i>USB 2.0 Controller</i> | <i>Enabled</i> | |
| <i>*****On-Chip Serial ATA Setting*****</i> | | |
| <i>On-Chip Serial ATA</i> | <i>Enhanced Mode</i> | |
| <i>Serial ATA Port0/1 Mode</i> | <i>P0-3rd/P1-4th</i> | |

↑↓←→: Move Enter: Select +/-: Value F10: Save Esc: Exit
F1: General Help F9: Optimized Defaults

OnBoard Floppy Controller

Use this item to enable or disable the onboard floppy disk drive interface.

Serial Port1 Address

Use this item to enable or disable the onboard COM1/2 serial port, and to assign a port address.

OnBoard IR Port

Use this item to enable or disable the onboard infrared port, and to assign a port address.

Parallel Port Address

Use this item to enable or disable the onboard Parallel port, and to assign a port address.

Parallel Port Mode

This item decides the parallel port mode. You can select Normal, Bi-Directional, EPP (Enhanced Parallel Port), or ECP (Extended Capabilities Port).

ECP Mode DMA Channel

This item assigns a DMA channel to the parallel port. The options are DMA0, DMA1 and DMA3.

Parallel Port IRQ

This item assigns either IRQ 5 or 7 to the parallel port.

OnBoard PCI IDE Controller

Use this item to enable or disable either or both of the onboard Primary and Secondary IDE channels. There are four options: Disabled, Primary, Secondary and Both.

Audio Device

This item enables or disables the AC'97 audio chip.

Ethernet Device

This item enables or disables the onboard Ethernet LAN.

MODEM Device

This item enables or disables the MC'97 modem chip.

OnBoard USB Function

Enable this item if you plan to use the USB ports on this motherboard.

USB Function For DOS

Enable this item if you plan to use the USB ports on this motherboard in a DOS environment.

On-Chip Serial ATA

Use this item to disable or enable the S-ATA and IDE devices:

| Option | Function |
|---------------|---|
| Disabled | Disabled S-ATA Controller |
| Enhanced Mode | Primary: 2 IDE Drives Secondary: 2 IDE Drives S-ATA: 2 S-ATA Drives |
| SATA Only | Only Support S-ATA Mode |
| Combine Mode | Primary: 2 IDE Drives S-ATA: 2 S-ATA Drives <i>Note: If you need to install Windows 98 or Windows ME, please select "Combine Mode".</i> |

Serial ATA Port0/1 Mode

Use this item to decide the sequence of the Serial ATA devices.

Motherboard User's Guide

BIOS Security Features Setup Page

This page helps you install or change a password.

| CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc. BIOS Security Features Setup | |
|---|---------------------------------|
| Security Settings | Help Item |
| Supervisor Password : Not Installed Change Supervisor Password Password Check | Install or Change the password. |
| Press Enter Setup | |
| ↑↓←→: Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults | |

Supervisor Password

This item indicates whether a supervisor password has been set. If the password has been installed, *Installed* displays. If not, *Not Installed* displays.

Change Supervisor Password

You can select this option and press <Enter> to access the sub menu. You can use the sub menu to change the supervisor password.

Password Check

This item enables users to choose the time when the system will perform password check.

CPU PnP Setup Page

This page helps you manually configure the mainboard for the CPU. The system will automatically detect the type of installed CPU and make the appropriate adjustments to the items on this page.

| CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc. CPU PnP Setup | |
|--|------------------|
| Manufacturer: Intel Ratio Status Locked DRAM Frequency Auto CPU Frequency 200MHz CPU Over-clocking Func. Disabled | Help Item |
| ↑↓←→: Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults | |

Manufacturer/Ratio Status

These items show the brand and Locked/Unlocked ratio status of the CPU installed in your system.

DRAM Frequency

This item shows the frequency of the DRAM in your system.

CPU Frequency

This item shows the frequency of the CPU installed in your system.

CPU Over-clocking Func.

This item decides the CPU over-clocking function installed in your system. If the over-clocking fails, please turn off the system power. And then, hold the PageUp key (similar to the Clear CMOS function) and turn on the power, the BIOS will recover the safe default.

Hardware Monitor Page

This page sets up some parameters for the hardware monitoring function of this motherboard.

| CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc. Hardware Monitor Setup | |
|---|--------------|
| -- System Hardware Monitor-- | Help Item |
| Vcore | : 1.363 V |
| Vlidd | : 1.677 V |
| VCC5V | : 4.985 V |
| SYSTEM FAN Speed | : 2463 RPM |
| CPU FAN Speed | : 5192 RPM |
| POWER FAN Speed | : 0 RPM |
| System Temperature | : 45°C/113°F |
| CPU Temperature | : 47°C/116°F |
| ⏪ ⏩ : Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults | |

CPU/System Temperature

These items display CPU and system temperature measurement.

FANs & Voltage Measurements

These items indicate cooling fan speeds in RPM and the various system voltage measurements.

Load Optimal Defaults

If you select this item and press <Enter> a dialog box appears. If you select **[OK]**, and then press <Enter>, the Setup Utility loads a set of fail-safe default values. These default values are not very demanding and they should allow your system to function with most kinds of hardware and memory chips.

Save Changes and Exit

Highlight this item and press <Enter> to save the changes that you have made in the Setup Utility configuration. When the Save Changes and Exit dialog box appears, select **[OK]** to save and exit, or **[Cancel]** to return to the main menu.

Discard Changes and Exit

Highlight this item and press <Enter> to discard any changes that you have made in the Setup Utility and exit the Setup Utility. When the Discard Changes and Exit dialog box appears, select **[OK]** to discard changes and exit, or **[Cancel]** to return to the main menu.

Note: If you have made settings that you do not want to save, use the "Discard Changes and Exit" item and select **[OK]** to discard any changes you have made.

Chapter 4 Software & Applications

Introduction

This chapter describes the contents of the support CD-ROM that comes with the motherboard package.

The support CD-ROM contains all useful software, necessary drivers and utility programs to properly run our products. More program information is available in a README file, located in the same directory as the software.

To run the support CD, simply insert the CD into your CD-ROM drive. An Auto Setup screen automatically pops out, and then you can go on the auto-installing or manual installation depending on your operating system.

If your operating system is Windows 98SE/ME/2000/XP, it will automatically install all the drivers and utilities for your motherboard.

Installing Support Software

- 1 Insert the support CD-ROM disc in the CD-ROM drive.
- 2 When you insert the CD-ROM disc in the system CD-ROM drive, the CD automatically displays an Auto Setup screen.
- 3 The screen displays three buttons of **Setup**, **Browse CD** and **Exit** on the right side, and three others **Setup**, **Application** and **ReadMe** at the bottom. Please see the following illustration.



The **Setup** button runs the software auto-installing program as explained in next section.

The **Browse CD** button is a standard Windows command that you can check the contents of the disc with the Windows 98 file browsing interface.

Motherboard User's Guide

The **Exit** button closes the Auto Setup window. To run the program again, reinsert the CD-ROM disc in the drive; or click the CD-ROM driver from the Windows Explorer, and click the Setup icon.

The **Application** button brings up a software menu. It shows the bundled software that this mainboard supports.

The **ReadMe** brings you to the Install Path where you can find out path names of software driver.


Auto-Installing under Windows 98SE/ME/2000/XP

If you are under Windows 98SE/ME/2000/XP, please click the **Setup** button to run the software auto-installing program while the Auto Setup screen pops out after inserting the support CD-ROM:

- 1 The installation program loads and displays the following screen. Click the **Next** button.



- 2 Select the items that you want to setup by clicking on it (the default options are recommended). Click the **Next** button to proceed.

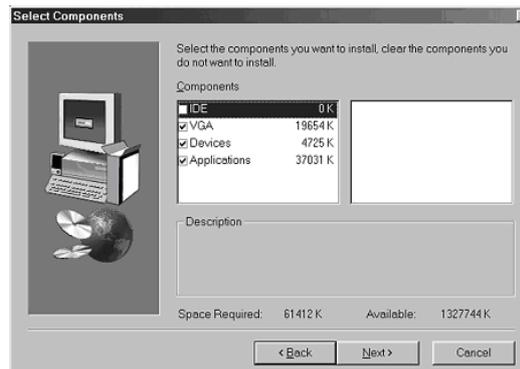

- 3 The support software will automatically install.

Chapter 4: Software & Applications

Once any of the installation procedures start, software is automatically installed in sequence. You need to follow the onscreen instructions, confirm commands and allow the computer to restart as few times as needed to complete installing whatever software you selected. When the process is finished, all the support software will be installed and start working.


Bundled Software Installation

All bundled software available on the CD-ROM is for users' convenience. You can install bundled software as follows:

- 1 Click the **Application** button while the Auto Setup screen pops out after inserting the support CD-ROM.
- 2 A software menu appears. Click the software you want to install.
- 3 Follow onscreen instructions to install the software program step by step until finished.

Hyper-Threading CPU

While you are in Windows Task Manager, please push down ctrl+Alt+Del keys. A dual CPU appears in the CPU Usage History & Device Manager under WinXP.

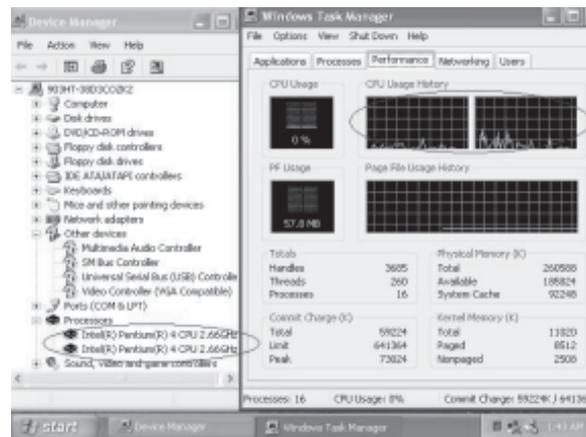

Note: Hyper-Threading Function only works under WINXP Operating System; therefore, disable it under other Operating System.