


CONNECTORS, JUMPERS SETTING

5737411431

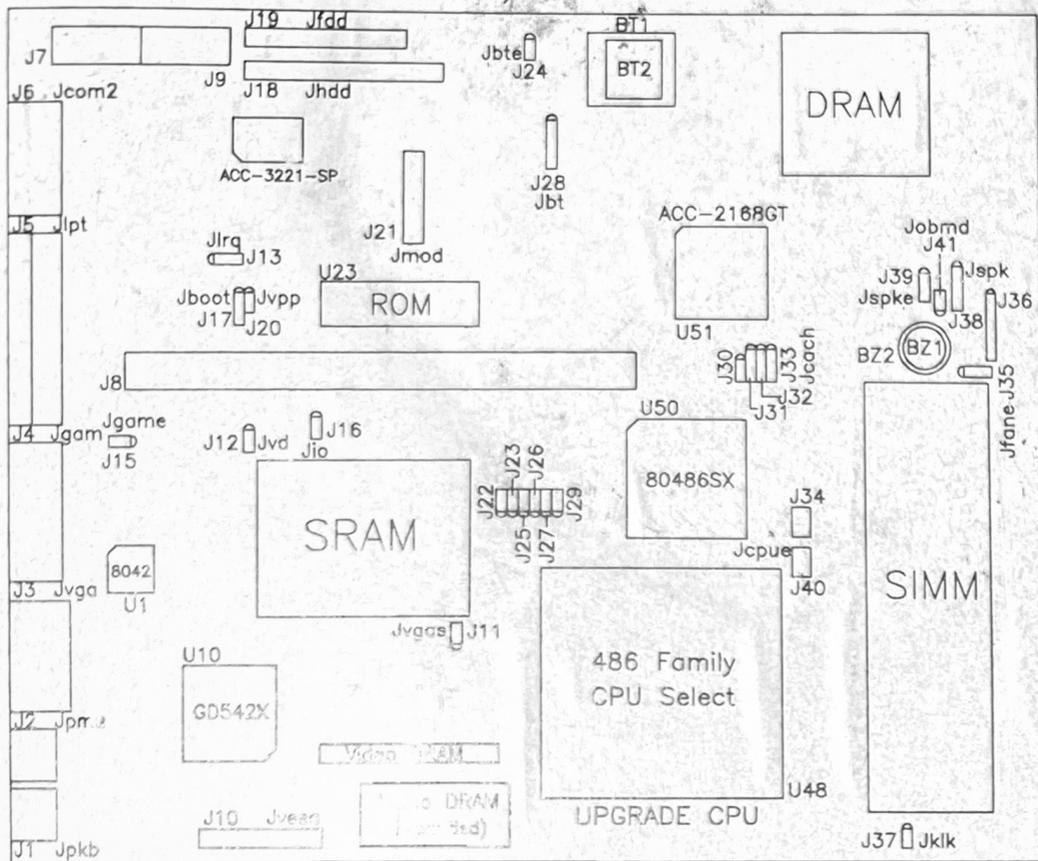

- J1: Keyboard Connector
- J2: Mouse Connector
- J3: VGA Monitor Connector
- J5: Parallel Port Connector
- J6: Serial Port B Connector
- J7: Power Connector #1
- J8: ISA Bus Extension Slot
- J9: Power Connector #2
- J10: VGA Feature Connector
- J18: IDE Port Connector
- J19: Floppy Drives Connector
- J21: Modem Connector
- J28: External Battery Connector
- J35: Auxiliary Fan Power Connector
- J36: Front Panel Connector
- J38: Auxiliary Speaker Connector
- J11: On-board VGA Enable
- J16: On-board Super I/O Enable
- J22: VGA IRQ Enable
- J24: On-board Battery Disable
- J27: Mouse Enable
- J41: On-board DRAM Disable

J40&J34: CPU Upgrade Type Select

	J34	J40
486DX	1-2, 5-6	1-2, 5-6
487SX	3-4	1-2, 5-6
486SX	5-6	3-4
None	3-4	1-2, 5-6

J30-J33: Level 2 Cache Size

	J30	J31	J32	J33
32K	OUT	1-2	1-2	1-2
128K	IN	2-3	2-3	1-2
512K	IN	2-3	2-3	2-3

J13: Printer Port Interrupt Select

1-2	IRQ7	IN	Color
2-3	IRQ5	OUT	Mono

J12: Color/Mono Select

- J23: SEL2 CPU Clock
- J25: SEL1 Speed Select
- J26: SEL0

	J23	J25	J26
20MHz	IN	OUT	OUT
25MHz	OUT	IN	IN
33MHz	OUT	IN	OUT
40MHz	OUT	OUT	IN

J39: Speaker Select

1-2	On-board Speaker
2-3	Auxiliary Speaker

J37: Keylock

IN	Locked
OUT	Unlocked

	J11	J16	J22	J24	J27	J41
Enabled	2-3	IN	IN	IN	IN	OUT
Disabled	1-2	OUT	OUT	OUT	OUT	IN

J14: Password Override/Clear

IN	Override/Clear
OUT	Normal Operation

J17: Boot Option

1-2	Boot From Boot-Block
2-3	Normal Operation