



JUMPER TABLE

JP-JUMPERS

JP1 1 - NORMAL DISKETTE OPERATION*
 1 - READ ONLY DISKETTE
 2 - (WRITE PROTECT)

JP3 1 - VERSA LOCAL BUS
 2 - (MUST BE JUMPED ALIKE)

JP4 2 - PIC BUS
 3 -

JP13 1 - PIC BUS
 1 - VERSA LOCAL BUS
 2 -

JP8 1 - DMA CH3 ECP*
 2 - (MUST BE JUMPED ALIKE)

JP9 2 - DMA CH1 ECP
 3 -

JP14 1 - NORMAL OPERATION*
 2 - ERASE POWER-ON/ADMIN.
 3 - PASSWORDS, AND CONFIG.

JP15 1 - IRQ 9 AVAILABLE*
 2 - IRQ NOT AVAILABLE
 3 - (SYS BOARD VIDEO ONLY)

J-JUMPERS

J13 1 - FLASH UPDATE DISABLED
 2 -
 3 - FLASH UPDATE ENABLED*

J15 1 - SYSTEM BOARD VIDEO
 2 - ENABLED*
 2 - SYSTEM BOARD VIDEO
 3 - DISABLED (EXT. VIDEO)

J16 1 - 0KB or 256KB CACHE*
 2 -
 3 - 128KB CACHE

J17 1 - 128KB CACHE
 2 - 0KB or 256KB CACHE*

J23 1 - 486SX PROCESSOR
 2 -
 3 - DX/DX2/DX4/P24T PROCESSOR

J24 1 - ALL OTHER PROCESSORS
 2 -
 3 - P24T PROCESSOR

PIN 1 TOWARDS REAR OF SYSTEM

* FACTORY SETTINGS

NOTE "J" AND "JP" JUMPERS PRESENT



CACHE TABLE 130/150-486

128K CACHE-POPULATE SOCKETS 1 THRU 5
 256K CACHE-POPULATE SOCKETS 1 THRU 9

NOTES: 1) SOCKETS 1 THRU 4-TOP TWO PIN ROWS NOT USED,
 INSERT MODULE PIN 1 IN SOCKET PIN 3.
 2) SOCKET 5 IS TAG MODULE - 15NS

MEMORY TABLE

TOTAL MEMORY	MEM 1	MEM 2	MEM 3	MEM 4
4MB	4MB	-	-	-
8MB	4MB	4MB	-	-
8MB	8MB	-	-	-
12MB	4MB	4MB	4MB	-
12MB	4MB	8MB	-	-
16MB	16MB	-	-	-
16MB	4MB	4MB	8MB	-
16MB	8MB	8MB	-	-
16MB	4MB	4MB	4MB	4MB
32MB	16MB	16MB	-	-
32MB	8MB	8MB	16MB	-
32MB	8MB	8MB	8MB	8MB
64MB	16MB	16MB	16MB	16MB
128MB	32MB	32MB	32MB	32MB

PLEASE REFER TO INSTALLING OPTIONS MANUAL FOR DEVICE
 INSTALLATION AND ADDITIONAL MEMORY CONFIGURATIONS

