

R622 Jumper Setting

CPU Type Selector : JP4, JP5, JP7, JP8, JP9, JP10, JP11, JP12

CPU Type	System CLK	Bus Freq.		Core Freq.				Sys. CLK	
		JP4	JP5	JP7	JP8	JP9	JP10	JP11	JP12
150 MHz	60 MHz x 2.5	O	C	O	C	C	C	O	C
166 MHz	66 MHz x 2.5	C	O	O	C	C	C	C	O
180 MHz	60 MHz x 3	O	C	C	O	C	C	O	C
200 MHz	66 MHz x 3	C	O	C	O	C	C	C	O

CMOS Clear Jumper : JP14

Function	JP14
Normal Operation (default)	1-2
Clear CMOS data	2-3

Flash EPROM Voltage Selector : JP15, JP16

EPROM Voltage Mode	JP15	JP16
+5V Flash ROM	1-2	2-3
+12V Flash ROM	2-3	2-3
None Flash ROM	1-2	1-2

DIMM DRAM Power Selector : JP2.

DIMM Module Type	JP2
5V	1-3,2-4
3.3V	3-5,4-6

Power Source Selector : JP6

Power Source	JP6
With AT Power Supply (CN1)	1-2
With ATX Power Supply (CN2)	2-3