

VIPer804

**386SX / 486SLC SINGLE BOARD COMPUTER
TECHNICAL REFERENCE MANUAL
VERSION 1.4, MARCH 1997**

**TEKNOR INDUSTRIAL COMPUTERS INC.
616 Cure Boivin
Boisbriand, Quebec
J7G 2A7 CANADA**

NOTE:

This manual is for reference purposes only.
Reproduction in whole or in part is authorized
provided TEKNOR INDUSTRIAL COMPUTERS INC.
is cited as the original source.

ref: M804S_1-4

FOREWORD

The information in this document is provided for reference purposes only. TEKNOR does not assume any liability for the application of information or the use of products described herein.

This document may contain information or refer to products protected by the copyrights or patents of others and does not convey any license under the patent rights of TEKNOR, nor the rights of others.

This manual does not discuss standard features of the IBM family of Personal Computers. Instead, it focuses on the superset of features that TEKNOR has implemented into its single board computers.

For information on IBM standard features, please refer to the following books:

- IBM AT Technical Reference Manual
- DOS Technical Reference
- Peter Norton's Programming the IBM PC

This is by no means an exhaustive list. Many titles exist on these subjects and just as many titles deal with specialized applications such as extended memory transfers, disk drives, ems, and so on.

If you require information not covered in this manual or in our Application Notes, contact our Technical Support department at (514) 437-5682.

Printed in Canada.

Copyright 1994 by TEKNOR INDUSTRIAL COMPUTERS INC., Boisbriand, Quebec
J7G 2A7

TABLE OF CONTENTS

LIST OF DIAGRAMS	x
LIST OF TABLES	xi
INTRODUCTION	1
PART ONE	
INSTALLING & SETTING UP VIPer	
SECTION 1	
INSTALLATION & SETUP	1-1
1.01 GETTING STARTED	1-1
1.02 HOW THE BOARD CAN BE USED	1-2
1.03 IMPORTANT PRECAUTIONS WHEN WORKING WITH A BOARD	1-3
1.04 UNPACKING	1-4
SECTION 2	
INSTALLING MEMORY	2-1
2.01 TYPES OF MEMORY ON BOARD	2-1
2.02 INSTALLING SIMMS	2-3
SECTION 3	
SETTING JUMPERS	3-1
3.01 TERMINOLOGY	3-1
3.02 JUMPER LOCATIONS ON THE BOARD	3-1
3.03 JUMPER SETTINGS	3-3

TABLE OF CONTENTS

LIST OF DIAGRAMS	x
LIST OF TABLES	xi
INTRODUCTION	1
PART ONE	
INSTALLING & SETTING UP VIPer	
SECTION 1	
INSTALLATION & SETUP	1-1
1.01 GETTING STARTED	1-1
1.02 HOW THE BOARD CAN BE USED	1-2
1.03 IMPORTANT PRECAUTIONS WHEN WORKING WITH A BOARD	1-3
1.04 UNPACKING	1-4
SECTION 2	
INSTALLING MEMORY	2-1
2.01 TYPES OF MEMORY ON BOARD	2-1
2.02 INSTALLING SIMMS	2-3
SECTION 3	
SETTING JUMPERS	3-1
3.01 TERMINOLOGY	3-1
3.02 JUMPER LOCATIONS ON THE BOARD	3-1
3.03 JUMPER SETTINGS	3-3

SECTION 4	
INSTALLING & WORKING WITH SYSTEM COMPONENTS	4-1
4.01 MICROPROCESSOR	4-1
4.02 INSTALLING MATH COPROCESSOR	4-1
4.03 CONFIGURING CACHE	4-2
4.04 SYSTEM CONTROLLER OVERVIEW	4-3
4.05 SUPERVISOR UTILITIES	4-6
4.06 MULTI-FUNCTION CONNECTOR (KEYBOARD, SPEAKER, RESET & LED)	4-7
4.07 PC/104 EXPANSION CARDS	4-8
4.08 PS/2 MOUSE	4-8
SECTION 5	
INSTALLING PERIPHERALS (PARALLEL/SERIAL)	5-1
5.01 PARALLEL PORT	5-1
5.02 SERIAL PORTS	5-7
SECTION 6	
INSTALLING IDE & FLOPPY DEVICES	6-1
6.01 INSTALLING IDE DEVICES	6-1
6.02 INSTALLING FLOPPY DEVICES	6-5
SECTION 7	
INSTALLING SOLID STATE DISKS (SRAM/FLASH)	7-1
7.01 SRAM DISK	7-1
7.02 FLASH EPROM DISK	7-3

SECTION 8	
POWER MANAGEMENT	8-1
8.01 POWER SUPPLY SOURCE	8-1
8.02 SLEEP MODE	8-2
8.03 RESET CIRCUIT	8-3
8.04 POWER FAIL DETECTION CIRCUIT	8-4
8.05 WATCHDOG TIMER	8-6
SECTION 9	
VIPer SOFTWARE SETUPS	9-1
9.01 VIP-UP PROGRAM	9-1
9.02 AMIBIOS SETUP PROGRAM	9-7

**PART TWO
SPECIAL SOFTWARE & ONBOARD UTILITIES**

SECTION 10	
VFLASH SOFTWARE	10-1
10.01 INTRODUCTION	10-1
10.02 OUTPUT SELECTION/FIRST SCREEN	10-4
10.03 OUTPUT SELECTION/SECOND SCREEN	10-5
10.04 FILE SELECTION SCREEN	10-7
10.05 LIST OF SELECTED FILES SCREEN	10-10
10.06 TRANSFER STATUS SCREENS	10-12
10.07 BATCH MODE	10-15
SECTION 11	
FLASH FILE SYSTEM II	11-1
11.01 SETTING UP CONFIG.SYS FOR FLASH FILE SYSTEM II	11-2
11.02 CREATING & FORMATTING AN MS-FLASH PARTITION	11-3
SECTION 12	
UPDATING BIOS	12-1
12.01 UBIOS - INTERACTIVE MODE	12-2
12.02 UBIOS - BATCH MODE	12-7
SECTION 13	
VT100 MODE	13-1
13.01 REQUIREMENTS	13-1
13.02 SETUP & CONFIGURATION	13-2
13.03 RUNNING WITHOUT A TERMINAL	13-4
SECTION 14	
DOWNLOAD MODE	14-1

APPENDIXES

APPENDIX A

VIPer804 SPECIFICATIONS

A-1

A.01 SPECIFICATIONS

A-1

A.02 BATTERY

A-2

A.03 MTBF

A-3

A.04 MEETING INDUSTRY STANDARDS

A-4

APPENDIX B

MEMORY & I/O MAPS

B-1

APPENDIX C

MECHANICAL LAYOUT & BLOCK DIAGRAM

C-1

APPENDIX D

CONNECTOR OVERVIEW

D-1

APPENDIX E

RECOMMENDED DEVICES & MATING CONNECTORS

E-1

APPENDIX F

ERROR CODES

F-1

F.01 POST CODES

F-1

F.02 BEEP ERROR CODES

F-7

GETTING HELP

1

LIST OF DIAGRAMS

2-1: Assembly	2-2
3-1: VIPer804 Jumper Locations	3-2
6-1: Floppy Disk Cable	6-7
13-1:VT100 Full Setup	13-3
13-2:VT100 Partial Setup	13-3
B-1: Memory Map	B-1
C-1: Mechanical Specifications	C-2
C-2: Block Diagram VIPer804	C-3

LIST OF TABLES

2-1: SIMM Configuration	2-3
3-1a: Jumper Settings: W1-W7	3-4
3-1b: Jumper Settings: W8-W13	3-5
3-1c: Jumper Settings: W14-J11	3-6
4-1: 8237 DMA Controller	4-3
4-2: 8259 Interrupt Controllers	4-4
4-3: Keyboard Controller	4-5
4-4: Register x90 (hex)	4-6
4-5: J3 Keyboard Header	4-7
5-1: Parallel Port Connector (J7) - Standard Mode	5-2
5-2: Parallel Port Connector (J7) - EPP Mode	5-3
5-3: Parallel Port Connector (J7) - ECP Mode	5-4
5-4a: Serial Port 1 (J9) RS232	5-8
5-4b: IBM 9-Pin DSUB Standard	5-8
5-5: Serial Port 1 (J6) RS232 - Standard IBM Serial Port	5-9
5-6a: Serial Port 2 (J4) RS232	5-10
5-6b: IBM 9-Pin DSUB Standard	5-10
5-7: Serial Port 2 (J4) RS485/RS422	5-11

LIST OF TABLES (Continued)

6-1: Hard Disk Connector (J1) - Pin-Out	6-2
6-2: Floppy Disk Connector (J2) - Pin-Out	6-6
8-1: Power Connector (J5) - Pin-Out	8-1
8-2: Watchdog Timer Register	8-6
9-1: Advanced Setup	9-13
9-2: Chipset Setup	9-14
A-1: Supply Current	A-1
B-2: I/O Map	B-2
F-1: Beep Error Codes	F-7

INTRODUCTION

The VIPer804 Single Board Computer is a high performance, fully IBM AT compatible, PC/AT single board computer. VIP stands for Very Integrated Processor. This board includes the following features:

- The VIPer804 has microprocessor support for these CPUs:
 - 80486SLC running at 33 MHz;
 - 80386SX running at 33 MHz.
- The 486SLC is made by Cyrix and TI, and has these features:
 - 80486SX instruction set compatible;
 - 1 KB of Internal Cache Memory;
 - 32-bit internal and 16-bit external data path.
- The VIPer804 has a coprocessor socket for installing an 80387SX Math Coprocessor.
- System memory can be configured as 1 MB, 2 MB, 4 MB, 8 MB or 16 MB of Dynamic RAM (DRAM) on 9-bit socketed SIMMs.
- The VIPer804 is a multi-purpose computer board:
 - It can be used as a single board computer in conjunction with a passive backplane;
 - Or as part of a stand-alone system with no backplane;
 - It can also operate without any mechanical disks by performing disk operations on solid state disks (Flash, SRAM).
- The board is ideal for industrial applications; it is designed to operate in environments where a sturdy and compact system is essential with features like:
 - A compact half-card format (7.1" x 4.8");
 - A watchdog timer;
 - A power failure detector;
 - Solid state disks (optional): 128 or 512 KB of SRAM and 1 MB of Flash EPROM.
- The VIPer804 includes an onboard IDE interface.

- The VIPer804 includes an enhanced super floppy controller which supports two floppy disk drives of up to 2.88 MB each, 16 bytes of FIFO buffering and a 48mA drive buffer.
- The VIPer804 board has one parallel printer port (ECP and EPP modes are supported).
- Serial Port 1 and Serial Port 2 are 16550 compatible with internal 16-byte FIFO buffers and can be defined as two of the following: COM1, COM2, COM3 or COM4.
- The board also includes a PS/2 mouse port.
- The board's PC/104 expansion header accepts any PC/104 mezzanine card.
- The VIPer804 board also includes a real-time clock with battery backup.

The VIPer804 HARDWARE REFERENCE MANUAL's Sections are divided into two parts. The first part - INSTALLING & SETTING UP VIPer - includes nine Sections which give a full overview of the VIPer804 board, plus installation and setup procedures. A topical index of these Sections is included below:

<u>TOPICS</u>	<u>SECTIONS</u>
Cable connections	5, 6, 8
Cache	4
CPUs	4
Floppy disk drives	6
Hard disk (IDE)	6
Jumpers	3
Memory	2
Mouse	4
Peripherals (Serial, Parallel)	5
Power supply	1, 8
Solid state disks (Flash, SRAM)	7
Static electricity	1
Unpacking	1
VIPer software setups	9

Introduction 2

Part Two - SPECIAL SOFTWARE & ONBOARD UTILITIES - contains information and instructions for using special software and onboard utilities; it has the following five Sections:

- Section 10: VFLASH SOFTWARE;
- Section 11: FLASH FILE SYSTEM II;
- Section 12: UPDATING BIOS;
- Section 13: VT100 MODE;
- Section 14: DOWNLOAD MODE.

Following the Sections are Appendixes A to F which contain information you can consult when needed. These include:

- Appendix A: VIPer804 SPECIFICATIONS;
- Appendix B: MEMORY & I/O MAPS;
- Appendix C: MECHANICAL LAYOUT & BLOCK DIAGRAM;
- Appendix D: CONNECTOR OVERVIEW;
- Appendix E: RECOMMENDED DEVICES & MATING CONNECTORS;
- Appendix F: ERROR CODES;

At the end of the manual, there is a GETTING HELP section which includes Technical Services/Support information, the warranty and instructions on returning merchandise.

PART ONE

INSTALLING & SETTING UP VIPer

SECTION 1: INSTALLATION & SETUP

SECTION 2: INSTALLING MEMORY

SECTION 3: SETTING JUMPERS

SECTION 4: INSTALLING & WORKING WITH SYSTEM COMPONENTS

SECTION 5: INSTALLING PERIPHERALS (PARALLEL/SERIAL)

SECTION 6: INSTALLING IDE & FLOPPY DEVICES

SECTION 7: INSTALLING SOLID STATE DISKS (SRAM/FLASH)

SECTION 8: POWER MANAGEMENT

SECTION 9: VIPer SOFTWARE SETUPS

SECTION 1 INSTALLATION & SETUP

1.01 GETTING STARTED

Part One of this manual (Sections 1 to 9) groups the various aspects of the VIPer804 board, with special emphasis put on installation and setup procedures. Wherever possible, technical information is given in these nine Sections to describe the various features of the board.

Depending on your level of experience and expertise, you will want to spend more or less time with the manual.

More experienced users will undoubtedly find Section 3 - SETTING JUMPERS - most helpful for locating the connectors and jumpers of the board and understanding how the board can be configured via the jumpers. Then, they can consult the TABLE OF CONTENTS at the beginning of this manual for specific information concerning the VIPer804 board, or refer to the topical index of Part One found on page 2 of the INTRODUCTION.

For less experienced users, it is recommended that they read through Part One of the manual as they install and set up the VIPer804 board. These Sections have been organized in a chronological order with respect to the steps that would be taken to install and set up the board. Certain Sections or sub-sections which deal with devices or peripherals that one wants to install can be studied in greater detail, while those describing devices that are not of interest can be skipped.

1.02 HOW THE BOARD CAN BE USED

The VIPer804 board is a multi-purpose computer board:

- The VIPer804 can be used as a **single board computer** in conjunction with a passive backplane. Power is drawn directly from the AT bus.
- The VIPer804 can be used as part of a **stand-alone system** with no backplane. The board has its own power connector, through which power can be drawn. The board has a PC/104 expansion header which accepts any PC/104 mezzanine card. The VIPer804 can also operate without any user interface.
- The VIPer804 can also operate **without any mechanical drives** by performing disk operations on solid state disks (user Flash EPROM and SRAM). A Flash EPROM partition created with the VFLASH utility is a read-only disk, while an MS-Flash partition created with the FLASH FILE SYSTEM II utility is a read/write disk that can be accessed via the MS-DOS commands. You can even set up your board to boot from the VFLASH partition. As for the SRAM disk, a read/write partition can be created using FDISK; it can then be accessed with the DOS commands.

1.03 IMPORTANT PRECAUTIONS WHEN WORKING WITH A BOARD

1.03.1 STATIC ELECTRICITY PRECAUTIONS

Since static electricity can damage a board, the following precautions should be taken:

- Keep the board in its antistatic package, until you are ready to install it.
- Touch a grounded surface before removing the board from its package or wear a grounding wrist strap; this will discharge any static electricity that may have built up in your body.
- Handle the board by the edges.
- When handling the board, touch a grounded surface often or wear a grounding wrist strap.

1.03.2 POWER PRECAUTIONS

Before installation and setup, ensure that the board is unplugged by turning off the power supply or unplugging any power cords.

1.04 UNPACKING

Follow these recommendations while unpacking:

- Observe the Static Electricity Precautions in section 1.03.1.
- After opening the box, save it and the packing material for possible future shipment.
- Remove the board from its antistatic wrapping and place it on a grounded surface.
- Inspect the board for damage. If there is any damage, or items are missing, notify TEKNOR immediately.

SECTION 2 INSTALLING MEMORY

2.01 TYPES OF MEMORY ON BOARD

Various types of memory are installed or supported on the VIPer804 board.

2.01.1 SYSTEM MEMORY (DRAM)

Dynamic Random Access Memory (DRAM) is essential system memory. It can be configured as 1 MB, 2 MB, 4 MB, 8 MB or 16 MB, on standard SIMM sockets. This is the only type of memory which can be installed by the user. See section 2.02 for instructions on installing SIMMs.

The location of the four standard 9-bit SIMM sockets appears on Diagram 2-1 at U1, U2, U3 and U4.

2.01.2 BIOS (FLASH EPROM & EPROM)


The Flash EPROM and the EPROM BIOS are also factory installed. The Flash EPROM appears on Diagram 2-1 at U23 and the EPROM BIOS at U18.

2.01.3 SOLID STATE DISKS (SRAM & FLASH EPROM DISKS)

Optional solid state disks which can be ordered from TEKNOR include SRAM (Static Random Access Memory) and Flash EPROM (user). See Section 7 for more information.

SRAM appears on Diagram 2-1 at U13. Two options exist for the user Flash EPROM: 512 KB or 1 MB. The 512 KB Flash EPROM disk option is located at U14, while the 1 MB option appears at U26.

DIAGRAM 2-1: Assembly

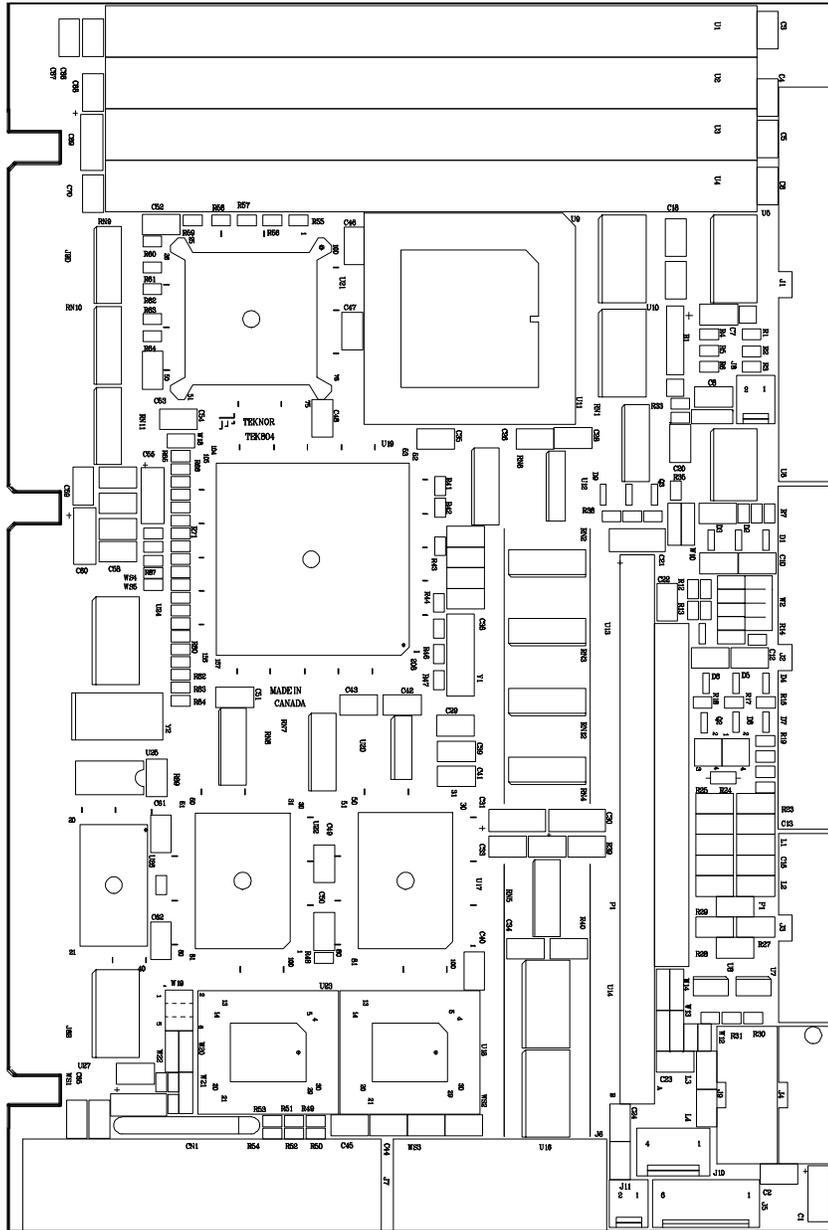

Installing Memory 2-2

2.02 INSTALLING SIMMS

At least 1 MB of system memory must be installed on the VIPer804 for proper operation.

Memory can be configured from 1 to 16 MB on the VIPer804 board using 9-bit SIMM devices.

There are four SIMM (Single In-line Memory Module) sockets; these can accept either 256 KB, 1 MB or 4 MB modules. Please refer to Appendix E for a list of recommended devices. Note that all SIMMs must be of the same capacity and installed in sockets 2 and 4 or in all four sockets.

Consult the following table when installing SIMMs. Note that U1 is near the edge of the board.

TABLE 2-1: SIMM Configuration

MEMORY SIZE	U1 BANK 1	U2 BANK 0	U3 BANK 1	U4 BANK 0
1 MB	256 KB	256 KB	256 KB	256 KB
2 MB	--	1 MB	--	1 MB
4 MB	1 MB	1 MB	1 MB	1 MB
8 MB	--	4 MB	--	4 MB
16 MB	4 MB	4 MB	4 MB	4 MB

Follow these steps to install SIMMs on the sockets:

- Turn the board so that the sockets are at the end of the board farthest from you.
- Hold the module at a 70° angle to the socket, with the chips on the module facing you, and insert the connector into the socket.
- Snap the module to a vertical position in the socket. The module is fully inserted when the retaining pegs snap into the holes at each end of the module.

Eventually, VIPer setups will have to be executed to tell the system how much memory you have installed (Section 9).

SECTION 3 SETTING JUMPERS

This Section describes how to configure hardware options by setting jumper switches on the VIPer board.


3.01 TERMINOLOGY

Jumper switches are small pins that you can set by using jumper caps. Two pins can be joined by a jumper cap, thereby closing or shorting a circuit. So you **short** (or close) a jumper by placing a plastic jumper cap over two pins of the jumper switch, and you **open** a jumper switch by removing a jumper cap.

3.02 JUMPER LOCATIONS ON THE BOARD

Diagram 3-1 on the next page shows 23 jumpers labeled from W1 to W22, and J11. These appear as rectangular boxes containing small circles which represent the pins. The jumpers are labeled on the board as well. When there are more than two pins in a jumper, then some of the pins are also numbered on the diagram and on the board, so that it will be possible to locate each pin and its number.

DIAGRAM 3-1: VPer804 Jumper Locations

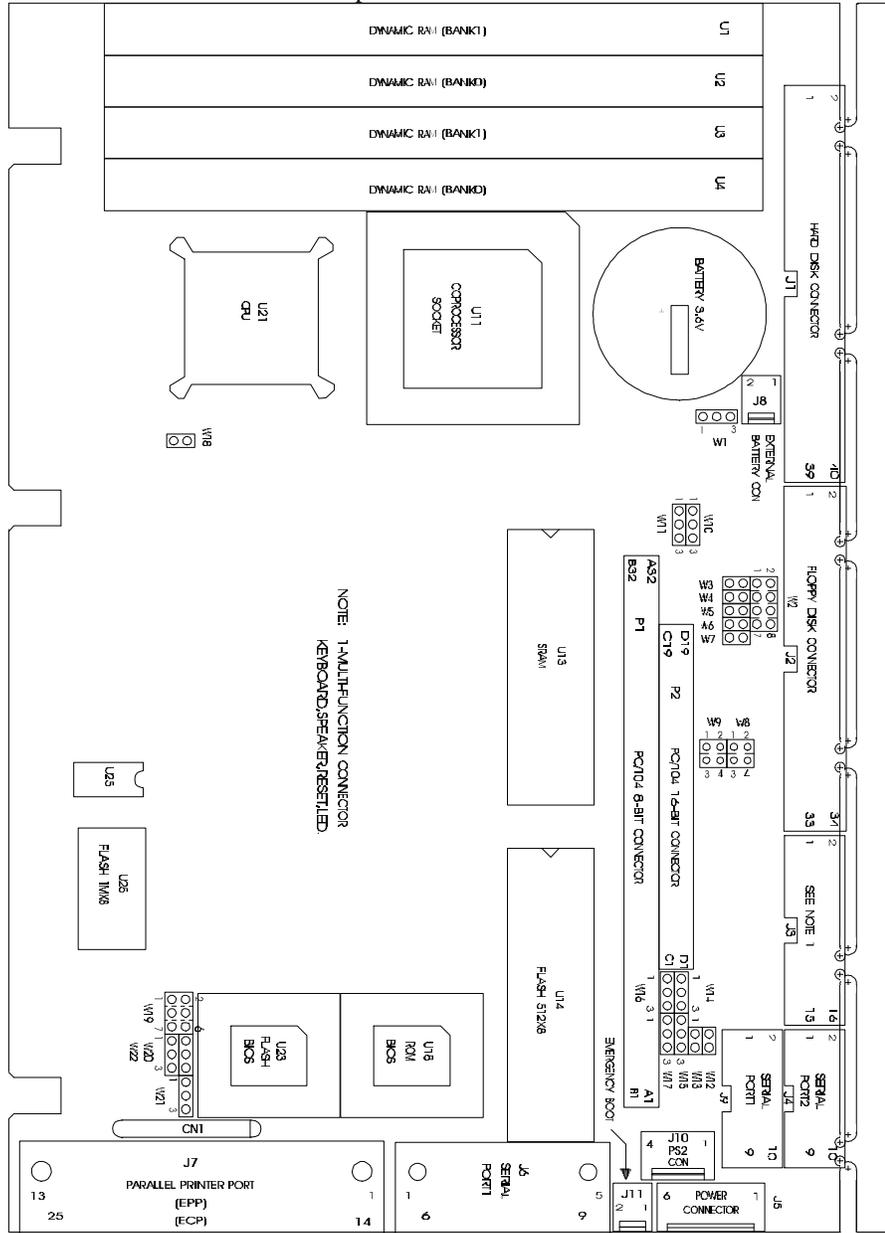

3.03 JUMPER SETTINGS

TABLE 3-1a to 3-1c on the following pages 3-3 to 3-5 show the jumper settings for W1 to W22, and J3.

TABLE 3-1a: Jumper Settings: W1 - W7

 
 
 
NAME	FUNCTION	CONFIGURATION (INITIAL SETTING: *)	
W1	External Battery	 <p>Battery Connected to J8</p>	 <p>Battery Connected to J5</p>
W2	Extended BIOS Modes (These jumpers are configured separately, even though they are grouped together here)	<p>1-2: Not Used</p> <p>3-4: Not Used</p> <p>5-6: VT100 Mode</p> <p>7-8: Serial Download Mode</p> 	<p>1-2: Not Used</p> <p>3-4: Not Used</p> <p>5-6: Standard Mode *</p> <p>7-8: Normal Mode *</p> 
W3	Power fail monitoring (Non Maskable Interrupt on Power Fail Output)	 <p>Enabled</p>	 <p>Disabled *</p>
W4	IOCHRDY signal to IDE interface	 <p>Enabled</p>	 <p>Disabled *</p>
W5	Watchdog Timer	 <p>Enabled *</p>	 <p>Disabled</p>
W6	Flash BIOS write	 <p>Enabled *</p>	 <p>Disabled</p>
W7	Flash Disk write	 <p>Enabled *</p>	 <p>Disabled</p>

TABLE 3-1b: Jumper Settings: W8 - W13

NAME	FUNCTION	CONFIGURATION (INITIAL SETTING: *)		
W8 & W9	2.88 MB High Density Floppy, HDOUT signal 2.88 MB High Density Floppy, EDOUT signal	<p>HDOUT left to software*</p> 	<p>1-3: HDOUT to Pin 33 (J3); 2-4: Ground to Pin 27 (J3)</p> 	<p>1-2: HDOUT to Pin 27 (J3); 3-4: Ground to Pin 33 (J3)</p> 
		<p>EDOUT left to software*</p> 	<p>OR: 1-3: EDOUT to Pin 29 (J3); 2-4: Ground to Pin 17 (J3)</p> 	<p>OR: 1-2: EDOUT to Pin 17 (J3); 3-4: Ground to Pin 29 (J3)</p> 
W10	Battery selection	<p>Internal battery *</p> 	<p>External battery</p> 	
W11	Power fail detection source (enabled with W3)	<p>External Power Fail Input to Pin 6 of J5 *</p> 	<p>Internal/external battery when less than 3 volts</p> 	
W12 W13	DSR2-DTR2 Serial Port 2 RS485 Loopback RTS2-RTS2 Serial Port 2 RS485 Loopback	 Loopback	 Normal *	
		 Loopback	 Normal *	

TABLE 3-1c: Jumper Settings: W14 - J11

NAME	FUNCTION	CONFIGURATION (INITIAL SETTING: *)		
W14	Serial Port 2 Configuration	 RS232 *	 RS485	
W15	Serial Port 2 Configuration	 RS232 *	 RS485	
W16	Serial Port 2 Configuration	 RS232 *	 RS485	
W17	Serial Port 2 Configuration	 RS232 *	 RS485	
W18	System Clock (SYSCLK)	 8 MHz Standard; Asynchronous *	 Frequency programmable in AMIBIOS Setup; Synchronous	
W19	1-4: Supervisor I/O: Base address 5-6: Not used	 190H *  290H	 390H  390H	
W20	Interrupt Signal from onboard Parallel Port	IRQ5 (Normally used for LPT2) 	IRQ7 (Normally used for LPT1) * 	
W21 & W22	DMA Request Signal for ECP Mode DMA Acknowledge Signal for ECP Mode	DRQ1 	OR: DRQ3 	OR: NONE * 
		DACK1 	DACK3 	NONE * 
J11	BIOS boot selection	 Emergency boot (from ROM BIOS)	 Normal boot (from Flash BIOS) *	

SECTION 4 INSTALLING & WORKING WITH SYSTEM COMPONENTS

4.01 MICROPROCESSOR

The microprocessor options available on the VIPer board are the 80386SX 33 MHz CPU (Central Processing Unit) and the Cyrix/TI 80486SLC 33 MHz CPU.

The 486SLC microprocessor is manufactured by Cyrix and TI, and has these features:

- 80486SX instruction set compatible,
- 32-bit internal/16-bit external data path,
- 1 KB of Internal Cache Memory: explained in section 4.03.

4.02 INSTALLING MATH COPROCESSOR

The board's coprocessor socket (U11) accepts an 80387SX Math Coprocessor. This coprocessor performs mathematical calculations.

To install an 80387SX math coprocessor, follow these steps:

- Make sure that power to the computer board is off.
- Align the coprocessor so that the notched corner of the chip matches the notched corner of the socket.
- Carefully press the chip into the socket.
- Please refer to Appendix E - RECOMMENDED DEVICES & MATING CONNECTORS - for a list of coprocessors.

4.03 CONFIGURING CACHE

The 486SLC microprocessor has 1 KB of Internal Cache Memory available for faster execution of applications.

Cache copies the most recently accessed data and places it in its fast Internal Cache Memory. The CPU can then access this data at a very high speed. Since most program executions are sequential and repetitive, the likelihood is great that the CPU will find data already stored in cache.

When the CPU retrieves data from cache, a **cache hit** occurs. On the other hand, when the CPU must access data from system memory, a **cache miss** occurs .

Internal Cache Memory is enabled or disabled in the Advanced CMOS Setup screen of the AMIBIOS Setup program. To run the AMIBIOS Setup program, boot-up your computer and hit the DELETE key before or when the message - "Hit if you want to run SETUP" - appears near the top of the screen. Set Internal Cache Memory in the Advanced CMOS Setup screen to Enabled or Disabled.

Cache is configured in the second screen of VIPer Setup (run VIP-UP from DOS or hit the the CTRL and V keys simultaneously during boot-up before or when the message - "Press CTRL-V to enter TEKNOR VIP-UP" - appears near the top of the screen). VIPer Setup allows definition of non-cacheable blocks of system memory.

Section 9 - VIPer SOFTWARE SETUPS - documents the AMIBIOS Setup and the VIPer Setup, and should be consulted to configure Cache.

4.04 SYSTEM CONTROLLER OVERVIEW

The VL82C315A System Controller used on the VIPer board is a true single chip AT high-performance controller intended primarily for low-power applications which require a high degree of integration. It is also an excellent choice for high integration, low-cost desktop systems.

The System Controller includes two DMA controllers, two interrupt controllers, a timer, a clock generator and ready interface, a bus controller, a keyboard controller and a real-time clock. Some of these features are explained below.

4.04.1 DMA CONTROLLERS

The VIPer supports seven Direct Memory Access (DMA) channels. Two DMA controllers, functionally equivalent to the 8237, are used with four channels on each chip.

The parallel port's ECP mode can be configured to use Channel 1 or 3. Channel 2 is reserved for the floppy controller and Channel 4 is used to cascade Channels 0 through 7 to the microprocessor.

TABLE 4-1: 8237 DMA Controller

DMA 0	Available
DMA 1	Available (ECP)
DMA 2	Floppy controller
DMA 3	Available (ECP)
DMA 4	Cascade controller # 1
DMA 5	Available
DMA 6	Available
DMA 7	Available

4.04.2 INTERRUPT CONTROLLERS

Two 8259 interrupt controllers handle the interrupts on the VIPer804. Six interrupt lines are directly linked to the keyboard controller timer, the real-time clock, both serial ports and the parallel port.

TABLE 4-2: 8259 Interrupt Controllers

CONTROLLER # 1		CONTROLLER # 2	
IRQ 0	Timer 0	IRQ 8	Real-time clock*
IRQ 1	Keyboard	IRQ 9	Available
IRQ 2	Cascade controller # 2	IRQ 10	Available
IRQ 3	COM 2*	IRQ 11	Available
IRQ 4	COM 1*	IRQ 12	PS/2 Mouse
IRQ 5	Available(LPT2)*	IRQ 13	Coprocessor
IRQ 6	Floppy controller*	IRQ 14	IDE*
IRQ 7	LPT 1*	IRQ 15	Available

* All functions marked with an asterisk (*) can be disabled or reconfigured.

4.04.3 TIMER/COUNTER

The 8254 timer features three independent 16-bit timer/counters. Timer 0 is tied to Interrupt 0, Timer 1 is used to generate the refresh with DMA Channel 0, and Timer 2 is used for the speaker port.

4.04.4 KEYBOARD CONTROLLER

The keyboard controller on the VIPer804 is compatible to Intel 8042 and is programmed to support the keyboard serial interface. The standard IBM AT® keyboard is supported. It can be hooked up using the supplied DIN connector cable.

The keyboard controller receives serial data from the keyboard, checks data parity, translates scan codes, and presents the data to the system as a byte of data in its output buffer. The controller can interrupt the system when data is placed in its output buffer, or wait for the system to poll its status register to determine when data is available.

TABLE 4-3: Keyboard Controller

ADDRESS		REGISTER
060	Read	Keyboard output buffer register
060	Write	Data write
064	Read	Status register
064	Write	Command write

4.04.5 REAL-TIME CLOCK

The Real-Time Clock (RTC) is compatible with the popular MC146818 used on the IBM AT®. It combines a complete time-of-day clock with a one-hundred year calendar, an alarm, a programmable periodic interrupt, and 114 bytes of low-power static RAM. A battery backup facility is provided for the RTC. The internal clock circuitry uses 14 bytes of this RAM, and the rest is reserved for configuration information.

4.05 SUPERVISOR UTILITIES

The VIPer series incorporates features that are usually not found on commercial PCs. TEKNOR computers utilize address space 190H, 290H or 390H to enable these special features. The I/O address is jumper selectable (W19 jumper - Section 3).

TABLE 4-4: Register x90 (hex)

Bit #	Bit Value (Default)	Function:	
		WRITE	READ
0	0	Enable Watchdog 1=enable, R/W bit	Same
1	1	Watchdog activate 1-0-1 to toggle, R/W bit	Same
2	0	Flash VPP enable	Same
3	0	Enable direction control RS-485 1=enable RS-485 only, write only	Power Detection Output or Battery Low output
4	0	Reserved, ENWF	W2(1-2) Status
5	0	Reserved, ENWB	W2(3-4) Status
6	1	Reserved, B64/16	W2(5-6) Status
7	1	Reserved, STANDBY 535*	W2(7-8) Status

- ☞ **Not all bits are R/W. Therefore, be certain to keep a mirror image of register x90(hex) when programming it.**
- ☞ **All bits are 0 after a hardware RESET or power up condition.**
- ☞ **Write the values shown in the "Bit Value (Default)" column if you are unsure.**

4.06 MULTI-FUNCTION CONNECTOR (KEYBOARD, SPEAKER, RESET & LED)

Connector J3 on the VIPer provides all the necessary signals for connecting the keyboard, speaker, reset, and keylock interface devices. The following diagram shows the signal connections at J3 (referred to as the Keyboard Header):

TABLE 4-5: J3 Keyboard Header

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
KBCLK	I/O	1	2	-	GND
KBDATA	I/O	3	4	-	GND
VCC	-	5	6	-	VCC
SPKR	O	7	8	-	VCC
KBDINH	I	9	10	-	GND
DOWNLD*	I	11	12	-	GND
PBRES*	I	13	14	-	GND
HDD ACTIVE*	O	15	16	-	VCC

* Active low signal

The following functions are available on the keyboard header, J3:

- **Speaker:** An 8 ohm speaker can be directly connected to pins 7 and 8 of J3. All necessary drivers are on the VIPer.
- **Keyboard Disable:** The keyboard can be disabled or locked up by shorting pins 9 and 10 of J3.
- **Hard Disk LED:** The onboard IDE interface activates an external LED. The LED must be connected anode on pin 16 (J3) and cathode on pin 15 (J3). No external current limiting resistor is required since one is already present on the VIPer.

- Reset: The VIPer can be reset by shorting pins 13 and 14 of J3.

4.07 PC/104 EXPANSION CARDS

The VIPer accepts PC/104 Expansion cards. PC/104 offers full architecture, hardware and software compatibility with PC Bus, in ultra-compact stackable modules (3.6" x 3.8"). PC/104 is being advanced as a proposed Appendix to the IEEE-P996 draft specification. Products compatible with the PC/104 are already offered by over 70 companies.

If you require additional information on the PC/104 standard, please contact our Technical Support department.

4.08 PS/2 MOUSE

The board supports a mouse, through the PS/2 connector at J10. With the PS/2 Mouse Cable (available from TEKNOR), this feature is compatible with the standard IBM PS/2 mouse. The cable may be ordered by contacting our Sales department.

During installation of the mouse, you must install the driver provided by the mouse manufacturer.

To enable the mouse, set the Mouse Support Option (PS/2) to Enabled in the Advanced CMOS Setup screen of the AMIBIOS Setup program (see section 9.02.2 for more information).

SECTION 5 INSTALLING PERIPHERALS (PARALLEL/SERIAL)

5.01 PARALLEL PORT

5.01.1 MODES

The parallel port is a multi-mode parallel port supporting the following modes:

- Standard Parallel Port (SPP): This mode is IBM XT/AT compatible and PS/2 compatible (bi-directional);
- Enhanced Parallel Port (EPP);
- Extended Capabilities Port (ECP).

For more information on the above modes, the Application Note #AN93008A - "Using the FDC37C665 Parallel Port" - is available from TEKNOR's Technical Support department.

5.01.2 CONNECTOR

The connection is done through a DB-25 connector located at the edge of the board (J7).

The following table shows the pin-out for this connector, when it is in Standard mode:

TABLE 5-1: Parallel Port Connector (J7) - Standard Mode

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
STROBE*	O	1	2	I/O	D0
D1	I/O	3	4	I/O	D2
D3	I/O	5	6	I/O	D4
D5	I/O	7	8	I/O	D6
D7	I/O	9	10	I	ACK*
BUSY	I	11	12	I	PE
SELECT	I	13	14	O	AUTOFD*
ERROR*	I	15	16	O	INIT*
SELECTIN*	O	17	18	-	GND
GND	-	19	20	-	GND
GND	-	21	22	-	GND
GND	-	23	24	-	GND
GND	-	25			

* Active low signal

The following table shows the pin-out for this connector, when it is in EPP mode:

TABLE 5-2: Parallel Port Connector (J7) - EPP Mode

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
WRITE*	O	1	2	I/O	D0
D1	I/O	3	4	I/O	D2
D3	I/O	5	6	I/O	D4
D5	I/O	7	8	I/O	D6
D7	I/O	9	10	I	INTR
WAIT*	I	11	12	I	Not Used
Not Used	I	13	14	O	DATASTB*
Not Used	I	15	16	O	Not Used
ADDRSTRB*	O	17	18	-	GND
GND	-	19	20	-	GND
GND	-	21	22	-	GND
GND	-	23	24	-	GND
GND	-	25			

* Active low signal

The following table shows the pin-out for this connector, when it is in ECP mode:

TABLE 5-3: Parallel Port Connector (J7) - ECP Mode

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
STROBE*	O	1	2	I/O	D0
D1	I/O	3	4	I/O	D2
D3	I/O	5	6	I/O	D4
D5	I/O	7	8	I/O	D6
D7	I/O	9	10	I	ACK*
BUSY, PERIPHACK ²	I	11	12	I	PERROR, ACKREVERSE* ²
SELECT	I	13	14	O	AUTOFD*, HOSTACK ²
FAULT* ¹ , PERIPHERQST* ²	I	15	16	O	INIT* ¹ , REVERSERQST* ²
SELECTIN* ^{1,2}	O	17	18	-	GND
GND	-	19	20	-	GND
GND	-	21	22	-	GND
GND	-	23	24	-	GND
GND	-	25			

* Active low signal

¹ Compatible Mode

² High Speed Mode

Note: For more information on the ECP protocol, please refer to the Extended Capabilities Port Protocol and ISA Interface Standard (available from Microsoft Corporation) or contact our Technical Support department.

5.01.3 JUMPERS

Parallel port jumpers and their settings appear below:

- W20 Interrupt Signal from onboard Parallel Port:
 - Pins 1-2 shorted: IRQ5 (normally used for LPT2), or
 - Pins 2-3 shorted: IRQ7 (normally used for LPT1): This is the initial setting.

- W21 DMA Request Signal for ECP mode & W22 DMA Acknowledge Signal for ECP mode:
 - No jumpers: This is the initial setting.
 - Or: W21: Pins 1-2 shorted: DRQ1, and
W22: Pins 1-2 shorted: DACK1.
 - Or: W21: Pins 2-3 shorted: DRQ3, and
W22: Pins 2-3 shorted: DACK3.

For location and settings of jumpers, refer to Section 3 of this manual.

5.01.4 VIPer SETUP

In the last screen of the VIPer Setup utility, these parameters are configured:

- Parallel Port Address:
 - 378H is the initial setting;
 - Other settings are: 278H, 3BCH or Disabled.

- Parallel Port Mode:
 - Printer Mode (standard) is the initial setting;
 - Other setting is Extended Mode (for ECP and EPP).

- Parallel Port Extended Mode Select:
 - Standard and SPP (bi-directional) is the initial setting;
 - Other settings are:
 - EPP (Enhanced Parallel Port) and SPP,
 - ECP (Extended Capabilities Port), and
 - ECP Mode & EPP Mode.

This parameter is only in effect if Parallel Port Mode parameter is Extended.

- IRQ3, IRQ4, FINTR & PINTR Polarity:
 - Active High, Inactive Low is the initial setting;
 - Other setting is Active Low, Inactive hi-z (high impedance).

For more detail on the VIPer Setup, refer to Section 9 of this manual.

5.02 SERIAL PORTS

There are two 16550 compatible serial ports. These have internal 16-byte FIFO buffers for more efficient data transfers.

For information on the programming of serial ports with the use of FIFO buffers, you can ask for Application Note # AN93007 from TEKNOR's Technical Support department.

5.02.1 CONNECTORS

Serial Port 1 (J9) RS232

The Serial Port 1 is configured as RS232, and is 100% compatible to the IBM-AT serial port, with the use of the IBM 9-pin DSUB Standard. The following tables show their pin-outs:

TABLE 5-4a: Serial Port 1 (J9) RS232

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	DSR
RX	I	3	4	O	RTS
TX	O	5	6	I	CTS
DTR	O	7	8	I	RI
GND	-	9	10	-	Not Used

TABLE 5-4b: IBM 9-Pin DSUB Standard

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	RX
TX	I	3	4	O	DTR
GND	-	5	6	I	DSR
RTS	O	7	8	I	CTS
RI	I	9			

TEKNOR offers a 10-pin header to 9-pin DSUB cable for IBM-AT compatibility. This can be purchased from TEKNOR or a cable can be made with a flat cable, a 10-pin flat cable crimp header and a 9-pin DSUB flat cable crimp connector. The use of Taiwanese adapter cables is not recommended, since the pin-out is often incorrect. The direct crimp design offered by TEKNOR allows the simplest cable assembly. All these cables are available from TEKNOR by contacting the Sales department.

Serial Port 1 (J6) RS232 - Standard IBM Serial Port

Serial Port 1 can use either the J9 connector (10-pin) which was described on page 5-8, or the J6 connector (9-pin) described on this page, however the board supports only one at a time.

Like Serial Port 1 - J9, Serial Port 1 - J6 is configured as RS232. But most importantly, the J6 serial port connector is a standard IBM serial port (DB9), needing no additional adapter cables to be 100% IBM-AT compatible.

The following table shows the Serial Port 1 - J6 connector's pin-out:

TABLE 5-5: Serial Port 1 (J6) RS232 - Standard IBM Serial Port

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	RX
TX	O	3	4	O	DTR
GND	-	5	6	I	DSR
RTS	O	7	8	I	CTS
RI	I	9			

Serial Port 2 (J4) RS232

The Serial Port 2 can be configured as RS232 or RS485. As a RS232 port, it is 100% compatible to the IBM-AT serial port, with the use of the IBM 9-pin DSUB Standard. The following tables show their pin-outs:

TABLE 5-6a: Serial Port 2 (J4) RS232

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	DSR
RX	I	3	4	O	RTS
TX	O	5	6	I	CTS
DTR	O	7	8	I	RI
GND	-	9	10	-	Not Used

TABLE 5-6b: IBM 9-Pin DSUB Standard

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	RX
TX	I	3	4	O	DTR
GND	-	5	6	I	DSR
RTS	O	7	8	I	CTS
RI	I	9			

TEKNOR offers a 10-pin header to 9-pin DSUB cable for IBM-AT compatibility. This can be purchased from TEKNOR or a cable can be made with a flat cable, a 10-pin flat cable crimp header and a 9-pin DSUB flat cable crimp connector. The use of Taiwanese adapter cables is not recommended, since the pin-out is often incorrect. The direct crimp design offered by TEKNOR allows the simplest cable assembly. All these cables are available from TEKNOR by contacting the Sales department.

Serial Port 2 (J4) RS485/RS422

If Serial Port 2 is configured for RS485 operation, it can support either full-duplex or party line communication.

Full Duplex Operation (RS422): Upon power-up or reset, the COM2 interface circuits are automatically configured for full duplex operation. Pins 3 and 4 of J4 act as the receiver lines and pins 5 and 6 act as the transmitter lines.

Party Line Operation (RS485): In order to enable party line operation, the user must first write "1" to bit 3 at I/O Port x90H. This allows the transceiver (pins 3 and 4 of J4) to be controlled by the RTS signal. Upon power-up or reset, the transceiver is by default in "receiver mode" in order to prevent unwanted perturbation on the line.

In party line operation, termination resistors R30 and R32 must be installed only on the boards at both ends of the network.

The following table shows this connector's pin-out:

TABLE 5-7: Serial Port 2 (J4) RS485/RS422

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	DSR
RXD(-)	I/O	3	4	I/O	RXD(+)
TXD(-)	O	5	6	I	TXD(+)
DTR	O	7	8	I	RI
GND	-	9	10	-	Not Used

5.02.2 JUMPERS

Serial ports jumpers and their settings appear below:

- W12 DSR2-DTR2 &
W13 RTS2-CTS2:
 - W12 and W13 shorted: Loopback, or
 - W12 and W13 open: Normal: This is the initial setting.

- W14, 15, W16 & W17 Serial Port 2 Configuration:
 - Pins 1-2 shorted: RS232: This is the initial setting.
 - Or Pins 2-3 shorted: RS485/RS422.

For location and settings of jumpers, refer to Section 3 of this manual.

5.02.3 VIPer SETUP

In the last screen of the VIPer Setup utility, these parameters are initially configured as follow:

- COM3 & COM4 Addresses: - COM3: 3E8H, COM4: 2E8H.
- UART 1 Interface: - Enabled.
- UART 1 Address: - COM1: 3F8H.
- UART 2 Interface: - Enabled.
- UART 2 Address: - COM2: 2F8H.
- IRQ3, IRQ4, FINTR
& PINTR Polarity: - Active High, Inactive Low.

For more detail on the VIPer Setup, refer to section 9.01 of this manual.

SECTION 6 INSTALLING IDE & FLOPPY DEVICES

6.01 INSTALLING IDE DEVICES

6.01.1 TYPE OF HARD DISK SUPPORTED

The VIPer804 supports AT Integrated Disk Drives. The AT embedded drive architecture incorporates drive electronics and controller circuitry on a single printed circuit board which is mounted directly to the disk drive chassis.

The integration of drive and controller functions increases reliability and performance by eliminating redundant circuitry, thus providing increased performance at reduced cost.

6.01.1 CONNECTOR

TABLE 6-1: Hard Disk Connector (J1) - Pin-Out

Pin Number	Signal Flow	Signal	Pin Number	Signal Flow	Signal
1	I	RESET*	2	-	GND
3	I/O	SD7	4	I/O	SD8
5	I/O	SD6	6	I/O	SD9
7	I/O	SD5	8	I/O	SD10
9	I/O	SD4	10	I/O	SD11
11	I/O	SD3	12	I/O	SD12
13	I/O	SD2	14	I/O	SD13
15	I/O	SD1	16	I/O	SD14
17	I/O	SD0	18	I/O	SD15
19	-	GND	20	-	Not Used
21	-	Not Used	22	-	GND
23	I	IOW*	24	-	GND
25	I	IOR*	26	-	GND
27	O	IOCHRDY	28	I	BALE
29	-	Not Used	30	-	GND
31	O	IRQ14	32	O	IOCS16*
33	I	SA1	34	-	Not Used
35	I	SA0	36	I	SA2
37	I	CS0*	38	I	CS1*
39	O	ACTIVE*	40	-	GND

* Active low signal

6.01.2 HOOK-UP

For the hook-up, a 40-pin dual row header signal connector is required. This connector handles all command, data and status I/O lines. Its recommended maximum cable length is 18-24 inches. It connects directly with the onboard 40-pin male header connector at J1.

The drive itself can be mounted in any horizontal or vertical plane.

For a list of recommended devices and connectors, see Appendix E - RECOMMENDED DEVICES & MATING CONNECTORS.

6.01.3 JUMPERS

IDE Controller jumper and its setting appears below:

- W4 IOCHRDY signal to IDE interface:
 - Shorted: Enabled.
 - Or open: Disabled: This is the initial setting.

For location and setting of jumper, refer to Section 3 of this manual.

6.01.4 VIPer SETUP

In the second screen of the VIPer Setup utility, the drive letters C, D, E and F can be reassigned between the disks (hard disks, Flash, SRAM), when the first parameter "Disks C: to F: Configuration (BIOS Int 13h)" is set to Enabled.

In the last screen, these parameters are initially configured as follow:

- IDE Interface: - Enabled.
- IDE Address Space: - 1st: 1F0H-1F7H, 3F6H, 3F7H.
- IRQ3, IRQ4, FINTR & PINTR Polarity: - Active High, Inactive Low.

For more detail on the VIPer Setup, refer to Section 9.01 of this manual.

6.01.5 AMIBIOS SETUP

When installing a hard disk, certain parameters need to be set in the AMIBIOS Setup program, on the following screens:

- Standard CMOS Setup screen:
 - Select a standard drive type in the setup screen
 - Or use type 47 (user defined) type and enter the required parameters: # of cylinders, heads, write precompensation, landing zone, sectors per track and size. The information (drive type and parameters) can be supplied by the drive manufacturer
 - Or select AUTO HARD DISK DETECT from the main menu. This utility will provide the user with a complete set of parameters for the hard drive. The newly found parameters are then displayed with the message: "ACCEPT PARAMETERS FOR C: (Y/N) ?" If the answer is yes, the parameters are stored in the user defined type 47.

- Advanced CMOS Setup screen: This is the parameter of interest:
 - Hard Disk Type 47 RAM Area: The end user can specify a user-definable hard disk for drive C or D. The data for the type 47 disk type is stored in 0:300H in lower system DRAM or in the top 1 KB of applications memory, starting at address 639 KB.

For more detail, refer to Section 9.02 - AMIBIOS SETUP PROGRAM.

6.02 INSTALLING FLOPPY DEVICES

6.02.1 TYPES OF FLOPPY DEVICES SUPPORTED

The floppy disk controller is IBM PC XT/AT compatible (single and double density) and supports Enhanced Floppy Mode (2.88 MB). It handles 3.5 inch and 5.25 inch, low and high density drives. Up to two drives can be supported in any combination.

6.02.2 CONNECTOR

TABLE 6-2: Floppy Disk Connector (J2) - Pin-Out

Pin Number	Signal Flow	Signal	Pin Number	Signal Flow	Signal
1	-	GND	2	O	RPM/LC
3	-	GND	4	-	Not Used
5	-	GND	6	-	Not Used
7	-	GND	8	I	INDEX*
9	-	GND	10	O	MOTOR ON 0,1*
11	-	GND	12	O	DRIVE SELECT B
13	-	GND	14	O	DRIVE SELECT A
15	-	GND	16	O	MOTOR ON 2*
17	I	EDOUT (2.88 MB)	18	O	DIR CONTROL
19	-	GND	20	O	STEP*
21	-	GND	22	O	WRITE DATA*
23	-	GND	24	O	WRITE ENABLE*
25	-	GND	26	I	TRACK0*
27	I	HDOUT (2.88 MB)	28	I	WRITE PROTECT*
29	I	EDOUT (2.88 MB)	30	I	READ DATA*
31	-	GND	32	O	HEAD SELECT
33	I	HDOUT (2.88 MB)	34	I	DSKCHG


* Active low signal

6.02.3 HOOK-UP

Mechanical Floppy Disk Installation:

The installation of the floppy drives is done via a standard IBM 34-pin flat ribbon cable that connects to J2.

DIAGRAM 6-1: Floppy Disk Cable

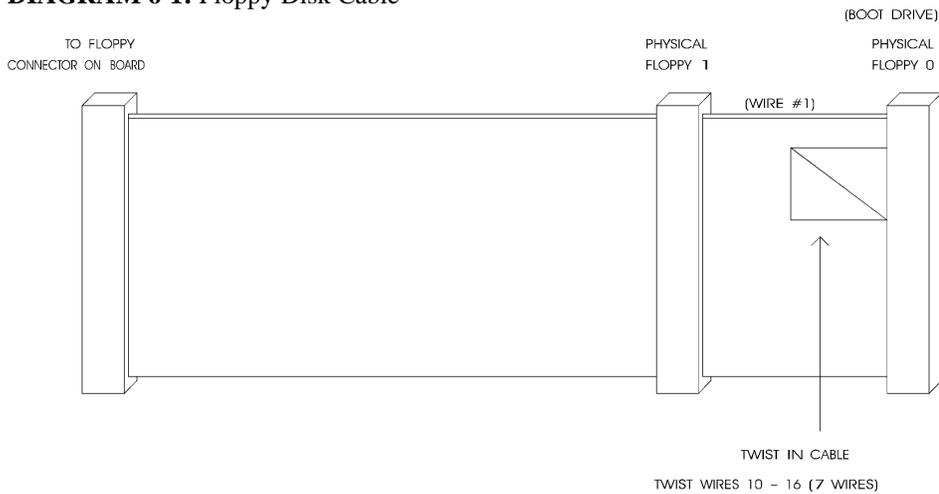

Enhanced Floppy Mode:

In order to connect your 2.88 MB floppy drive, simply indicate the proper floppy disk drive in the AMIBIOS Setup program (Section 9); it is not necessary to set the HDOUT and EDOUT media detection signals jumpers.

6.02.4 JUMPERS

There are three possible jumper configurations for the 2.88 MB High Density Floppy EDOUT and HDOUT signals:

- | | | | |
|-----|-----|---------------------|--|
| (1) | W8: | No jumper: | HDOUT left to software, and |
| | W9: | No jumper: | EDOUT left to software. This is the initial setting. |
| (2) | W8 | Short Pins 1 and 3: | HDOUT to Pin 33 (J2), and |
| | | Short Pins 2 and 4: | Ground to Pin 27 (J2), and |
| | W9: | Short Pins 1 and 3: | EDOUT to Pin 29 (J2), and |
| | | Short Pins 2 and 4: | Ground to Pin 17 (J2). |
| (3) | W8: | Short Pins 1 and 2: | HDOUT to Pin 27 (J2), and |
| | | Short Pins 3 and 4: | Ground to Pin 33 (J2), and |
| | W9: | Short Pins 1 and 2: | HDOUT to Pin 17 (J2), and |
| | | Short Pins 3 and 4: | Ground to Pin 29 (J2). |

These jumpers are optional. Your 2.88 MB Floppy Drive will operate correctly if 2.88 MB is indicated in the AMIBIOS - STANDARD CMOS SETUP screen. Not installing these jumpers will work for all floppy disk drives, as long as the proper floppy type is indicated in AMIBIOS Setup. We recommend you not install these jumpers, for proper operation.

For location and settings of jumpers, refer to Section 3 of this manual.

6.02.5 VIPer SETUP

In the last screen, these parameters are initially configured as follow:

- Floppy Disk
Controller Interface: - Enabled.
- Floppy Disk Controller
Address Space: - 1st: 3F0H-3F7H.
- IRQ3, IRQ4, FINTR
& PINTR Polarity: - Active High, Inactive Low.

For more detail on the VIPer Setup, refer to Section 9.01 of this manual.

6.02.6 AMIBIOS SETUP

- Standard CMOS Setup:
 - Floppy drive A & B: Choose the correct drive.

For more detail, refer to Section 9.02.

SECTION 7

INSTALLING SOLID STATE DISKS (SRAM/FLASH)

Solid State Disks (SSDs) have no moving parts and are far less susceptible to dirt, moisture, vibration and temperature variations than mechanical floppy disks. Two types of SSDs are available: Static-RAM (SRAM) and Flash EPROM. The VIPer supports up to 512 KB of SRAM and up to 1 MB of Flash EPROM.

7.01 SRAM DISK

The VIPer comes optionally with 128 KB or 512 KB of SRAM, which can be used as a semiconductor disk. The advantage of a semiconductor disk over a mechanical drive is that it is much faster. It also has a major advantage over a regular RAM drive (made of DRAM): SRAM is battery-backed, which means that all your data will be retained even if you power down your system.

The SRAM disk also "looks" just like a hard disk since you can partition and format it, and read and write directly to it, all using regular DOS commands.

Creating a SRAM disk is just a matter of using the FDISK and FORMAT commands as detailed in the following steps:

- First, you must assign a drive letter to your SRAM drive. This can be done in the second screen of the VIPer Setup utility (explained in Section 9.01 of this manual). If you want the SRAM disk to be bootable, then assign the C drive letter to it.
- Then, from the DOS prompt, invoke FDISK.
 - If more than one disk are present in your system, you will first have to select option 5 -Change current fixed disk drive - by typing "5" and pressing ENTER. The capacity of the SRAM disk will be displayed as 0 MB for a 128 KB disk or 1 MB for a 512 KB disk (this is normal, since DOS FDISK was designed to work with larger disks; it will work anyway). To change the current fixed disk drive, type the corresponding number from the option list and press ENTER; to return to the main menu press ESC.

- From the main menu, select option 1 - Create DOS partition or logical DOS drive - by typing "1" and pressing ENTER.
- Then, from the - Create DOS partition or logical DOS drive - menu, select option 1 - Create primary DOS partition - by typing "1" and pressing ENTER. The capacity of the disk is displayed as 0 MB for a 128 KB disk or 1 MB for a 512 KB disk. Enter the percentage of the available SRAM memory you wish to use for the disk; this should be 100% most of the time. If you use less than 100%, the remaining memory will be free and may be used as "scratch pad memory" by your application.
- FDISK will not automatically set the newly created partition as an active partition. If you want to make SRAM bootable, select option 2 - Set active partition - from the main menu, by typing "2" and pressing ENTER.
- Finally, from the DOS prompt, use the FORMAT command with the appropriate drive letter; do not forget to use the /s switch if you wish to make it bootable.



Files transferred to the battery-backed SRAM disks can typically last two years. However, actual life is dependent on the consumption of the SRAM devices installed as well as taking into consideration the time the board is powered off.

7.02 FLASH EPROM DISK

The non-volatile characteristics of Flash memory eliminate the risk of losing valuable data updates (a concern with battery-backed SRAM). As a result, Flash memory offers major advantages in applications like automated factories, remote systems, portable equipment and similar environments. Also, Flash memory is obtainable at a much lower cost than EPROM or battery-backed SRAM.

The VIPer comes optionally with 512 KB or 1 MB of Flash EPROM for use as Flash disks. Two special software utilities are available for creating Flash disks: TEKNOR's VFLASH software and Microsoft's FLASH FILE SYSTEM II (FFSII files can be purchased from TEKNOR).

A Flash EPROM disk created with VFLASH is very much like a hard disk. A partition is created and data is stored in files, just like on a hard disk. The main difference between the two is that a Flash disk is a read-only drive. Therefore, in order to write software to Flash devices you must use VFLASH. VFLASH must also be used if you want to make the Flash EPROM disk bootable, after which you must configure the Flash Disk as C: in the VIPer Setup (see section 9.01).

With the FLASH FILE SYSTEM II software, Flash EPROM disks are read/write and may be accessed via DOS commands. For information on using this utility, see Section 11.

☞ **Jumper W7 on the VIPer must be installed when the Flash EPROM device is present. This jumper enables +12 V VPP for writing to Flash with the proper utilities and drivers.**

**SECTION 8
POWER MANAGEMENT**

8.01 POWER SUPPLY SOURCE

The VIPer board is powered from one of two sources:

- Power connector (J5): Stand-alone systems are powered from an outside power supply through the J5 connector.
- ISA (AT) bus: When the board is in a passive backplane system, it is powered through the ISA bus.

The pin-out for the J5 power connector is shown in the table below:

TABLE 8-1: Power Connector (J5) - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
VCC	-	1	2	-	GND
GND	-	3	4	-	+12V
-12V	-	5	6	-	PD (Power Fail Detection Input) or External Battery Source

8.02 SLEEP MODE

CMOS technology consumes more power when it is made to oscillate faster. Therefore, by reducing the oscillating speed of the chip set and processor, overall power consumption is also greatly reduced.

Average system power consumption can be reduced by halting or slowing the chip set and processor clock during idle periods.

This feature can be very interesting where power consumption is crucial, for example in portable units like laptop computers.

The CPU is put in Sleep Mode by software with the following steps:

- 1. The Sleep Frequency divider is set to the desired frequency.
- 2. The Sleep Mode feature is enabled by setting the appropriate register in the chipset.
- 3. A HALT instruction will automatically switch the CPU to the Sleep Frequency (initialized in step 1). The CPU will exit Sleep Mode when an interrupt is encountered (the keyboard, mouse or any other device can generate interrupts).

Most of the controllers on the board can individually be put to sleep by accessing their internal registers. Application Note #AN94003 describes sleep mode for TEKNOR boards; it is available through the Technical Support department.

8.03 RESET CIRCUIT

8.03.1 EXTERNAL RESET CIRCUIT SWITCH

The VIPer can be reset by activating an external reset switch.

This switch should be connected between pin 13 (PBRESET) and pin 14 (GND) on the Keyboard Header (J3).

This provides an easy and effective way of resetting the system.

See Section 4.06 for more information.

8.03.2 ONBOARD POWER DETECTION

An onboard device, which is part of the reset circuit, constantly monitors the voltage which powers the board. Normally, the board is powered with 5 V; if the supply voltage drops below 4.65 V (a typical threshold), the onboard circuitry will reset the VIPer board and the system. This reset has the same effect on the system as the reset button.

8.04 POWER FAIL DETECTION CIRCUIT

The power fail circuit can be used to determine if a voltage crosses a pre-determined threshold. The output of the power fail circuit can be connected to the IOCHK* line to generate a non-maskable interrupt (NMI) when the monitored voltage crosses this threshold.

Power fail monitoring is enabled by shorting the W3 jumper.

The power failure detector, which generates a NMI when a failure occurs, provides a 1.25 V threshold for DC power fail warning when the system monitors:

- Low battery detection, or
- A power supply other than +5 V DC.

There are four ways to set the Power Fail and Battery circuit:

- Internal Battery (set by W10 jumper with pins 1-2 shorted) and External Power Fail Input to Pin 6 of J5 connector (set by W11 jumper with pins 1-2 shorted). The power detection input can only accept DC voltage. The line is monitored via a resistor network made up of a user-defined resistor (R24) and a fixed 1K Ω resistor connected to GND. The junction of these two resistors is connected to the input of the power fail circuit which has its threshold set to 1.25 V. R24 can be calculated as follows:
$$R24 = 1K\Omega \frac{VI - 1.25}{1.25}$$
 where VI is input voltage on pin 6 of the power connector.
- Internal Battery (set by W10 jumper with pins 1-2 shorted) and Power fail detect when battery is less than 3 V (set by W11 jumper with pins 2- 3 shorted). When the internal battery is selected as being the source of the power fail circuit, it is set to trip when the battery goes lower that 3.0 V.
- External Battery connected to J8 - External Battery Connector (set by W1 jumper with pins 1-2 shorted and W10 jumper with pins 2-3 shorted) and Power fail detect when battery is less than 3 V (set by W11 jumper with pins 2-3 shorted). When the external battery is selected as being the source of the power fail circuit, it is set to trip when the battery drops below 3.0 V.
- External Battery connected to J5 - Power Connector (set by W1 jumper with pins 2-3 shorted and W10 jumper with pins 2-3 shorted) and Power fail detect when battery is less than 3 V (set by W11 jumper with pins 2-3 shorted). When the external battery is selected as being the source of the power fail circuit, it is set to trip when the battery drops below 3.0 V.

The W1 jumper is used to select the External Battery Connector:

- Short Pins 1-2 when External Battery is connected to J8 (External Battery Connector),
- Or short Pins 2-3 when External Battery is connected to J5 (Power Connector).

The W10 jumper is used to select whether the battery is onboard (1-2) or external (2-3).

The W11 jumper is used to select what voltage is monitored:

- Short Pins 1-2 to monitor an external voltage that is present on the power fail input, through pin 6 of the J5 power connector,
- Or short Pins 2-3 to monitor the internal/external battery.

This means that when an external battery is used, the voltage needs to be monitored on the battery.

Jumper locations and settings are illustrated in Section 3.

8.05 WATCHDOG TIMER

The Watchdog Timer is extremely useful in embedded systems where human supervision is not required. Following a reset, the Watchdog is always disabled. The Watchdog is enabled once you write "1" in bit "0" at I/O Port x90(hex) the first time. When enabled, the microprocessor must refresh the Watchdog. This is done by writing alternatively "0" and "1" to bit 1 at I/O Port x90(hex), once every 1.6 seconds to verify proper software execution.

If a hardware or software failure occurs such that the Watchdog is not refreshed, a reset pulse is generated by the Watchdog to restart the processor.

☞ **The user program must provide the first access to I/O Port x90(hex), and must also include the refresh routine. In addition, be certain to keep a mirror image of register x90(hex) when programming it. This is necessary since register x90(hex) is a write-only user register and, as a result, is not used by the system BIOS.**

TABLE 8-2: Watchdog Timer Register

ADDRESS		REGISTER
x90 bit 0	Read/Write	Watchdog enable
x90 bit 1	Read/Write	Watchdog refresh

Jumper W5 must be installed to permit activation of the Watchdog. If jumper W5 is removed, the Watchdog is disabled.

The default timeout period is 1.6 seconds; however the timeout period can be changed. Shorting C9 and leaving R9 opened changes the timeout to 100 ms. Shorting R9 and installing a capacitor at C9 will change the timeout period according to the following formulae:

$$\text{Timeout (milliseconds)} = (400/47\text{pF}) * C$$

or

$$C9 = (\text{Timeout (milliseconds)} * 47\text{pF}) / 400\text{ms}$$

For instance, an external capacity of 100pF will lengthen the timeout to 851 ms and a 1000 pF will bring it to 8.5 seconds.

SECTION 9

VIPer SOFTWARE SETUPS

The VIPer804 is fully software configurable. The setup programs allow for minimal hardware configuration.

The two software setups are explained in this Section; first the VIP-UP program - TEKNOR's own VIPer Setup program for enabling / disabling / readdressing various hardware features on the VIPer - and then the AMIBIOS Setup program which is used to change operating parameters.

9.01 VIP-UP PROGRAM

The VIP-UP program can be executed during boot-up. During boot-up, hit the CTRL and V keys simultaneously, before or when you see the message "Press CTRL-V to enter TEKNOR VIP-UP" at the top of the screen (CTRL-V will work, even if the message display is disabled in VIP-UP).

There are three screens in the VIP-UP program. The values appearing on the right side of each screen can be modified: Follow the instructions found at the bottom of the screen to select another value.

Use the ↑ and ↓ keyboard keys to move up and down the screen, and on to subsequent or preceding screens. As you do, the value of the selected field is highlighted. If you press the ↓ key when the last field of the screen is highlighted, the next screen is displayed. Pressing the ↑ key when the first field is highlighted will display the first field of the preceding screen; in this way you can move quickly from screen to screen.

Once a field value is highlighted, you can change it by pressing PgDn or typing "+" on the keyboard (in VT100 mode, only "+" will work); this will usually display a higher value. You can also press the PgUp key or type "-" ("-" in VT100 mode), which will usually display a lower value.

Press F10 to save the current configuration and exit (type "U" in VT100 mode). The configuration is not saved until F10 is pressed or "U" is typed. Press ESC to exit without saving the setup.

9.01.1 FIRST SCREEN

TEKNOR MICROSYSTEMS INC --- VIPer SETUP	
TEKNOR BIOS Extension Address	E0000H-E3FFFH
TEKNOR BIOS Window Address	E8000H-EBFFFH
Disks C: to F: Configuration (BIOS Int 13h)	Disabled
Disk C: Configuration	Not Installed
Disk D: Configuration	Not Installed
Disk E: Configuration	Not Installed
Disk F: Configuration	Not Installed
Enter VIP-UP Message	Displayed 3 seconds
VT100 & Serial Download Speed	19200 BPS
VT100 & Serial Download Serial Port	COM1: 3F8H
Use Flash To Store CMOS RAM SETUP	No
↑↓ to select options	ESC - Quit without saving
PgDn(+), PgUp(-) to change an option	F10 - (U)pdate Flash BIOS

There are five parts to the screen:

1. Selection of TEKNOR BIOS addresses: The addresses of the TEKNOR BIOS extension and the TEKNOR BIOS window are set in the top part of the screen.
2. Use Flash To Store CMOS RAM SETUP: When this option is set to "Yes", the AMIBIOS Setup will be restored during each power up (only the time and date could be lost, if the battery fails). However, modifying and saving the AMIBIOS Setup does not change the Flash copy. To update the Flash copy, you must return to VIP-UP, set the "Use Flash To Store CMOS RAM SETUP" option to "Yes", and save the configuration by pressing F10 or typing "U".
3. Disks C: to F: Configuration (BIOS Int 13h): The Disk Configuration locations (C, D, E, F) can be user-defined by setting the first parameter "Disks C: to F: Configuration .." to "Enabled". You can then associate the disks present (e.g., Hard Disk 0, Hard Disk 1, Flash disk, SRAM disk) to the drive letter desired. The disk you want to boot from must be configured as "Disk C:". Never assign a letter to a disk that is not present. Never skip a drive letter (e.g., the following is not valid: C: assigned to a disk, D: "Not Installed", E: to another disk).

Although the BIOS does not prevent it, you should not configure the same disk (Hard Disk 0, Hard Disk 1, Flash Disk or SRAM Disk) at two or more locations (C, D, E or F), for example, Hard Disk 0 at D and E.

4. Enter VIP-UP message: This option allows the user to enable or disable the message "Press CTRL-V to enter TEKNOR VIP-UP" at the top of the screen upon boot-up.

5. VT100 & Serial Download: The VT100 & Serial Download Speed option is for selecting the desired speed for the VT100 mode and the Download mode. BPS stands for Bits Per Second. The VT100 & Serial Download Serial Port option allows the user to use either COM2 or COM1 for VT100-Serial Download Mode hookup.

The relationship between block size and starting address is true for all block sizes except 4 GB (Gigabytes). When the block is set to 4 GB (Gigabytes), all physical memory is non-cacheable, regardless of the setting of the starting address (however, one can disable/enable the Cache simply by an AMIBIOS Setup option in the "Advanced CMOS Setup" menu).

In order to optimize Cache, you could define only those memory blocks which do not support Cache in your specific hardware configuration (check your BIOS and hardware reference manuals), however in most cases Region 1 and 2 should retain their initial settings, leaving Region 3 and 4 open for defining other non-cacheable memory blocks.

9.02 AMIBIOS SETUP PROGRAM

The VIPer804 uses the AMIBIOS Setup program, a setup utility in ROM that is accessed by pressing the DELETE key at the appropriate time during system boot. This utility is used to set configuration data in CMOS RAM.

The system BIOS (Basic Input Output System) provides an interface between the operating system and the hardware of the VIPer804 single-board computer. The interface provided by AMIBIOS is 100% IBM AT compatible: All functions accept similar inputs as IBM and provide the same results, although the program code itself is different.

To run the AMIBIOS Setup program incorporated into the ROM BIOS:

- Turn on or reboot the system.
- Hit the DELETE key before or when the message - "Hit if you want to run SETUP" appears near the top of the screen (DELETE will work, even if the message display is disabled in AMIBIOS SETUP).
- The main menu appears on the screen.

9.02.1 MAIN MENU

The main menu options are:

STANDARD CMOS SETUP
ADVANCED CMOS SETUP
ADVANCED CHIPSET SETUP
AUTO CONFIGURATION WITH BIOS DEFAULTS
AUTO CONFIGURATION WITH POWER-ON DEFAULTS
CHANGE PASSWORD
AUTO DETECT HARD DISK
WRITE TO CMOS AND EXIT
DO NOT WRITE TO CMOS AND EXIT

These options will first be described briefly.

STANDARD CMOS SETUP

This part of the setup allows you set the time, date, hard disk type, types of floppy drives, monitor type, and whether the keyboard is installed.

Use the →, ←, ↑ or ↓ keys to select the item you want to change. When the item is highlighted, press the PgDn or PgUp keys to change values.

☞ **If there is no video card in the system and setup is not set accordingly, the VIPer will not boot past the Power On Self Test (POST) because it will be looking for the video memory. The default for this option is "Video card: not installed" which will let the system boot with or without a video card in the system.**

ADVANCED CMOS SETUP

This part of the setup handles options and features such as key repetition settings, boot sequence, Num Lock, password, shadowing, ...

Use the →, ←, ↑ or ↓ keys to select the item you want to change. When the item is highlighted, press the PgDn or PgUp keys to change values.

For more information, see section 9.02.2.

ADVANCED CHIPSET SETUP

This part of the setup sets chipset-specific options and features.

Use the →, ←, ↑ or ↓ keys to select the item you want to change. When the item is highlighted, press the PgDn or PgUp keys to change values.

For more information, see section 9.02.3.

AUTO CONFIGURATION WITH BIOS DEFAULTS

This option lets you load the BIOS default values. They are common recommended values and should optimize system performance. This feature might be useful in instances where a quick reconfiguration is needed.

- ☞ **After you load the BIOS DEFAULTS, you need to save the changes. This can be done by selecting WRITE TO CMOS AND EXIT in the main menu or with the F10 key.**

AUTO CONFIGURATION WITH POWER ON DEFAULTS

This option lets you load all the power on defaults values. They are worst-case values that are the most stable values that can be chosen. Use this option as a diagnostic aid if the system is behaving erratically.

- ☞ **After you load the POWER ON DEFAULTS, you need to save the changes. This can be done by selecting WRITE TO CMOS AND EXIT in the main menu.**

CHANGE PASSWORD

This option is used to enable the password feature or to change the password itself. By default, the user can boot the system and enter the AMIBIOS Setup without any restrictions. Choosing a password for the first time will automatically enable the password feature. At the next bootup, the user will be prompted to enter his password on bootup or when he attempts to enter AMIBIOS Setup, depending on the setting of the PASSWORD CHECKING OPTION in the ADVANCED CMOS SETUP (see the PASSWORD CHECKING OPTION description for the available settings).

- ☞ **To disable the password, use this option: 1) At the prompt "Enter CURRENT Password", enter your password, 2) Then at the prompt "Enter NEW Password", press ENTER, 3) The screen then displays "Password Now Disabled". Make sure you press F10 to save this configuration. If you forget your current password, the password feature can be disabled by removing jumper W10 for several minutes; however this will also clear the CMOS Setup, which will then be configured at the BIOS default values.**

AUTO HARD DISK DETECT

This is a utility that will provide the user with a complete set of parameters for the IDE hard drives C and D.

The utility first scans the C drive. The newly found parameters are then displayed on the screen followed by the message "ACCEPT PARAMETERS FOR C: (Y/N) ?".

If the user answers yes, the displayed parameters are then stored in the user defined drive TYPE 47. TYPE 47 then becomes the current type for the C drive. The same sequence is then repeated for the D drive.

☞ **It is possible that the parameters provided do not match the ones found in your drive's literature. This should not be considered an error. As matter of fact, different combinations of heads, cylinders and sectors that match the disk's capacity in MB will work when formatting an IDE hard drive. But if the disk is already formatted, it is not possible to use different parameters than the ones that were used when the drive was originally formatted.**

WRITE TO CMOS AND EXIT

This option is used to save the configuration in the CMOS RAM. After the information is saved, the computer is automatically rebooted. This option will not change the values saved in Flash EPROM. To update the values in Flash, enter the VIP-UP program and perform a save (press F10 or type "U").

DO NOT WRITE TO CMOS AND EXIT

This option is used to exit AMIBIOS Setup without saving the configuration to CMOS RAM. After the information is saved, the computer is automatically rebooted.

9.02.2 ADVANCED CMOS SETUP

Whenever you are not sure about a certain setting, you may refer to the list of default values. The list of defaults is provided in the event that a value has been changed and one wishes to set this option to its original value. Loading the BIOS or Power-On defaults will affect all the options and will reset options previously altered.

The Power-on default settings consist of the safest set of parameters. Use them if the system is behaving erratically. They should always work but do not provide optimal system performance.

The BIOS Setup default values provide optimum performance settings for all devices and system features.

The first column to the left displays these options:

FIELDS SETUP	POWER-ON DEFAULTS	BIOS DEFAULTS
Typematic Rate Programming:	Disabled	Enabled
Typematic Rate Delay (msec):	500	500
Typematic Rate (chars/sec):	15	30
Mouse Support Option (PS/2):	Enabled	Enabled
Above 1MB Memory Test:	Disabled	Disabled
Memory Test Tick Sound:	Disabled	Disabled
Memory Parity Error Check:	Enabled	Enabled
Hit Message Display:	Enabled	Enabled
Hard Disk Type 47 RAM Area:	0:300	0:300
System Boot Up Num Lock:	Off	Off
Numeric Processor Test:	Enabled	Enabled
Floppy Drive Seek At Boot:	Enabled	Disabled
System Boot Up Sequence:	A:,C:	A:,C:
System Boot Up CPU Speed:	High	High
Internal Cache (486SLC)	Disabled	Disabled
Fast Gate A20 Option:	Disabled	Enabled
Password Checking Option:	Setup	Setup

The second column to the right displays these options:

FIELDS SETUP	POWER-ON DEFAULTS	BIOS DEFAULTS
Adaptor ROM Shadow C800, 16K:	Disabled	Disabled
Adaptor ROM Shadow CC00, 16K:	Disabled	Disabled
Adaptor ROM Shadow D000, 16K:	Disabled	Disabled
Adaptor ROM Shadow D400, 16K:	Disabled	Disabled
Adaptor ROM Shadow D800, 16K:	Disabled	Disabled
Adaptor ROM Shadow DC00, 16K:	Disabled	Disabled
Adaptor ROM Shadow E000, 32K:	Disabled	Disabled
Adaptor ROM Shadow E800, 32K:	Disabled	Disabled
Shadow RAM Option:	Disabled	Both

The various options in the ADVANCED CMOS SETUP are described below.

TYPOMATIC: RATE PROGRAMMING, RATE DELAY & RATE

Typematic Rate Programming enables or disables the Typematic Rate Delay and Typematic Rate. These control the speed at which a keystroke is repeated. The selected character is displayed when a key is held down longer than the delay set by Typematic Rate Delay. It then repeats at a rate set by the Typematic Rate value.

MOUSE SUPPORT OPTION (PS/2)

This option enables PS/2-type mouse support.

ABOVE 1MB MEMORY TEST

This feature, when enabled, executes the POST memory routines on the DRAM above 1MB. If disabled, the AMIBIOS only tests the first 1MB of DRAM and clears memory above 1MB.

MEMORY TEST TICK SOUND

This option enables the ticking sound during the memory test.

MEMORY PARITY ERROR CHECKING

This option enables or disables parity error checking for all system DRAM. Disabling the parity is not recommended in normal operation. Consequently, this option should be left to Enabled.

HIT MESSAGE DISPLAY

Disabling this option will prevent the message "Hit if you want to run Setup" from appearing when the system reboots.

HARD DISK TYPE 47 RAM AREA

The end user can specify a user-definable hard disk for drive C: and drive D: . The data for the type 47 disk type is stored in 0:300H in lower system DRAM or in the top 1 KB of applications memory, starting at address 639 KB. The options are 0:300H or Upper 1 KB.

SYSTEM BOOT UP NUM LOCK

If this option is set to Off, the Num Lock key on the keyboard is turned off when the system is powered on; you can then use the →, ←, ↑ or ↓ keys on both the numeric keypad and the keyboard.

NUMERIC PROCESSOR TEST

This option performs the coprocessor test during the AMIBIOS POST if it is set to Enabled.

FLOPPY DRIVE SEEK AT BOOT

This option specifies that a SEEK instruction will be performed on the floppy drive A: at system boot time.

SYSTEM BOOT UP SEQUENCE

This option specifies the boot sequence for drive A: and C: after AMIBIOS POST completes and attempts to boot DOS. The settings are C:, A: or A:, C.

SYSTEM BOOT UP CPU SPEED

This option sets the speed at which the system boots.

INTERNAL CACHE (486SLC)

This option enables the 486SLC Internal Cache Memory.

FAST GATE A20 OPTION

This option enables the system's Fast Gate A20 circuitry. Normally, the keyboard controller is used to switch between real and protected mode with Gate A20. Fast Gate A20 substitutes a faster method for address mode switching. This option speeds up programs that constantly change from real address mode to protected address mode.

PASSWORD CHECKING OPTION

This option enables a password check every time the system boots or if AMIBIOS Setup is executed. The settings are Always or Setup. The password feature is disabled by default but can be enabled by using the CHANGE PASSWORD option for the first time (for more information on the CHANGE PASSWORD option, see page 9-9).

ADAPTOR ROM SHADOW <ADDRESS>, 16K/32K

ROM shadow is a technique in which BIOS code is copied from slower ROM to faster RAM. The BIOS is then executed from the RAM, thus, allowing faster execution. The code that resides in the 16 or 32 KB segment of ROM specified by the address is therefore shadowed to RAM, if that option is enabled. If a card in the system has an onboard BIOS, it can be shadowed for greater speed. Depending on the size of the BIOS, you might have to enable shadowing on more than one 16 or 32 KB block. For instance, if the BIOS is 64 KB, you will need to shadow 4 blocks of 16 KB or 2 blocks of 32 KB.

☞ **Not all BIOS can be shadowed. In some cases, it can result in erratic operation. For example, if the expansion board has built-in "scratchpad memory" which is used internally, shadowing may cause unpredictable results.**

SHADOW RAM OPTION

The settings for this option are Disabled, Video, Main or Both. If this option is set to Main, the system BIOS ROM at F0000H - FFFFH is shadowed from ROM to RAM for faster execution. If this option is set to Video, it enables shadowing of the video ROM at C0000H - C7FFFH to RAM. This will significantly improve video performance. If the option is set to Both, both video and system ROM are shadowed. If it is set to Disabled neither are shadowed.

9.02.3 ADVANCED CHIPSET SETUP

Whenever you are not sure about a certain setting, you may refer to the list of defaults values. The list of defaults is provided in the event that a value has been changed and one wishes to set this option to its original value. Loading the BIOS or Power-On defaults will affect all the options and will reset options previously altered.

The Power-On default settings consist of the safest set of parameters. Use them if the system is behaving erratically. They should always work but do not provide optimal system performance.

The BIOS Setup default values provide optimum performance settings for all devices and system features.

☞ **These parameters have been provided to give control over the system. However, the values for these options should be changed only if the user has a full understanding of the timing relationships involved.**

FIELDS SETUP	POWER-ON DEFAULTS	BIOS DEFAULTS
DRAM Wait States:	Mode4	Mode4
Page mode:	Enabled	Enabled
Refresh Period:	15.625 μ s	15.625 μ s
Non-Turbo Mode CLK2 Divider:	Clk2/4	Clk2/4
Fast Clock Divider:	/6	/6
Ext BUS Oscillator Control:	Slow	Slow
Slow Clock Divider:	/2	/2
ROM Wait States:	3 W/S	3 W/S
8-Bit DMA Wait States:	3 W/S	3 W/S
16-Bit DMA Wait States:	3 W/S	3 W/S
DMA Clock:	SCLK/2	SCLK/2
Disk Timing:	Normal	Normal
16-Bit Wait I/O States:	0 W/S	0 W/S
8-Bit Wait I/O States:	4 W/S	4 W/S

The various options in the ADVANCED CHIPSET SETUP are described below.

DRAM WAIT STATES

This option provides five different sets of timing that will accommodate various SIMMs. The choices are MODE 1 through MODE 5. MODE 1 should be selected for fast (60 ns) dynamic RAM SIMMs, while MODE 5 should be used for slower modules. The default setting is MODE 4 (for 70 ns SIMMs).

PAGE MODE

Page mode is a mode that reduces the time required by multiple read or write memory cycles that are in the same memory page. This option should be set to Enabled in order to take advantage of this feature.

REFRESH PERIOD

This option selects the period at which the memory is being refreshed. The settings are 15.625 μ s or 125 μ s.

NON-TURBO MODE CLK2 DIVIDER

The CLK2 divider determines the CLK2 frequency, which is the clock signal used by the CPU. Lowering the CLK2 frequency therefore slows down the processor's speed. The following table shows the possible settings for the CLK2 divider when SYSTEM BOOT UP CPU SPEED is set to LOW (Non-Turbo mode) in the Advanced CMOS Setup, and the corresponding CLK2 frequencies.

Non-Turbo Mode CLK2 Divider	CLK2 Frequency
Clk2/1	66.60 MHz
Clk2/2	33.30 MHz
Clk2/3	22.20 MHz
Clk2/4	16.66 MHz

EXT BUS OSCILLATOR CONTROL

This option enables you to select between the Slow or Fast Clock Divider. The settings are Slow and Fast.

SLOW CLOCK DIVIDER

This option enables you to select the SYSCLK frequency. The following table shows the possible settings for the Slow Clock Divider when the EXT BUS OSCILLATOR CONTROL option is set to Slow, and the corresponding SYSCLK frequencies.

Slow Clock Divider	SYSCLK Frequency
/2	7.99 MHz
/4	3.99 MHz
/6	2.66 MHz
/8	1.99 MHz

Note: The Bus control signals BALE, IOR*, IOW*, MEMR* and MEMW* are synchronized to SYSCLK. According to the P996 specifications, the SYSCLK must be between 8.33 and 5.99 MHz.

FAST CLOCK DIVIDER

This option enables you to select the SYSCLK frequency. The following table shows the possible settings for the Fast Clock Divider when the EXT BUS OSCILLATOR CONTROL option is set to Fast, and the corresponding SYSCLK frequencies.

Fast Clock Divider	SYSCLK Frequency
/2	7.99 MHz
/4	3.99 MHz
/6	2.66 MHz

Note: The Bus control signals BALE, IOR*, IOW*, MEMR* and MEMW* are synchronized to SYSCLK. According to the P996 specifications, the SYSCLK must be between 8.33 and 5.99 MHz.

ROM WAIT STATES

This option selects how many wait states are inserted in the ROM read cycles. The settings are 3 W/S, 2 W/S and 1 W/S.

8/16 BIT DMA WAIT STATES

These options select how many wait states are being inserted in the 8-bit or 16-bit DMA cycles. The settings are 2 W/S, 3 W/S and 4 W/S.

DMA CLOCK

This option lets the user select a divider that will determine the DMA clock. The settings are SCLK/2 and SCLK.

DISK TIMING

This option allows the system to support slower disks by providing slower timing. The settings are Normal (default) and Fast.

16-BIT DMA WAIT STATES

This option selects how many wait states are being inserted in the I/O commands. The settings are 0 W/S and 1 W/S.

8-BIT DMA WAIT STATES

This option selects how many wait states are being inserted in the I/O commands. The settings are 4 W/S and 5 W/S.

TABLE 9-1: Advanced Setup

Option	BIOS Setup Defaults	Power-On Defaults	Possible Settings	Description
Typematic Rate Programming	Enabled	Disabled	Enabled, Disabled, 15, 20, 30	This option enables or disables the Typematic Rate Delay and Typematic Rate. These control the speed at which a keystroke is repeated. The selected character is displayed when a key is held down longer than the delay set by Typematic Rate Delay. It then repeats at a rate set by the Typematic Rate Value.
Typematic Rate Delay (msec)	500	500		
Typematic Rate (chars/sec)	30	15		
Mouse Support Option (PS/2)	Enabled	Enabled	Enabled, Disabled	This option enables PS/2-type mouse support.
Above 1MB Memory Test	Disabled	Disabled	Enabled, Disabled	When Enabled, executes the POST memory routine on all system memory. When Disabled, AMIBIOS only tests the first 1MB of system memory.
Memory Test Tick Sound	Disabled	Disabled	Enabled, Disabled	Turns On or Off (Enabled/Disabled) tick sound during the memory test.
Memory Parity Error Check	Enabled	Enabled	Enabled, Disabled	Parity error checking for memory system. When Disabled, checks only the first MB. When Enabled, checks all the memory.
Hit Message Display	Enabled	Enabled	Enabled, Disabled	When Enabled, displays "Hit to run Setup", when the system boots.
Hard Disk Type 47 RAM Area	0:300	0:300	0:300, DOS 1K	BIOS RAM area storage. At address 0:300 in the system BIOS area in low memory or at the top 1KB of the system programming area beginning at 639K (DOS 1K).
System Boot Up Num Lock	Off	Off	On, Off	When Off, deactivates the Numeric Key Pad at power-on. Arrow keys are enabled.
Numeric Processor Test	Enabled	Enabled	Enabled, Disabled	If it is set to enabled, this option performs the coprocessor test during the AMIBIOS POST.
Floppy Drive Seek At Boot	Disabled	Enabled	Enabled, Disabled	When Enabled, specifies that a SEEK will be performed on floppy drive A: at system boot time.
System Boot Up Sequence	A:, C:	A:, C:	C:, A: / A:, C:	Specifies the boot sequence after AMIBIOS POST completes and attempts to boot DOS
System Boot Up CPU Speed	High	High	High, Low	Sets the speed when the system boots.
Internal Cache (486SLC)	Enabled	Disabled	Enabled, Disabled	Enables or Disables the CPU Internal Cache Memory
Fast Gate A20 Option	Enabled	Disabled	Enabled, Disabled	This option enables the system's Fast Gate A20.
Password Checking	Setup	Setup	Always, Setup	This option enables a password check every time the system boots or if AMIBIOS Setup is executed.
Adaptor ROM Shadow C800, 16K	Disabled	Disabled	Enabled, Disabled	<p>ROM Shadow is a technique in which BIOS code is copied from slower ROM to faster RAM. The BIOS is then executed from the RAM, thus allowing faster execution. The code that resides in the 16KB segment of ROM specified by the address is therefore shadowed to RAM, if that option is enabled. If a card in the system has an onboard BIOS, it can be shadowed for greater speed. Depending on the size of the BIOS, you might have to enable shadowing on more than one 16KB block. For instance, if the BIOS is 64KB, you will need to shadow 4 blocks of 16KB.</p> <p>Not all BIOS can be shadowed. In some cases, it can result in erratic operation. For example, if the expansion board has built-in "scratchpad memory", which is used internally, shadowing may cause unpredictable results.</p>
Adaptor ROM Shadow CC00, 16K	Disabled	Disabled	Enabled, Disabled	
Adaptor ROM Shadow D000, 16K	Disabled	Disabled	Enabled, Disabled	
Adaptor ROM Shadow D400, 16K	Disabled	Disabled	Enabled, Disabled	
Adaptor ROM Shadow D800, 16K	Disabled	Disabled	Enabled, Disabled	
Adaptor ROM Shadow DC00, 16K	Disabled	Disabled	Enabled, Disabled	
Adaptor ROM Shadow E000, 16K	Disabled	Disabled	Enabled, Disabled	
Adaptor ROM Shadow E800, 16K	Disabled	Disabled	Enabled, Disabled	
Shadow RAM Option	Both	Disabled	Disabled, Video, Main, Both	
				If this option is set to Main, the system BIOS ROM at F0000H-FFFFH is shadowed from ROM to RAM for faster execution. If this option is set to Video, it enables shadowing of the video ROM at C0000H-C7FFFH to RAM. This will significantly improve video performance. If the option is set to Both, both video and system ROM are shadowed. If it is set to Disabled, neither are shadowed.

TABLE 9-2: Chipset Setup

Option	Fail-safe Defaults	Optimal Defaults	Possible Settings	Description
DRAM Wait States	Mode4	Mode4	Mode1 through Mode5	This option provides five different sets of timing that will accommodate various SIMMs. Mode 1 should be selected for fast (60 ns) dynamic RAM SIMMs, while Mode 5 should be used for slower modules. The default setting is Mode 4 (for 70 ns SIMMs).
Page Mode	Enabled	Enabled	Enabled, Disabled	This mode reduces the time required by multiple read or write memory cycles that are in the same memory page. This option should be set to Enabled in order to take advantage of it.
Refresh Period	15.625 μ s	15.625 μ s	15.625 μ s, 125 μ s	This option selects the period at which the memory is being refreshed.
Non-Turbo Mode CLK2 Divider	Clk2/4	Clk2/4	When SYSTEM BOOT UP CPU SPEED is set to LOW (Non-Turbo Mode): Clk2/1 (66.60 MHz), Clk2/2 (33.30 MHz), Clk2/3 (22.20 MHz), Clk2/4 (16.66 MHz)	The CLK2 divider determines the CLK2 frequency, which is the clock signal used by the CPU. Lowering the CLK2 frequency therefore slows down the processor's speed.
Fast Clock Divider	/6	/6	When the EXT BUS OSCILLATOR CONTROL option is set to Fast: /2 (7.99 MHz), /4 (3.99 MHz), /6 (2.66 MHz)	This option allows you to select the SYSCLK frequency.
Ext BUS Oscillator Control	Slow	Slow	Slow, Fast	This option allows you to select between the Slow or Fast Clock Divider.
Slow Clock Divider	/2	/2	When the EXT BUS OSCILLATOR CONTROL option is set to Slow: /2 (7.99 MHz), /4 (3.99 MHz), /6 (2.66 MHz), /8 (1.99 MHz)	This option allows you to select the SYSCLK frequency. Note: The Bus control signals BALE, IOR*, IOW*, MEMR* and MEMW* are synchronized to SYSCLK. According to the P996 specifications, the SYSCLK must be between 8.33 and 5.99 MHz.
ROM Wait States	3 W/S	3 W/S	3 W/S, 2 W/S, 1 W/S	This option selects how many wait states are inserted in the ROM read cycles.
8-Bit DMA Wait States	3 W/S	3 W/S	2 W/S, 3 W/S, 4 W/S	This option selects how many wait states are being inserted in the 8-bit or 16-bit DMA cycles.
16-Bit DMA Wait States	3 W/S	3 W/S	2 W/S, 3 W/S, 4 W/S	
DMA Clock	SCLK/2	SCLK/2	SCLK2, SCLK	This option lets you select a divider that will determine the DMA clock.
Disk Timing	Normal	Normal	Normal (default), Fast	This option allows the system to support slower disks by providing slower timing.
16-Bit Wait I/O States	0 W/S	0 W/S	0 W/S, 1 W/S	This option selects how many wait states are being inserted in the I/O commands.
8-Bit Wait I/O States	4 W/S	4 W/S	4 W/S, 5 W/S	

PART TWO

SPECIAL SOFTWARE & ONBOARD UTILITIES

SECTION 10: VFLASH SOFTWARE

SECTION 11: FLASH FILE SYSTEM II

SECTION 12: UPDATING BIOS

SECTION 13: VT100 MODE

SECTION 14: DOWNLOAD MODE

SECTION 10 VFLASH SOFTWARE

10.01 INTRODUCTION

VFLASH is TEKNOR's Flash EPROM transfer utility program for VIPer single board computers. Its main function is to download DOS files to the 512 KB or the 1 MB Flash EPROM device, also referred to as data Flash (Diagram 2-2: 512 KB at U14; 1 MB at U26).

A Flash EPROM disk created with VFLASH is very much like a hard disk. A partition is created and data is stored in files, just like on a hard disk. The main difference between the two is that this Flash disk is a read-only drive. Therefore, in order to write software to this Flash disk, you must use VFLASH.

However, with the FLASH FILE SYSTEM II software from Microsoft, Flash EPROM disks are read/write and may be accessed via DOS commands (this utility is covered in Section 11).

This Section will describe how to use the VFLASH software utility.

10.01.1 VFLASH SOFTWARE OVERVIEW

Depending on your particular configuration, VFLASH can transfer information to the Flash disk in one of two methods:

1. If your VIPer is equipped with hard or floppy drives, then VFLASH downloads data directly on the board's Flash EPROM disk.
2. If your VIPer does not have floppy or hard disks, then VFLASH must be run from a remote computer which downloads data to the VIPer board via a serial link on COM1 or COM2. This mode is recognized in the BIOS extension as Download Mode and is enabled by installing jumper W2 (7-8) on the VIPer; in this mode, the VIPer board waits for signals from the remote computer's VFLASH software.

The first screen of the VFLASH software allows you to choose between direct and serial downloading (the screen is explained in section 10.02 - OUTPUT SELECTION/FIRST SCREEN).

The next screen is where the address and size of the Flash partition to create are determined (explained in section 10.03 - OUTPUT SELECTION/SECOND SCREEN).

The next step is to select the files in the FILE SELECTION screen, which are to be transferred to the Flash EPROM disk (explained in section 10.04 - FILE SELECTION SCREEN).

The next screen is the LIST OF SELECTED FILES; here the file listing can be verified and modified, duplicate files can be renamed or erased, and the Flash disk can be written (explained in section 10.05 - LIST OF SELECTED FILES).

Finally, the last screen to appear is the TRANSFER STATUS OF ONBOARD FLASH PROGRAMMING or the TRANSFER STATUS OF EXTERNAL FLASH PROGRAMMING; this screen displays each of the transfer operations in progress (explained in section 10.06 - TRANSFER STATUS SCREENS).

The above sections explain how to run the program in interactive mode via menus, but it is also possible to run the program without menus by a command which specifies the selected options and files with parameters; this mode is called Batch Mode (explained in section 10.07 - BATCH MODE).

10.01.2 TYPES OF FLASH EPROM DISKS

With VFLASH, you can create two types of Flash EPROM disks:

1 - Bootable Flash Disk: This type of Flash EPROM disk must start from the first block and is recognized by the BIOS. Like a hard disk, an active Flash EPROM disk can boot your system. A typical system setup would contain a CONFIG.SYS file to start device drivers, an AUTOEXEC.BAT file to start your software, plus all driver files required (e.g., EMM386.EXE, a MOUSE driver, etc).

To boot from Flash EPROM three conditions must be met:

- You must have the optional 512 KB or 1 MB Flash EPROM installed at U14 or U26 respectively.
- The bootable Flash EPROM partition must start from the first block.
- The Flash disk must be configured in the VIPer Setup as the C: drive (section 9.01.2).

2 - Non-bootable Flash Disk: Unlike bootable Flash disks which must begin at the first Flash block, non-bootable disks can begin anywhere.

10.01.3 VFLASH REQUIREMENTS

VFLASH is designed to operate in an IBM compatible environment.

The MS-DOS® operating system has been successfully tested with VFLASH; MS-DOS compatible operating systems such as DR-DOS® and PC-DOS® should therefore support VFLASH. Operating systems such as QNX® and OS-9000® are not supported by VFLASH (other utility programs are available for such operating systems; please contact our Technical Support department for more information).

If you intend to directly program Flash device on the VIPer, VFLASH must be running on board.

If you need a remote computer to program Flash device on the VIPer (host), then the VIPer must be in Download Mode and VFLASH must be running on the remote computer. A serial cable must be connected between the COM1 or COM2 ports, in the same way as in VT100 mode (the remote computer is cabled like a VT100 terminal: See Section 13 - VT100 MODE).

☞ **To properly run VFLASH, you need at least 1 floppy drive, 1 MB of DRAM, MS-DOS® or PC-DOS® (version 2 or greater) or DR-DOS® (version 3. 41 or greater).**

10.02 OUTPUT SELECTION/FIRST SCREEN

To run VFLASH, simply type "VFLASH" at the DOS prompt and press ENTER.

The first OUTPUT SELECTION FOR THE TRANSFER screen appears with the following options:

On board Flash devices.

External Flash devices via serial link.

Quit VFLASH and return to DOS.

Use the ↑ and ↓ keys to highlight the option and then press ENTER to select.

On board Flash Devices: Use this option when VFLASH is run on a VIPer with Flash EPROM to be programmed directly on the board.

External Flash Devices via a Serial Link: Use this option when VFLASH is run from a remote computer, or when your VIPer board has no floppy or hard disks, or simply because the data to transfer is on a different computer than the VIPer and Flash EPROM disk. The transfer takes place via a serial link on COM1 (3F8H) or COM2 (2F8H) from the remote computer to the VIPer.

10.03 OUTPUT SELECTION/SECOND SCREEN

Once onboard or external Flash is selected, a second screen appears as follows.

OUTPUT SELECTION FOR THE TRANSFER

Output selected: On board FLASH devices.

Type "B" to choose where the disk begins,
"E" to set where it ends.

Legend: selected block = , unselected block =

↑ Begin

ORDER:#2, ADDRESS: 20000h, DISK SIZE: 640 Kbytes (min: 128K-b)

Disk will start from the 2nd block (address : 20000 hex).
The size of the disk is: 640 K-bytes.

Strike any key to continue.

↑↓→← **Enter** to select option **Special disk**

On the first line, the output selected will be displayed ("On board FLASH devices" or "External FLASH devices via serial link").

The rest of the screen allows you to divide or partition the Flash disk according to your needs. The default disk always starts at the beginning of the Flash space and the size is all Flash selected. Therefore, a full bar will be displayed below the legend.

To set the size of the disk, type "E" and move the END pointer to the end of the disk with the horizontal keys to set the size of the disk.

10.04 FILE SELECTION SCREEN

Once you have selected the output, the following information is displayed on screen:

Selected files (max 240):0;		Free Space to copy: 522240 bytes	
DRIVE A: COMPLETE COPY DRIVE B: COMPLETE COPY DRIVE C: DRIVE E: DOS <DIR> QAPLUS <DIR> TEMP <DIR> TP <DIR> VENTURA <DIR> ATTR2 PAS 569 1-04-91 9:32 AUTOEXEC BAT 74 2-14-91 16:12 BOOTDIR PAS 6508 3-03-91 13:31 COMMAND COM 25308 2-02-91 12:25 CONFIG SYS 128 1-01-91 14:42		DRIVE A: TO CHOOSE FILES DRIVE B: TO CHOOSE FILES DRIVE D: BIOS 700 <DIR> PCAD <DIR> SKEY <DIR> TEST <DIR> TYPESET <DIR> WIN <DIR> AUTOEXEC BAK 59 2-14-91 16:11 BOOT_DIR PAS 158 1-25-91 16:58 CHOIXMED PAS 19797 3-06-91 1:11 COMMANDE PAS 6110 2-21-91 15:57 CONFIG SYS 128 1-23-91 17:45	
21 Files, D:*.*			
(Tag Untag New dir) or Enter Block Make bootable Done Esc to quit ↑ ↓ → ← Home PgUp PgDn Volume label			

This menu allows the user to choose the files that will eventually make up the Flash disk. Files can be chosen from the various drives on the system.

The top line in this menu gives size information about the Flash partition. **SELECTED FILES** indicates how many files have been chosen up to this point. **FREE SPACE TO COPY** indicates the available Flash space found, minus the space used up by the selected files.

The largest block of information (center screen) is the **FILE AREA**. It lists the files in the current directory.

Highlighted files are marked for copying to Flash devices.

Entries marked with a "<DIR>" extension indicate a subdirectory. When you select a subdirectory, the first two entries are displayed as ". <DIR>" and ". . <DIR>". As with DOS, "." refers to the actual directory and ". ." to the parent directory. Thus, if you do a "Newdir" command on the ". . <DIR>" you will return to the previous directory.

Entries marked as "Drive A:" or "Drive B:" allow you to change drives/directories or to select files. "DRIVE A/B: TO CHOOSE FILES" is used to select files. "DRIVE A/B: COMPLETE COPY" is used to make an exact copy of a floppy disk to Flash. This last function resembles a DOS DISKCOPY command. When this mode of transfer is chosen, no other files can be sent along with the diskette files.

The bottom of the screen is dedicated to the MESSAGE AREA and MENU COMMANDS.

The MESSAGE AREA gives indications and warnings with respect to file selection operations.

The MENU COMMANDS begin with a highlighted letter or identifier which indicates the key to press in order to execute the desired function. The following commands are available:

TAG: Use this function to select a file from the above file list. Simply move the cursor over the desired field and type "T" on your keyboard. The file will then be highlighted - indicating it was selected. If you type "T" again, you deselect the file.

UNTAG: This function is used to deselect a chosen file from the above list of files. To use this function, simply move the cursor over the desired file and type "U".

BLOCK: This function is used to mark a group of files for selection or deselection. Move the cursor to the beginning of the first file you wish to select and type "B" (a ">" symbol will be displayed after "Block" in the command area to remind you that a block has been entered). Then, move the cursor to the last file of the group and type "B" again (a "<" will appear next to the ">" indicating that a block definition is now complete). The block of outlined files are now ready to be "Tagged" or "Untagged".

MAKE BOOTABLE: Choose this function (by typing "M") to move files you wish to make bootable into the FILE SELECTION area (to appear in the LIST OF SELECTED FILES screen). The system will then prompt you for the drive which contains the system files (**Note that the source should not be a Flash disk, since these are read-only and write protected**). Once the selected files are found, the "MAKE BOOTABLE" command will be changed to "BOOTABLE DISK". This confirms that the Flash disk will be bootable.

NEWDIR: This function lets you enter or exit a drive or directory. To change directories, place the cursor at the desired entry and type "N". The listing will automatically change to the new directory's content.

ENTER: Press ENTER to either tag, untag, or change directory. When the cursor is on a directory, ENTER is equivalent to the NEWDIR command. When the cursor is on a file, pressing ENTER will tag/untag it.

DONE: Use this function when the file selection is terminated. Type "D" and the next screen will appear (LIST OF SELECTED FILES).

ESC: Press the ESC key to abort VFLASH without modifying any information in the Flash devices. The system will prompt you before exiting to DOS.

VOLUME LABEL: Use this function to include a disk volume label for the Flash EPROM disk. Simply type "V" on your keyboard to bring the message into the following format:

```
Volume is xxxxxxxxxxxx
Volume label (11 characters, ENTER for none)?
```

The same operating system limitations on volume label names apply.

The cursor can be moved within the FILE SELECTION screen by using the ↑, ↓, →, ←, PAGE UP, PAGE DOWN and HOME keys.

10.05 LIST OF SELECTED FILES SCREEN

The LIST OF SELECTED FILES screen shows you the list of files that the Flash disk will contain.

LIST OF SELECTED FILES			
Disk volume label: xxxxxxxxxxxx			
AFIRST.ASM	AFIRST.BAK	AFIRST.OBJ	ASECOND.ASM
ASECOND.BAK	ASECOND.OBJ	ATTR2.PAS	BOOTDIR.BAK
BOOTDIR.BAK	BOOTDIR.PAS	COMM.ASM	COMM.BAK
COMM.OBJ	COMMANDE.PAS	COPYXB.BAK	COMMBAK.BAK
COPYXAC.BAK	COPYXAC.BAK	COMMBAK.ASM	ECRANSFX.DOC
Program Change Selection		Esc to quit	
↑↓ PgUp PgDn Home			

The list of previously selected files appears in the center of the screen.

You can browse through the list by using the ↑, ↓, PAGE UP, PAGE DOWN and HOME keys.

The following commands are also available:

CHANGE SELECTION: This option allows you to return to the FILE SELECTION screen by typing "C".

PROGRAM: Type "P" to enter the Programming (TRANSFER STATUS ...) screen. This will begin programming the Flash devices - according to the transfer mode selected (on board or external Flash).

ESC: The ESC key allows you to abort VFLASH and exit to DOS without modifying the contents of the Flash devices.

If duplicate files are found, the DUPLICATE FILES MENU section appears below the list of selected files. This section will appear only if two or more files with the same name are found. When this occurs, a menu will automatically appear in the bottom section to solve the conflict:

LIST OF SELECTED FILES			
Disk volume label: xxxxxxxxxxxx			
AFIRST.ASM	AFIRST.BAK	AFIRST.OBJ	ASECOND.ASM
ASECOND.BAK	ASECOND.OBJ	ATTR2.PAS	BOOTDIR.BAK
BOOTDIR.BAK	BOOTDIR.PAS	COMM.ASM	COMM.BAK
COMM.OBJ	COMMANDE.PAS	COPYXB.BAK	COMMBAK.BAK
COPYXAC.BAK	COPYXAC.BAK	COMMBAK.ASM	ECRANSFX.DOC
DUPLICATE FILES MENU			
E:\BOOTDIR.BAK			
E:\TP\BOOTDIR.BAK			
1:Rename duplicate(s) (file.ext,file1.ext,etc) 2:Rename or erase duplicate(s) 3:Erase remaining duplicates Esc to quit			
			Select list

Make a selection by choosing the corresponding number. Choosing:

1. Will force a rename by appending a numeral at the end of the filename.
2. Will erase or rename files manually.
3. Will erase all duplicates.

When the final selection has been made and the final listing is displayed, the Flash disk can then be written.

10.06 TRANSFER STATUS SCREENS

10.06.1 TRANSFER STATUS OF ONBOARD FLASH PROGRAMMING SCREEN

TRANSFER STATUS OF ONBOARD FLASH PROGRAMMING
Erasing of all Flash devices installed, please wait. . . Erasing nth device. . . Erase completed
Creating a bootable flash disk
Transferring the BOOT sector, FAT and root DIR . . . Completed
Copying selected files. . .
Transfer completed: XX. X%
Transferring: FILENAME
Transfer complete

This screen displays each of the transfer operations in progress:

1. First, the Flash devices are erased. This operation can take some time to complete. Only the Flash devices of the actual disk to be programmed will be erased, however.
2. The base system information is then transferred. This is followed by the file data itself.
3. The transfer in progress is displayed by XX%, and the actual file being copied is also shown (unless a complete diskette copy is performed).

Restart the system if the disk is to be recognized by the TEKNOR BIOS extension. Although rebooting is not necessary if Flash disks were not created, it is a recommended procedure in all circumstances.

10.06.2 TRANSFER STATUS OF EXTERNAL FLASH PROGRAMMING SCREEN

When a serial link is used, the following screen will be displayed:

TRANSFER STATUS OF EXTERNAL FLASH PROGRAMMING
Erasing of all Flash devices installed, please wait. . . Erase completed
Creating a bootable flash disk
Transferring the BOOT sector, FAT and root DIR. . . Completed
Copying selected files. . . Transfer completed: XX. X%
Transferring: FILENAME
Elapsed time: Xmin XXsec
Transfer complete

The above screen is used to display the transfer operation status. It shows each step in progress:

1. The devices are erased (this may take some time).
2. The base system information is transferred, followed by the file data itself.
3. The data progress is displayed by XX% up to 100%. The actual file being sent is also shown (unless a complete diskette copy is performed). In addition, the elapsed time of the transfer is displayed.

If an error occurs during transfer, the system beeps twice to warn the user.

To signal the end of a successful transfer, a single beep is heard.

☞ **This operation can be time consuming in Serial Mode due to the serial transfer speed and protocol.**

4. When the transfer is 100% complete, the following message is displayed:

Do you want to Reset the receiving system?

This software command is made available to restart the receiving system by remote. In order for a new Flash disk to be recognized by the BIOS and DOS, the system must be rebooted.

The receiving system can be put in Download Mode by any of the following options:

1. Short pins 7 and 8 on jumper W2. This forces Download Mode at boot up.
2. Download Mode is automatically enabled when VT100 Mode is activated by shorting pins 5 and 6 on jumper W2. In this case, the communications port will recognize the Download Mode commands and activate it.

☞ **Reset is the only way to exit from Download Mode which is forced on at setup by the W2(7-8) jumper. If Download Mode was entered by recognition of the code sequence, you can simply exit Download Mode and continue processing.**

10.07 BATCH MODE

While files can be manually selected using the Interactive Mode, automatic transfers of a predefined area (a sub-directory or preferably a diskette) can be achieved through Batch Mode.

In Batch Mode, a user or field technician with no previous knowledge of the system can easily effect a transfer to the Flash disk. This can be done either by calling a batch file (*.bat) or by simply issuing the proper command line parameters directly from DOS.

When the transfer is complete, reset the system. This allows the BIOS and DOS to recognize the new Flash disk.

Keep in mind that Batch Mode can be called directly from a floppy or hard disk, from a remote computer, or from a portable computer. In each case, the selected files can be downloaded to the Flash devices.

Batch Mode returns error codes (errorlevel) that can be read by a DOS batch file or by a high level language program.

10.07.1 BATCH MODE COMMAND LINE PARAMETERS

The command line format is as follows:

VFLASH [drive:] [\directory] [destination] [options]

where:

[drive:] is the source drive from which a complete copy will be made if no directory is specified (see section 10.04, for more information).

[\directory] is the path used to show from which directory the source files will be taken and transferred to the Flash or EPROM files. If you do not specify a directory (for example, VFLASH B:\), only the files in the root directory will be transferred to the Flash disk. Also, if the Flash disk is to be bootable, the /B option must be used.

Each option or switch starts with a '/' character followed by one or more letters. These letters are in uppercase and are used by VFLASH to identify a specific option.

A colon ':' or pound '#' character is also a necessary part of the switch. Lowercase letters represent a variable field that must be entered. Each switch may be separated by a space if you so choose.

The switches may be written in random order except for switches that are linked together. For example a /S must be followed by either /#order or /sizeK or both. Thus, a command line such as VFLASH B: /M /S/#2/128K is valid, however, VFLASH B: /S/M/#2/128K is not. The following list of options provides complete descriptions.

The first three options listed are not required to execute a disk. They can be used either in Interactive Mode or Batch Mode.

[options]

- /G:group Specifies how many Flash blocks will be grouped together as a cluster. The Group Factor will set the smallest disk size available. Valid group values are defined as 1, 2, 4, 8, 16... and so on.
- /M Instructs VFLASH to use a monochrome display pattern. This option is useful with LCDs since it may be difficult to distinguish colors with such displays.
- /VT100 This option allows a visual monitoring of the transfer operation in progress while in VT100 mode. Use this switch when you make an onboard Flash disk.

The following options identify disk or file parameters to be executed in Batch Mode.

- /B/bootdrive: Makes the disk bootable by transferring the bootable files from the 'bootdrive' specified. Note that the source should not be a Flash disk, since these are read-only and write protected.
- /E Performs an external transfer by serial link to the remote system. This switch must be present in order to use any of the next three options (/RATE, /COM2 and /R).
- /rate The value entered corresponds to the desired baud rate for transfer. Any one of the following can be used: 300, 1200, 2400, 9600, 19200, 38400. It is set at 19200 by default.

/COM2	This option instructs COM2 to be used instead of the default value COM1.
/R	Instructs VFLASH to reset the VIPer board upon completion of download operation. This is valid only in VT100 Mode. In Download Mode, the remote system is always reset.
/S	Used to create a special disk or partition. This option precedes the starting device number option (/#order) or the disk size option (/sizeK), or both.
/#order	Specifies the Flash block to be used as the starting point for a disk partition (default setting is #1).
/sizeK	Specifies a special disk size, in KB, for the Flash disk. The default setting is the largest disk size following the designated starting disk as selected in the /#order option).
/V:volume label	This switch specifies a volume label for the disk to be created. This option will report an invalid command line error if it is used while transferring a complete copy of a floppy disk. Since it is acceptable to have spaces in a volume label, do not place this switch before [drive:], [\directory] or [destination] since VFLASH would not be able to determine when the label ends and when these options begins.

To get a summary of the Batch Mode options from VFLASH, simply run VFLASH with the command line '/?' or '/HELP' (type 'VFLASH/?' or 'VFLASH/HELP'). Either command will display a Batch Mode options summary and some examples of valid VFLASH command lines. The same help information will also be displayed each time VFLASH detects an error in the command line.

10.07.2 BATCH MODE ERROR CODES

The following error messages are returned by the VFLASH Batch Mode function. They can be detected with a DOS errorlevel condition.

ERROR (HEX)	NUMBER (DECIMAL)	DESCRIPTION
0	0	No error
1	1	Bad command line
2	2	Invalid drive choice for recovering boot information
3	3	Unable to establish communication (serial download mode only)
4	4	No Flash memory found (verify jumper)
5	5	Mixed memory types detected in Flash bank
6	6	Unable to find system files on specified disk
7	7	Specified output file already exists
8	8	Error reading transfer source drive
9	9	Insufficient data space or directory space to copy all desired files
A	10	Bad checksum (problem with serial link)
B	11	Non Hex code received (problem with serial link)
C	12	Error transferring data. Unusable Flash drive
D	13	No files to transfer in selected directory
E	14	Unable to open a file to be copied
F	15	Media not yet supported
10	16	Communications or device error while transferring files. Unusable flash drive.
11	17	Unable to read transfer source drive
12	18	Insufficient Flash space to store files
13	19	Unrecognized Flash device type
14	20	Programming failure on devices
15	21	Cannot select any file from actual Flash disk
16	22	Unable to find sourcefiles
17	23	Cannot specify starting device on remote system
18	24	Cannot find starting flash bank address

ERROR (HEX)	NUMBER (DECIMAL)	DESCRIPTION
19	25	Communication error while reading flash bank content
1A	26	External device cannot be erased properly
1B	27	Unsupported serial download function
1C	28	Flash content does not verify with source
1D	29	No device found in specified starting socket
1E	30	Cannot create a flash disk of specified size
1F	31	Communication error when reading flash identification code
20	32	Cannot use 8086 or 8088 CPU with flash memory
21	33	No serial port or card attached for transfer
22	34	/S switch not supported with this BIOS
23	35	/G:group value on command line is invalid
24	36	Insufficient Flash or EPROM space to include the volume label entry
25	37	Cannot make EPROM with same [source] and [destination] path
26	38	EPROM filename already exist
27	39	EPROM filename path not found
28	40	Selected drive for EPROM files not ready
29	41	Invalid EPROM filename or disk error
2A	42	Not enough disk space to copy EPROM files
2B	43	Not enough memory for data buffer.
2C	44	Command line option "/TEKXXX" is invalid.
2D	45	486SLC internal registers are different from BIOS setup.
2E	46	The 486SLC cache is not disabled over the Flash device(s).
2F	47	Unable to erase the nth device.
30	48	No VIPer BIOS found.
31	49	The source diskette must be DOS Version 4 and up.
32	50	Flash ID command to BIOS or data Flash must be issued first.

SECTION 11

FLASH FILE SYSTEM II

With FLASH FILE SYSTEM II, a read/write MS-Flash partition can be created in the 512 KB or 1 MB Flash EPROM device (located at U14 or U26 respectively on Diagram 2-2 and on the VIPer804 board). Such a partition can be accessed via the DOS commands.

FLASH FILE SYSTEM II files can be purchased from TEKNOR and are not part of the standard VIPer package and utilities.

Section 10 - VFLASH Software - explained how a read-only Flash partition is created with VFLASH and how data can be stored in files with VFLASH.

The user or data Flash device can be configured in one of four ways:

- As one read-only partition, created by VFLASH. This partition can be created as a bootable or non-bootable disk. See Section 10 for more information.
- As one read/write MS-Flash partition created by FLASH FILE SYSTEM II.
- As a combination of the above: one read-only VFLASH partition, followed by one MS-Flash read/write partition. Both partitions will be set up as a different drive, with the MS-Flash disk always the last. For example: The VFLASH disk can be set up as C:, other hard disks as D: and E:, and SRAM as F:, all in the VIPer Setup; the MS-Flash disk would automatically be set up by the system as the next drive letter, in this case G:. Another example could be only one hard disk, with the following setup: hard disk (C:), VFLASH disk (D:), SRAM disk (E:) and MS-Flash disk (F:).
- The fourth possible configuration is similar to the previous one except that space (one or more memory block) is left between the VFLASH disk and the MS-Flash disk. This non-partitioned space can be used by special applications to store data; this can only be done safely if one knows the exact address of these memory blocks.

The following sections explain how to set up CONFIG.SYS for FLASH FILE SYSTEM II, and how to create and format an MS-Flash partition with MEMCARD.EXE.

11.01 SETTING UP CONFIG.SYS FOR FLASH FILE SYSTEM II

Two lines must be included in your CONFIG.SYS file in order to set up the MS-Flash partition and to install the Microsoft FLASH FILE SYSTEM on your computer.

The first line differs depending on whether the Flash device has a VFLASH partition or not:

- If there is only the one MS-Flash partition on the device, these two lines must be included in CONFIG.SYS:

```
device=FFS_VIP.EXE
device=MS-FLASH.SYS
```

- If there is a VFLASH partition as well as an MS-Flash partition on the device, these two lines must be included in CONFIG.SYS:

```
device=FFS_VIP.EXE /start=X
device=MS-FLASH.SYS
```

where X can be replaced by the appropriate number of blocks which must be skipped from the beginning of the device. For example, a user created a bootable disk using VFLASH in the first four blocks of the Flash device; the size of each block is 64 KB. This leaves twelve 64 KB blocks for an MS-Flash partition which will begin at the fifth block. The two lines to add in CONFIG.SYS are therefore:

```
device=FFS_VIP.EXE /start=4
device=MS-FLASH.SYS
```

By default, the system uses start=0, meaning no blocks are skipped and the MS-Flash partition begins at the first block. That is why the /start switch is not needed if there is one MS-Flash partition on the Flash device.

11.02 CREATING & FORMATTING AN MS-FLASH PARTITION

FLASH FILE SYSTEM II on the VIPer804 allows only one MS-Flash read/write partition on the data Flash device.

The MEMCARD software is used to create and format an MS-Flash partition. The program can be used in one of two ways, by: 1) Running the program interactively and making selections in the menus, or 2) Executing the command from the DOS prompt with switches to specify the drive letter and volume label of the drive you want to format or to check the Flash device for errors.

Note: Prior to creating a new or expanded MS-Flash partition, you must erase any non MS-Flash section it will occupy. To do this, select option 5 - Erase entire memory card - in the MEMCARD program. This erases the whole partition that will be used by FLASH FILE SYSTEM, not the whole Flash disk. For example, if one had specified FFS_VIP/START=10 in CONFIG.SYS, only the 384KB used by this partition is erased.

11.02.1 USING MEMCARD MENU OPTIONS

To use the MEMCARD program with the menu options, follow these steps:

1. Type MEMCARD at the command prompt. The main menu appears as follow:

PC Memory Card Setup Program Version 2.00
(C) 1991-1992 Microsoft Corporation

Memcard Options

Current memory card slot: 1 of 2 slots

Choose one of the following:

1. Create and format a new partition
2. Format an existing partition
3. Delete a partition
4. Display partition information
5. Erase entire memory card

6. Check memory card and fix errors
7. Select next memory card slot

Enter your choice. [4]

To quit Memcard, press ESC.

If your computer includes only one memory card slot, option 7 will not appear on the main menu.

To choose a menu option, type its number, and then press ENTER. When you choose menu options 1 through 6, another menu appears. To return to the main menu, press ESC. To quit MEMCARD, return to the main menu and press ESC.

2. To create and format an MS-Flash read/write partition, select 1 from the menu. A Create and Format a New Partition screen such as the following appears:

Current memory card slot: 1

Letter	Type	Status	Size
D	MS-Flash	Formatted	1024K

If the card already has one MS-Flash partition, the following message appears at the bottom of the screen:

This card has already been formatted.
Creating a partition will destroy all the data on the card.

Do you want to continue? (Y/N) [N]

Create a new partition only if you have backed up all the data that you want to save. To continue, type "Y", and then press ENTER.

3. If the card is unformatted or has one large partition, the following message appears:

Do you want to use the entire card for MS-Flash? (Y/N) [Y]

To create and format one large partition, type "Y", and then press ENTER; to create and format a partition that occupies only part of a memory card, type "Y", and then press ENTER.

4. This step is only if you are creating a partition that will occupy only part of the Flash device: Specify the size of the partition you want to create, and then press ENTER. The minimum size depends on the amount of free space available on the memory card. The number that appears on your screen is the largest amount of available space.
5. Specify the number of spare blocks that MS-Flash should reserve for memory card cleanup, and then press ENTER. The default is 1. Although reserving extra blocks may speed up the memory card slightly, you will not be able to use the reserved blocks for files. The default is recommended.
6. Specify a volume label for the partition, and then press ENTER. If you do not want to specify a volume label, leave the field blank, and press ENTER.

11.02.2 USING MEMCARD DIRECTLY FROM THE COMMAND PROMPT

If you use switches with the MEMCARD command directly from the command prompt, you can format memory cards and check Flash memory cards for errors.

Syntax MEMCARD /FMT=*drive*: [*V=label*]
 MEMCARD /CHK=*drive*: [*F*]

Parameters *drive*: Specifies the drive you want to format.

label Specifies the volume label.

Switches /FMT= Formats the memory card partition associated with the specified drive.

 /V= Specifies a volume name for the newly formatted memory card.

 /CHK= Checks the specified Flash memory card partition for errors and displays a status report. If no drive is specified, MEMCARD will check the current drive.

`/F` Fixes errors found on a Flash memory card. If this switch is not specified, the errors are displayed, but not fixed.

For example, you can assign an entire memory card to drive D and specify the volume label `CARD1`, if you type the following at the command prompt:

```
MEMCARD /FMT=D:/V=CARD1
```

Here's another example: You can check partition E for errors, fix any errors that are found, and display the status of the partition, if you type the following at the command prompt:

```
MEMCARD /CHK=E: /F
```

SECTION 12

UPDATING BIOS

UBIOS is a utility that allows you to take BIOS files from a disk and update the Flash BIOS EPROM with them. It also allows the reverse operation - to copy the contents of the Flash BIOS to files on disk.

The program can be executed in one of two modes:


- **Interactive Mode:** In this mode the program is menu-driven. This mode is explained in section 12.01.
- **Batch Mode:** It is also possible to run the program without menus by a command which specifies the selected options and files with parameters. This mode is explained in section 12.02.

Both the Interactive Mode and the Batch Mode are available in VT100 mode (Section 13). The small differences will be explained in the sections noted above.

Note: Using UBIOS 2.15 and up will clear the CMOS Setup in ROM. Therefore, it is recommended that you take note of your Setup parameters (especially Hard Disk parameters), so you can reset them afterwards.

12.01 UBIOS - INTERACTIVE MODE

To run the program in interactive mode, type "UBIOS" from the DOS prompt and the following screen will be displayed:

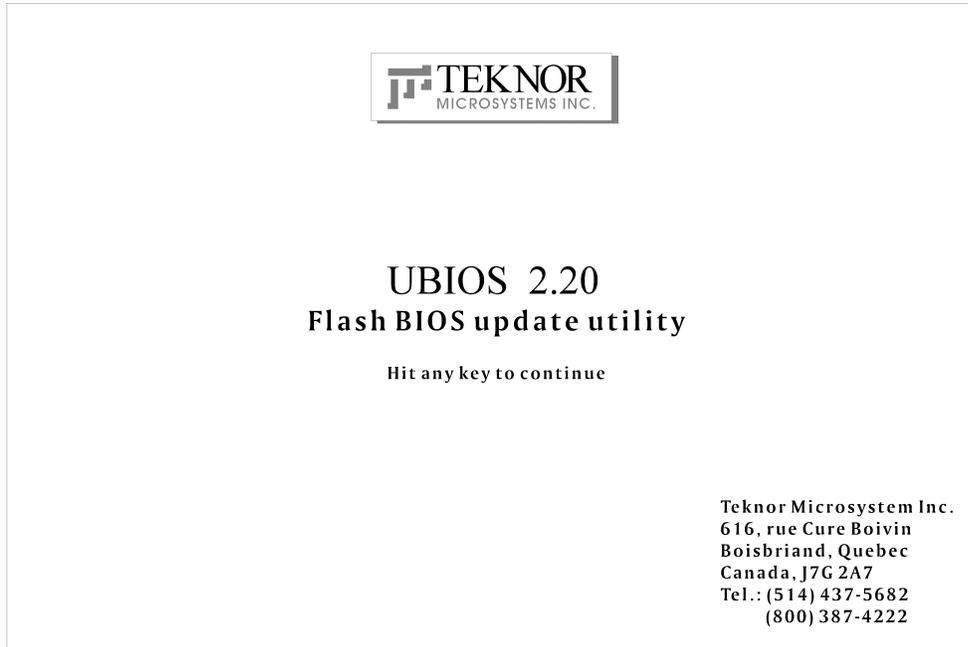

This is simply a presentation screen. To continue, hit any key on the keyboard. This brings you to the main menu.

In VT100 mode, type "UBIOS /VT", leaving a space between "UBIOS" and "/VT".

If you have a monochrome monitor or a CGA monitor, type "UBIOS/low", for low resolution.

The presentation screen in low resolution or VT100 mode is different from the one appearing above, but it works the same way: To continue, you must hit a key on the keyboard, which brings you to the main menu.

12.01.1 MAIN MENU

The main menu appears as follow:

UBIOS 2.20	
Write Flash BIOS device	Retrieve a BIOS to a file
1-Update all BIOS	6-Copy all BIOS
3-Update Teknor's BIOS extension	8-Copy Teknor's BIOS extension
5-Update main BIOS	0-Copy main BIOS

The main menu displays two groups of options: Write Flash BIOS device (options 1, 3, 5) and Retrieve a BIOS to a file (options 6, 8, 0). The first group includes three options which allow you to update the Flash BIOS EPROM with a BIOS file stored on disk. The second group includes three options which allow you to copy the contents of the Flash BIOS EPROM to files on disk.

All BIOS can be accessed individually using the appropriate files. Note that the different BIOS files have different extensions:

- All four can be combined in a single file with the .BIN extension.
- TEKNOR's BIOS extension file have the .EXT extension.
- MAIN BIOS files have the .ROM extension.

Selections are made in one of two ways:

- Enter the corresponding number (e.g. "1" for Update all BIOS).
- Use the ↓ or ↑ keys to highlight the desired option and press ENTER.

The path and name of the current directory will be displayed next to "Directory:" in the top window.

The FILES window displays the files of the selected type (.BIN, .EXT or .ROM). Follow these instructions for selecting a file in the FILE window of the UPDATE screen:

- Letter for a drive: By typing the desired drive letter, you can change the current drive.
- ↑↓ to change files\directory: Use the ↑ or ↓ key to travel through the files of the current directory. When a directory is selected (see <ENTER> to select below), then the ↑ or ↓ key is used to scroll up or down the file list. To move quickly to a directory, press the F2 key and type the first letter of the desired directory next to "Scan:" (displayed in the FILES window).
- <ENTER> to select: Press ENTER to select the highlighted directory or file. When "..<Dir>" is displayed, pressing ENTER will bring you one level up to the parent directory. When a BIOS file is displayed, pressing ENTER will bring a pop-up message on the screen : "Do you really want to update: Flash BIOS, filename (Y/N)". If you type "Y", then the file will be used to update the Flash BIOS.

Aside from the ↑ or ↓ key, other keys can be used to travel through the FILES window of the current directory:

- HOME: This moves to the top of the current directory and displays the first fourteen files.
- END: This moves to the bottom of the current directory and displays the last fourteen files.
- PAGE UP: This moves up by fourteen in the current directory.
- PAGE DOWN: This moves down by fourteen in the current directory.

The above keys are displayed in a Help screen by pressing the F1 key.

After an update was made with a file of version 0.61 and up, the following message appears on the screen: "Do you want to reboot now (Y/N)". If you type "Y", the system reboots and the new configuration comes into effect; otherwise, if you type "N", a message appears to inform the user that he will have to reboot if he wants the new configuration to become operational and the program exits to the operating system prompt.

12.01.3 FLASH BIOS COPY MENU

If you select from the second group of options in the Main Menu (# 6, 8, 0), a screen similar to the following appears:

```
FLASH BIOS COPY
You are currently using version 0.60

File name for extension BIOS file (.EXT):
```

The top part of the screen displays the current BIOS files being used; it shows all types of BIOS, not just the one selected from the main menu.

Then the following is displayed below: "File name for Flash BIOS file ():".

To copy the selected BIOS to a file, follow these instructions:

- File name for Flash BIOS file (): The file extension of the selected type will appear in the parentheses: .BIN, .EXT or .ROM.
- Type in the name of the BIOS file to create and press ENTER to proceed.

Once done, the program will exit to the operating system prompt.

12.02 UBIOS - BATCH MODE

While files can be manually selected using the Interactive Mode, Flash BIOS Update or Copy can be achieved through Batch Mode.

12.02.1 BATCH MODE COMMAND LINE PARAMETERS

The command line format is as follows:

UBIOS -B [operation] [filetype] [filename] [options]

where:

[operation] is the Flash BIOS operation you wish to perform, and can be replaced with one of two letters: U for Update, or C for Copy.

[filetype] is the filetype of the BIOS file to program (with an update operation) or to create (with a copy operation), and can be replaced with one of the following:
ALL for All BIOS files in a single file with the .BIN extension,
TEKNOR for TEKNOR's BIOS extension with the .EXT extension,
MAIN for Main BIOS with the .ROM extension.

[filename] is the name of the BIOS file to program (with an update operation) or to create (with a copy operation), and can be replaced with the filename which corresponds to the filetype. For example, if "TEKNOR" was listed as filetype, then the filename could be "TEK3.EXT".

[options] these are optional parameters that may be added:

/R Instructs UBIOS to reset the VIPer board upon completion of an operation.

/VT This option allows a visual monitoring of the Flash BIOS update/copy operation in VT100 mode.

To get a summary of the Batch Mode options from UBIOS, simply call UBIOS with the command line '?'. The command will display a Batch options summary of valid UBIOS command lines. The same help information will also be displayed each time UBIOS detects an error in the command line.

SECTION 13

VT100 MODE

The VIPer utilizes a feature known as VT100 Mode. This mode enables your single board computer to run without a local keyboard or screen. That is, operation can be controlled via a remote terminal supporting VT100 Mode or a computer with a terminal emulation program (for example, Telix, Procomm).

13.01 REQUIREMENTS

To use VT100 Mode, the board must be supplied with ± 12 volts. This is the voltage required by the RS232 drivers.

The terminal you are using should emulate a VT100 or ANSI terminal. Although this is not an absolute requirement, strange characters may appear on screen if it does not. This occurs because the VT100 recognizes these control characters, and causes them to perform a specific function, for example, screen erase, cursor position, and so on.



13.02 SETUP & CONFIGURATION

Follow these steps for setting up VT100 Mode:

- Power off your VIPer and install jumper W2(5-6) to enable VT100 Mode. Note: VT100 Mode runs on UART1 and UART2.
- Connect the communications cable as shown in Diagram 13-1. Note: If you do not require a full cable for your terminal, you can set up a partial cable by using only the TXD and RXD lines. The control lines can be ignored by looping them back as shown in Diagram 13-2.
- Power on your VIPer and run VIPer Setup by hitting the CTRL and V keys simultaneously, before or when you see the message "Press CTRL-V to enter TEKNOR VIP-UP" at the top of the screen. On the second screen, set the "VT100 & Serial Download Speed" at 19200 BPS or 9600 BPS.
- You must respect this protocol:
 - 8 Bits
 - No Parity
 - Echo Off.

If you are running a terminal emulation program, these parameters must be set in it.

DIAGRAM 13-1: VT100 Full Setup
DIAGRAM 13-2: VT100 Partial Setup

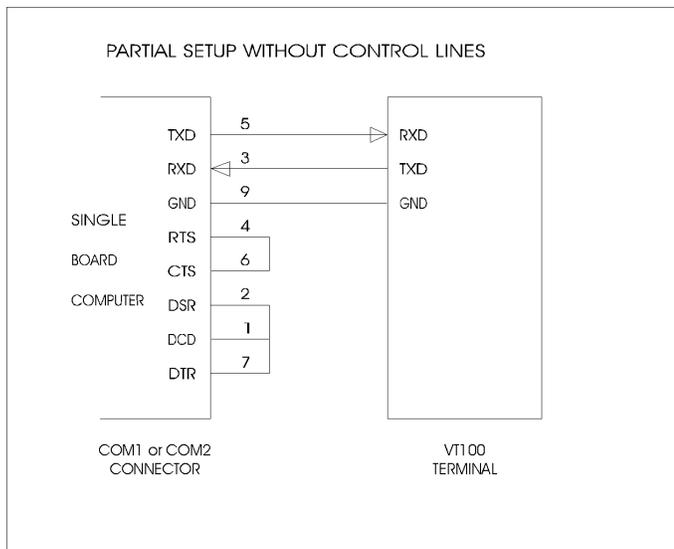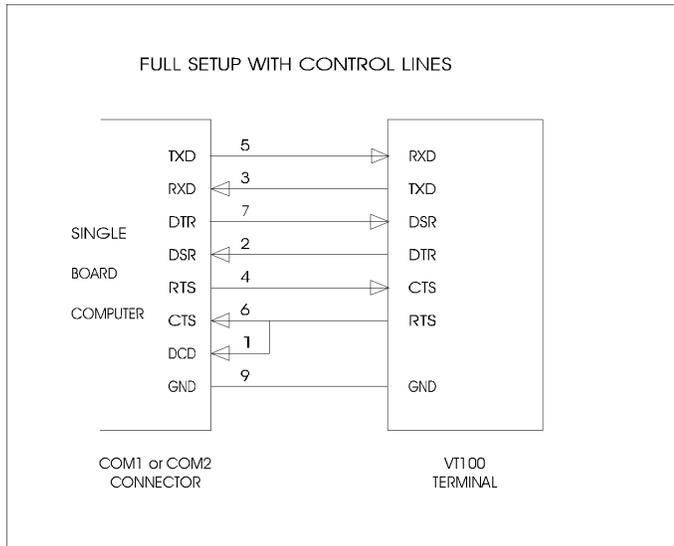

13.03 RUNNING WITHOUT A TERMINAL

The VIPer can boot up without a screen or terminal attached. However, if VT100 Mode is desired, but the terminal is to be disconnected, you must ensure the control lines are in an active state. Failing this, the system may "hang" while waiting for the control lines to become active. Wiring the system according to Diagram 13-2 allows the lines to remain active. This does not apply if the VT100 jumper is not set.

Furthermore, you can run without any console at all simply by not enabling VT100 Mode and by not installing a video card.

SECTION 14

DOWNLOAD MODE

Information can be downloaded to the Flash EPROM disk on the VIPer by running VFLASH on a remote computer and using a serial link. This is referred to as Download Mode and is enabled by installing jumper W2(7-8).

Refer to Section 10 for more information on running VFLASH in Download Mode.

APPENDIXES

APPENDIX A: VIPer804 SPECIFICATIONS

APPENDIX B: MEMORY & I/O MAPS

APPENDIX C: MECHANICAL LAYOUT & BLOCK DIAGRAM

APPENDIX D: CONNECTOR OVERVIEW

APPENDIX E: RECOMMENDED DEVICES & MATING CONNECTORS

APPENDIX F: ERROR CODES

**APPENDIX A
VIPer804 SPECIFICATIONS**

A.01 SPECIFICATIONS

Operating Temperature: 0° to 70°C

Noncondensing Relative Humidity: 5% to 95%

Electrical: Conforms to the IEEE P996 PC/AT bus electrical specifications

Supply Voltage: VCC = + 5V ±5%
±12V ±5%

Supply Current:

TABLE A-1: Supply Current

SUPPLY CURRENT *	VIPer804 386SX-33	VIPer804 486SLC-33
ICC Typical (+5V)	1.17 A	1.24 A
ICC Stanby (+5V)	0.69 A	0.56 A
IPP (+12V)	10 mA	10 mA
IPP (-12V)	5 mA	5 mA

* Measured with 4 MB DRAM, 1 MB Flash EPROM, 512 KB SRAM.

Mechanical: •Conforms to the IEEE P996 PC/AT bus mechanical specifications.

•4.8 in. x 7.125 in./122 mm x 181 mm.

A.02 BATTERY

The VIPer804 comes with a 360 mAh TL5186 TADIRAN battery with a shelf life of approximately 10 years (under "no-load" conditions).

The actual life of the battery depends on the amount of time DC power is not applied and on environmental (temperature) conditions. The TADIRAN TL5186 has an operating range of -55° to 75°C and discharge characteristics vary with temperature.

The SRAM and RTC typically draw 7µA while the specifications are 24µA maximum (20µA for the SRAM and 4µA for the RTC). Therefore, the expected life of the battery (360 mAh) would be typically 6 years, while the absolute worst case would be 1¾ years (21 months), when 512 KB SRAM are installed.

The TADIRAN TL5186 is UL recognized. Its UL component recognition is MH12193.

☞ **The actual voltage supplied by the battery is 3.6 volts. This can be verified with a standard voltmeter at the battery socket's two extreme pins (if you use the pins on the soldered side, you do not have to remove the battery).**

An optional 1Ah can be obtained from TEKNOR (part number 100-003).

Shorting jumper W10: pins 1 and 2 enables the Internal Battery's power. Opening jumper W10: 1-2 has the same effect as putting the battery in storage; TEKNOR always ships its board with battery jumper removed in order to increase the life of the battery.

An external battery may be used. In such a case, short pins 2 and 3 of jumper W10. You can connect the External Battery to J8 (External Battery Connector) or to J5 (Power Connector): When it is connected to J8, make sure pins 1-2 of jumper W1 are shorted; when it is connected to J5, make sure pins 2-3 of jumper W1 are shorted

Please refer to Section 3 for jumper location and setting.

The VIPer board has a special feature that allows the CMOS RAM Setup to be saved in Flash EPROM memory. This feature eliminates battery dependence by saving and recovering the CMOS RAM Setup from Flash (only the time and date could be lost).

☞ **In order to save your current CMOS RAM Setup in Flash, you must update the VIP-UP Setup (with F10), while the "Use Flash To Store CMOS RAM SETUP" (first screen) is set to "Yes". See section 10.01 for more information.**

A.03 MTBF

MEAN TIME BETWEEN FAILURE (MTBF)

The reliability analysis performed on the VIPer804 has resulted in a predicted reliability greater than 101,600 hours for the 386SX-33 microprocessor and 94,663 hours for the 486SLC-33. The test was also performed with 1 MB of Flash EPROM resulting in 98,017 hours for the 386SX-33 and 91,545 hours for the 486SLC-33.

The MTBF is estimated using the prediction data from MIL-HDBK-217F, Reliability Prediction of Electronic Equipment (Dec. 1991).

The VIPer804 board is considered functioning in a Ground Fixed environment as defined in MIL-HDBK-217F. The calculations are performed at 20°C with a temperature rise of 10°C which is due to heat dissipated by active components.

It is assumed that only one failure at a time can occur and that the failure of any component will result in the system becoming inoperative or, as a minimum, resulting in a degraded mode of operation requiring repair action. All components are considered as having an exponential distribution of time to failure, with a constant failure rate. A failure rate is attributed to each component called in the parts list, according to the stress levels it is submitted during normal operation.

The components with the highest calculated failure rate in the VIPer804 reliability prediction are: the CPU (386SX-33 or 486SLC-33), the 3030-100 PGA, the 82C315A-FC, the forty-three 33R resistors, and the four 74HCT245.

A.04 MEETING INDUSTRY STANDARDS

TEKNOR Quality Standards insist that our products meet or exceed industry standards set by such respected agencies, organizations and associations as UL and CSA.

As a result, the VIPer804 has the following built-in features to help ensure that the conditions required for approval are met:

- A current block diode on the battery circuit,
- A current limiter resistor on the battery,
- A protection fuse on the keyboard controller.

TEKNOR computer cards are designed to meet industry standards for customers requiring approval for their equipment.

TABLE B-2: I/O Map

ADDRESS	OPTIONAL ADDRESS	OPTIONAL ADDRESS	OPTIONAL ADDRESS	FUNCTION
000-00F				DMA Controller 1
020-03F				Interrupt Controller 1
040-043				Timer
060-064				Keyboard (8742)
070-071				Real-time clock, NMI mask
080-09F				DMA Page Register
0A0-0BF				Interrupt Controller 2
0C0-0DF				DMA Controller 2
0EC-0EF				Configuration Registers
0F0-0FF				Math Coprocessor/ Configuration Registers
1F0-1F7, 3F6, 3F7	170-177, 376, 377			IDE Hard Disk
3F0-3F7	370-377			Floppy Disk
378-37A	3BC-3BE	278-27A		Parallel Port (LPT1 by default)
3F8-3FF (COM1)	2F8-2FF (COM2)	3E8-3EF (COM3)	2E8-2EF (COM4)	UART1 (COM1 by default)
2F8-2FF (COM2)	3F8-3FF (COM1)	3E8-3EF (COM3)	2E8-2EF (COM4)	UART2 (COM2 by default)
190-193	290-293	390-393		TEKNOR Control Port


APPENDIX C
MECHANICAL LAYOUT & BLOCK DIAGRAM

In this appendix, two diagrams are included in the following pages.

DIAGRAM C-1: Mechanical Specifications


DIAGRAM C-2: Block Diagram VIPer804

DIAGRAM C-1: Mechanical Specifications

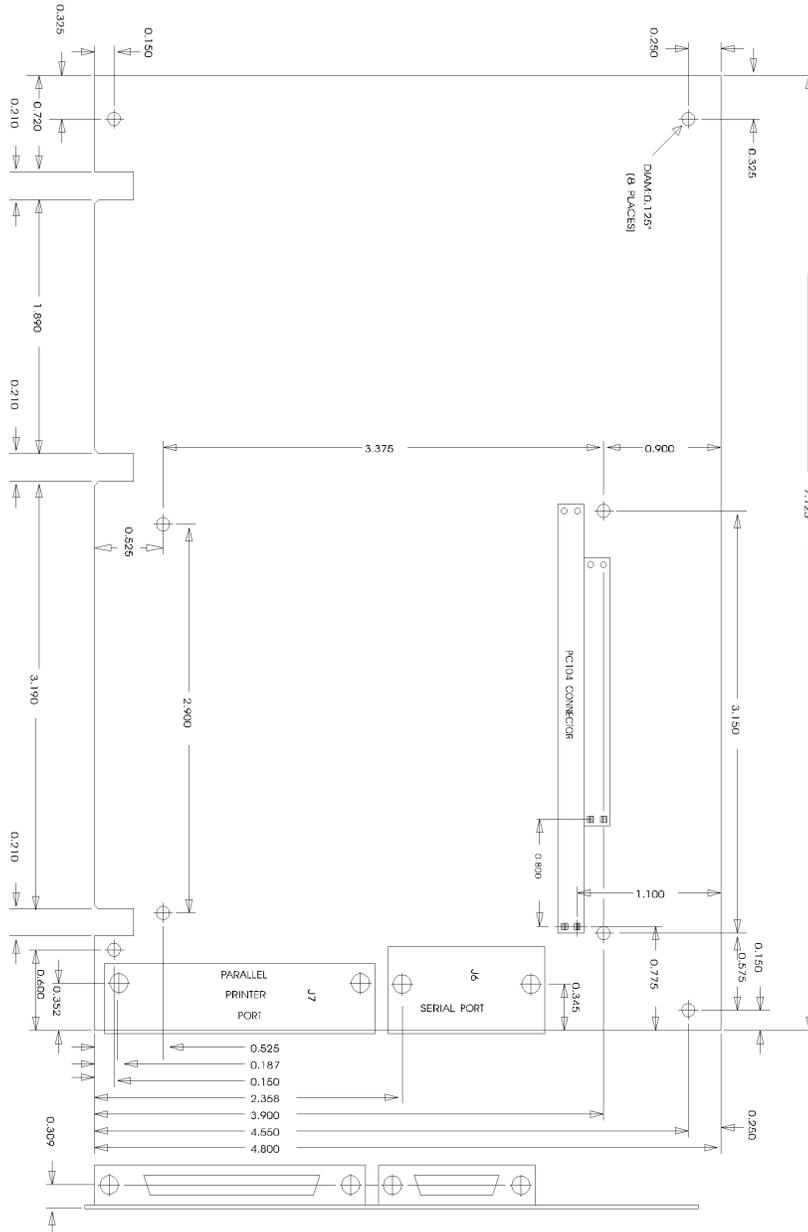

Mechanical Layout & Block Diagram C-2

DIAGRAM C-2: Block Diagram VIPer804

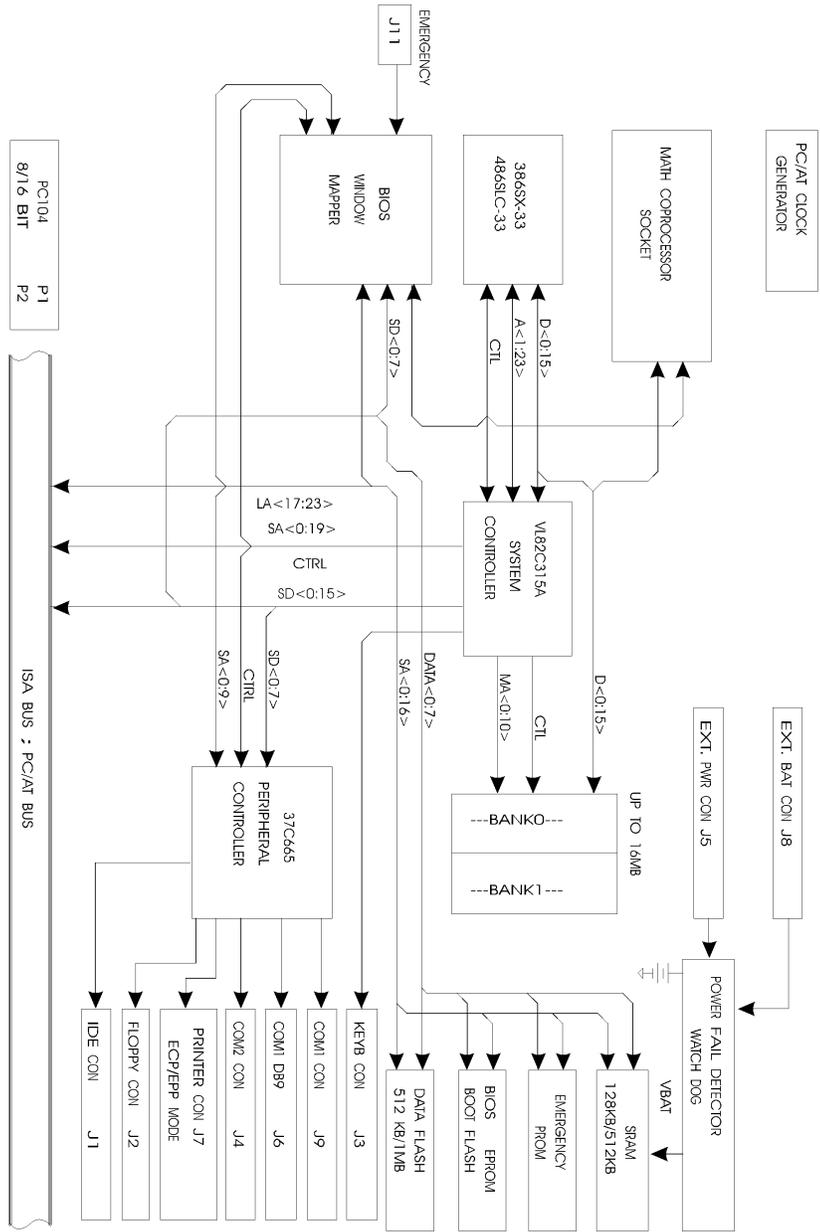

Mechanical Layout & Block Diagram C-3

**APPENDIX D
CONNECTOR OVERVIEW**

Hard Disk Connector (J1) - Pin-Out

Pin Number	Signal Flow	Signal	Pin Number	Signal Flow	Signal
1	I	RESET*	2	-	GND
3	I/O	SD7	4	I/O	SD8
5	I/O	SD6	6	I/O	SD9
7	I/O	SD5	8	I/O	SD10
9	I/O	SD4	10	I/O	SD11
11	I/O	SD3	12	I/O	SD12
13	I/O	SD2	14	I/O	SD13
15	I/O	SD1	16	I/O	SD14
17	I/O	SD0	18	I/O	SD15
19	-	GND	20	-	Not Used
21	-	Not Used	22	-	GND
23	I	IOW*	24	-	GND
25	I	IOR*	26	-	GND
27	O	IOCHRDY	28	I	BALE
29	-	Not Used	30	-	GND
31	O	IRQ14	32	O	IOCS16*
33	I	SA1	34	-	Not Used
35	I	SA0	36	I	SA2
37	I	CS0*	38	I	CS1*
39	O	ACTIVE*	40	-	GND

* Active low signal

Floppy Disk Connector (J2) - Pin-Out

Pin Number	Signal Flow	Signal	Pin Number	Signal Flow	Signal
1	-	GND	2	O	RPM/LC
3	-	GND	4	-	Not Used
5	-	GND	6	-	Not Used
7	-	GND	8	I	INDEX*
9	-	GND	10	O	MOTOR ON 0,1*
11	-	GND	12	O	DRIVE SELECT B
13	-	GND	14	O	DRIVE SELECT A
15	-	GND	16	O	MOTOR ON 2*
17	I	EDOUT (2.88 MB)	18	O	DIR CONTROL
19	-	GND	20	O	STEP*
21	-	GND	22	O	WRITE DATA*
23	-	GND	24	O	WRITE ENABLE*
25	-	GND	26	I	TRACK0*
27	I	HDOUT (2.88 MB)	28	I	WRITE PROTECT*
29	I	EDOUT (2.88 MB)	30	I	READ DATA*
31	-	GND	32	O	HEAD SELECT
33	I	HDOUT (2.88 MB)	34	I	DSKCHG

* Active low signal

Keyboard Connector (J3) - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
SIGNAL			SIGNAL		
KBCLK	I/O	1	2	-	GND
KBDATA	I/O	3	4	-	GND
VCC	-	5	6	-	VCC
SPKR	O	7	8	-	VCC
KBDINH	I	9	10	-	GND
DOWNLD*	I	11	12	-	GND
PBRES*	I	13	14	-	GND
HDD ACTIVE*	O	15	16	-	VCC

* Active low signal

Serial Port 2 (J4) RS232 - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	DSR
RX	I	3	4	O	RTS
TX	O	5	6	I	CTS
DTR	O	7	8	I	RI
GND	-	9	10	-	Not Used

Serial Port 2 (J4) RS485 - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	DSR
RXD(-)	I/O	3	4	I/O	RXD(+)
TXD(-)	O	5	6	I	TXD(+)
DTR	O	7	8	I	RI
GND	-	9	10	-	Not Used

Power Connector (J5) - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
VCC	-	1	2	-	GND
GND	-	3	4	-	+12V
-12V	-	5	6	-	PD (Power Fail Detection Input) or External Battery Source

**Serial Port 1 (J6) RS232
Standard IBM Serial Port**

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	RX
TX	O	3	4	O	DTR
GND	-	5	6	I	DSR
RTS	O	7	8	I	CTS
RI	I	9			

Parallel Port Connector (J7) - Standard Mode - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
STROBE*	O	1	2	I/O	D0
D1	I/O	3	4	I/O	D2
D3	I/O	5	6	I/O	D4
D5	I/O	7	8	I/O	D6
D7	I/O	9	10	I	ACK*
BUSY	I	11	12	I	PE
SELECT	I	13	14	O	AUTOFD*
ERROR*	I	15	16	O	INIT*
SELECTIN*	O	17	18	-	GND
GND	-	19	20	-	GND
GND	-	21	22	-	GND
GND	-	23	24	-	GND
GND	-	25			

* Active low signal

Parallel Port Connector (J7) - EPP Mode - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
WRITE*	O	1	2	I/O	D0
D1	I/O	3	4	I/O	D2
D3	I/O	5	6	I/O	D4
D5	I/O	7	8	I/O	D6
D7	I/O	9	10	I	INTR
WAIT*	I	11	12	I	Not used
Not used	I	13	14	O	DATASTB*
Not used	I	15	16	O	Not used
ADDRSTRB*	O	17	18	-	GND
GND	-	19	20	-	GND
GND	-	21	22	-	GND
GND	-	23	24	-	GND
GND	-	25			

* Active low signal

Parallel Port Connector (J7) - ECP Mode - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
STROBE*	O	1	2	I/O	D0
D1	I/O	3	4	I/O	D2
D3	I/O	5	6	I/O	D4
D5	I/O	7	8	I/O	D6
D7	I/O	9	10	I	ACK*
BUSY, PERIPHACK ²	I	11	12	I	PERROR, ACKREVERSE* ²
SELECT	I	13	14	O	AUTOFD*, HOSTACK ²
FAULT* ¹ , PERIPHRQST* ²	I	15	16	O	INIT* ¹ , REVERSERQST* ²
SELECTIN* ^{1,2}	O	17	18	-	GND
GND	-	19	20	-	GND
GND	-	21	22	-	GND
GND	-	23	24	-	GND
GND	-	25			

* Active low signal

¹ Compatible Mode

² High Speed Mode

External Battery Connector (J8) - Pin-Out

Pin Number	Signal
1	VBAT
2	GND

Serial Port 1 - (J9) RS232 - Pin-Out

Pin Number			Pin Number		
Signal Flow			Signal Flow		
Signal			Signal		
DCD	I	1	2	I	DSR
RX	I	3	4	O	RTS
TX	O	5	6	I	CTS
DTR	O	7	8	I	RI
GND	-	9	10	-	Not Used

PS/2 Connector (J10) - Pin-Out

Pin Number	Signal	Pin Number	Signal
1	MCLK	2	GND
3	MDATA	4	VCC

BIOS Boot Jumper (J11) - Pin-Out

Pin Number	Signal
1	EMER*
2	GND

* Active low signal

PC/104 Card Connector (P1)

A Side

B Side

I/O PIN	Signal Name	I/O	I/O PIN	Signal Name	I/O
A1	IOCHK*	I	B1	GND	-
A2	SD7	I/O	B2	RESET DRV	O
A3	SD6	I/O	B3	VCC	-
A4	SD5	I/O	B4	IRQ9	I
A5	SD4	I/O	B5	-5 Vdc	-
A6	SD3	I/O	B6	DRQ2	I
A7	SD2	I/O	B7	-12 Vdc	-
A8	SD1	I/O	B8	OWS*	I
A9	SD0	I/O	B9	+12 Vdc	-
A10	IOCHRDY	I	B10	NOT USED	-
A11	AEN	O	B11	SMEMW*	O
A12	SA19	I/O	B12	SMEMR*	O
A13	SA18	I/O	B13	IOW*	I/O
A14	SA17	I/O	B14	IOR*	I/O
A15	SA16	I/O	B15	DACK3*	O
A16	SA15	I/O	B16	DRQ3	I
A17	SA14	I/O	B17	DACK1*	O
A18	SA13	I/O	B18	DRQ1	I
A19	SA12	I/O	B19	REFRESH*	I/O
A20	SA11	I/O	B20	SYSCLK	O
A21	SA10	I/O	B21	IRQ7	I
A22	SA9	I/O	B22	IRQ6	I
A23	SA8	I/O	B23	IRQ5	I
A24	SA7	I/O	B24	IRQ4	I
A25	SA6	I/O	B25	IRQ3	I
A26	SA5	I/O	B26	DACK2*	O
A27	SA4	I/O	B27	T/C	O
A28	SA3	I/O	B28	BALE	O
A29	SA2	I/O	B29	VCC	-
A30	SA1	I/O	B30	OSC	O
A31	SA0	I/O	B31	GND	-
A32	GND	-	B32	GND	-

* Active low signal

PC/104 Card Connector (P2)

C Side

I/O PIN	Signal Name	I/O
C0	GND	-
C1	SBHE*	I/O
C2	LA23	I/O
C3	LA22	I/O
C4	LA21	I/O
C5	LA20	I/O
C6	LA19	I/O
C7	LA18	I/O
C8	LA17	I/O
C9	MEMR*	I/O
C10	MEMW*	I/O
C11	SD08	I/O
C12	SD09	I/O
C13	SD10	I/O
C14	SD11	I/O
C15	SD12	I/O
C16	SD13	I/O
C17	SD14	I/O
C18	SD15	I/O
C19	Not Used	-

D Side

I/O PIN	Signal Name	I/O
D0	GND	-
D1	MEMCS16*	I
D2	IOCS16*	I
D3	IRQ10	I
D4	IRQ11	I
D5	IRQ12	I
D6	IRQ15	I
D7	IRQ14	I
D8	DACK0*	O
D9	DRQ0	I
D10	DACK5*	O
D11	DRQ5	I
D12	DACK6*	O
D13	DRQ6	I
D14	DACK7*	O
D15	DRQ7	I
D16	VCC	-
D17	MASTER*	I
D18	GND	-
D19	GND	-

* Active low signal

PC Bus Connector

A Side

I/O PIN	Signal Name	I/O
A1	IOCHK*	I
A2	SD7	I/O
A3	SD6	I/O
A4	SD5	I/O
A5	SD4	I/O
A6	SD3	I/O
A7	SD2	I/O
A8	SD1	I/O
A9	SD0	I/O
A10	IOCHRDY	I
A11	AEN	O
A12	SA19	I/O
A13	SA18	I/O
A14	SA17	I/O
A15	SA16	I/O
A16	SA15	I/O
A17	SA14	I/O
A18	SA13	I/O
A19	SA12	I/O
A20	SA11	I/O
A21	SA10	I/O
A22	SA9	I/O
A23	SA8	I/O
A24	SA7	I/O
A25	SA6	I/O
A26	SA5	I/O
A27	SA4	I/O
A28	SA3	I/O
A29	SA2	I/O
A30	SA1	I/O
A31	SA0	I/O

B Side

I/O PIN	Signal Name	I/O
B1	GND	-
B2	RESET DRV	O
B3	VCC	-
B4	IRQ9	I
B5	-5 Vdc	-
B6	DRQ2	I
B7	-12 Vdc	-
B8	OWS*	I
B9	+12 Vdc	-
B10	GND	-
B11	SMEMW*	O
B12	SMEMR*	O
B13	IOW*	I/O
B14	IOR*	I/O
B15	DACK3*	O
B16	DRQ3	I
B17	DACK1*	O
B18	DRQ1	I
B19	REFRESH*	I/O
B20	SYSCLK	O
B21	IRQ7	I
B22	IRQ6	I
B23	IRQ5	I
B24	IRQ4	I
B25	IRQ3	I
B26	DACK2*	O
B27	T/C	O
B28	BALE	O
B29	VCC	-
B30	OSC	O
B31	GND	-

* Active low signal

PC Bus Connector

C Side

I/O PIN	Signal Name	I/O
C1	SBHE*	I/O
C2	LA23	I/O
C3	LA22	I/O
C4	LA21	I/O
C5	LA20	I/O
C6	LA19	I/O
C7	LA18	I/O
C8	LA17	I/O
C9	MEMR*	I/O
C10	MEMW*	I/O
C11	SD08	I/O
C12	SD09	I/O
C13	SD10	I/O
C14	SD11	I/O
C15	SD12	I/O
C16	SD13	I/O
C17	SD14	I/O
C18	SD15	I/O

D Side

I/O PIN	Signal Name	I/O
D1	MEMCS16*	I
D2	IOCS16*	I
D3	IRQ10	I
D4	IRQ11	I
D5	IRQ12	I
D6	IRQ15	I
D7	IRQ14	I
D8	DACK0*	O
D9	DRQ0	I
D10	DACK5*	O
D11	DRQ5	I
D12	DACK6*	O
D13	DRQ6	I
D14	DACK7*	O
D15	DRQ7	I
D16	VCC	-
D17	MASTER*	I
D18	GND	-

* Active low signal

APPENDIX E

RECOMMENDED DEVICES & MATING CONNECTORS

The following is a list of recommended devices and connectors for use on the VPer804. Many other models are available and function equally well. Users are encouraged to check with their local distributors for comparable substitutes.

DRAM (U1-U4)

DRAM devices with page mode at 70 ns maximum access time is recommended for 33 MHz boards. For example:

MOZEL	V104BJ9S70	(256K*9)
OKI	MSC2331A-70YS3	(256K*9)
OKI	MSC2331B-70YS3	(256K*9)
IBM	B1A10900A-70	(1M*9)
MOTOROLA	MCM91430S60	(1M*9)
MOTOROLA	MCM91430S70	(1M*9)
MOTOROLA	MCM91430S70JC	(1M*9)
NEC	MC-421000A9BA-70	(1M*9)
OKI	MJC23109B-70DS3B	(1M*9)
OKI	MSC23109-70DJ3	(1M*9)
OKI	MSC23109-70DS3	(1M*9)
OKI	MSC23109-70DS3A	(1M*9)
SAMSUNG	KMM591000AN-70	(1M*9)
SAMSUNG	KMM591000BN-60	(1M*9)
HITACHI	HB56A49BR7B	(4M*9)
OKI	MSC23409-70DS9	(4M*9)
TI	TM4100EAD9-70	(4M*9)
TI	TM497EU9-70	(4M*9)

MATH COPROCESSORS

IIT	3C87SX-33 for 33 MHz boards
CYRIX	CX-83S87-33 for 33MHz boards

INTERFACE CONNECTORS

The following connectors are recommended for interfacing with the I/O devices. The parts shown here do not have a strain relief but one may be added.

<u>Connector</u>	<u>Recommended Mating Part</u>
Hard Disk (J1)	Robinson Nugent IDS-C40PK-TG Amp 746286-9 (499252-1*) Thomas & Betts 609-1041 (40-pin flat cable connector)
Floppy Disk (J2)	Robinson Nugent IDS-C34PK-TG Amp 746286-8 (499252-6*) Thomas & Betts 609-3441 (34-pin flat cable connector)
Keyboard (J3)	Robinson Nugent IDS-C16PK-TG Amp 746286-3 (499252-8*) Thomas & Betts 609-1641 (16-pin flat cable connector)
Serial Ports (J4 & J9)	Robinson Nugent IDS-C10PK-TG Amp 746286-1 (499252-5*) Thomas & Betts 609-1041 (10-pin flat cable connector)
Power Connector (J5)	Leoco 2530 S060013 (housing) Leoco 2533 TCB00A0 (pins) Molex 22-01-2065 (housing) Molex 08-50-114 (pins)

* optional Amp strain relief part number shown in brackets

<u>Connector</u>	<u>Recommended Mating Part</u>
Standard IBM Serial Port (J6)	Robinson Nugent IDD-C9SM-440-TG30 Amp 747318-4 (747275-4*) Thomas & Betts 609-09S Amphenol 841-17-DBFR-B9S (9-pin flat cable connector)
Parallel Port (J7)	Robinson Nugent IDD-C25PM-440-TG30 Amp 747321-2 (747275-2*) Thomas & Betts 609-25P Amphenol 841-17-DBFR-B25P (25-pin flat cable connector)
External Battery Connector (J8)	Leoco 2530 S020013 (housing) Leoco 2533 TCB00A0 (pins)
PS/2 Connector (J10)	Amp 22-01-3047 (connector) Amp 08-50-0114 (crimps)

* optional Amp strain relief part number shown in brackets

APPENDIX F

POST CODES & ERROR CODES

When you power on your system, the Power On Self Test (POST) diagnostic routines check to make sure your system is running properly. A number of check points are covered during these tests. These POST codes are described in F.01.

Fatal errors, which halt the boot process, are communicated through a series of audible beeps. If POST can initialize the system video display, it will display the error message. Beep error codes are described in F.02.

F.01 POST CODES

POST codes can be displayed by installing a PC diagnostic POST card. This card includes a small display, which indicates the POST code number of specific check-points in the POST routines as they are passed.

POST CODE	DESCRIPTION
----------------------	--------------------

01	Processor register test about to start, and NMI to be disabled.
02	NMI is disabled. Power on delay starting.
03	Power on delay complete. Any initialization before keyboard BAT is in progress.
04	Any initialization before keyboard BAT is complete. Reading keyboard SYS bit, to check soft reset / power-on.
05	Soft reset / power-on determined. Going to enable ROM, i.e., disable shadow RAM/Cache if any.
06	ROM is enabled. Calculating ROM BIOS checksum, and waiting for KB controller input buffer to be free.
07	ROM BIOS checksum passed, KB controller I/B free. Going to issue the BAT command to keyboard controller.
08	BAT command to keyboard controller is issued. Going to verify BAT command.
09	Keyboard controller BAT result verified. Keyboard command byte to be written next.
0A	Keyboard command byte code is issued. Going to write command byte data.
0B	Keyboard controller command byte is written. Going to issue Pin-23, 24 blocking/unblocking command.
0C	Pin-23, 24 of keyboard controller is blocked/unblocked. NOP command of keyboard controller to be issued next.
0D	NOP command processing done. CMOS shutdown register test to be done next.

**POST DESCRIPTION
CODE**

0E	CMOS shutdown register R/W test passed. Going to calculate CMOS checksum, and update DIAG byte.
0F	CMOS checksum calculation is done, DIAG byte written. CMOS initialize to begin (If "INIT CMOS IN EVERY BOOT IS SET").
10	CMOS initialization done (if any). CMOS status register about to initialize Date and Time.
11	CMOS Status register initialized. Going to disable DMA and interrupt controllers.
12	DMA controller #1, #2, interrupt controller #1, #2 disabled. About to disable video display and initialize port-B.
13	Video display is disabled and port-B is initialized. Chipset initialization / automatic memory detection about to begin.
14	Chipset initialization / automatic memory detection over. 8254 timer test about to start.
15	CH-2 timer test halfway. 8254 CH-2 timer test to be complete.
16	CH-2 timer test over. 8254 CH-1 timer test to be complete.
17	CH-1 timer test over. 8254 CH-0 timer test to be complete.
18	CH-0 timer test over. About to start memory refresh.
19	Memory Refresh started. Memory Refresh test to be done next.
1A	Memory Refresh line is toggling. Going to check 15 micro second ON/OFF time.
1B	Memory Refresh period 30 microsecond test complete. Base 64 KB memory test about to start.
20	Base 64 KB memory test started. Address line test to be done next.
21	Address line test passed. Going to do toggle parity.
22	Toggle parity over. Going for sequential data R/W test.
23	Base 64 KB sequential data R/W test passed. Any setup before interrupt vector initialization about to start.
24	Setup required before vector initialization complete. Interrupt vector initialization about to begin.
25	Interrupt vector initialization done. Going to read I/O port of 8042 for turbo switch (if any).
26	I/O port of 8042 is read. Going to initialize global data for turbo switch.
27	Global data initialization is over. Any initialization after interrupt vector to be done next.
28	Initialization after interrupt vector is complete. Going for monochrome mode setting.
29	Monochrome mode setting is done. Going for color mode setting.
2A	Color mode setting is done. About to go for toggle parity before optional ROM test.

Error Codes F-2

**POST DESCRIPTION
CODE**

2B	Toggle parity over. About to give control for any setup required before optional video ROM check.
2C	Processing before video ROM control is done. About to look for optional video ROM and give control.
2D	Optional video ROM control is done. About to give control to do any processing after video ROM returns control.
2E	Return from processing after the video ROM control. If EGA/VGA not found, then do display memory R/W test.
2F	EGA/VGA not found. Display memory R/W test about to begin.
30	Display memory R/W test passed. About to look for the retrace checking.
31	Display memory R/W test or retrace checking failed. About to do alternate Display memory R/W test.
32	Alternate display memory R/W test passed. About to look for the alternate display retrace checking.
33	Video display checking over. Verification of display type with switch setting and actual card to begin.
34	Verification of display adapter done. Display mode to be set next.
35	Display mode set complete. BIOS ROM data area about to be checked.
36	BIOS ROM data area checked over. Going to set cursor for power on message.
37	Cursor setting for power on message id complete. Going to display the power on message.
38	Power on message display complete. Going to read new cursor position.
39	New cursor position read and saved. Going to display the reference string.
3A	Reference string display is over. Going to display the Hit <ESC> message.
3B	Hit <ESC> message displayed. Virtual mode memory test about to start.
40	Preparation for virtual mode test started. Going to verify from video memory.
41	Returned after verifying from display memory. Going to prepare the descriptor tables.
42	Descriptor tables prepared. Going to enter in virtual mode for memory test.
43	Entered in the virtual mode. Going to enable interrupts for diagnostics mode.
44	Interrupts enabled (if diagnostics switch is on). Going to initialize data to check memory wrap around 0:0.
45	Data initialized. Going to check for memory wrap around at 0:0 and finding the total system memory size.
46	Memory wrap around test done. Memory size calculation over. About to go for writing patterns to test memory.
47	Pattern to be tested written in extended memory. Going to write patterns in base 640 KB memory.

**POST DESCRIPTION
CODE**

- 48 Patterns written in base memory. Going to find out amount of memory below 1 MB memory.
- 49 Amount of memory below 1 MB found and verified. Going to find out amount of memory above 1 MB memory.
- 4A Amount of memory above 1 MB found and verified. Going for BIOS ROM data area check.
- 4B BIOS ROM data area check over. Going to check <ESC> and to clear memory below 1 MB for soft reset.
- 4C Memory below 1 MB cleared. (SOFT RESET.) Going to clear memory above 1 MB.
- 4D Memory above 1 MB cleared. (SOFT RESET.) Going to save the memory size.
- 4E Memory test started. (NO SOFT RESET.) About to display the first 64 KB memory test.
- 4F Memory size display started. This will be updated during memory test. Going for sequential and random memory test.
- 50 Memory test below 1 MB complete. Going to adjust memory size for relocation/shadow.
- 51 Memory size adjusted due to relocation/shadow. Memory test above 1 MB to follow.
- 52 Memory test above 1 MB complete. Going to prepare to go back to real mode.
- 53 CPU registers are saved including memory size. Going to enter in real mode.
- 54 Shutdown successful, CPU in real mode. Going to restore registers saved during preparation for shutdown.
- 55 Registers restored. Going to disable gate A20 address line.
- 56 A20 address line disable successful. BIOS ROM data area about to be checked.
- 57 BIOS ROM data area check halfway. BIOS ROM data area check to be complete.
- 58 BIOS ROM data area check over. Going to clear Hit <ESC> message.
- 59 Hit <ESC> message cleared. <WAIT...> message displayed. About to start DMA and interrupt controller test.
- 60 DMA page register test passed. About to verify from display memory.
- 61 Display memory verification over. About to go for DMA #1 base register test.
- 62 DMA #1 base register test passed. About to go for DMA #2 base register test.
- 63 DMA #2 base register test passed. About to go for BIOS ROM data area test.
- 64 BIOS ROM area check halfway. BIOS ROM data area check to be complete.
- 65 BIOS ROM data area check over. About to program DMA unit 1 and 2.
- 66 DMA unit 1 and 2 programming over. About to initialize 8259 interrupt controller.
- 67 8259 initialization over. About to start keyboard test.

**POST DESCRIPTION
CODE**

80	Keyboard test started. Clearing output buffer, checking for stuck key. About to issue keyboard reset command.
81	Keyboard reset error/stuck key found. About to issue keyboard controller interface test command.
82	Keyboard controller interface test over. About to write command byte and initialize circular buffer.
83	Command byte written, global data initialization done. About to check for lock-key.
84	Lock-key checking over. About to check for memory size mismatch with CMOS.
85	Memory size check done. About to display soft error and check for password or bypass setup.
86	Password checked. About to do programming before setup.
87	Programming before setup complete. Going to CMOS setup program.
88	Returned from CMOS setup program and screen is cleared. About to do programming after setup.
89	Programming after setup complete. Going to display power on screen message.
8A	First screen message displayed. About to display <WAIT...> message.
8B	<WAIT...> message displayed. About to do Main and Video BIOS shadow.
8C	Main and Video BIOS shadow successful. Setup options programming after CMOS setup about to start.
8D	Setup options are programmed. Mouse check and initialization about to be done next.
8E	Mouse check and initialization complete. Going for hard disk, floppy reset.
8F	Floppy check returns that floppy is to be initialized. Floppy setup to follow.
90	Floppy setup is over. Test for hard disk presence to be done.
91	Hard disk presence test over. Hard disk setup to follow.
92	Hard disk setup complete. About to go for BIOS ROM data area check.
93	BIOS ROM data area check halfway. BIOS ROM data area check to be complete.
94	BIOS ROM data area check over. Going to set base and extended memory size.
95	Memory size adjusted due to mouse support, hdisk type-47. Going to verify from display memory.
96	Returned after verifying from display memory. Going to do any initialization before C800 optional ROM control.
97	Any initialization before C800 optional ROM control is over. Optional ROM check and control will be done next.
98	Optional ROM control is done. About to give control to do any required processing after optional ROM returns control.
99	Any initialization required after optional ROM test over. Going to setup timer data area and printer base address.

**POST DESCRIPTION
CODE**

9A	Return after setting timer and printer base address. Going to set the RS-232 base address.
9B	Returned after RS-232 base address. Going to do any initialization before co-processor test.
9C	Required initialization before co-processor is over. Going to initialize the co-processor next.
9D	Co-processor initialized. Going to do any initialization after co-processor test.
9E	Initialization after co-processor test is complete. Going to check extended keyboard, keyboard ID and NUM-LOCK.
9F	Extended keyboard check is done, ID flag set. NUM-LOCK ON/OFF. Keyboard ID command to be issued.
A0	Keyboard ID command issued. Keyboard ID flag to be reset.
A1	Keyboard ID flag reset. Cache memory test to follow.
A2	Cache memory test over. Going to display any soft errors.
A3	Soft errors display complete. Going to set the keyboard typematic rate.
A4	Keyboard typematic rate set. Going to program memory wait states.
A5	Memory wait states programming over. Screen to be cleared next.
A6	Screen cleared. Going to enable parity and NMI.
A7	NMI and parity enabled. Going to do any initialization required before giving control to optional ROM at E000.
A8	Initialization before E000 ROM control over. E000 ROM to get control next.
A9	Returned from E000 ROM control. Going to do any initialization required after E000 optional ROM control.
AA	Initialization after E000 optional ROM control is over. Going to display the system configuration.
00	System configuration displayed. Going to give control to INT 19H boot loader.

F.02 BEEP ERROR CODES

All beep codes, except number 8, are fatal errors.

If your system starts beeping during POST, count the number of beeps and check the table below.

TABLE F-1: Beep Error Codes

BEEPS	ERROR MESSAGE	DESCRIPTION
1	Refresh Failure	The memory refresh circuitry is faulty.
2	Parity Error	Parity error in the base memory (the first 64 KB block of memory)
3	Base 64 KB Memory Failure	Memory failure in the first 64 KB.
4	Time Not Operational	A memory failure in the first 64 KB of memory, or Timer 1 is not functioning.
5	Processor error	The CPU generated an error.
6	8042 - Gate A20 Failure	Cannot switch to protected mode.
7	Processor Exception Interrupt Error	The CPU on the CPU Card generated an exception interrupt.
8	Display Memory Read/Write Error	The system video adapter is either missing or its memory is faulty. This is not a fatal error.
9	ROM Checksum Error	The ROM checksum value does not match the value encoded in AMIBIOS.
10	CMOS Shutdown Register Read/Write Error	The shutdown register for CMOS RAM has failed.

GETTING HELP

At TEKNOR we take great pride in our customer's successes. We strongly believe in providing full support at all stages of your product development.

If at any time you encounter difficulties with your application or with any of our products, or if you simply need guidance on system setups and capabilities, you may contact our Technical Support department at:

CANADIAN HEADQUARTERS

Tel.: (450) 437-5682
Fax: (450) 437-8053

EUROPEAN REGIONAL OFFICE

Tel.: +49 811 / 600 15-0
Fax: +49 811 / 600 15-33

If you have any questions about TEKNOR, our products or services, you may reach us at the above numbers or by writing to:

**TEKNOR INDUSTRIAL
COMPUTERS INC.
616 Cure Boivin
Boisbriand, Quebec
J7G 2A7 CANADA**

**TEKNOR INDUSTRIAL
COMPUTERS INC.
Zeppelin Str. 4
D-85399 Hallbergmoos
GERMANY**

LIMITED WARRANTY

TEKNOR INDUSTRIAL COMPUTERS INC. ("the seller") warrants its products to be free from defects in material and workmanship for a period of two (2) years commencing on the date of shipment. The liability of the seller shall be limited to replacing or repairing, at the seller's option, any defective units. Equipment or parts which have been subject to abuse, misuse, accident, alteration, neglect, or unauthorized repair are not covered by this warranty. This warranty is in lieu of all other warranties expressed or implied.

Returning Defective Merchandise

If your TEKNOR product malfunctions, please do the following before returning any merchandise:

- 1) Call our Technical Support department in Canada at (450) 437-5682 or in Germany at +49 811 / 600 15-0. Make certain you have the following at hand: the TEKNOR Invoice #, your Purchase Order #, and the Serial Number of the defective unit.
- 2) Give the serial number found on the back of the card and explain the nature of your problem to a service technician.
- 3) If the problem cannot be solved over the telephone, the technician will further instruct you on the return procedure.
- 4) Prior to returning any merchandise, make certain you receive an RMA # from TEKNOR's Technical Support and clearly mark this number on the outside of the package you are returning. To request a number, follow these steps: make a copy of the request form on the following page, fill it out and fax it to us.
- 5) When returning goods, please include the name and telephone number of a person whom we can contact for further explanations if necessary. **Where applicable, always include all duty papers and invoice(s) associated with the item(s) in question.**
- 6) When returning a TEKNOR card:
 - i) Make certain that the card is properly packed: Place it in an antistatic plastic bag and pack it in a rigid cardboard box.
 - ii) Ship prepaid to (but not insured, since incoming units are insured by TEKNOR):

**TEKNOR INDUSTRIAL
COMPUTERS INC.
616 Cure Boivin
Boisbriand, Quebec
J7G 2A7 CANADA**

**TEKNOR INDUSTRIAL
COMPUTERS INC.
Zeppelin Str. 4
D-85399 Hallbergmoos
GERMANY**



**RETURN TO MANUFACTURER
AUTHORISATION REQUEST**

Contact Name : _____
Company Name : _____
Street Address _____
City : _____ Province / State : _____
Country : _____ Postal / Zip Code _____
Phone Number : _____ Fax Number: _____

Serial Number	Failure or Problem Description	P.O. # (if not under warranty)

**Fax this form to TEKNOR's Technical Support department
in Canada at (450) 437-8053 or in Germany at +49 811 / 600 15-33**

